Part No. 060191-10, Rev. B
April 2004

OmniStack® 6300-24

Users Guide

Downloaded from www.Manualslib.com manuals search engine

An Alcatel service agreement brings your company the assurance of 7x24 no-excuses technical support. You'll also receive regular software updates to maintain and maximize your Alcatel product's features and functionality and on-site hardware replacement through our global network of highly qualified service delivery partners. Additionally, with 24-hour-a-day access to Alcatel's Service and Support web page, you'll be able to view and update any case (open or closed) that you have reported to Alcatel's technical support, open a new case or access helpful release notes, technical bulletins, and manuals. For more information on Alcatel's Service Programs, see our web page at www.ind.alcatel.com, call us at 1-800-995-2696, or email us at support@ind.alcatel.com.

This Manual documents OmniStack 6300-24 hardware and software.
The functionality described in this Manual is subject to change without notice.

Copyright© 2004 by Alcatel Internetworking, Inc. All rights reserved. This document may not be reproduced in whole or in part without the express written permission of Alcatel Internetworking, Inc.

Alcatel®and the Alcatel logo are registered trademarks of Compagnie Financiére Alcatel, Paris, France. OmniSwitch® and OmniStack® are registered trademarks of Alcatel Internetworking, Inc. Omni Switch/Router™, SwitchExpert℠, the Xylan logo are trademarks of Alcatel Internetworking, Inc. All other brand and product names are trademarks of their respective companies.

26801 West Agoura Road
Calabasas, CA 91301
(818) 880-3500 FAX (818) 880-3505
info@ind.alcatel.com
US Customer Support-(800) 995-2696
International Customer Support-(818) 878-4507
Internet-http://eservice.ind.alcatel.com

Downloaded from www.Manualslib.com manuals search engine

Warning

This equipment has been tested and found to comply with the limits for Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions in this guide, may cause interference to radio communications. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his own expense.

The user is cautioned that changes and modifications made to the equipment without approval of the manufacturer could void the user's authority to operate this equipment. It is suggested that the user use only shielded and grounded cables to ensure compliance with FCC Rules.

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulations of the Canadian department of communications.

Le present appareil numerique níemet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la Class A prescrites dans le reglement sur le brouillage radioelectrique edicte par le ministere des communications du Canada.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Contents

Chapter 1: Introduction **1-1**
- Key Features 1-1
- Description of Software Features 1-2
- System Defaults 1-5

Chapter 2: Initial Configuration **2-1**
- Connecting to the Switch 2-1
  - Configuration Options 2-1
  - Required Connections 2-2
  - Remote Connections 2-3
- Basic Configuration 2-3
  - Console Connection 2-3
  - Setting Passwords 2-4
  - Setting an IP Address 2-4
    - Manual Configuration 2-4
    - Dynamic Configuration 2-5
  - Enabling SNMP Management Access 2-6
    - Community Strings 2-6
    - Trap Receivers 2-7
  - Saving Configuration Settings 2-7
- Managing System Files 2-8

Chapter 3: Configuring the Switch **3-1**
- Using the Web Interface 3-1
- Navigating the Web Browser Interface 3-2
  - Home Page 3-2
  - Configuration Options 3-2
  - Panel Display 3-3
  - Main Menu 3-3
- Basic Configuration 3-8
  - Displaying System Information 3-8
  - Displaying Switch Hardware/Software Versions 3-10
  - Displaying Bridge Extension Capabilities 3-11
  - Setting the Switch's IP Address 3-12
    - Manual Configuration 3-13
    - Using DHCP/BOOTP 3-14
  - Enabling Jumbo Frames 3-15
  - Managing Firmware 3-15
    - Downloading System Software from a Server 3-16
  - Saving or Restoring Configuration Settings 3-17
    - Downloading Configuration Settings from a Server 3-17
  - Console Port Settings 3-18

Downloaded from www.Manualslib.com manuals search engine

Telnet Settings 3-21
Configuring Event Logging 3-23
System Logs 3-23
System Logs Configuration 3-24
Remote Logs Configuration 3-25
Sending Simple Mail Transfer Protocol Alerts 3-27
Resetting the System 3-29
Setting the System Clock 3-29
Configuring SNTP 3-30
Setting the Time Zone 3-31
Simple Network Management Protocol 3-31
Enabling SNMP 3-33
Setting Community Access Strings 3-33
Specifying Trap Managers and Trap Types 3-34
Configuring SNMPv3 Management Access 3-35
Setting an Engine ID 3-35
Configuring SNMPv3 Users 3-36
Configuring SNMPv3 Groups 3-38
Setting SNMPv3 Views 3-40
User Authentication 3-41
Configuring the Logon Password 3-41
Configuring Local/Remote Logon Authentication 3-42
Configuring HTTPS 3-45
Replacing the Default Secure-site Certificate 3-46
Configuring the Secure Shell 3-47
Generating the Host Key Pair 3-49
Configuring the SSH Server 3-51
Configuring Port Security 3-52
Configuring 802.1x Port Authentication 3-54
Displaying 802.1x Global Settings 3-55
Configuring 802.1x Global Settings 3-57
Configuring Port Authorization Mode 3-58
Displaying 802.1x Statistics 3-59
Access Control Lists 3-61
Configuring Access Control Lists 3-61
Setting the ACL Name and Type 3-62
Configuring a Standard IP ACL 3-62
Configuring an Extended IP ACL 3-63
Configuring a MAC ACL 3-66
Configuring ACL Masks 3-68
Specifying the Mask Type 3-68
Configuring an IP ACL Mask 3-69
Configuring a MAC ACL Mask 3-71
Binding a Port to an Access Control List 3-72
Filtering IP Addresses for Management Access 3-73

Downloaded from www.Manualslib.com manuals search engine

Port Configuration 3-75
Displaying Connection Status 3-75
Configuring Interface Connections 3-77
Creating Trunk Groups 3-79
Statically Configuring a Trunk 3-80
Enabling LACP on Selected Ports 3-81
Configuring LACP Parameters 3-83
Displaying LACP Port Counters 3-85
Displaying LACP Settings and Status for the Local Side 3-86
Displaying LACP Settings and Status for the Remote Side 3-88
Setting Broadcast Storm Thresholds 3-90
Configuring Port Mirroring 3-91
Configuring Rate Limits 3-92
Showing Port Statistics 3-93
Alcatel Mapping Adjacency Protocol (AMAP) 3-98
Configuring AMAP 3-98
Displaying AMAP Detected Devices 3-99
Address Table Settings 3-100
Setting Static Addresses 3-100
Displaying the Address Table 3-101
Changing the Aging Time 3-102
Spanning Tree Algorithm Configuration 3-103
Displaying Global Settings 3-104
Configuring Global Settings 3-107
Displaying Interface Settings 3-111
Configuring Interface Settings 3-114
Configuring Multiple Spanning Trees 3-116
Displaying Interface Settings for MSTP 3-119
Configuring Interface Settings for MSTP 3-121
VLAN Configuration 3-122
Overview 3-122
Assigning Ports to VLANs 3-123
Forwarding Tagged/Untagged Frames 3-125
Enabling or Disabling GVRP (Global Setting) 3-125
Displaying Basic VLAN Information 3-126
Displaying Current VLANs 3-127
Creating VLANs 3-129
Adding Static Members to VLANs (VLAN Index) 3-130
Adding Static Members to VLANs (Port Index) 3-132
Configuring VLAN Behavior for Interfaces 3-133
Configuring Private VLANs 3-135
Enabling Private VLANs 3-135
Configuring Uplink and Downlink Ports 3-136
Configuring Protocol-Based VLANs 3-136
Configuring Protocol Groups 3-137

Downloaded from www.Manualslib.com manuals search engine

Mapping Protocols to VLANs 3-137
Class of Service Configuration 3-139
Setting the Default Priority for Interfaces 3-139
Mapping CoS Values to Egress Queues 3-141
Selecting the Queue Mode 3-143
Setting the Service Weight for Traffic Classes 3-143
Mapping Layer 3/4 Priorities to CoS Values 3-145
Selecting IP Precedence/DSCP Priority 3-145
Mapping IP Precedence 3-146
Mapping DSCP Priority 3-147
Mapping IP Port Priority 3-149
Mapping CoS Values to ACLs 3-150
Changing Priorities Based on ACL Rules 3-151
Quality of Service 3-153
Configuring Quality of Service Parameters 3-153
Configuring a Class Map 3-154
Creating QoS Policies 3-156
Attaching a Policy Map to Ingress and Egress Queues 3-159
Multicast Filtering 3-160
Layer 2 IGMP (Snooping and Query) 3-160
Configuring IGMP Snooping and Query Parameters 3-161
Displaying Interfaces Attached to a Multicast Router 3-162
Specifying Static Interfaces for a Multicast Router 3-163
Displaying Port Members of Multicast Services 3-164
Assigning Ports to Multicast Services 3-165
Configuring Domain Name Service 3-166
Configuring General DNS Server Parameters 3-167
Configuring Static DNS Host to Address Entries 3-169
Displaying the DNS Cache 3-171

Chapter 4: Command Line Interface 4-1
Using the Command Line Interface 4-1
Accessing the CLI 4-1
Console Connection 4-1
Telnet Connection 4-1
Entering Commands 4-3
Keywords and Arguments 4-3
Minimum Abbreviation 4-3
Command Completion 4-3
Getting Help on Commands 4-3
Showing Commands 4-4
Partial Keyword Lookup 4-5
Negating the Effect of Commands 4-5
Using Command History 4-5

Downloaded from www.Manualslib.com manuals search engine

Understanding Command Modes 4-5
Exec Commands 4-6
Configuration Commands 4-6
Command Line Processing 4-7
Command Groups 4-9
Line Commands 4-10
line 4-10
login 4-11
password 4-12
timeout login response 4-13
exec-timeout 4-14
password-thresh 4-14
silent-time 4-15
databits 4-16
parity 4-16
speed 4-17
stopbits 4-17
disconnect 4-18
show line 4-18
General Commands 4-19
enable 4-19
disable 4-20
configure 4-20
show history 4-21
reload 4-22
end 4-22
exit 4-22
quit 4-23
System Management Commands 4-23
Device Designation Commands 4-24
prompt 4-24
hostname 4-25
User Access Commands 4-25
username 4-25
enable password 4-26
IP Filter Commands 4-27
management 4-27
show management 4-28
Web Server Commands 4-29
ip http port 4-29
ip http server 4-30
ip http secure-server 4-30
ip http secure-port 4-31
Secure Shell Commands 4-32
ip ssh server 4-34

Downloaded from www.Manualslib.com manuals search engine

ip ssh timeout 4-35
ip ssh authentication-retries 4-36
ip ssh server-key size 4-36
delete public-key 4-37
ip ssh crypto host-key generate 4-37
ip ssh crypto zeroize 4-38
ip ssh save host-key 4-38
show ip ssh 4-39
show ssh 4-39
show public-key 4-40
Event Logging Commands 4-41
logging on 4-41
logging history 4-42
logging host 4-43
logging facility 4-43
logging trap 4-44
clear logging 4-44
show logging 4-45
SMTP Alert Commands 4-46
logging sendmail host 4-47
logging sendmail level 4-47
logging sendmail source-email 4-48
logging sendmail destination-email 4-48
logging sendmail 4-49
show logging sendmail 4-49
Time Commands 4-50
sntp client 4-50
sntp server 4-51
sntp poll 4-52
show sntp 4-52
clock timezone 4-53
calendar set 4-53
show calendar 4-54
System Status Commands 4-54
show startup-config 4-54
show running-config 4-57
show system 4-59
show users 4-60
show version 4-60
Frame Size Commands 4-61
jumbo frame 4-61
Flash/File Commands 4-62
copy 4-62
delete 4-64
dir 4-65

Downloaded from www.Manualslib.com manuals search engine

whichboot 4-66
boot system 4-66
Authentication Commands 4-67
Authentication Sequence 4-67
authentication login 4-68
authentication enable 4-69
RADIUS Client 4-70
radius-server host 4-70
radius-server port 4-70
radius-server key 4-71
radius-server retransmit 4-71
radius-server timeout 4-72
show radius-server 4-72
TACACS+ Client 4-73
tacacs-server host 4-73
tacacs-server port 4-73
tacacs-server key 4-74
show tacacs-server 4-74
Port Security Commands 4-75
port security 4-75
802.1x Port Authentication 4-76
authentication dot1x default 4-77
dot1x default 4-77
dot1x max-req 4-78
dot1x port-control 4-78
dot1x operation-mode 4-79
dot1x re-authenticate 4-79
dot1x re-authentication 4-80
dot1x timeout quiet-period 4-80
dot1x timeout re-authperiod 4-80
dot1x timeout tx-period 4-81
show dot1x 4-81
Access Control List Commands 4-83
IP ACLs 4-85
access-list ip 4-85
permit, deny (Standard ACL) 4-86
permit, deny (Extended ACL) 4-87
show ip access-list 4-89
access-list ip mask-precedence 4-89
mask (IP ACL) 4-90
show access-list ip mask-precedence 4-93
ip access-group 4-94
show ip access-group 4-94
map access-list ip 4-95
show map access-list ip 4-96

Downloaded from www.Manualslib.com manuals search engine

match access-list ip 4-96
show marking 4-97
MAC ACLs 4-98
access-list mac 4-98
permit, deny (MAC ACL) 4-99
show mac access-list 4-100
access-list mac mask-precedence 4-101
mask (MAC ACL) 4-102
show access-list mac mask-precedence 4-104
mac access-group 4-104
show mac access-group 4-105
map access-list mac 4-105
show map access-list mac 4-106
match access-list mac 4-106
ACL Information 4-107
show access-list 4-107
show access-group 4-108
SNMP Commands 4-108
snmp-server community 4-109
snmp-server contact 4-110
snmp-server location 4-110
snmp-server host 4-111
snmp-server enable traps 4-112
show snmp 4-113
snmp-server 4-114
snmp-server engine-id 4-114
show snmp engine-id 4-115
snmp-server view 4-115
show snmp view 4-116
snmp-server group 4-117
show snmp group 4-117
snmp-server user 4-119
show snmp user 4-119
DHCP Commands 4-120
DHCP Client 4-120
ip dhcp client-identifier 4-120
ip dhcp restart client 4-121
DNS Commands 4-122
ip host 4-122
clear host 4-123
ip domain-name 4-123
ip domain-list 4-124
ip name-server 4-125
ip domain-lookup 4-126
show hosts 4-127

Downloaded from www.Manualslib.com manuals search engine

show dns 4-127
show dns cache 4-128
clear dns cache 4-128
Interface Commands 4-129
interface 4-130
description 4-131
speed-duplex 4-131
negotiation 4-132
capabilities 4-133
flowcontrol 4-134
combo-forced-mode 4-135
shutdown 4-135
switchport broadcast packet-rate 4-136
clear counters 4-137
show interfaces status 4-138
show interfaces counters 4-139
show interfaces switchport 4-140
Mirror Port Commands 4-141
port monitor 4-141
show port monitor 4-142
AMAP Configuration 4-143
amap enable 4-144
amap run 4-144
amap discovery timer 4-144
amap common timer 4-145
show amap 4-145
Rate Limit Commands 4-146
rate-limit 4-146
Link Aggregation Commands 4-147
channel-group 4-148
lacp 4-149
lacp system-priority 4-150
lacp admin-key (Ethernet Interface) 4-151
lacp admin-key (Port Channel) 4-152
lacp port-priority 4-153
show lacp 4-153
Address Table Commands 4-157
mac-address-table static 4-157
clear mac-address-table dynamic 4-158
show mac-address-table 4-158
mac-address-table aging-time 4-159
show mac-address-table aging-time 4-160
Spanning Tree Commands 4-160
spanning-tree 4-161
spanning-tree mode 4-162

Downloaded from www.Manualslib.com manuals search engine

spanning-tree forward-time 4-163
spanning-tree hello-time 4-164
spanning-tree max-age 4-164
spanning-tree priority 4-165
spanning-tree pathcost method 4-166
spanning-tree transmission-limit 4-166
spanning-tree mst-configuration 4-167
mst vlan 4-167
mst priority 4-168
name 4-169
revision 4-169
max-hops 4-170
spanning-tree spanning-disabled 4-171
spanning-tree cost 4-171
spanning-tree port-priority 4-172
spanning-tree edge-port 4-172
spanning-tree portfast 4-173
spanning-tree link-type 4-174
spanning-tree mst cost 4-175
spanning-tree mst port-priority 4-176
spanning-tree protocol-migration 4-176
show spanning-tree 4-177
show spanning-tree mst configuration 4-178
VLAN Commands 4-179
Editing VLAN Groups 4-179
vlan database 4-180
vlan 4-180
Configuring VLAN Interfaces 4-181
interface vlan 4-181
switchport mode 4-182
switchport acceptable-frame-types 4-183
switchport ingress-filtering 4-183
switchport native vlan 4-184
switchport allowed vlan 4-185
switchport forbidden vlan 4-186
Displaying VLAN Information 4-187
show vlan 4-187
Configuring Protocol-based VLANs 4-187
protocol-vlan protocol-group (Configuring Groups) 4-188
protocol-vlan protocol-group (Configuring Interfaces) 4-189
show protocol-vlan protocol-group 4-190
show interfaces protocol-vlan protocol-group 4-190
Configuring Private VLANs 4-191
pvlan 4-191
show pvlan 4-192

Downloaded from www.Manualslib.com manuals search engine

GVRP and Bridge Extension Commands 4-192
bridge-ext gvrp 4-193
show bridge-ext 4-193
switchport gvrp 4-194
show gvrp configuration 4-194
garp timer 4-195
show garp timer 4-196
Priority Commands 4-197
Priority Commands (Layer 2) 4-197
switchport priority default 4-197
queue mode 4-198
queue bandwidth 4-199
queue cos-map 4-200
show queue mode 4-201
show queue bandwidth 4-201
show queue cos-map 4-202
Priority Commands (Layer 3 and 4) 4-202
map ip port (Global Configuration) 4-203
map ip port (Interface Configuration) 4-203
map ip precedence (Global Configuration) 4-204
map ip precedence (Interface Configuration) 4-204
map ip dscp (Global Configuration) 4-205
map ip dscp (Interface Configuration) 4-206
map access-list ip 4-207
show map ip port 4-208
show map ip precedence 4-208
show map ip dscp 4-209
Quality of Service Commands 4-210
class-map 4-211
match 4-212
policy-map 4-213
class 4-214
set 4-214
police 4-215
service-policy 4-216
show class-map 4-216
show policy-map 4-217
show policy-map interface 4-217
Multicast Filtering Commands 4-218
IGMP Snooping Commands 4-218
ip igmp snooping 4-218
ip igmp snooping vlan static 4-219
ip igmp snooping version 4-220
show ip igmp snooping 4-220
show mac-address-table multicast 4-221

Downloaded from www.Manualslib.com manuals search engine

IGMP Query Commands (Layer 2) 4-222
ip igmp snooping querier 4-222
ip igmp snooping query-count 4-222
ip igmp snooping query-interval 4-223
ip igmp snooping query-max-response-time 4-224
ip igmp snooping router-port-expire-time 4-224
Static Multicast Routing Commands 4-225
ip igmp snooping vlan mrouter 4-225
show ip igmp snooping mrouter 4-226
IP Interface Commands 4-227
Basic IP Configuration 4-227
ip address 4-227
ip default-gateway 4-228
ip dhcp restart 4-229
show ip interface 4-229
show ip redirects 4-230
ping 4-230

Appendix A: Software Specifications A-1
Software Features A-1
Management Features A-2
Standards A-2
Management Information Bases A-3

Appendix B: Troubleshooting B-1

Glossary

Index

Downloaded from www.Manualslib.com manuals search engine

Tables

Table 1-1.	Key Features	1-1
Table 1-2.	System Defaults	1-5
Table 3-4.	Main Menu	3-3
Table 3-2.	Configuration Options	3-3
Table 3-1.	SNMPv3 Security Models and Levels	3-32
Table 3-22.	Compatible Operating Systems	3-45
Table 3-30.	802.1X Statistics	3-59
Table 3-45.	LACP Port Counters Information	3-85
Table 3-47.	LACP Settings - Local Side	3-86
Table 3-49.	LACP Settings - Remote Side	3-88
Table 3-54.	Displaying Port Statistics	3-94
Table 3-85.	Mapping CoS Values to Egress Queues	3-141
Table 3-86.	Priority Levels	3-141
Table 3-91.	Mapping IP Precedence	3-146
Table 3-93.	Mapping DSCP Priority	3-147
Table 3-95.	Mapping CoS Values to ACLs	3-150
Table 4-1.	Command Modes	4-5
Table 4-2.	Configuration Command Modes	4-7
Table 4-3.	Keystroke Commands	4-7
Table 4-4.	Command Groups	4-9
Table 4-5.	Line Commands	4-10
Table 4-6.	General Commands	4-19
Table 4-7.	System Management Commands	4-23
Table 4-8.	Device Designation Commands	4-24
Table 4-9.	User Access Commands	4-25
Table 4-10.	User Access Levels	4-26
Table 4-11.	IP Filter Commands	4-27
Table 4-12.	Web Server Commands	4-29
Table 4-13.	Compatible Operating Systems	4-31
Table 4-14.	Secure Shell Commands	4-32
Table 4-15.	Secure Shell Information	4-39
Table 4-16.	Event Logging Commands	4-41
Table 4-17.	Logging Messages	4-42
Table 4-19.	Remote Logging Parameters	4-46
Table 4-20.	SMTP Alert Commands	4-46
Table 4-18.	System Logging Parameters	4-46
Table 4-21.	Time Commands	4-50
Table 4-22.	System Status Commands	4-54
Table 4-23.	Frame Size Commands	4-61
Table 4-24.	Flash/File Commands	4-62
Table 4-25.	File Directory	4-65
Table 4-26.	Authentication Commands	4-67

Downloaded from www.Manualslib.com manuals search engine

Table 4-27.	Authentication Sequence	4-67
Table 4-28.	RADIUS Commands	4-70
Table 4-29.	TACACS+ Commands	4-73
Table 4-30.	Port Security Commands	4-75
Table 4-31.	802.1X Port Authentication Commands	4-76
Table 4-32.	ACL Information	4-84
Table 4-33.	IP ACLs	4-85
Table 4-34.	Priority Queue Mapping	4-95
Table 4-35.	MAC ACLs	4-98
Table 4-36.	Priority Queue Mapping	4-105
Table 4-37.	ACL Information	4-107
Table 4-38.	SNMP Commands	4-108
Table 4-1.	SNMP Engine ID	4-115
Table 4-2.	SNMP View	4-116
Table 4-3.	SNMP Group	4-118
Table 4-4.	SNMP User	4-120
Table 4-39.	DHCP Clients	4-120
Table 4-40.	DNS Commands	4-122
Table 4-41.	DNS Cache	4-128
Table 4-42.	Interface Commands	4-129
Table 4-43.	Interfaces Switchport Parameters	4-140
Table 4-44.	Mirror Port Commands	4-141
Table 4-45.	AMAP Commands	4-143
Table 4-46.	Rate Limit Commands	4-146
Table 4-47.	Linnk Aggregation Commands	4-147
Table 4-48.	LACP Counters	4-154
Table 4-49.	LACPDUs	4-155
Table 4-50.	LACP Neighbours Information	4-156
Table 4-51.	LACP System ID	4-156
Table 4-52.	Address Table Commands	4-157
Table 4-53.	Spanning Tree Commands	4-160
Table 4-54.	VLAN Commands	4-179
Table 4-55.	Editing VLAN Groups	4-179
Table 4-56.	Configuring VLAN Interfaces	4-181
Table 4-57.	Displaying VLAN Information	4-187
Table 4-58.	Protocol VLANs	4-188
Table 4-59.	Configuring Private VLAN Groups	4-191
Table 4-60.	GVRP and Bridge Extension Commands	4-192
Table 4-61.	Priority Commands	4-197
Table 4-62.	Priority Commands (Layer 2)	4-197
Table 4-63.	Priority Queue Mapping	4-200
Table 4-64.	Priority Commands (Layer 3 and 4)	4-202
Table 4-65.	Mapping IP Precedence	4-205
Table 4-66.	Mapping IP DSCP Precedence	4-206
Table 4-5.	Mapping CoS Values to ACL Rules	4-207

Downloaded from www.Manualslib.com manuals search engine

Table 4-67. Quality of Service Commands 4-210
Table 4-68. Multicast Filtering Commands 4-218
Table 4-69. IGMP Snooping Commands 4-218
Table 4-70. IGMP Query Commands (Layer 2) 4-222
Table 4-71. Static Multicast Routing Commands 4-225
Table 4-72. IP Configuration 4-227
Table B-1. Troubleshooting Chart B-1

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Figures

Figure 3-1. Home Page 3-2
Figure 3-3. Ports Panel 3-3
Figure 3-5. System Information 3-9
Figure 3-6. Switch Information 3-10
Figure 3-7. Bridge Exentsion Configuration 3-12
Figure 3-8. IP Configuration 3-13
Figure 3-9. Selecting DHCP Mode 3-14
Figure 3-10. Enabling Jumbo Frame Support 3-15
Figure 3-11. Transfering an Operation Code Image File from a Server 3-16
Figure 3-12. Selecting the Start-up Operation Code Image File 3-16
Figure 3-13. Transfering a Configuration File from a Server 3-17
Figure 3-14. Setting the Start-up Configuration File 3-18
Figure 3-1. Console Port Settings 3-20
Figure 3-2. Telnet Settings 3-22
Figure 3-3. Logging Information 3-24
Figure 3-4. Enabling System Logging 3-25
Figure 3-5. Enabling Remote Logging and Adding Host IP Addresses 3-26
Figure 3-6. Enabling and Configuring SMTP Alerts 3-28
Figure 3-15. Resetting the System 3-29
Figure 3-16. SNTP Configuration 3-30
Figure 3-17. Clock Time Zone 3-31
Figure 3-7. Enabling the SNMP Agent 3-33
Figure 3-18. SNMP Configuration 3-34
Figure 3-19. Configuring SNMP Trap Managers 3-35
Figure 3-8. Setting an Engine ID 3-36
Figure 3-9. Configuring SNMPv3 Users 3-37
Figure 3-10. Configuring SNMPv3 Groups 3-39
Figure 3-11. Configuring SNMPv3 Views 3-40
Figure 3-20. Setting Passwords 3-42
Figure 3-21. Authentication Settings 3-44
Figure 3-23. HTTPS Settings 3-46
Figure 3-24. Secure Shell Host-Key Settings 3-50
Figure 3-25. Secure Shell Server Settings 3-51
Figure 3-26. Configuring Port Security 3-53
Figure 3-27. 802.1X Information 3-55
Figure 3-28. 802.1X Configuration 3-57
Figure 3-29. 802.1X Port Configuration 3-59
Figure 3-31. 802.1X Statistics 3-60
Figure 3-32. ACL Configuration 3-62
Figure 3-33. Configuring a Standard ACL 3-63
Figure 3-34. Configuring an Extended ACL 3-65
Figure 3-35. Configuring a MAC ACL 3-67

Downloaded from www.Manualslib.com manuals search engine

Figure 3-36. ACL Mask Configuration 3-68
Figure 3-37. ACL IP Mask Configuration 3-70
Figure 3-38. ACL MAC Mask Configuration 3-71
Figure 3-39. ACL Port Binding 3-73
Figure 3-12. Filtering IP Addresses 3-74
Figure 3-40. Port Information 3-75
Figure 3-41. Port Configuration 3-78
Figure 3-42. Trunk Membership 3-80
Figure 3-43. LACP Configuration 3-82
Figure 3-44. LACP Aggregation Port Settings 3-84
Figure 3-46. LACP Port Counters Information 3-86
Figure 3-48. LACP Settings - Local Side 3-87
Figure 3-50. LACP Port Settings - Remote Side 3-89
Figure 3-51. Port Broadcast Control 3-90
Figure 3-52. Mirror Port Configuration 3-92
Figure 3-53. Output Rate Limit Port Configuration 3-93
Figure 3-55. Displaying Port Statistics 3-97
Figure 3-56. AMAP Settings 3-99
Figure 3-57. AMAP Information 3-100
Figure 3-58. Setting a Static Address Table 3-101
Figure 3-59. Setting a Dynamic Address Table 3-102
Figure 3-60. Address Aging 3-103
Figure 3-61. Spanning Tree BPDUs 3-103
Figure 3-62. STA Information 3-106
Figure 3-63. STA Configuration 3-110
Figure 3-64. STA Port Roles 3-112
Figure 3-65. STA Port Information 3-113
Figure 3-66. STA Port Configuration 3-116
Figure 3-67. MSTP Vlan Configuration 3-117
Figure 3-68. MSTP Port Information 3-119
Figure 3-69. MSTP Port Configuration 3-122
Figure 3-70. Tagged and Untagged Frames 3-123
Figure 3-71. Port Based VLANs 3-125
Figure 3-72. GVRP Status 3-126
Figure 3-73. Basic VLAN Information 3-126
Figure 3-74. VLAN Current Table 3-128
Figure 3-75. VLAN Static List 3-129
Figure 3-76. VLAN Static Table 3-131
Figure 3-77. VLAN Static Membership by Port 3-132
Figure 3-78. VLAN Port Configuration 3-134
Figure 3-79. Configuring PVLANs 3-135
Figure 3-80. PVLAN Status 3-135
Figure 3-81. PVLAN Link Status 3-136
Figure 3-82. Protocol VLAN Configuration 3-137
Figure 3-83. Protocol VLAN Port Configuration 3-138

Downloaded from www.Manualslib.com manuals search engine

Figure 3-84. Port Priority Configuration 3-140
Figure 3-87. Traffic Classes 3-142
Figure 3-88. Selecting the Queue Mode 3-143
Figure 3-89. Queue Scheduling 3-144
Figure 3-90. IP Precedence/DSCP Priority Status 3-145
Figure 3-92. Assigning CoS Values to IP Precedence 3-146
Figure 3-94. Mapping IP DSCP Priority 3-148
Figure 3-13. Globally Enabling the IP Port Priority Status 3-149
Figure 3-14. Mapping Switch Ports and Trunks to IP TCP/UDP Priority 3-149
Figure 3-96. ACL CoS Priority 3-151
Figure 3-97. ACL Marker 3-152
Figure 3-98. Configuring Class Maps 3-155
Figure 3-99. Configuring Policy Maps 3-158
Figure 3-100. Service Policy Settings 3-159
Figure 3-101. IGMP Configuration 3-162
Figure 3-102. Multicast Router Port Information 3-163
Figure 3-103. Static Multicast Router Port Configuration 3-164
Figure 3-104. IP Multicast Registration Table 3-165
Figure 3-105. IGMP Member Port Table 3-166
Figure 3-106. DNS Configuration 3-168
Figure 3-107. DNS Static Host Table 3-170
Figure 3-108. Displaying the DNS Cache 3-171

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Chapter 1: Introduction

This switch provides a broad range of features for Layer 2 switching. It includes a management agent that allows you to configure the features listed in this manual. The default configuration can be used for most of the features provided by this switch. However, there are many options that you should configure to maximize the switch's performance for your particular network environment.

Key Features

Table 1-1. Key Features

Feature	Description
Configuration Backup and Restore	Backup to TFTP server
Authentication	Console, Telnet, web – User name / password, RADIUS, TACACS+ Web – HTTPS; Telnet – SSH SNMP version 3 – MD5 or SHA password Port – IEEE 802.1x, MAC address filtering
Access Control Lists	Supports up to 32 IP or MAC ACLs
DHCP Client	Supported
DNS Server	Supported
Port Configuration	Speed, duplex mode and flow control
Rate Limiting	Input and output rate limiting per port
Port Mirroring	One or more ports mirrored to single analysis port
Port Trunking	Supports up to 6 trunks using either static or dynamic trunking (LACP)
Broadcast Storm Control	Supported
Static Address	Up to 16K MAC addresses in the forwarding table
IEEE 802.1D Bridge	Supports dynamic data switching and addresses learning
Store-and-Forward Switching	Supported to ensure wire-speed switching while eliminating bad frames
Spanning Tree Protocol	Supports standard STP, Rapid Spanning Tree Protocol (RSTP), and Multiple Spanning Trees (MSTP)
Virtual LANs	Up to 255 using IEEE 802.1Q, port-based, protocol-based, or private VLANs
Traffic Prioritization	Default port priority, traffic class map, queue scheduling, IP Precedence, or Differentiated Services Code Point (DSCP)
QoS	Supports Quality of Service (QoS)
Multicast Filtering	Supports IGMP snooping and query

Downloaded from www.Manualslib.com manuals search engine

Table 1-1. Key Features	
Feature	**Description**
AMAP	Configures Alcatel Mapping Adjacency Protocol (AMAP) parameters and displays information on attached AMAP-aware devices

Description of Software Features

The switch provides a wide range of advanced performance enhancing features. Flow control eliminates the loss of packets due to bottlenecks caused by port saturation. Broadcast storm suppression prevents broadcast traffic storms from engulfing the network. Port-based and protocol-based VLANs, plus support for automatic GVRP VLAN registration provide traffic security and efficient use of network bandwidth. CoS priority queueing ensures the minimum delay for moving real-time multimedia data across the network. While multicast filtering provides support for real-time network applications. Some of the management features are briefly described below.

Configuration Backup and Restore – You can save the current configuration settings to a file on a TFTP server, and later download this file to restore the switch configuration settings.

Authentication – This switch authenticates management access via the console port, Telnet or web browser. User names and passwords can be configured locally or can be verified via a remote authentication server (i.e., RADIUS or TACACS+). Port-based authentication is also supported via the IEEE 802.1x protocol. This protocol uses the Extensible Authentication Protocol over LANs (EAPOL) to request user credentials from the 802.1x client, and then verifies the client's right to access the network via an authentication server.

Other authentication options include HTTPS for secure management access via the web, SSH for secure management access over a Telnet-equivalent connection, IP address filtering for SNMP/web/Telnet management access, and MAC address filtering for port access.

Access Control Lists – ACLs provide packet filtering for IP frames (based on address, protocol, TCP/UDP port number or TCP control code) or any frames (based on MAC address or Ethernet type). ACLs can by used to improve performance by blocking unnecessary network traffic or to implement security controls by restricting access to specific network resources or protocols.

Port Configuration – You can manually configure the speed, duplex mode, and flow control used on specific ports, or use auto-negotiation to detect the connection settings used by the attached device. Use the full-duplex mode on ports whenever possible to double the throughput of switch connections. Flow control should also be enabled to control network traffic during periods of congestion and prevent the loss of packets when port buffer thresholds are exceeded. The switch supports flow control based on the IEEE 802.3x standard.

Downloaded from www.Manualslib.com manuals search engine

Rate Limiting – This feature controls the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Traffic that falls within the rate limit is transmitted, while packets that exceed the acceptable amount of traffic are dropped.

Port Mirroring – The switch can unobtrusively mirror traffic from any port to a monitor port. You can then attach a protocol analyzer or RMON probe to this port to perform traffic analysis and verify connection integrity.

Port Trunking – Ports can be combined into an aggregate connection. Trunks can be manually set up or dynamically configured using IEEE 802.3ad Link Aggregation Control Protocol (LACP). The additional ports dramatically increase the throughput across any connection, and provide redundancy by taking over the load if a port in the trunk should fail. The switch supports up to 6 trunks.

Broadcast Storm Control – Broadcast suppression prevents broadcast traffic from overwhelming the network. When enabled on a port, the level of broadcast traffic passing through the port is restricted. If broadcast traffic rises above a pre-defined threshold, it will be throttled until the level falls back beneath the threshold.

Static Addresses – A static address can be assigned to a specific interface on this switch. Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table. Static addresses can be used to provide network security by restricting access for a known host to a specific port.

IEEE 802.1D Bridge – The switch supports IEEE 802.1D transparent bridging. The address table facilitates data switching by learning addresses, and then filtering or forwarding traffic based on this information. The address table supports up to 16K addresses.

Store-and-Forward Switching – The switch copies each frame into its memory before forwarding them to another port. This ensures that all frames are a standard Ethernet size and have been verified for accuracy with the cyclic redundancy check (CRC). This prevents bad frames from entering the network and wasting bandwidth.

To avoid dropping frames on congested ports, the switch provides 1 MB for frame buffering. This buffer can queue packets awaiting transmission on congested networks.

Spanning Tree Protocol – The switch supports these spanning tree protocols:

Spanning Tree Protocol (STP, IEEE 802.1D) – This protocol adds a level of fault tolerance by allowing two or more redundant connections to be created between a pair of LAN segments. When there are multiple physical paths between segments, this protocol will choose a single path and disable all others to ensure that only one route exists between any two stations on the network. This prevents the creation of network loops. However, if the chosen path should fail for any reason, an alternate path will be activated to maintain the connection.

Rapid Spanning Tree Protocol (RSTP, IEEE 802.1w) – This protocol reduces the convergence time for network topology changes to about 10% of that required by the

Downloaded from www.Manualslib.com manuals search engine

older IEEE 802.1D STP standard. It is intended as a complete replacement for STP, but can still interoperate with switches running the older standard by automatically reconfiguring ports to STP-compliant mode if they detect STP protocol messages from attached devices.

Multiple Spanning Tree Protocol (MSTP, IEEE 802.1s) – This protocol is a direct extension of RSTP. It can provide an independent spanning tree for different VLANs. It simplifies network management, provides for even faster convergence than RSTP by limiting the size of each region, and prevents VLAN members from being segmented from the rest of the group (as sometimes occurs with IEEE 802.1D STP).

Virtual LANs – The switch supports up to 255 VLANs. A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. The switch supports tagged VLANs based on the IEEE 802.1Q standard. Members of VLAN groups can be dynamically learned via GVRP, or ports can be manually assigned to a specific set of VLANs. This allows the switch to restrict traffic to the VLAN groups to which a user has been assigned. By segmenting your network into VLANs, you can:

- Eliminate broadcast storms which severely degrade performance in a flat network.
- Simplify network management for node changes/moves by remotely configuring VLAN membership for any port, rather than having to manually change the network connection.
- Provide data security by restricting all traffic to the originating VLAN.
- Use private VLANs to restrict traffic to pass only between data ports and the uplink ports, thereby isolating adjacent ports within the same VLAN, and allowing you to limit the total number of VLANs that need to be configured.

Traffic Prioritization – This switch prioritizes each packet based on the required level of service, using eight priority queues with strict or Weighted Round Robin Queuing. It uses IEEE 802.1p and 802.1Q tags to prioritize incoming traffic based on input from the end-station application. These functions can be used to provide independent priorities for delay-sensitive data and best-effort data.

This switch also supports several common methods of prioritizing layer 3/4 traffic to meet application requirements. Traffic can be prioritized based on the priority bits in the IP frame's Type of Service (ToS) octet. When these services are enabled, the priorities are mapped to a Class of Service value by the switch, and the traffic then sent to the corresponding output queue.

Quality of Service – Differentiated Services (DiffServ) provides policy-based management mechanisms used for prioritizing network resources to meet the requirements of specific traffic types on a per hop basis. Each packet is classified upon entry into the network based on access lists, IP Precedence or DSCP values, or VLAN lists. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding.

Downloaded from www.Manualslib.com manuals search engine

Multicast Filtering – Specific multicast traffic can be assigned to its own VLAN to ensure that it does not interfere with normal network traffic and to guarantee real-time delivery by setting the required priority level for the designated VLAN. The switch uses IGMP Snooping and Query to manage multicast group registration.

AMAP – The AMAP protocol enables a switch to discover the topology of other AMAP-aware devices in the network. The protocol allows each switch to determine if other AMAP-aware switches are adjacent to it.

System Defaults

The switch's system defaults are provided in the configuration file "Factory_Default_Config.cfg." To reset the switch defaults, this file should be set as the startup configuration file (page 3-18).

The following table lists some of the basic system defaults.

Table 1-2. System Defaults

Function	Parameter	Default
Console Port Connection	Baud Rate	auto
	Data bits	8
	Stop bits	1
	Parity	none
	Local Console Timeout	0 (disabled)
Authentication	Privileged Exec Level	Username "admin" Password "admin"
	Normal Exec Level	Username "guest" Password "guest"
	Enable Privileged Exec from Normal Exec Level	Password "super"
	RADIUS Authentication	Disabled
	TACACS Authentication	Disabled
	802.1x Port Authentication	Disabled
	HTTPS	Enabled
	SSH	Enabled
	Port Security	Disabled
Web Management	HTTP Server	Enabled
	HTTP Port Number	80
	HTTP Secure Server	Enabled
	HTTP Secure Port Number	443

Downloaded from www.Manualslib.com manuals search engine

Table 1-2. System Defaults		
Function	**Parameter**	**Default**
SNMP	Community Strings	"public" (read only) "private" (read/write)
	Traps	Authentication traps: enabled Link-up-down events: enabled
	IP Filtering	Disabled
Port Configuration	Admin Status	Enabled
	Auto-negotiation	Enabled
	Flow Control	Disabled
	Port Capability	1000BASE-T – 10 Mbps half duplex 10 Mbps full duplex 100 Mbps half duplex 100 Mbps full duplex 1000 Mbps full duplex Full-duplex flow control disabled Symmetric flow control disabled 1000BASE-SX/LX/LH – 1000 Mbps full duplex Full-duplex flow control disabled Symmetric flow control disabled
AMAP	Status	Enabled
	Common Phase Timeout Interval	300 seconds
	Discovery Phase Timeout Interval	30 seconds
Rate Limiting	Input and output limits	Disabled
Port Trunking	Static Trunks	None
	LACP (all ports)	Disabled
Broadcast Storm Protection	Status	Enabled (all ports)
	Broadcast Limit Rate	500 packets per second
Spanning Tree Protocol	Status	Enabled, MSTP (Defaults: All values based on IEEE 802.1s)
	Fast Forwarding (Edge Port)	Disabled
Address Table	Aging Time	300 seconds

Downloaded from www.Manualslib.com manuals search engine

Table 1-2. System Defaults		
Function	**Parameter**	**Default**
Virtual LANs	Default VLAN	1
	PVID	1
	Acceptable Frame Type	All
	Ingress Filtering	Disabled
	Switchport Mode (Egress Mode)	Hybrid: tagged/untagged frames
	GVRP (global)	Disabled
	GVRP (port interface)	Disabled
Traffic Prioritization	Ingress Port Priority	0
	Weighted Round Robin	Queue: 0 1 2 3 4 5 6 7 Priority: 2 0 1 3 4 5 6 7
	IP Precedence Priority	Disabled
	IP DSCP Priority	Disabled
IP Settings	IP Address	0.0.0.0
	Subnet Mask	255.0.0.0
	Default Gateway	0.0.0.0
	DHCP	Client: Disabled
	BOOTP	Disabled
DNS Server	Lookup	Disabled
Multicast Filtering	IGMP Snooping	Snooping: Enabled Querier: Enabled
System Log	Status	Enabled
	Messages Logged	Levels 0-7 (all)
	Messages Logged to Flash	Levels 0-3
SMTP Email Alerts	Event Handler	Disabled
SNTP	Clock Synchronization	Disabled

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Chapter 2: Initial Configuration

Connecting to the Switch

Configuration Options

The switch includes a built-in network management agent. The agent offers a variety of management options, including SNMP, RMON and a Web-based interface. A PC may also be connected directly to the switch for configuration and monitoring via a command line interface (CLI).

Note: The IP address for this switch is unassigned by default. To change this address, see “Setting an IP Address” on page 2-4.

The switch’s HTTP Web agent allows you to configure switch parameters, monitor port connections, and display statistics using a standard Web browser such as Netscape Navigator version 6.2 and higher or Microsoft IE version 5.0 and higher. The switch’s Web management interface can be accessed from any computer attached to the network.

The CLI program can be accessed by a direct connection to the RS-232 serial console port on the switch, or remotely by a Telnet connection over the network.

The switch’s management agent also supports SNMP (Simple Network Management Protocol). This SNMP agent permits the switch to be managed from any system in the network using network management software such as HP OpenView.

The switch’s Web interface, CLI configuration program, and SNMP agent allow you to perform the following management functions:

- Set user names and passwords for up to 16 users
- Set an IP interface for a management VLAN
- Configure SNMP parameters
- Enable/disable any port
- Set the speed/duplex mode for any port
- Configure the bandwidth of any port by limiting input or output rates
- Configure up to 255 IEEE 802.1Q VLANs
- Enable GVRP automatic VLAN registration
- Configure IGMP multicast filtering
- Upload and download system firmware via TFTP
- Upload and download switch configuration files via TFTP
- Configure Spanning Tree parameters
- Configure Class of Service (CoS) priority queuing
- Configure up to 6 static or LACP trunks
- Enable port mirroring

Downloaded from www.Manualslib.com manuals search engine

- Set broadcast storm control on any port
- Display system information and statistics

Required Connections

The switch provides an RS-232 serial port that enables a connection to a PC or terminal for monitoring and configuring the switch. A null-modem console cable is provided with the switch.

Attach a VT100-compatible terminal, or a PC running a terminal emulation program to the switch. You can use the console cable provided with this package, or use a null-modem cable that complies with the wiring assignments shown in the Installation Guide.

To connect a terminal to the console port, complete the following steps:

1. Connect the console cable to the serial port on a terminal, or a PC running terminal emulation software, and tighten the captive retaining screws on the DB-9 connector.

2. Connect the other end of the cable to the RS-232 serial port on the switch.

3. Make sure the terminal emulation software is set as follows:
   - Select the appropriate serial port (COM port 1 or COM port 2).
   - Set to any of the following baud rates: 9600, 19200, 38400, 57600, 115200 (Note: Set to 9600 baud if want to view all the system initialization messages.)
   - Set the data format to 8 data bits, 1 stop bit, and no parity.
   - Set flow control to none.
   - Set the emulation mode to VT100.
   - When using HyperTerminal, select Terminal keys, not Windows keys.

Notes:
1. When using HyperTerminal with Microsoft® Windows® 2000, make sure that you have Windows 2000 Service Pack 2 or later installed. Windows 2000 Service Pack 2 fixes the problem of arrow keys not functioning in HyperTerminal's VT100 emulation. See www.microsoft.com for information on Windows 2000 service packs.
2. Refer to "Line Commands" on page 4-10 for a complete description of console configuration options.
3. Once you have set up the terminal correctly, the console login screen will be displayed.

For a description of how to use the CLI, see "Using the Command Line Interface" on page 4-1. For a list of all the CLI commands and detailed information on using the CLI, refer to "Command Groups" on page 4-9.

Downloaded from www.Manualslib.com manuals search engine

Remote Connections

Prior to accessing the switch's onboard agent via a network connection, you must first configure it with a valid IP address, subnet mask, and default gateway using a console connection, DHCP or BOOTP protocol.

The IP address for this switch is unassigned by default. To manually configure this address or enable dynamic address assignment via DHCP or BOOTP, see "Setting an IP Address" on page 2-4.

Note: This switch supports four concurrent Telnet or SSH sessions.

After configuring the switch's IP parameters, you can access the onboard configuration program from anywhere within the attached network. The onboard configuration program can be accessed using Telnet from any computer attached to the network. The switch can also be managed by any computer using a web browser (Internet Explorer 5.0 or above, or Netscape Navigator 6.2 or above), or from a network computer using SNMP network management software.

Note: The onboard program only provides access to basic configuration functions. To access the full range of SNMP management functions, you must use SNMP-based network management software.

Basic Configuration

Console Connection

The CLI program provides two different command levels — normal access level (Normal Exec) and privileged access level (Privileged Exec). The commands available at the Normal Exec level are a limited subset of those available at the Privileged Exec level and allow you to only display information and use basic utilities. To fully configure the switch parameters, you must access the CLI at the Privileged Exec level.

Access to both CLI levels are controlled by user names and passwords. The switch has a default user name and password for each level. To log into the CLI at the Privileged Exec level using the default user name and password, perform these steps:

1. To initiate your console connection, press <Enter>. The "User Access Verification" procedure starts.
2. At the Username prompt, enter "admin."
3. At the Password prompt, enter "switch." (The password characters are not displayed on the console screen.)
4. The session is opened and the CLI displays the "Console#" prompt indicating you have access at the Privileged Exec level.

Downloaded from www.Manualslib.com manuals search engine

Setting Passwords

Note: If this is your first time to log into the CLI program, you should define new passwords for both default user names using the “username” command, record them and put them in a safe place.

Passwords can consist of up to 8 alphanumeric characters and are case sensitive. To prevent unauthorized access to the switch, set the passwords as follows:

1. Open the console interface with the default user name “admin” and password “switch” to access the Privileged Exec level.
2. Type “configure” and press <Enter>.
3. Type “username guest password 0 *password*,” for the Normal Exec level, where *password* is your new password. Press <Enter>.
4. Type “username admin password 0 *password*,” for the Privileged Exec level, where *password* is your new password. Press <Enter>.

```
Username: admin
Password: switch

      CLI session with the OmniStack 6300 is opened.
      To end the CLI session, enter [Exit].

Console#configure
Console(config)#username guest password 0 [password]
Console(config)#username admin password 0 [password]
Console(config)#
```

Setting an IP Address

You must establish IP address information for the switch to obtain management access through the network. This can be done in either of the following ways:

Manual — You have to input the information, including IP address and subnet mask. If your management station is not in the same IP subnet as the switch, you will also need to specify the default gateway router.

Dynamic — The switch sends IP configuration requests to BOOTP or DHCP address allocation servers on the network.

Manual Configuration

You can manually assign an IP address to the switch. You may also need to specify a default gateway that resides between this device and management stations that exist on another network segment. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. Anything outside this format will not be accepted by the CLI program.

Note: The IP address for this switch is unassigned by default.

Downloaded from www.Manualslib.com manuals search engine

Before you can assign an IP address to the switch, you must obtain the following information from your network administrator:

- IP address for the switch
- Default gateway for the network
- Network mask for this network

To assign an IP address to the switch, complete the following steps:

1. From the Privileged Exec level global configuration mode prompt, type "interface vlan 1" to access the interface-configuration mode. Press <Enter>.
2. Type "ip address *ip-address netmask*," where "ip-address" is the switch IP address and "netmask" is the network mask for the network. Press <Enter>.
3. Type "exit" to return to the global configuration mode prompt. Press <Enter>.
4. To set the IP address of the default gateway for the network to which the switch belongs, type "ip default-gateway *gateway*," where "gateway" is the IP address of the default gateway. Press <Enter>.

```
Console(config)#interface vlan 1
Console(config-if)#ip address 192.168.1.5 255.255.255.0
Console(config-if)#exit
Console(config)#ip default-gateway 192.168.1.254
Console(config)#
```

Dynamic Configuration

If you select the "bootp" or "dhcp" option, IP will be enabled but will not function until a BOOTP or DHCP reply has been received. You therefore need to use the "ip dhcp restart client" command to start broadcasting service requests. Requests will be sent periodically in an effort to obtain IP configuration information. (BOOTP and DHCP values can include the IP address, subnet mask, and default gateway.)

If the "bootp" or "dhcp" option is saved to the startup-config file (step 6), then the switch will start broadcasting service requests as soon as it is powered on.

To automatically configure the switch by communicating with BOOTP or DHCP address allocation servers on the network, complete the following steps:

1. From the Global Configuration mode prompt, type "interface vlan 1" to access the interface-configuration mode. Press <Enter>.
2. At the interface-configuration mode prompt, use one of the following commands:
   - To obtain IP settings via DHCP, type "ip address dhcp" and press <Enter>.
   - To obtain IP settings via BOOTP, type "ip address bootp" and press <Enter>.
3. Type "end" to return to the Privileged Exec mode. Press <Enter>.
4. Type "ip dhcp restart client" to begin broadcasting service requests. Press <Enter>.

Downloaded from www.Manualslib.com manuals search engine

5. Wait a few minutes, and then check the IP configuration settings by typing the “show ip interface” command. Press <Enter>.

6. Then save your configuration changes by typing “copy running-config startup-config.” Enter the startup file name and press <Enter>.

```
Console(config)#interface vlan 1
Console(config-if)#ip address dhcp
Console(config-if)#end
Console#ip dhcp restart client
Console#show ip interface
 IP address and netmask: 192.168.1.54 255.255.255.0 on VLAN 1,
 and address mode: User specified.
Console#copy running-config startup-config
Startup configuration file name []: startup
\Write to FLASH Programming.

\Write to FLASH finish.
Success.
```

Enabling SNMP Management Access

The switch can be configured to accept management commands from Simple Network Management Protocol (SNMP) applications such as HP OpenView. You can configure the switch to (1) respond to SNMP requests or (2) generate SNMP traps.

When SNMP management stations send requests to the switch (either to return information or to set a parameter), the switch provides the requested data or sets the specified parameter. The switch can also be configured to send information to SNMP managers (without being requested by the managers) through trap messages, which inform the manager that certain events have occurred.

Community Strings

Community strings are used to control management access to SNMP stations, as well as to authorize SNMP stations to receive trap messages from the switch. You therefore need to assign community strings to specified users or user groups, and set the access level.

The default strings are:

- **public** - with read-only access. Authorized management stations are only able to retrieve MIB objects.
- **private** - with read-write access. Authorized management stations are able to both retrieve and modify MIB objects.

Note: If you do not intend to utilize SNMP, we recommend that you delete both of the default community strings. If there are no community strings, then SNMP management access to the switch is disabled.

To prevent unauthorized access to the switch via SNMP, it is recommended that you change the default community strings.

Downloaded from www.Manualslib.com manuals search engine

To configure a community string, complete the following steps:

1. From the Privileged Exec level global configuration mode prompt, type "snmp-server community *string mode*," where "string" is the community access string and "mode" is **rw** (read/write) or **ro** (read only). Press <Enter>. (Note that the default mode is read only.)

2. To remove an existing string, simply type "no snmp-server community *string*," where "string" is the community access string to remove. Press <Enter>.

```
Console(config)#snmp-server community admin rw
Console(config)#snmp-server community private
Console(config)#
```

Trap Receivers

You can also specify SNMP stations that are to receive traps from the switch.

To configure a trap receiver, complete the following steps:

1. From the Privileged Exec level global configuration mode prompt, type "snmp-server host *host-address community-string*," where "host-address" is the IP address for the trap receiver and "community-string" is the string associated with that host. Press <Enter>.

2. In order to configure the switch to send SNMP notifications, you must enter at least one snmp-server enable traps command. Type "snmp-server enable traps *type*," where "type" is either **authentication** or **link-up-down**. Press <Enter>.

```
Console(config)#snmp-server enable traps link-up-down
Console(config)#
```

Saving Configuration Settings

Configuration commands only modify the running configuration file and are not saved when the switch is rebooted. To save all your configuration changes in nonvolatile storage, you must copy the running configuration file to the start-up configuration file using the "copy" command.

To save the current configuration settings, enter the following command:

1. From the Privileged Exec mode prompt, type "copy running-config startup-config" and press <Enter>.

Downloaded from www.Manualslib.com manuals search engine

2. Enter the name of the start-up file. Press <Enter>.

```
Console#copy running-config startup-config
Startup configuration file name []: startup
\Write to FLASH Programming.

\Write to FLASH finish.
Success.

Console#
```

Managing System Files

The switch's flash memory supports three types of system files that can be managed by the CLI program, Web interface, or SNMP. The switch's file system allows files to be uploaded and downloaded, copied, deleted, and set as a start-up file.

The three types of files are:

- **Configuration** — This file stores system configuration information and is created when configuration settings are saved. Saved configuration files can be selected as a system start-up file or can be uploaded via TFTP to a server for backup. A file named "Factory_Default_Config.cfg" contains all the system default settings and cannot be deleted from the system. See "Saving or Restoring Configuration Settings" on page 3-17 for more information.
- **Operation Code** — System software that is executed after boot-up, also known as run-time code. This code runs the switch operations and provides the CLI and Web management interfaces. See "Managing Firmware" on page 3-15 for more information.
- **Diagnostic Code** — Software that is run during system boot-up, also known as POST (Power On Self-Test).

Due to the size limit of the flash memory, the switch supports only two operation code files. However, you can have as many diagnostic code files and configuration files as available flash memory space allows.

In the system flash memory, one file of each type must be set as the start-up file. During a system boot, the diagnostic and operation code files set as the start-up file are run, and then the start-up configuration file is loaded.

Note that configuration files should be downloaded using a file name that reflects the contents or usage of the file settings. If you download directly to the running-config, the system will reboot, and the settings will have to be copied from the running-config to a permanent file.

Downloaded from www.Manualslib.com manuals search engine

Chapter 3: Configuring the Switch

Using the Web Interface

This switch provides an embedded HTTP Web agent. Using a Web browser you can configure the switch and view statistics to monitor network activity. The Web agent can be accessed by any computer on the network using a standard Web browser (Internet Explorer 5.0 or above, or Netscape Navigator 6.2 or above).

Note: You can also use the Command Line Interface (CLI) to manage the switch over a serial connection to the console port or via Telnet. For more information on using the CLI, refer to Chapter 4: “Command Line Interface.”

Prior to accessing the switch from a Web browser, be sure you have first performed the following tasks:

1. Configure the switch with a valid IP address, subnet mask, and default gateway using an out-of-band serial connection, BOOTP or DHCP protocol. (See “Setting an IP Address” on page 2-4.)
2. Set user names and passwords using an out-of-band serial connection. Access to the Web agent is controlled by the same user names and passwords as the onboard configuration program. (See “Setting Passwords” on page 2-4.)
3. After you enter a user name and password, you will have access to the system configuration program.

Notes:

1. You are allowed three attempts to enter the correct password; on the third failed attempt the current connection is terminated.

2. If you log into the Web interface as guest (Normal Exec level), you can view the configuration settings or change the guest password. If you log in as “admin” (Privileged Exec level), you can change the settings on any page.

3. If the path between your management station and this switch does not pass through any device that uses the Spanning Tree Algorithm, then you can set the switch port attached to your management station to fast forwarding (i.e., enable Admin Edge Port) to improve the switch’s response time to management commands issued through the web interface. See “Configuring Interface Settings” on page 3-114.

Downloaded from www.Manualslib.com manuals search engine

Navigating the Web Browser Interface

To access the web-browser interface you must first enter a user name and password. The administrator has Read/Write access to all configuration parameters and statistics. The default user name and password for the administrator is “admin.”

Home Page

When your web browser connects with the switch’s web agent, the home page is displayed as shown below. The home page displays the Main Menu on the left side of the screen and System Information on the right side. The Main Menu links are used to navigate to other menus, and display configuration parameters and statistics.

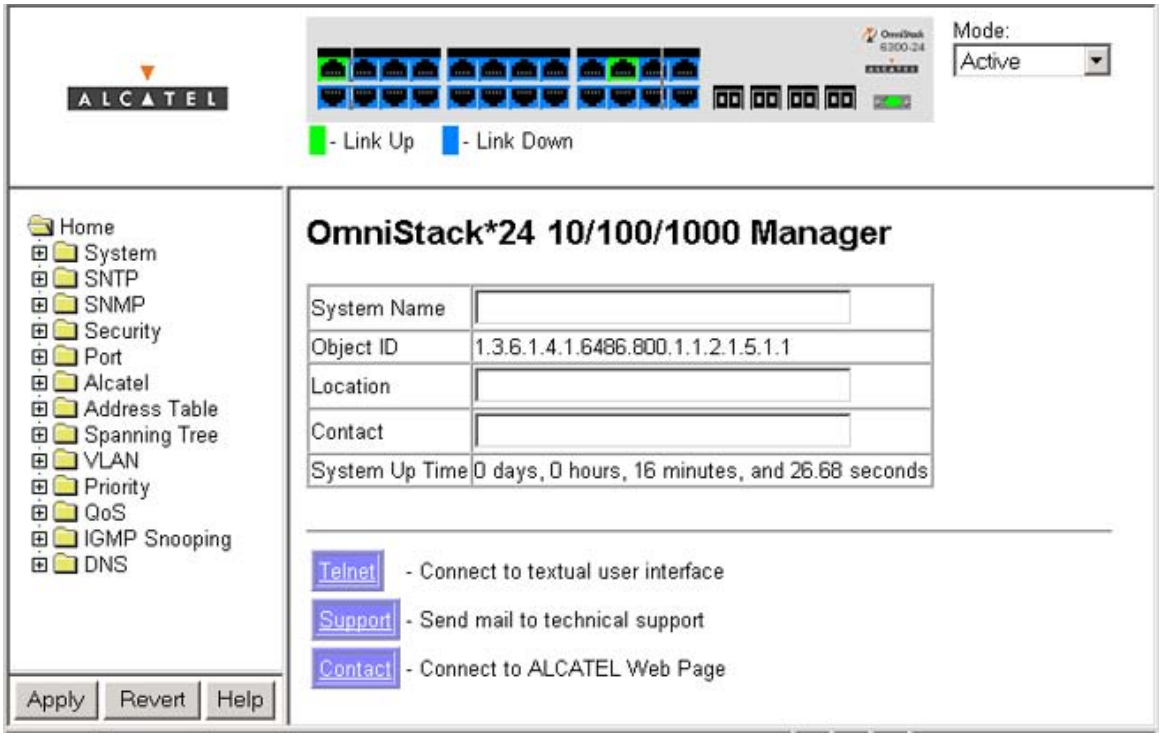

Figure 3-1. Home Page

Configuration Options

Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, be sure to click on the “Apply” or “Apply Changes” button to confirm the new setting. The following table summarizes the web page configuration buttons.

Downloaded from www.Manualslib.com manuals search engine

Table 3-2. Configuration Options	
Button	**Action**
Revert	Cancels specified values and restores current values prior to pressing “Apply” or “Apply Changes.”
Refresh	Immediately updates values for the current page.
Apply	Sets specified values to the system.
Apply Changes	Sets specified values to the system.

Notes: **1.** To ensure proper screen refresh, be sure that Internet Explorer 5.x is configured as follows: Under the menu “Tools / Internet Options / General / Temporary Internet Files / Settings,” the setting for item “Check for newer versions of stored pages” should be “Every visit to the page.”

2. When using Internet Explorer 5.0, you may have to manually refresh the screen after making configuration changes by pressing the browser’s refresh button.

Panel Display

The web agent displays an image of the switch’s ports. The Mode can be set to display different information for the ports, including Active (i.e., up or down), Duplex (i.e., half or full duplex, or Flow Control (i.e., with or without flow control). Clicking on the image of a port opens the Port Configuration page as described on page 3-77.

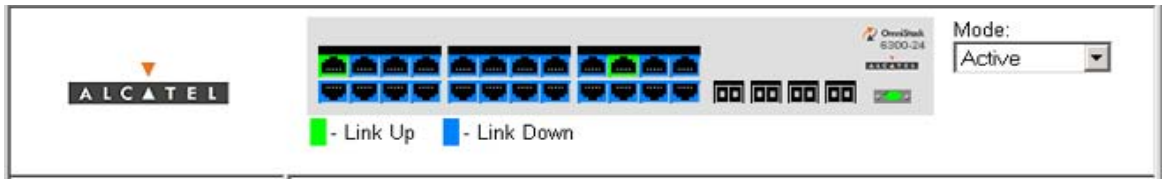

Figure 3-3. Ports Panel

Main Menu

Using the onboard web agent, you can define system parameters, manage and control the switch, and all its ports, or monitor network conditions. The following table briefly describes the selections available from this program.

Table 3-4. Main Menu		
Menu	**Description**	**Page**
System		3-8
System Information	Provides basic system description, including contact information	3-8
Switch Information	Shows the number of ports, hardware/firmware version numbers, and power status	3-10
Bridge Extension	Shows the bridge extension parameters	3-11
IP Configuration	Sets the IP address for management access	3-12

Downloaded from www.Manualslib.com manuals search engine

Table 3-4. Main Menu		
Menu	**Description**	**Page**
Jumbo Frame	Enables jumbo frame support	3-15
File		3-16
Firmware	Manages code image files	3-16
Configuration	Manages switch configuration files	3-17
Line		3-18
Console	Sets console port connection parameters	3-18
Telnet	Sets telnet connection parameters	3-21
Log		3-23
Logs	Stores and displays error messages	3-24
System Logs	Sends error messages to a logging process	3-24
Remote Logs	Configures the logging of messages to a remote logging process	3-25
SMTP	Sends an SMTP client message to a participating server	3-27
Reset	Restarts the switch	3-29
SNTP		3-29
Configuration	Configures SNTP client settings, including broadcast mode or a specified list of servers	3-30
Clock Time Zone	Sets the local time zone for the system clock	3-31
SNMP		3-31
Configuration	Configures community strings and related trap functions	3-33
Agent Status	Allows SNMP to be enabled or disabled	3-34
SNMPv3		3-35
Engine ID	Sets the SNMP v3 engine ID	3-35
Users	Configures SNMP v3 users	3-36
Groups	Configures SNMP v3 groups	3-38
Views	Configures SNMP v3 views	3-40
Security		3-25
Passwords	Assigns a new password for the current user	3-41
Authentication Settings	Configures authentication sequence, RADIUS and TACACS	3-42
HTTPS Settings	Configures secure HTTP settings	3-45
SSH		3-47
Settings	Configures Secure Shell server settings	3-51
Host-Key Settings	Generates the host key pair (public and private)	3-49

Downloaded from www.Manualslib.com manuals search engine

Table 3-4. Main Menu		
Menu	**Description**	**Page**
Port Security	Configures per port security, including status, response for security breach, and maximum allowed MAC addresses	3-52
802.1x	Port authentication	3-54
Information	Displays global configuration settings	3-55
Configuration	Configures protocol parameters	3-57
Port Configuration	Sets the authentication mode for individual ports	3-58
Statistics	Displays protocol statistics for the selected port	3-59
ACL		3-61
Configuration	Configures packet filtering based on IP or MAC addresses	3-61
Mask Configuration	Controls the order in which ACL rules are checked	3-68
Port Binding	Binds a port to the specified ACL	3-72
IP Filtering	Sets IP addresses of clients allowed management access via the Web, SNMP, and Telnet	3-73
Port		3-75
Port Information	Displays port connection status	3-75
Trunk Information	Displays trunk connection status	3-75
Port Configuration	Configures port connection settings	3-77
Trunk Configuration	Configures trunk connection settings	3-77
Trunk Membership	Specifies ports to group into static trunks	3-80
LACP		3-81
Configuration	Allows ports to dynamically join trunks	3-81
Aggregation Port	Configures system priority, admin key, and port priority	3-83
Port Counters Information	Displays statistics for LACP protocol messages	3-85
Port Internal Information	Displays settings and operational state for local side	3-86
Port Neighbors Information	Displays settings and operational state for remote side	3-88
Port Broadcast Control	Sets the broadcast storm threshold for each port	3-90
Trunk Broadcast Control	Sets the broadcast storm threshold for each trunk	3-90
Mirror Port Configuration	Sets the source and target ports for mirroring	3-91
Rate Limit		3-92
Input Port Configuration	Sets the input rate limit for each port	3-92
Input Trunk Configuration	Sets the input rate limit for each trunk	3-92
Output Port Configuration	Sets the output rate limit for each port	3-92
Output Trunk Configuration	Sets the output rate limit for each trunk	3-92

Downloaded from www.Manualslib.com manuals search engine

Table 3-4. Main Menu		
Menu	**Description**	**Page**
Port Statistics	Lists Ethernet and RMON port statistics	3-93
Alcatel		3-98
AMAP	Alcatel Mapping Adjacency Protocol (AMAP)	3-98
Settings	Configures AMAP parameters	3-98
Information	Displays information on attached AMAP-aware devices	3-99
Address Table		3-80
Static Addresses	Displays entries for interface, address or VLAN	3-100
Dynamic Addresses	Displays or edits static entries in the Address Table	3-101
Address Aging	Sets timeout for dynamically learned entries	3-102
Spanning Tree		3-103
STA		3-103
Information	Displays STA values used for the bridge	3-104
Configuration	Configures global bridge settings for STA, RSTP and MSTP	3-107
Port Information	Displays individual port settings for STA	3-111
Trunk Information	Displays individual trunk settings for STA	3-111
Port Configuration	Configures individual port settings for STA	3-114
Trunk Configuration	Configures individual trunk settings for STA	3-114
MSTP		3-116
VLAN Configuration	Configures priority and VLANs for a spanning tree instance	3-116
Port Information	Displays port settings for a specified MST instance	3-119
Trunk Information	Displays trunk settings for a specified MST instance	3-119
Port Configuration	Configures port settings for a specified MST instance	3-121
Trunk Configuration	Configures trunk settings for a specified MST instance	3-121
VLAN		3-122
802.1Q VLAN		3-122
GVRP Status	Enables GVRP VLAN registration protocol	3-125
Basic Information	Displays information on the VLAN type supported by this switch	3-126
Current Table	Shows the current port members of each VLAN and whether or not the port is tagged or untagged	3-127
Static List	Used to create or remove VLAN groups	3-129
Static Table	Modifies the settings for an existing VLAN	3-130
Static Membership	Configures membership type for interfaces, including tagged, untagged or forbidden	3-132

Downloaded from www.Manualslib.com manuals search engine

Table 3-4. Main Menu		
Menu	**Description**	**Page**
Port Configuration	Specifies default PVID and VLAN attributes	3-133
Trunk Configuration	Specifies default trunk VID and VLAN attributes	3-133
Private VLAN		3-135
Status	Enables or disables the private VLAN	3-135
Link Status	Configures the private VLAN	3-136
Protocol VLAN		3-136
Configuration	Creates a protocol group, specifying the supported protocols	3-137
Port Configuration	Maps a protocol group to a VLAN	3-137
Priority		3-139
Default Port Priority	Sets the default priority for each port	3-139
Default Trunk Priority	Sets the default priority for each trunk	3-139
Traffic Classes	Maps IEEE 802.1p priority tags to output queues	3-141
Traffic Classes Status	Enables/disables traffic class priorities (not implemented)	NA
Queue Mode	Sets queue mode to strict priority or Weighted Round-Robin	3-143
Queue Scheduling	Configures Weighted Round Robin queueing	3-143
IP Precedence/ DSCP Priority Status	Globally selects IP Precedence or DSCP Priority, or disables both.	3-145
IP Precedence Priority	Sets IP Type of Service priority, mapping the precedence tag to a class-of-service value	3-146
IP DSCP Priority	Sets IP Differentiated Services Code Point priority, mapping a DSCP tag to a class-of-service value	3-147
IP Port Priority Status	Globally enables or disables IP Port Priority	3-149
IP Port Priority	Sets TCP/UDP port priority, defining the socket number and associated class-of-service value	3-149
ACL CoS Priority	Sets the CoS value and corresponding output queue for packets matching an ACL rule	3-133
ACL Marker	Change traffic priorities for frames matching an ACL rule	3-151
QoS		3-153
DiffServ	Configure QoS classification criteria and service policies	3-153
Class Map	Creates a class map for a type of traffic	3-154
Policy Map	Creates a policy map for multiple interfaces	3-156
Service Policy	Applies a policy map defined to the input or output of a particular interface	3-159

Downloaded from www.Manualslib.com manuals search engine

Table 3-4. Main Menu		
Menu	**Description**	**Page**
IGMP Snooping		3-160
IGMP Configuration	Enables multicast filtering; configures parameters for multicast query	3-161
Multicast Router Port Information	Displays the ports that are attached to a neighboring multicast router for each VLAN ID	3-162
Static Multicast Router Port Configuration	Assigns ports that are attached to a neighboring multicast router	3-163
IP Multicast Registration Table	Displays all multicast groups active on this switch, including multicast IP addresses and VLAN ID	3-164
IGMP Member Port Table	Indicates multicast addresses associated with the selected VLAN	3-165
DNS		3-166
General Configuration	Enables DNS; configures domain name and domain list; and specifies IP address of name servers for dynamic lookup	3-167
Static Host Table	Configures static entries for domain name to address mapping	3-169
Cache	Displays cache entries discovered by designated name servers	3-171

Basic Configuration

Displaying System Information

You can easily identify the system by displaying the device name, location and contact information.

Field Attributes

- **System Name** – Name assigned to the switch system.
- **Object ID** – MIB II object ID for switch's network management subsystem.
- **Location** – Specifies the system location.
- **Contact** – Administrator responsible for the system.
- **System Up Time** – Length of time the management agent has been up.

These additional parameters are displayed for the CLI.

- **MAC Address** – The physical layer address for this switch.
- **Web server** – Shows if management access via HTTP is enabled.
- **Web server port** – Shows the TCP port number used by the web interface.
- **Web secure server** – Shows if management access via HTTPS is enabled.
- **Web secure server port** – Shows the TCP port used by the HTTPS interface.
- **POST result** – Shows results of the power-on self-test

Downloaded from www.Manualslib.com manuals search engine

Web – Click System, System Information. Specify the system name, location, and contact information for the system administrator, then click Apply. (This page also includes a Telnet button that allows access to the Command Line Interface via Telnet.)

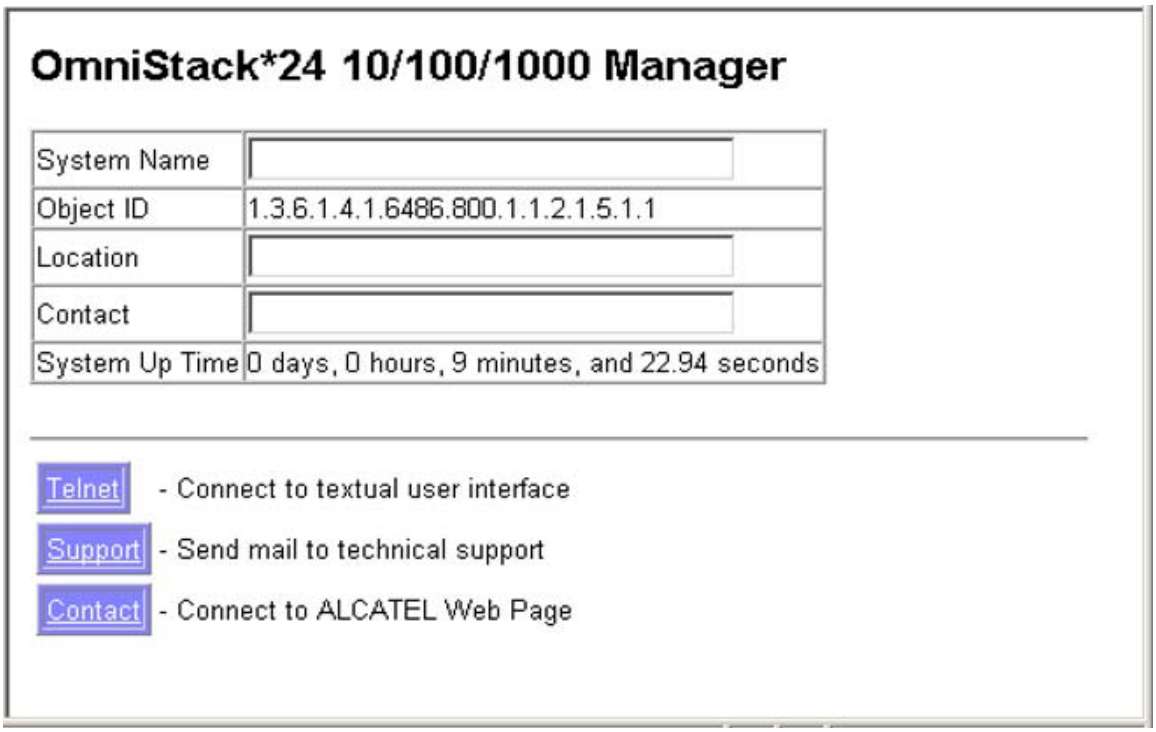

Figure 3-5. System Information

CLI – Specify the hostname, location and contact information.

```
Console(config)#hostname R&D 5                                    4-25
Console(config)#snmp-server location WC 9                         4-110
Console(config)#snmp-server contact Ted                           4-110
Console(config)#end
Console#show system                                               4-59
System description: OmniStack*24 10/100/1000
System OID string: 1.3.6.1.4.1.6486.800.1.1.2.1.5.1.1
System information
 System Up time: 0 days, 0 hours, 23 minutes, and 26.59 seconds
 System Name            : R&D 5
 System Location        : WC 9
 System Contact         : Ted
 MAC address            : 00-30-F1-99-B3-DB
 Web server             : enable
 Web server port        : 80
 Web secure server      : enable
 Web secure server port : 443
 POST result
UART LOOP BACK Test.........PASS
DRAM Test..................PASS
Timer Test.................PASS
PCI Device 1 Test..........PASS
PCI Device 2 Test..........PASS
Switch Int Loopback test.....PASS

Done All Pass.
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Displaying Switch Hardware/Software Versions

Use the Switch Information page to display hardware/firmware version numbers for the main board and management software, as well as the power status of the system.

Field Attributes

Main Board

- **Serial Number** – The serial number of the switch.
- **Number of Ports** – Number of built-in RJ-45 ports and expansion ports.
- **Hardware Version** – Hardware version of the main board.
- **Internal Power Status** – Displays the status of the internal power supply.
- **Redundant Power Status*** – Displays the status of the redundant power supply.

* CLI only.

Management Software

- **Loader Version** – Version number of loader code.
- **Boot-ROM Version** – Version of Power-On Self-Test (POST) and boot code.
- **Operation Code Version** – Version number of runtime code.
- **Role** – Shows that this switch is operating as Master (i.e., operating stand-alone).

Web – Click System, Switch Information.

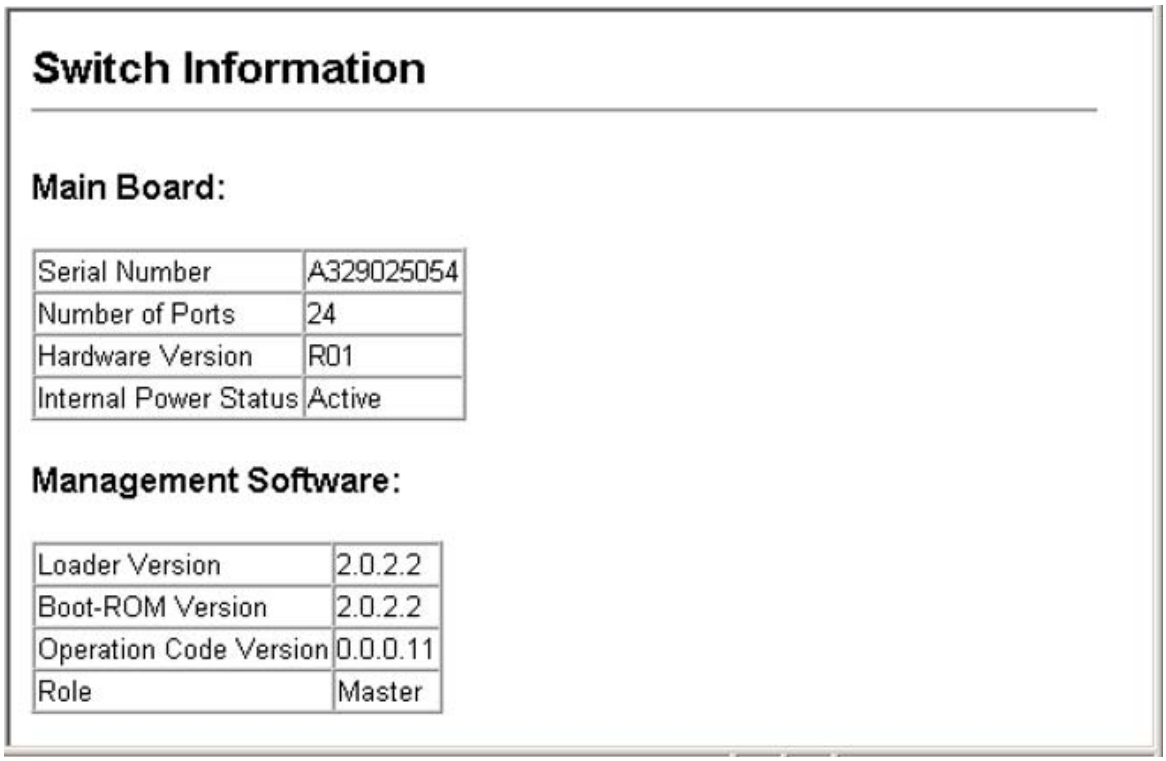

Figure 3-6. Switch Information

Downloaded from www.Manualslib.com manuals search engine

CLI – Use the following command to display version information.

```
Console#show version                                              4-60
Unit1
 Serial number           :A329025054
 Hardware version        :R01
 Number of ports         :24
 Main power status       :up
 Redundant power status :not present
Agent(Primary)
 Unit id                 :1
 Loader version          :2.0.2.2
 Boot rom version        :2.0.2.2
 Operation code version :10.31.23.17
Console#
```

Displaying Bridge Extension Capabilities

The Bridge MIB includes extensions for managed devices that support Multicast Filtering, Traffic Classes, and Virtual LANs. You can access these extensions to display default settings for the key variables.

Field Attributes

- **Extended Multicast Filtering Services** – This switch does not support the filtering of individual multicast addresses based on GMRP (GARP Multicast Registration Protocol).
- **Traffic Classes** – This switch provides mapping of user priorities to multiple traffic classes. (Refer to “Class of Service Configuration” on page 3-139.)
- **Static Entry Individual Port** – This switch allows static filtering for unicast and multicast addresses. (Refer to “Setting Static Addresses” on page 3-100.)
- **VLAN Learning** – This switch uses Independent VLAN Learning (IVL), where each port maintains its own filtering database.
- **Configurable PVID Tagging** – This switch allows you to override the default Port VLAN ID (PVID used in frame tags) and egress status (VLAN-Tagged or Untagged) on each port. (Refer to “VLAN Configuration” on page 3-122.)
- **Local VLAN Capable** – This switch supports multiple local bridges; i.e., multiple spanning trees. (Refer to “Configuring Multiple Spanning Trees” on page 3-116.)
- **GMRP** – GARP Multicast Registration Protocol (GMRP) allows network devices to register endstations with multicast groups. This switch does not support GMRP; it uses the Internet Group Management Protocol (IGMP) to provide automatic multicast filtering.

Downloaded from www.Manualslib.com manuals search engine

Web – Click System, Bridge Extension.

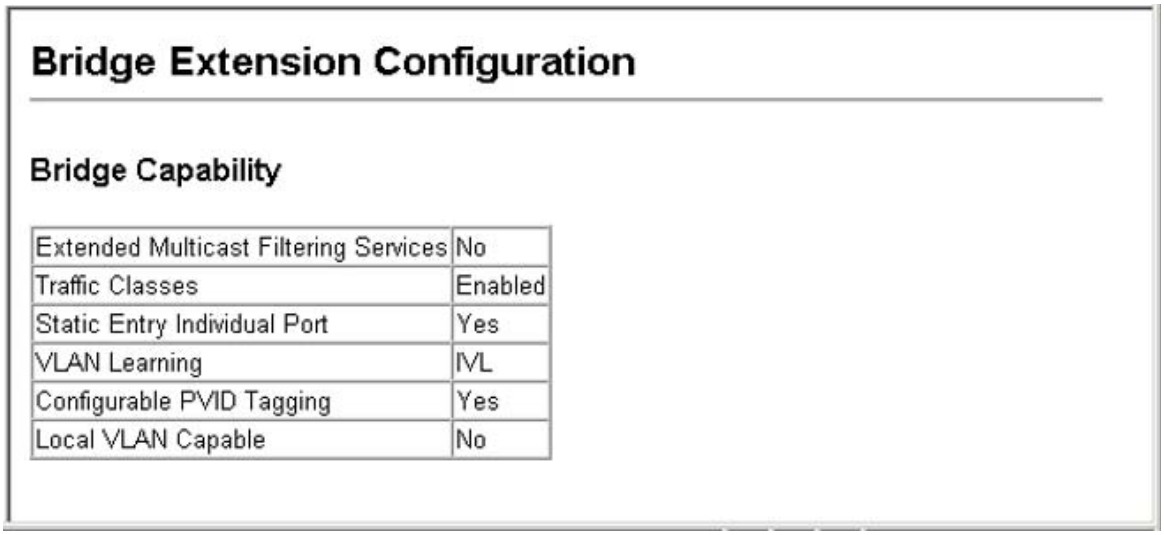

Bridge Extension Configuration

Bridge Capability

Extended Multicast Filtering Services	No
Traffic Classes	Enabled
Static Entry Individual Port	Yes
VLAN Learning	IVL
Configurable PVID Tagging	Yes
Local VLAN Capable	No

Figure 3-7. Bridge Exentsion Configuration

CLI – Enter the following command.

```
Console#show bridge-ext                                          4-193
 Max support vlan numbers: 255
 Max support vlan ID: 4094
 Extended multicast filtering services: No
 Static entry individual port: Yes
 VLAN learning: IVL
 Configurable PVID tagging: Yes
 Local VLAN capable: Yes
 Traffic classes: Enabled
 Global GVRP status: Disabled
 GMRP: Disabled
Console#
```

Setting the Switch's IP Address

This section describes how to configure an IP interface for management access over the network. The IP address for this switch is unassigned by default. To manually configure an address, you need to change the switch's default settings (IP address 0.0.0.0 and netmask 255.0.0.0) to values that are compatible with your network. You may also need to a establish a default gateway between the switch and management stations that exist on another network segment.

You can manually configure a specific IP address, or direct the device to obtain an address from a BOOTP or DHCP server. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. Anything outside this format will not be accepted by the CLI program.

Command Attributes

- **Management VLAN** – ID of the configured VLAN (1-4094, no leading zeroes). By default, all ports on the switch are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address.

Downloaded from www.Manualslib.com manuals search engine

- **IP Address Mode** – Specifies whether IP functionality is enabled via manual configuration (Static), Dynamic Host Configuration Protocol (DHCP), or Boot Protocol (BOOTP). If DHCP/BOOTP is enabled, IP will not function until a reply has been received from the server. Requests will be broadcast periodically by the switch for an IP address. (DHCP/BOOTP values can include the IP address, subnet mask, and default gateway.)
- **IP Address** – Address of the VLAN interface that is allowed management access. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. (Default: 0.0.0.0)
- **Subnet Mask** – This mask identifies the host address bits used for routing to specific subnets. (Default: 255.0.0.0)
- **Default Gateway** – IP address of the gateway router between this device and management stations that exist on other network segments. (Default: 0.0.0.0)
- **MAC Address** – The physical layer address for this switch.

Manual Configuration

Web – Click System, IP Configuration. Select the VLAN through which the management station is attached, set the IP Address Mode to "Static," enter the IP address, subnet mask and gateway, then click Apply.

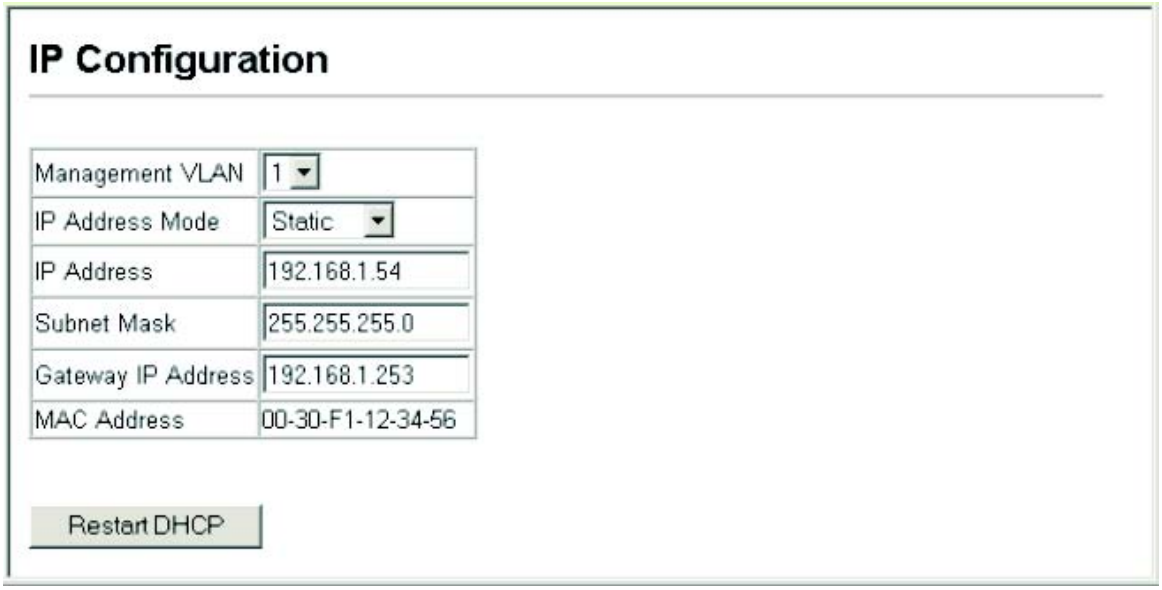

Figure 3-8. IP Configuration

CLI – Specify the management interface, IP address and default gateway.

```
Console#config
Console(config)#interface vlan 1                                    4-181
Console(config-if)#ip address 10.1.0.254 255.255.255.0              4-227
Console(config-if)#exit
Console(config)#ip default-gateway 192.168.1.254                    4-228
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

Using DHCP/BOOTP

If your network provides DHCP/BOOTP services, you can configure the switch to be dynamically configured by these services.

Web – Click System, IP Configuration. Specify the VLAN to which the management station is attached, set the IP Address Mode to DHCP or BOOTP. Click Apply to save your changes. Then click Restart DHCP to immediately request a new address. Note that the switch will also broadcast a request for IP configuration settings on each power reset.

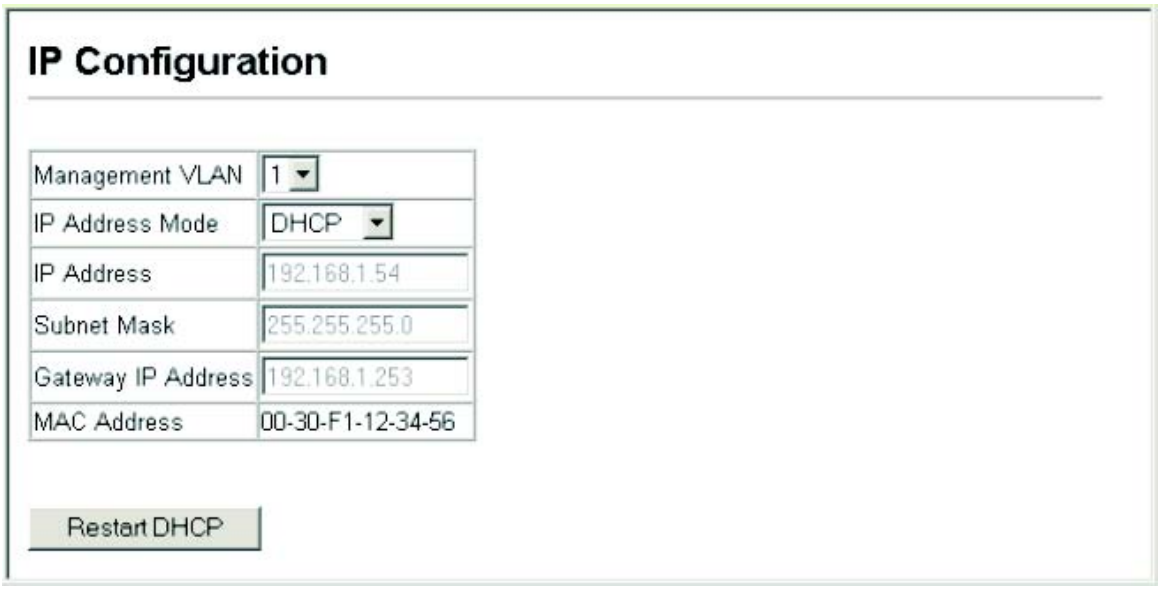

Figure 3-9. Selecting DHCP Mode

Note: If you lose your management connection, use a console connection and enter "show ip interface" to determine the new switch address.

CLI – Specify the management interface, and set the IP address mode to DHCP or BOOTP, and then enter the "ip dhcp restart client" command.

```
Console#config
Console(config)#interface vlan 1                                    4-130
Console(config-if)#ip address dhcp                                  4-227
Console(config-if)#end
Console#ip dhcp restart client                                      4-121
Console#show ip interface                                           4-223
 IP address and netmask: 192.168.1.54 255.255.255.0 on VLAN 1,
 and address mode: User specified.
Console#
```

Renewing DCHP – DHCP may lease addresses to clients indefinitely or for a specific period of time. If the address expires or the switch is moved to another network segment, you will lose management access to the switch. In this case, you can reboot the switch or submit a client request to restart DHCP service via the CLI.

Web – If the address assigned by DHCP is no longer functioning, you will not be able to renew the IP settings via the web interface. You can only restart DHCP service via the web interface if the current address is still available.

Downloaded from www.Manualslib.com manuals search engine

CLI – Enter the following command to restart DHCP service.

```
Console#ip dhcp restart client                                    4-121
Console#
```

Enabling Jumbo Frames

The switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames up to 9000 bytes. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.

To use jumbo frames, both the source and destination end nodes (such as a computer or server) must support this feature. Also, when the connection is operating at full duplex, all switches in the network between the two end nodes must be able to accept the extended frame size. And for half-duplex connections, all devices in the collision domain would need to support jumbo frames.

Enabling jumbo frames limits the maximum threshold for broadcast storm control to 64 packets per second.

Command Attributes

Jumbo Packet Status – Enables or disables support for jumbo frames.

Web – Click System, Jumbo Frame Configuration. Check the box and click Apply Changes to enable jumbo frame support.

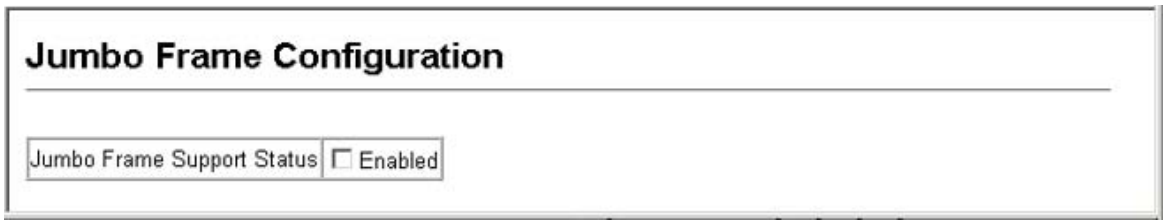

Figure 3-10. Enabling Jumbo Frame Support

CLI – In global configuration mode enter jumbo-frame to enable jumbo frame support.

```
Console(config)#jumbo-frame                                       4-61
Console(config)#
```

Managing Firmware

You can upload/download firmware to or from a TFTP server. By saving runtime code to a file on a TFTP server, that file can later be downloaded to the switch to restore operation. You can set the switch to use new firmware without overwriting the previous version.

Command Attributes

- **TFTP Server IP Address** – The IP address of a TFTP server.

Downloaded from www.Manualslib.com manuals search engine

- **File Name** – The file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names on the TFTP server is 127 characters or 31 characters for files on the switch. (Valid characters: A-Z, a-z, 0-9, ".", "-", "_")
- **Source/Destination Unit** – Specifies the switch stack unit number.
- **File Type** – Allows you to specify either an operational code file (opcode), or a configuration file (config).
- **Destination/Startup File Name** – Allows specification of filenames already in memory, or the creation of a new filename. (Valid characters: A-Z, a-z, 0-9, ".", "-", "_")
- **Source File Name** – Allows you to specify the name of the chosen source file.

Note: Up to two copies of the system software (i.e., the runtime firmware) can be stored in the file directory on the switch. The currently designated startup version of this file cannot be deleted.

Downloading System Software from a Server

When downloading runtime code, you can specify the Destination File Name to replace the current image, or first download the file using a different name from the current runtime code file, and then set the new file as the startup file.

Web – Click System, File, Firmware. Enter the IP address of the TFTP server and the source and destination file names. Click Transfer from Server.

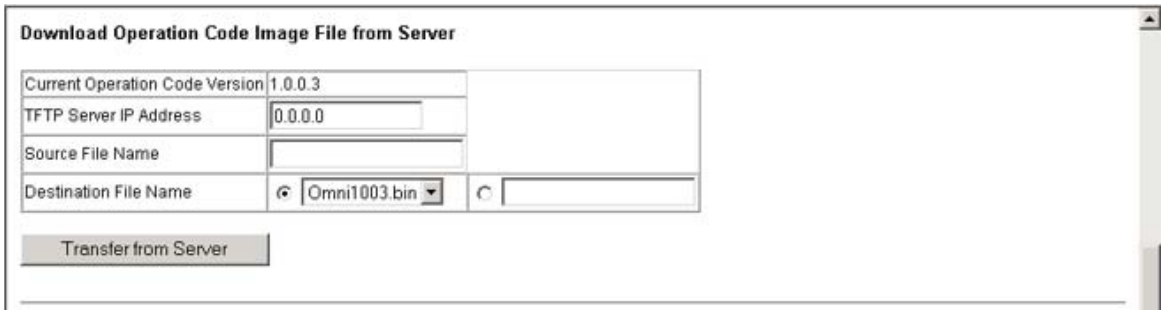

Figure 3-11. Transfering an Operation Code Image File from a Server

If you download to a new destination file, then select the file from the drop-down box for the operation code used at startup, and click Apply Changes. To start the new firmware, reboot the system via the System/Reset menu.

Figure 3-12. Selecting the Start-up Operation Code Image File

Downloaded from www.Manualslib.com manuals search engine

CLI – Enter the IP address of the TFTP server, select “config” or “opcode” file type, then enter the source and destination file names, set the new file to start up the system, and then restart the switch.

```
Console#copy tftp file                                          4-62
TFTP server ip address: 10.1.0.19
Choose file type:
 1. config:  2. opcode: <1-2>: 2
Source file name: M100000.bix
Destination file name: V1.0
\Write to FLASH Programming.
-Write to FLASH finish.
Success.
Console#config
Console(config)#boot system opcode:V1.0                         4-66
Console(config)#exit
Console#reload                                                  4-22
```

Saving or Restoring Configuration Settings

You can upload/download configuration settings to/from a TFTP server. The configuration file can be later downloaded to restore the switch’s settings.

Command Attributes

- **TFTP Server IP Address** – The IP address of a TFTP server.
- **File Name** — The configuration file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names on the TFTP server is 127 characters or 31 characters for files on the switch. (Valid characters: A-Z, a-z, 0-9, “.”, “-”, “_”)

Note: The maximum number of user-defined configuration files is limited only by available flash memory space.

Downloading Configuration Settings from a Server

You can download the configuration file under a new file name and then set it as the startup file, or you can specify the current startup configuration file as the destination file to directly replace it. Note that the file “Factory_Default_Config.cfg” can be copied to the TFTP server, but cannot be used as the destination on the switch.

Web – Click System, File, Configuration. Enter the IP address of the TFTP server, enter the name of the file to download, select a file on the switch to overwrite or specify a new file name, and then click Transfer from Server.

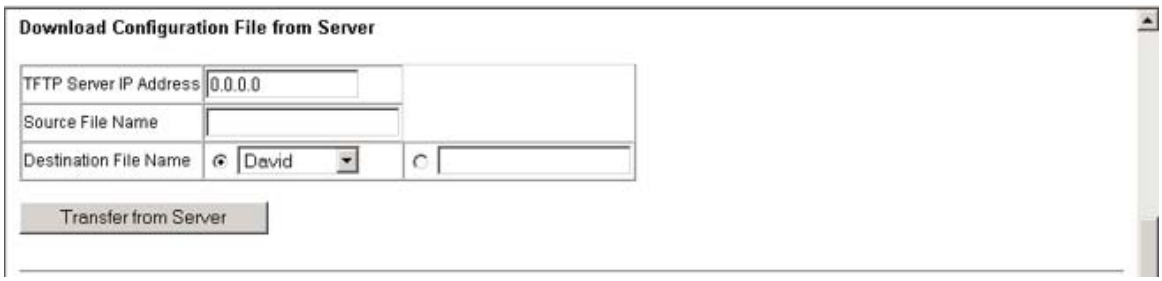

Figure 3-13. Transfering a Configuration File from a Server

Downloaded from www.Manualslib.com manuals search engine

If you download to a new file name, then select the new file from the drop-down box for Startup Configuration File, and press Apply Changes. To use the new settings, reboot the system via the System/Reset menu.

Figure 3-14. Setting the Start-up Configuration File

CLI – Enter the IP address of the TFTP server, specify the source file on the server, set the startup file name on the switch, and then restart the switch.

```
Console#copy tftp startup-config                                    4-62
TFTP server ip address: 192.168.1.19
Source configuration file name: config-1
Startup configuration file name [] : startup
\Write to FLASH Programming.
-Write to FLASH finish.
Success.

Console#reload
```

If you download the startup configuration file under a new file name, you can set this file as the startup file at a later time, and then restart the switch.

```
Console#config
Console(config)#boot system config: startup-new                     4-66
Console(config)#exit
Console#reload                                                      4-22
```

Console Port Settings

You can access the onboard configuration program by attaching a VT100 compatible device to the switch's serial console port. Management access through the console port is controlled by various parameters, including a password, timeouts, and basic communication settings. These parameters can be configured via the Web or CLI interface.

Command Attributes

- **Login Timeout** – Sets the interval that the system waits for a user to log into the CLI. If a login attempt is not detected within the timeout interval, the connection is terminated for the session. (Range: 0 - 300 seconds; Default: 0)
- **Exec Timeout** – Sets the interval that the system waits until user input is detected. If user input is not detected within the timeout interval, the current session is terminated. (Range: 0 - 65535 seconds; Default: 600 seconds)

Downloaded from www.Manualslib.com manuals search engine

- **Password Threshold** – Sets the password intrusion threshold, which limits the number of failed logon attempts. When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time (set by the Silent Time parameter) before allowing the next logon attempt. (Range: 0-120; Default: 3 attempts)
- **Silent Time** – Sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts has been exceeded. (Range: 0-65535; Default: 0)
- **Data Bits** – Sets the number of data bits per character that are interpreted and generated by the console port. If parity is being generated, specify 7 data bits per character. If no parity is required, specify 8 data bits per character. (Default: 8 bits)
- **Parity** – Defines the generation of a parity bit. Communication protocols provided by some terminals can require a specific parity bit setting. Specify Even, Odd, or None. (Default: None)
- **Speed** – Sets the terminal line's baud rate for transmit (to terminal) and receive (from terminal). Set the speed to match the baud rate of the device connected to the serial port or specify "Auto." (Default: 9600 bps)
- **Stop Bits** – Sets the number of the stop bits transmitted per byte. (Default: 1 stop bit)
- **Password*** – Specifies a password for the line connection. When a connection is started on a line with password protection, the system prompts for the password. If you enter the correct password, the system shows a prompt. (Default: No password)
- **Login*** – Enables password checking at login. You can select authentication by a single global password as configured for the Password parameter, or by passwords set up for specific user-name accounts (the default).

* CLI only.

Downloaded from www.Manualslib.com manuals search engine

Web – Click System, Line, Console. Specify the console port connection parameters as required, then click Apply.

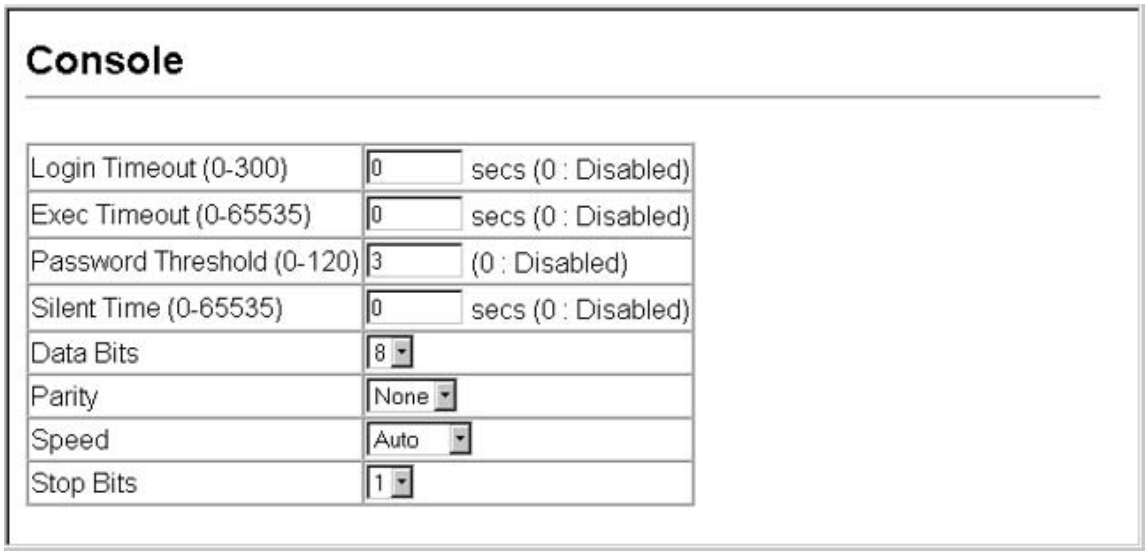

Figure 3-1. Console Port Settings

CLI – Enter Line Configuration mode for the console, then specify the connection parameters as required. To display the current console port settings, use the **show line** command from the Normal Exec level.

```
Console(config)#line console                                    4-10
Console(config-line)#login local                                4-11
Console(config-line)#password 0 secret                          4-12
Console(config-line)#timeout login response 0                   4-13
Console(config-line)#exec-timeout 0                             4-14
Console(config-line)#password-thresh 5                          4-14
Console(config-line)#silent-time 60                             4-15
Console(config-line)#databits 8                                 4-16
Console(config-line)#parity none                                4-16
Console(config-line)#speed auto                                 4-17
Console(config-line)#stopbits 1                                 4-17
Console(config-line)#end
Console#show line                                               4-18
 Console configuration:
  Password threshold:  5 times
  Interactive timeout: Disabled
  Login timeout: Disabled
  Silent time:         60
  Baudrate:            auto
  Databits:            8
  Parity:              none
  Stopbits:            1

 VTY configuration:
  Password threshold:  3 times
  Interactive timeout: 600 sec
  Login timeout: 300 sec
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Telnet Settings

You can access the onboard configuration program over the network using Telnet (i.e., a virtual terminal). Management access via Telnet can be enabled/disabled and other various parameters set, including the TCP port number, timeouts, and a password. These parameters can be configured via the Web or CLI interface.

Command Attributes

- **Telnet Status** – Enables or disables Telnet access to the switch. (Default: Enabled)
- **Telnet Port Number** – Sets the TCP port number for Telnet on the switch. (Default: 23)
- **Login Timeout** – Sets the interval that the system waits for a user to log into the CLI. If a login attempt is not detected within the timeout interval, the connection is terminated for the session. (Range: 0 - 300 seconds; Default: 300 seconds)
- **Exec Timeout** – Sets the interval that the system waits until user input is detected. If user input is not detected within the timeout interval, the current session is terminated. (Range: 0 - 65535 seconds; Default: 600 seconds)
- **Password Threshold** – Sets the password intrusion threshold, which limits the number of failed logon attempts. When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time (set by the Silent Time parameter) before allowing the next logon attempt. (Range: 0-120; Default: 3 attempts)
- **Password*** – Specifies a password for the line connection. When a connection is started on a line with password protection, the system prompts for the password. If you enter the correct password, the system shows a prompt. (Default: No password)
- **Login*** – Enables password checking at login. You can select authentication by a single global password as configured for the Password parameter, or by passwords set up for specific user-name accounts (the default).

* CLI only.

Downloaded from www.Manualslib.com manuals search engine

Web – Click System, Line, Telnet. Specify the connection parameters for Telnet access, then click Apply.

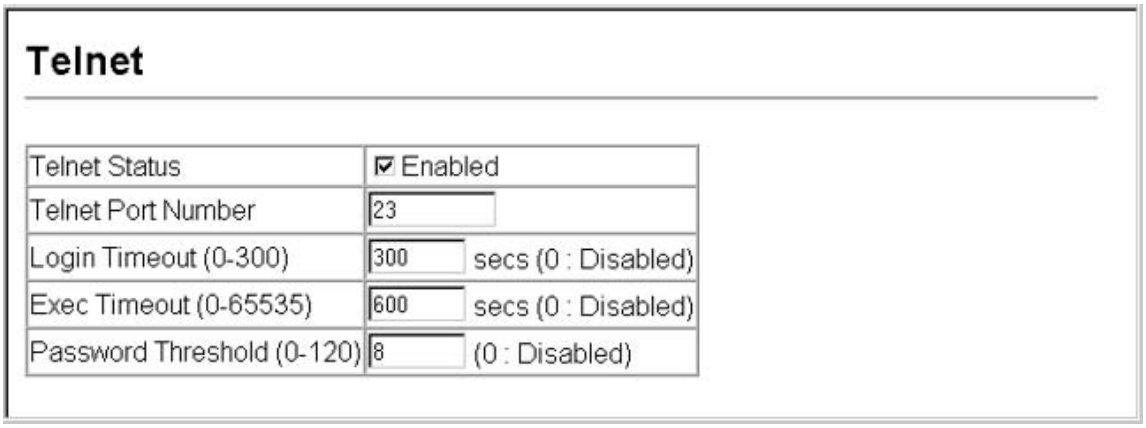

Figure 3-2. Telnet Settings

CLI – Enter Line Configuration mode for a virtual terminal, then specify the connection parameters as required. To display the current virtual terminal settings, use the **show line** command from the Normal Exec level.

```
Console(config)#line vty                                          4-10
Console(config-line)#login local                                  4-11
Console(config-line)#password 0 secret                            4-12
Console(config-line)#timeout login response 300                   4-13
Console(config-line)#exec-timeout 600                             4-14
Console(config-line)#password-thresh 3                            4-14
Console(config-line)#end
Console#show line                                                 4-18
 Console configuration:
  Password threshold:  5 times
  Interactive timeout: Disabled
  Login timeout: Disabled
  Silent time:         60
  Baudrate:            auto
  Databits:            8
  Parity:              none
  Stopbits:            1

 VTY configuration:
  Password threshold:  3 times
  Interactive timeout: 600 sec
  Login timeout: 300 sec
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring Event Logging

The switch allows you to control the logging of error messages, including the type of events that are recorded in switch memory, logging to a remote System Log (syslog) server, and displays a list of recent event messages.

System Logs

The system can be configured to send debug and error messages to a logging process. This logging process controls the type of error messages that are stored in switch memory or sent to a remote syslog server.

System log messages are categorized by severity into eight levels, as detailed in the following table.

Level	Severity Name	Description
7	Debug	Debugging messages
6	Informational	Informational messages only
5	Notice	Normal but significant condition, such as cold start
4	Warning	Warning conditions (e.g., return false, unexpected return)
3	Error	Error conditions (e.g., invalid input, default used)
2	Critical	Critical conditions (e.g., memory allocation, or free memory error - resource exhausted)
1	Alert	Immediate action needed
0	Emergency	System unusable

** There are only Level 2, 5 and 6 error messages for the current firmware release.*

The switch allows you to specify which levels are logged to RAM or flash memory.

Severe error messages that are logged to flash memory are permanently stored in the switch to assist in troubleshooting network problems. Up to 4096 log entries can be stored in the flash memory, with the oldest entries being overwritten first when the available log memory (256 kilobytes) has been exceeded.

The Logs page allows you to scroll through the logged system and event messages. The switch can store up to 2048 log entries in temporary random access memory (RAM; i.e., memory flushed on power reset) and up to 4096 entries in permanent flash memory.

Downloaded from www.Manualslib.com manuals search engine

Web – Click System, Log, Logs.

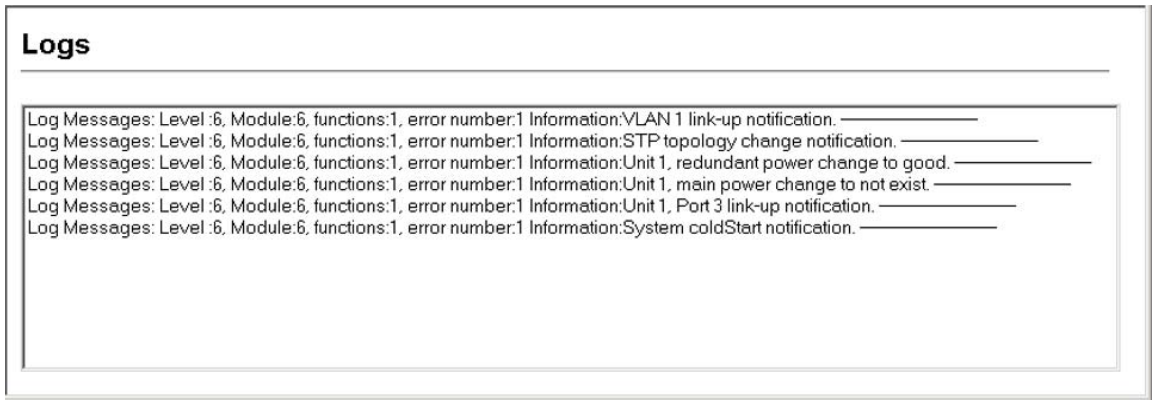
Logs
Log Messages: Level :6, Module:6, functions:1, error number:1 Information:VLAN 1 link-up notification.
Log Messages: Level :6, Module:6, functions:1, error number:1 Information:STP topology change notification.
Log Messages: Level :6, Module:6, functions:1, error number:1 Information:Unit 1, redundant power change to good.
Log Messages: Level :6, Module:6, functions:1, error number:1 Information:Unit 1, main power change to not exist.
Log Messages: Level :6, Module:6, functions:1, error number:1 Information:Unit 1, Port 3 link-up notification.
Log Messages: Level :6, Module:6, functions:1, error number:1 Information:System coldStart notification.

Figure 3-3. Logging Information

CLI – Type "show logging ram" to display log messages in the RAM buffer.

```
Console#show logging ram                                          4-45
Syslog logging: Enable
History logging in RAM: level debugging
[3] 0:0:58 1/1/1
   "VLAN 1 link-up notification."
   level: 6, module: 6, function: 1, and event no.: 1
[2] 0:0:58 1/1/1
   "STP topology change notification."
   level: 6, module: 6, function: 1, and event no.: 1
[1] 0:0:28 1/1/1
   "Unit 1, Port 23 link-up notification."
   level: 6, module: 6, function: 1, and event no.: 1
[0] 0:0:28 1/1/1
   "System coldStart notification."
   level: 6, module: 6, function: 1, and event no.: 1
Console#
```

System Logs Configuration

The System Logs page allows you to configure and limit system messages that are logged to flash or RAM memory. The default is for levels 0 to 3 to be logged to flash and levels 0 to 7 to be logged to RAM.

Note: The level of messages logged to flash must be equal to or less than the level of messages logged to RAM.

Command Attributes

- **System Log Status** – Enables/disables the logging of debug or error messages to the logging process. (Default: Enabled)
- **Flash Level** – Limits log messages saved to the switch's permanent flash memory for all levels up to the specified level. For example, if level 3 is specified, all messages from level 0 to level 3 will be logged to flash. (Default: 3)

Downloaded from www.Manualslib.com manuals search engine

- **RAM Level** – Limits log messages saved to the switch's temporary RAM memory for all levels up to the specified level. For example, if level 7 is specified, all messages from level 0 to level 7 will be logged to RAM. (Default: 6)

Web – Click System, Log, System Logs. Specify the System Log Status, modify the level of messages to be logged to RAM and flash memory, and then click Apply.

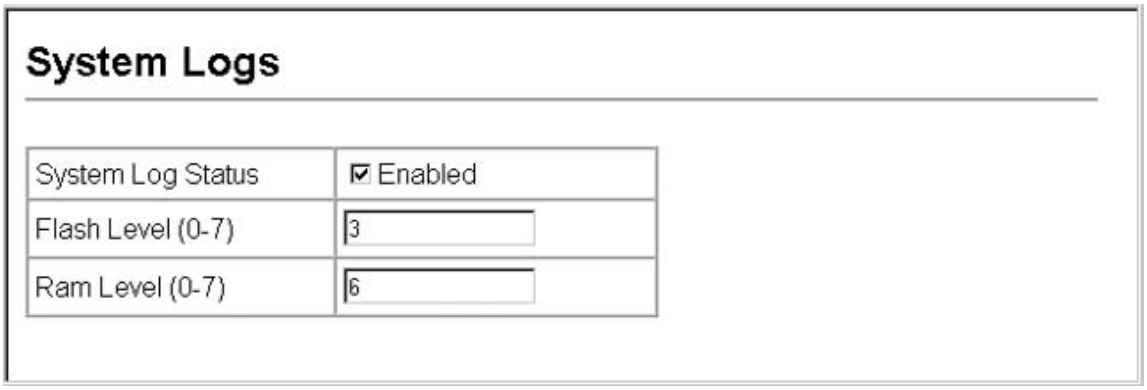

Figure 3-4. Enabling System Logging

CLI – Enable system logging and then specify the level of messages to be logged to RAM and flash memory. Use the **show logging** command to display the current settings.

```
Console(config)#logging on                                          4-41
Console(config)#logging history ram 6                               4-42
Console(config)#
Console#show logging flash                                          4-45
Syslog logging:              Enabled
History logging in FLASH: level errors
Console#
```

Remote Logs Configuration

The Remote Logs page allows you to configure the logging of messages that are sent to syslog servers. You can also limit the error messages sent to only those messages below a specified level.

Command Attributes

- **Remote Log Status** – Enables/disables the logging of debug or error messages to the remote logging process. (Default: Enabled)
- **Logging Facility** – Sets the facility type for remote logging of syslog messages. There are eight facility types specified by values of 16 to 23. The facility type is used by the syslog server to dispatch log messages to an appropriate service. (Default: 23)
- **Logging Trap** – Limits log messages that are sent to the remote syslog server for all levels up to the specified level. For example, if level 3 is specified, all messages from level 0 to level 3 will be sent to the remote server. (Default: 3)

Downloaded from www.Manualslib.com manuals search engine

- **Host IP List** – Displays the list of remote server IP addresses that receive the syslog messages. The maximum number of host IP addresses allowed is five.
- **Host IP Address** – Specifies a new server IP address to add to the Host IP List.

Web – Click System, Log, Remote Logs. To add an IP address to the Host IP List, type the new IP address in the Host IP Address box, and then click Add. To delete an IP address, click the entry in the Host IP List, and then click Remove.

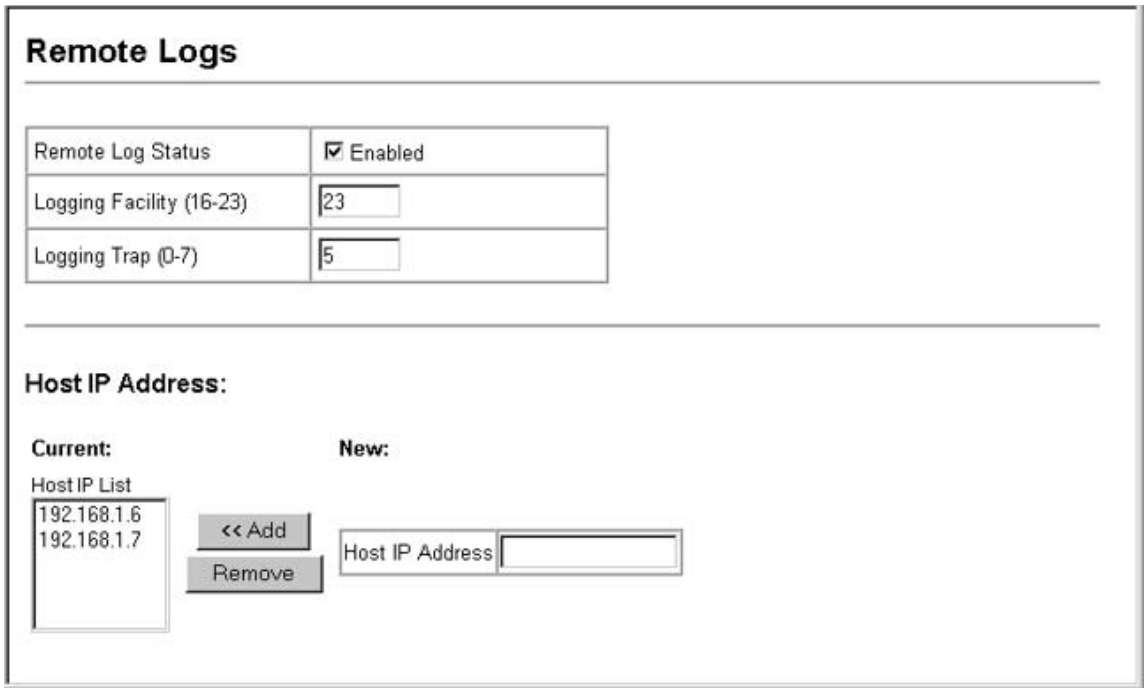

Figure 3-5. Enabling Remote Logging and Adding Host IP Addresses

CLI – Enter the syslog server host IP address, choose the facility type and set the minimum level of messages to be logged.

```
Console(config)#logging host 192.168.1.7                          4-43
Console(config)#logging facility 23                               4-43
Console(config)#logging trap 4                                    4-44
Console(config)#
Console#show logging trap                                         4-45
Syslog logging:               Enabled
REMOTELOG status:             Enabled
REMOTELOG facility type:      local use 7
REMOTELOG level type:         Warning conditions
REMOTELOG server IP address: 192.168.1.7
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Sending Simple Mail Transfer Protocol Alerts

To alert system administrators of problems, the switch can use SMTP (Simple Mail Transfer Protocol) to send email messages when triggered by logging events of a specified level. The messages are sent to specified SMTP servers on the network and can be retrieved using POP or IMAP clients.

Command Attributes

- **Admin Status** – Enables/disables the SMTP function. (Default: Disabled)
- **Email Source Address** – Sets the email address used for the “From” field in alert messages. You may use a symbolic email address that identifies the switch, or the address of an administrator responsible for the switch.
- **Severity** – Sets the syslog severity threshold level (see table on page 3-23) used to trigger alert messages. All events at this level or higher will be sent to the configured email recipients. For example, using Level 7 will report all events from level 7 to level 0. (Default : Level 7)
- **SMTP Server List** – Specifies a list of up to three recipient SMTP servers. The switch attempts to connect to the other listed servers if the first fails. Use the New SMTP Server text field and the Add/Remove buttons to configure the list.
- **Email Destination Address List** – Specifies the email recipients of alert messages. You can specify up to five recipients. Use the New Email Destination Address text field and the Add/Remove buttons to configure the list.

Downloaded from www.Manualslib.com manuals search engine

Web – Click System, Log, SMTP. Enable SMTP, specify a source email address, and select the minimum severity level. To add an IP address to the SMTP Server List, type the new IP address in the SMTP Server text box and then click Add. To delete an IP address, click the entry in the SMTP Server List and then click Remove. Specify up to five email addresses to receive the alert messages, and then click Apply.

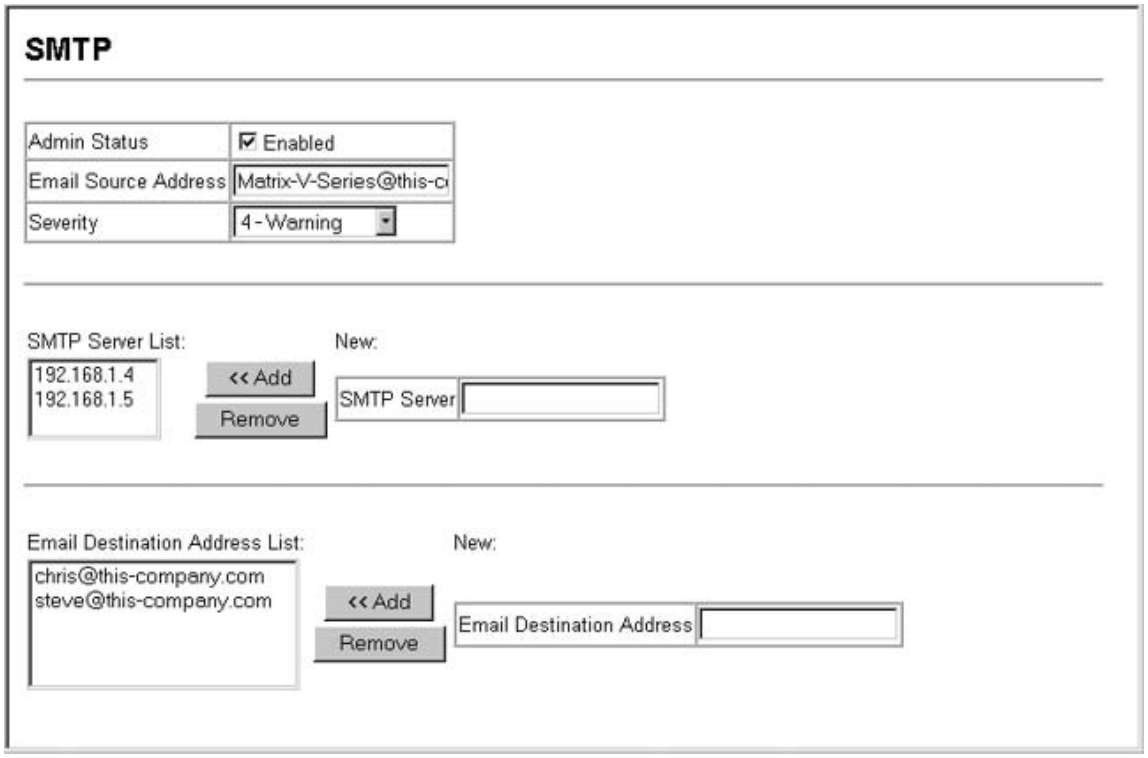

Figure 3-6. Enabling and Configuring SMTP Alerts

CLI – Enter the IP address of at least one SMTP server, set the syslog severity level to trigger an email message, and specify the switch (source) and up to five recipient (destination) email addresses. Enable SMTP with the **logging sendmail** command

Downloaded from www.Manualslib.com manuals search engine

to complete the configuration. Use the **show logging sendmail** command to display the current SMTP configuration.

```
Console(config)#logging sendmail host 192.168.1.4                    4-47
Console(config)#logging sendmail level 3                             4-47
Console(config)#logging sendmail source-email
   Matrix-V-Series@this-company.com                                  4-48
Console(config)#logging sendmail destination-email
   chris@this-company.com                                            4-48
Console(config)#logging sendmail                                     4-49
Console(config)#exit
Console#show logging sendmail                                        4-49
SMTP servers
-----------------------------------------------

Active SMTP server: 0.0.0.0

SMTP minimum severity level: 4

SMTP destination email addresses
-----------------------------------------------
  1. chris@this-company.com

SMTP source email address: AlcatelOS6300PhaseII@this-company.com

SMTP status:               Enabled
Console#
```

Resetting the System

Web – Click System, Reset. Click the Reset button to restart the switch.

Figure 3-15. Resetting the System

CLI – Use the reload command to restart the switch.

```
Console#reload                                                       4-22
System will be restarted, continue <y/n>?
```

Note: When restarting the system, it will always run the Power-On Self-Test.

Setting the System Clock

Simple Network Time Protocol (SNTP) allows the switch to set its internal clock based on periodic updates from a time server (SNTP or NTP). Maintaining an accurate time on the switch enables the system log to record meaningful dates and times for event entries. You can also manually set the clock using the CLI. (See “calendar set” on page 4-53.) If the clock is not set, the switch will only record the time from the factory default set at the last bootup.

Downloaded from www.Manualslib.com manuals search engine

This switch acts as an SNTP client in unicast mode:

Unicast – The switch periodically sends a request for a time update to a configured time server. You can configure up to three time server IP addresses. The switch will attempt to poll each server in the configured sequence.

Configuring SNTP

You can configure the switch to send time synchronization requests to specific time servers (i.e., client mode).

Command Attributes

- **SNTP Client** – Configures the switch to operate as an SNTP unicast client. This mode requires at least one time server to be specified in the SNTP Server field.
- **SNTP Poll Interval** – Sets the interval between sending requests for a time update from a time server when set to SNTP Client mode. (Range: 16-16284 seconds; Default: 16 seconds)
- **SNTP Server** – In unicast mode, sets the IP address for up to three time servers. The switch attempts to update the time from the first server, if this fails it attempts an update from the next server in the sequence.

Web – Select SNTP, Configuration. Modify any of the required parameters, and click Apply.

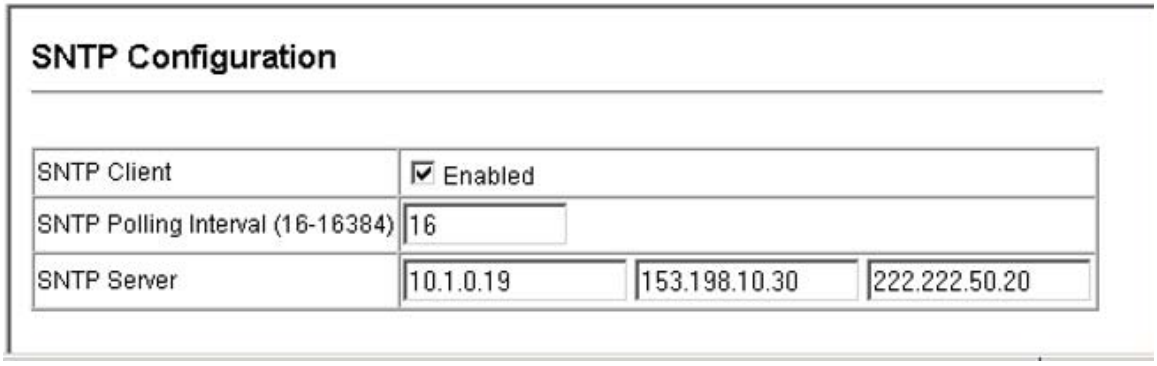

Figure 3-16. SNTP Configuration

CLI – This example configures the switch to operate as an SNTP broadcast client.

```
Console(config)#sntp client                                          4-50
Console(config)#sntp poll 16                                         4-52
Console(config)#sntp server 10.1.0.19 137.82.140.80 128.250.36.2     4-51
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

Setting the Time Zone

SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth's prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must indicate the number of hours and minutes your time zone is east (before) or west (after) of UTC.

Command Attributes

- **Current Time** – Displays the current time.
- **Name** – Assigns a name to the time zone.
- **Hours (0-12)** – The number of hours before/after UTC**.**
- **Minutes (0-59)** – The number of minutes before/after UTC.
- **Direction** – Configures the time zone to be before (east) or after (west) UTC.

Web – Select SNTP, Clock Time Zone. Set the offset for your time zone relative to the UTC, and click Apply.

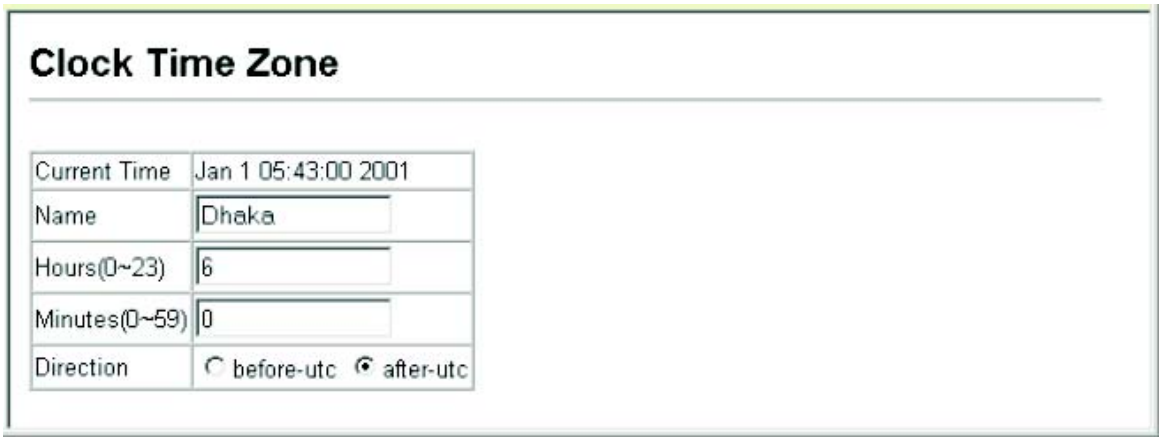

Figure 3-17. Clock Time Zone

CLI - This example shows how to set the time zone for the system clock.

```
Console(config)#clock timezone Dhaka hours 6 minute 0 after-UTC      4-53
Console#
```

Simple Network Management Protocol

Simple Network Management Protocol (SNMP) is a communication protocol designed specifically for managing devices on a network. Equipment commonly managed with SNMP includes switches, routers and host computers. SNMP is typically used to configure these devices for proper operation in a network environment, as well as to monitor them to evaluate performance or detect potential problems.

Managed devices supporting SNMP contain software, which runs locally on the device and is referred to as an agent. A defined set of variables, known as managed objects, is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB) that provides a

Downloaded from www.Manualslib.com manuals search engine

standard presentation of the information controlled by the agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The switch includes an onboard agent that supports SNMP versions 1, 2c, and 3. This agent continuously monitors the status of the switch hardware, as well as the traffic passing through its ports. A network management station can access this information using software such as HP OpenView. Access to the onboard agent using SNMP v1 and v2c is controlled by community strings. To communicate with the switch, the management station must first submit a valid community string for authentication.

Access to the switch using SNMPv3 provides additional security features that cover message integrity, authentication, and encryption; as well as controlling user access to specific areas of the MIB tree.

The SNMPv3 security structure consists of security models, with each model having it's own security levels. There are three security models defined, SNMPv1, SNMPv2c, and SNMPv3. Users are assigned to "groups" that are defined by a security model and specified security levels. Each group also has a defined security access to set of MIB objects for reading and writing, which are known as "views." The switch has a default view (all MIB objects) and default groups defined for security models v1 and v2c. The following table shows the security models and levels available and the system default settings.

Table 3-1. SNMPv3 Security Models and Levels

Model	Level	Group	Read View	Write View	Security
v1	noAuthNoPriv	DefaultROGroup	defaultview	none	Community string only
v1	noAuthNoPriv	DefaultRWGroup	defaultview	defaultview	Community string only
v1	noAuthNoPriv	*user defined*	*user defined*	*user defined*	Community string only
v2c	noAuthNoPriv	DefaultROGroup	defaultview	none	Community string only
v2c	noAuthNoPriv	DefaultRWGroup	defaultview	defaultview	Community string only
v2c	noAuthNoPriv	*user defined*	*user defined*	*user defined*	Community string only
v3	noAuthNoPriv	*user defined*	*user defined*	*user defined*	A user name match only
v3	AuthNoPriv	*user defined*	*user defined*	*user defined*	Provides user authentication via MD5 or SHA algorithms
v3	AuthPriv	*user defined*	*user defined*	*user defined*	Provides user authentication via MD5 or SHA algorithms and data privacy using DES 56-bit encryption

Note: The predefined default groups and view can be deleted from the system.

Downloaded from www.Manualslib.com manuals search engine

Enabling SNMP

Enables the SNMP agent on the switch for all versions (1, 2c, and 3).

Command Attributes

- **SNMP Agent Status** – Enables SNMP on the switch.

Figure 3-7. Enabling the SNMP Agent

CLI – The following example enalbes SNMP on the switch.

```
Console(config)#snmp-server                                    4-114
Console(config)#
```

Setting Community Access Strings

You may configure up to five community strings authorized for management access using SNMP v1 and v2c. All community strings used for IP Trap Managers should be listed in this table. For security reasons, you should consider removing the default strings.

Command Attributes

- **SNMP Community Capability** – Indicates that the switch supports up to five community strings.
- **Community String** – A community string that acts like a password and permits access to the SNMP protocol.
  Default strings: “public” (read-only access), “private” (read/write access)
  Range: 1-32 characters, case sensitive
- **Access Mode**
  - **Read-Only** – Specifies read-only access. Authorized management stations are only able to retrieve MIB objects.
  - **Read/Write** – Specifies read-write access. Authorized management stations are able to both retrieve and modify MIB objects.

Downloaded from www.Manualslib.com manuals search engine

Web – Click SNMP, Configuration. Add new community strings as required, select the access rights from the Access Mode drop-down list, then click Add.

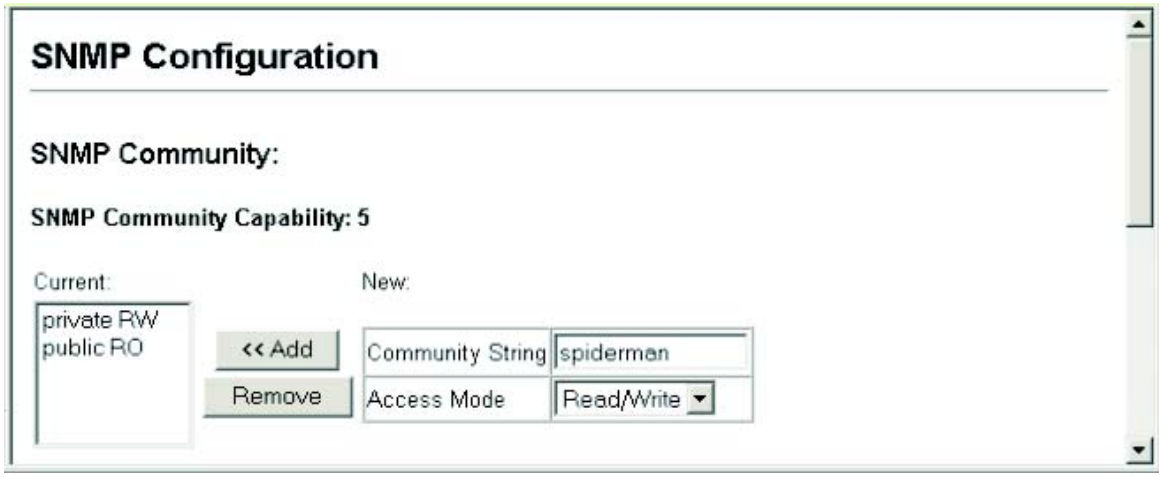

Figure 3-18. SNMP Configuration

CLI – The following example adds the string “spiderman” with read/write access.

```
Console(config)#snmp-server community spiderman rw                4-109
Console(config)#
```

Specifying Trap Managers and Trap Types

Traps indicating status changes are issued by the switch to specified trap managers. You must specify trap managers so that key events are reported by this switch to your management station (using network management platforms such as HP OpenView). You can specify up to five management stations that will receive authentication failure messages and other trap messages from the switch.

Command Attributes

- **Trap Manager Capability** – Indicates that the switch supports up to five trap managers.
- **Current** – Displays a list of the trap managers currently configured.
- **Trap Manager IP Address** – IP address of a new management station to receive trap messages.
- **Trap Manager Community String** – Specifies a valid community string for the new trap manager entry. Though you can set this string in the Trap Managers table, we recommend that you define this string in the SNMP Protocol table as well. (Range: 1-32 characters, case sensitive)
- **Trap UDP Port** – Specifies the UDP port number used by the trap manager.
- **Trap Version** – Indicates if the user is running SNMP v1, v2c, or v3.
- **Enable Authentication Traps** – Issues a trap message to specified IP trap managers whenever authentication of an SNMP request fails. (Default: Enabled)
- **Enable Link-up and Link-down Traps** – Issues a trap message whenever a port link is established or broken. (Default: Enabled)

Downloaded from www.Manualslib.com manuals search engine

Web – Click SNMP, Configuration. Enter the IP address and community string for each managment station that will receive trap messages, specify the UDP port and SNMP version, and then click Add. Select the trap types required using the check boxes for Authentication and Link-up/down traps, and then click Apply.

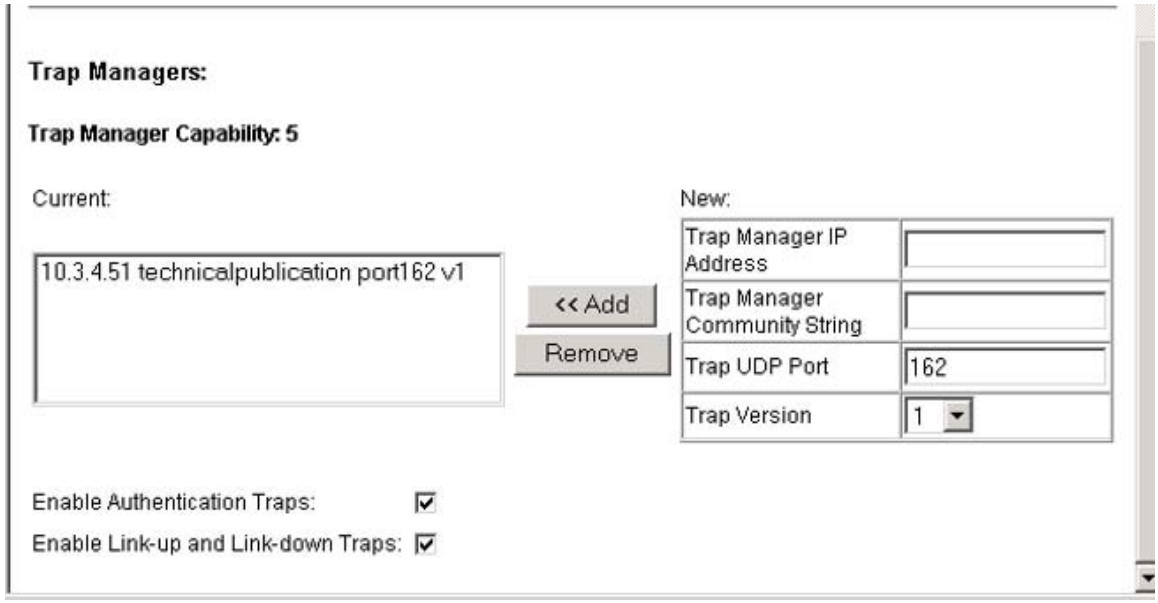

Figure 3-19. Configuring SNMP Trap Managers

CLI – This example adds a trap manager and enables both authentication and link-up, link-down traps.

```
Console(config)#snmp-server host 192.168.1.19 private version 2c 4-111
Console(config)#snmp-server enable traps authentication          4-112
```

Configuring SNMPv3 Management Access

To configure SNMPv3 management access to the switch, follow these steps:

1. If you want to change the default engine ID, it must be changed first before configuring other parameters.
2. Specify read and write access views for the switch MIB tree.
3. Configure SNMP user groups with the required security model (i.e., SNMP v1, v2c or v3) and security level (i.e., authentication and privacy).
4. Assign SNMP users to groups, along with their specific authentication and privacy passwords.

Setting an Engine ID

An SNMPv3 engine is an independent SNMP agent that resides on the switch. This engine protects against message replay, delay, and redirection. The engine ID is also used in combination with user passwords to generate the security keys for authenticating and encrypting SNMPv3 packets.

Downloaded from www.Manualslib.com manuals search engine

A local engine ID is automatically generated that is unique to the switch. This is referred to as the default engine ID. If the local engine ID is deleted or changed, all SNMP users will be cleared. You will need to reconfigure all existing users.

A new engine ID can be specified by entering 1 to 26 hexadecimal characters. If less than 26 characters are specified, trailing zeroes are added to the value. For example, the value “1234” is equivalent to “1234” followed by 22 zeroes.

Web – Click SNMP, SNMPv3, Engine ID. Enter an ID of up to 26 hexadecimal characters and then click Save.

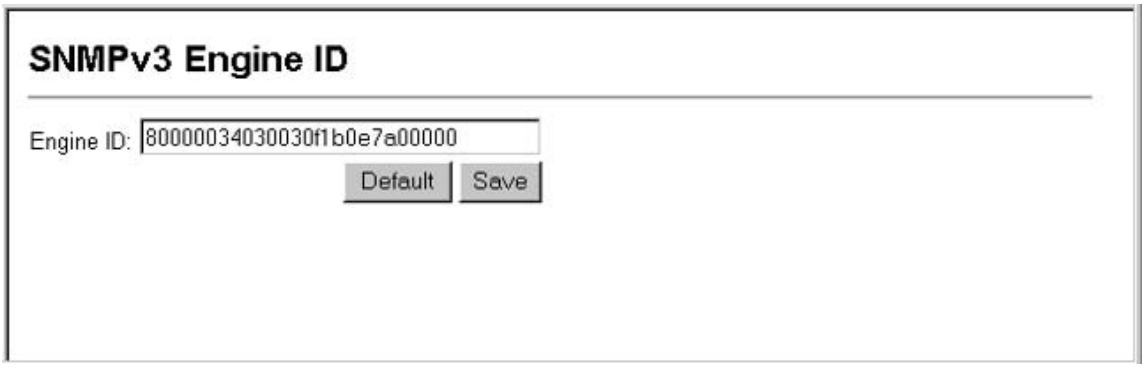

Figure 3-8. Setting an Engine ID

CLI – This example sets an SNMPv3 engine ID.

```
Console(config)#snmp-server engine-id local 12345abcdef            4-114
Console(config)#exit
Console#show snmp engine-id                                        4-115
Local SNMP engineID: 12345abcdef000000000000000
Local SNMP engineBoots: 1
Console#
```

Configuring SNMPv3 Users

Each SNMPv3 user is defined by a unique name. Users must be configured with a specific security level and assigned to a group. The SNMPv3 group restricts users to a specific read and a write view.

Command Attributes

- **User Name** – The name of user connecting to the SNMP agent. (Range: 1-32 characters)
- **Group Name** – The name of the SNMP group to which the user is assigned. (Range: 1-32 characters)
- **Model** – The user security model; SNMP v1, v2c or v3.

Downloaded from www.Manualslib.com manuals search engine

- **Level** – The security level used for the user:
  - noAuthNoPriv – There is no authentication or encryption used in SNMP communications.
  - AuthNoPriv – SNMP communications use authentication, but the data is not encrypted (only available for the SNMPv3 security model).
  - AuthPriv – SNMP communications use both authentication and encryption (only available for the SNMPv3 security model).
- **Authentication** – The method used for user authentication; MD5 only.
- **Privacy** – The encryption algorithm use for data privacy; only 56-bit encryption is currently available
- **Actions** – Enables the user to be assigned to another SNMPv3 group.

Web – Click SNMP, SNMPv3, Users. Click New to configure a user name. In the New User page, define a name and assign it to a group, then click Add to save the configuration and return to the User Name list. To delete a user, check the box next to the user name, then click Delete. To change the assigned group of a user, click Change Group in the Actions column of the users table and select the new group.

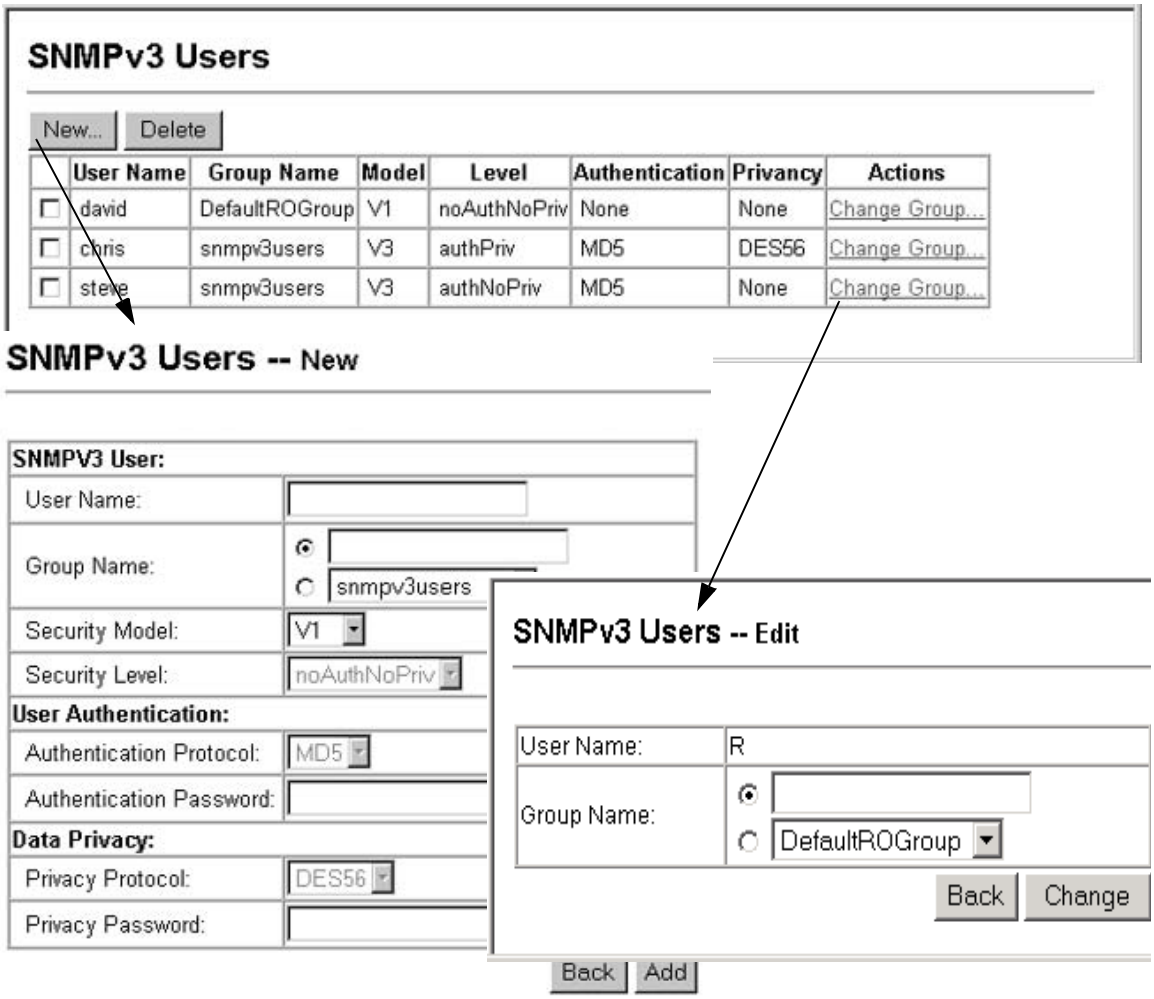

Figure 3-9. Configuring SNMPv3 Users

Downloaded from www.Manualslib.com manuals search engine

CLI – Use the **snmp-server user** command to configure a new user name and assign it to a group.

```
Console(config)#snmp-server user chris group r&d v3 auth md5 greenpeace
   priv des56 einstien                                                    3-132
Console(config)#exit
Console#show snmp user                                                    3-132
EngineId: 80000034030001f488f5200000
User Name: chris
Authentication Protocol: md5
Privacy Protocol: des56
Storage Type: nonvolatile
Row Status: active

Console#
```

Configuring SNMPv3 Groups

An SNMPv3 group sets the access policy for its assigned users, restricting them to specific read and write views. You can use the pre-defined default groups or create new groups to map a set of SNMP users to SNMP views.

Command Attributes

- **Group Name** – The name of the SNMP group. (Range: 1-32 characters)
- **Model** – The group security model; SNMP v1, v2c or v3.
- **Level** – The security level used for the group:
  - noAuthNoPriv – There is no authentication or encryption used in SNMP communications.
  - AuthNoPriv – SNMP communications use authentication, but the data is not encrypted (only available for the SNMPv3 security model).
  - AuthPriv – SNMP communications use both authentication and encryption (only available for the SNMPv3 security model).
- **Read View** – The configured view for read access. (Range: 1-64 characters)
- **Write View** – The configured view for write access. (Range: 1-64 characters)

Downloaded from www.Manualslib.com manuals search engine

Web – Click SNMP, SNMPv3, Groups. Click New to configure a new group. In the New Group page, define a name, assign a security model and level, and then select read and write views. Click Add to save the new group and return to the Groups list. To delete a group, check the box next to the group name, then click Delete.

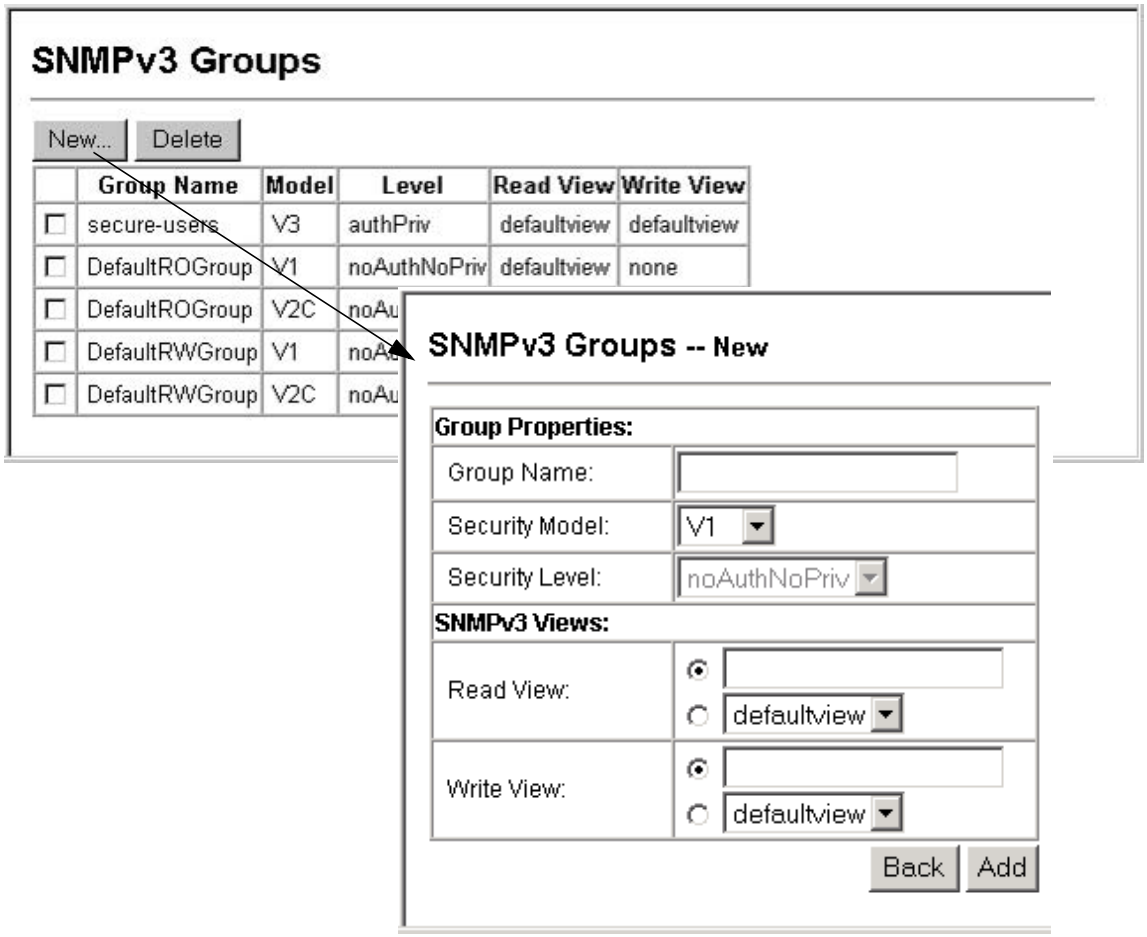

Figure 3-10. Configuring SNMPv3 Groups

CLI – Use the **snmp-server group** command to configure a new group, specifying the security model and level, and restricting MIB access to defined read and write views.

```
Console(config)#snmp-server group v3secure v3 priv read defaultview write
   defaultview                                                    3-130
Console(config)#exit
Console#show snmp group                                           3-130
Group Name: v3secure
Security Model: v3
Read View: defaultview
Write View: defaultview
Notify View: none
Storage Type: nonvolatile
Row Status: active

Console#
```


Downloaded from www.Manualslib.com manuals search engine

Setting SNMPv3 Views

SNMPv3 views are used to restrict user access to specified portions of the MIB tree. The predefined view “defaultview” includes access to the entire MIB tree.

Command Attributes

- **View Name** – The name of the SNMP view. (Range: 1-64 characters)
- **View OID Subtrees** – Shows the currently configured object identifiers of branches within the MIB tree that define the SNMP view.
- **Edit OID Subtrees** – Allows you to configure the object identifiers of branches within the MIB tree. Wildcards can be used to mask a specific portion of the OID string.
- **Type** – Indicates if the object identifier of a branch within the MIB tree is included or excluded from the SNMP view.

Web – Click SNMP, SNMPv3, Views. Click New to configure a new view. In the New View page, define a name and specify OID subtrees in the switch MIB to be included or excluded in the view. Click Back to save the new view and return to the SNMPv3 Views list. For a specific view, click on View OID Subtrees to display the current configuration, or click on Edit OID Subtrees to make changes to the view settings. To delete a view, check the box next to the view name, then click Delete.

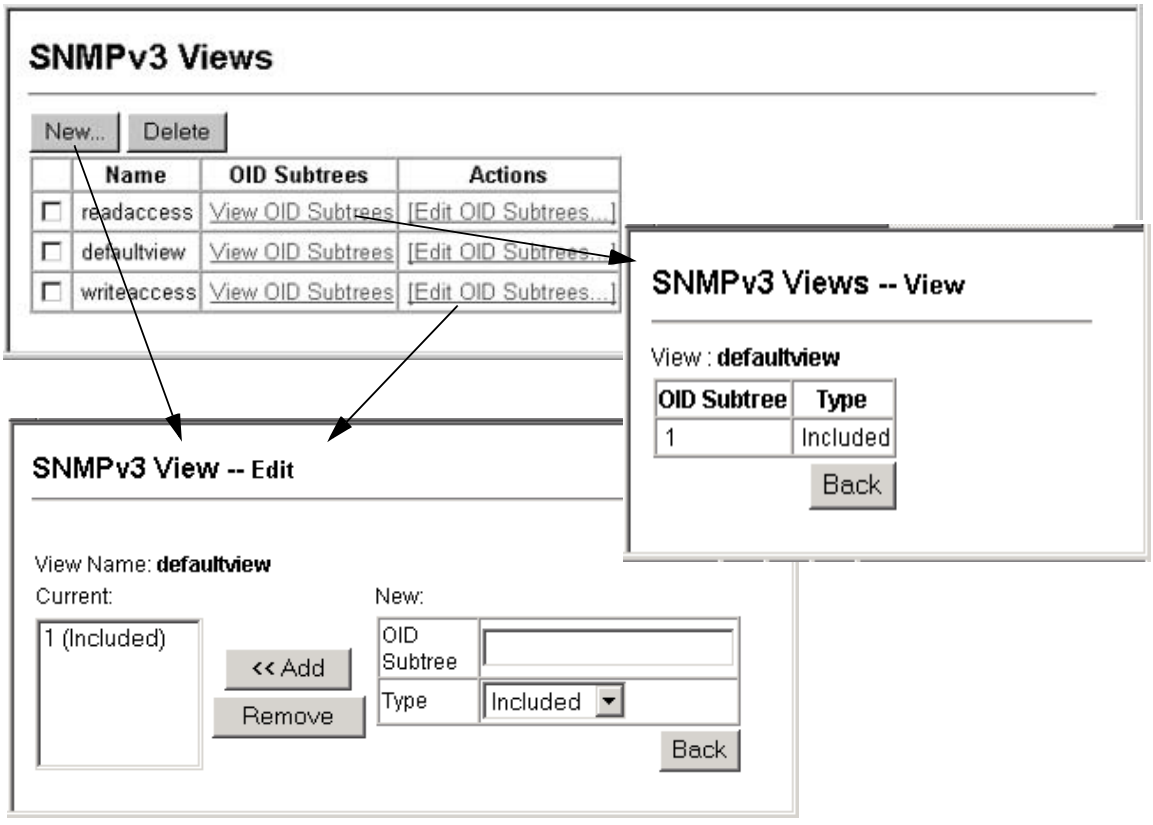

Figure 3-11. Configuring SNMPv3 Views

Downloaded from www.Manualslib.com manuals search engine

CLI – Use the **snmp-server view** command to configure a new view. This example view includes the MIB-2 interfaces table, and the wildcard mask selects all index entries.

```
Console(config)#snmp-server view ifEntry.a 1.3.6.1.2.1.2.2.1.1.* included
                                                                    3-128
Console(config)#exit
Console#show snmp view                                              3-129
View Name: ifEntry.a
Subtree OID: 1.3.6.1.2.1.2.2.1.1.*
View Type: included
Storage Type: nonvolatile
Row Status: active

View Name: readaccess
Subtree OID: 1.3.6.1.2
View Type: included
Storage Type: nonvolatile
Row Status: active

View Name: defaultview
Subtree OID: 1
View Type: included
Storage Type: nonvolatile
Row Status: active

Console#
```

User Authentication

You can restrict management access to this switch using the following options:

- Passwords – Manually configure access rights on the switch for specified users.
- Authentication Settings – Use remote authentication to configure access rights.
- HTTPS Settings – Provide a secure web connection.
- SSH Settings – Provide a secure shell (for secure Telnet access).
- Port Security – Configure secure addresses for individual ports.
- 802.1x – Use IEEE 802.1x port authentication to control access to specific ports.
- IP Filter – Fillters management access to the web, SNMP or Telnet interface.

Configuring the Logon Password

The guest only has read access for most configuration parameters. However, the administrator has write access for all parameters governing the onboard agent. You should therefore assign a new administrator password as soon as possible, and store it in a safe place.

The default guest name is “guest” with the password “guest.” The default administrator name is “admin” with the password “admin.” Note that user names can only be assigned via the CLI.

Downloaded from www.Manualslib.com manuals search engine

Command Attributes

- **User Name*** – The name of the user.
  (Maximum length: 8 characters)
- **Access Level*** – Specifies the user level.
  (Options: Normal and Privileged)
- **Password** – Specifies the user password.
  (Range: 0-8 characters plain text, case sensitive)

* CLI only.

Web – Click Security, Passwords. To change the password for the current user, enter the old password, the new password, confirm it by entering it again, then click Apply.

Figure 3-20. Setting Passwords

CLI – Assign a user name to access-level 15 (i.e., administrator), then specify the password.

```
Console(config)#username bob access-level 15                    4-25
Console(config)#username bob password 0 smith
Console(config)#
```

Configuring Local/Remote Logon Authentication

Use the Authentication Settings menu to restrict management access based on specified user names and passwords. You can manually configure access rights on the switch, or you can use a remote access authentication server based on RADIUS or TACACS+ protocols.

Remote Authentication Dial-in User Service (RADIUS) and Terminal Access Controller Access Control System Plus (TACACS+) are logon authentication protocols that use software running on a central server to control access to RADIUS-aware or TACACS-aware devices on the network. An authentication server contains

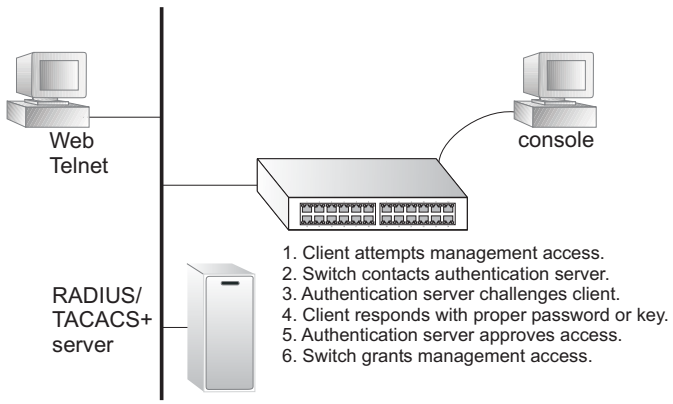

Downloaded from www.Manualslib.com manuals search engine

a database of multiple user name/password pairs with associated privilege levels for each user that requires management access to the switch.

RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a connection-oriented transport. Also, note that RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.

Command Usage

- By default, management access is always checked against the authentication database stored on the local switch. If a remote authentication server is used, you must specify the authentication sequence and the corresponding parameters for the remote authentication protocol. Local and remote logon authentication control management access via the console port, web browser, or Telnet.
- RADIUS and TACACS+ logon authentication assign a specific privilege level for each user name/password pair. The user name, password, and privilege level must be configured on the authentication server.
- You can specify up to three authentication methods for any user to indicate the authentication sequence. For example, if you select (1) RADIUS, (2) TACACS and (3) Local, the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted using the TACACS+ server, and finally the local user name and password is checked.

Command Attributes

- **Authentication** – Select the authentication, or authentication sequence required:
  - **Local** – User authentication is performed only locally by the switch.
  - **Radius** – User authentication is performed using a RADIUS server only.
  - **TACACS** – User authentication is performed using a TACACS+ server only.
  - [authentication sequence] – User authentication is performed by up to three authentication methods in the indicated sequence.
- **RADIUS Settings**
  - **Server IP Address** – Address of authentication server. (Default: 10.1.0.1)
  - **Server Port Number** – Network (UDP) port of authentication server used for authentication messages. (Range: 1-65535; Default: 1812)
  - **Secret Text String** – Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 20 characters)
  - **Number of Server Transmits** – Number of times the switch tries to authenticate logon access via the authentication server. (Range: 1-30; Default: 2)
  - **Timeout for a reply** – The number of seconds the switch waits for a reply from the RADIUS server before it resends the request. (Range: 1-65535; Default: 5)

Downloaded from www.Manualslib.com manuals search engine

- **TACACS Settings**
  - **Server IP Address** – Address of the TACACS+ server. (Default: 10.11.12.13)
  - **Server Port Number** – Network (TCP) port of TACACS+ server used for authentication messages. (Range: 1-65535; Default: 49)
  - **Secret Text String** – Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 20 characters)

Note: The local switch user database has to be set up by manually entering user names and passwords using the CLI. (See “username” on page 4-25.)

Web – Click Security, Authentication Settings. To configure local or remote authentication preferences, specify the authentication sequence (i.e., one to three methods), fill in the parameters for RADIUS or TACACS+ authentication if selected, and click Apply.

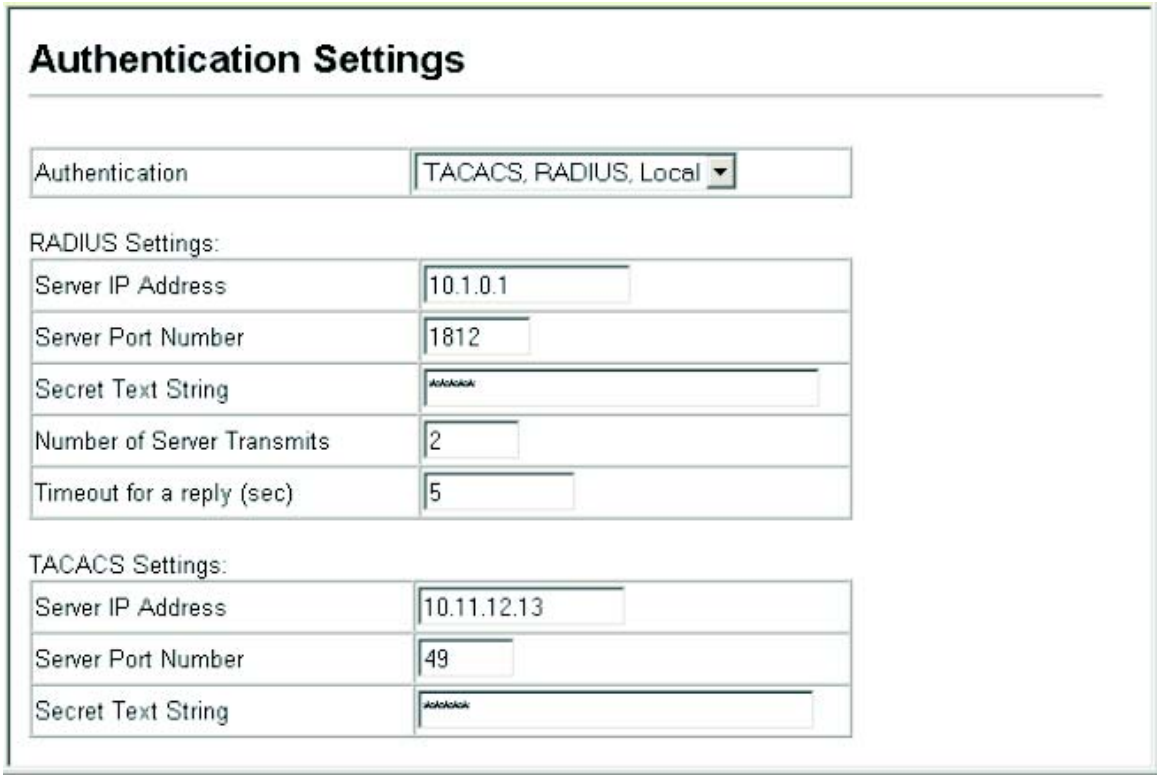

Figure 3-21. Authentication Settings

Downloaded from www.Manualslib.com manuals search engine

CLI – Specify all the required parameters to enable logon authentication.

```
Console(config)#authentication login radius                    4-68
Console(config)#radius-server host 192.168.1.25                4-70
Console(config)#radius-server port 181                         4-70
Console(config)#radius-server key green                        4-71
Console(config)#radius-server retransmit 5                     4-71
Console(config)#radius-server timeout 10                       4-72
Console#show radius-server                                     4-72
Server IP address: 192.168.1.25
 Communication key with radius server:
 Server port number: 181
 Retransmit times: 5
 Request timeout: 10
Console(config)#authentication login tacacs                    4-68
Console(config)#tacacs-server host 10.20.30.40                 4-73
Console(config)#tacacs-server port 200                         4-73
Console(config)#tacacs-server key green                        4-74
Console#show tacacs-server                                     4-74
Server IP address: 10.20.30.40
 Communication key with tacacs server: green
 Server port number: 200
Console(config)#
```

Configuring HTTPS

You can configure the switch to enable the Secure Hypertext Transfer Protocol (HTTPS) over the Secure Socket Layer (SSL), providing secure access (i.e., an encrypted connection) to the switch's web interface.

Command Usage

- Both the HTTP and HTTPS service can be enabled independently on the switch. However, you cannot configure both services to use the same UDP port.
- If you enable HTTPS, you must indicate this in the URL that you specify in your browser: https://*device*[:*port_number*]
- When you start HTTPS, the connection is established in this way:
  - The client authenticates the server using the server's digital certificate.
  - The client and server negotiate a set of security protocols to use for the connection.
  - The client and server generate session keys for encrypting and decrypting data.
- The client and server establish a secure encrypted connection.
  A padlock icon should appear in the status bar for Internet Explorer 5.x or above and Netscape Navigator 4.x or above.
- The following web browsers and operating systems currently support HTTPS:

Table 3-22. Compatible Operating Systems

Web Browser	Operating System
Internet Explorer 5.0 or later	Windows 98,Windows NT (with service pack 6a), Windows 2000, Windows XP
Netscape Navigator 4.76 or later	Windows 98,Windows NT (with service pack 6a), Windows 2000, Windows XP, Solaris 2.6

Downloaded from www.Manualslib.com manuals search engine

- To specify a secure-site certificate, see “Replacing the Default Secure-site Certificate” on page 3-46.

Command Attributes

- **HTTPS Status** – Allows you to enable/disable the HTTPS server feature on the switch. (Default: Enabled)
- **Change HTTPS Port Number** – Specifies the UDP port number used for HTTPS/SSL connection to the switch’s web interface. (Default: Port 443)

Web – Click Security, HTTPS Settings. Enable HTTPS and specify the port number, then click Apply.

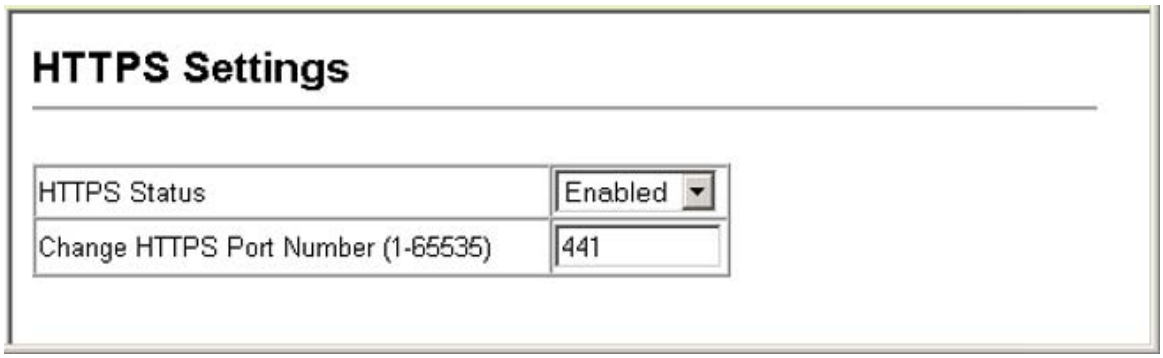

Figure 3-23. HTTPS Settings

CLI – This example enables the HTTP secure server and modifies the port number.

```
Console(config)#ip http secure-server                    4-30
Console(config)#ip http secure-port 441                  4-31
Console(config)#
```

Replacing the Default Secure-site Certificate

When you log onto the web interface using HTTPS (for secure access), a Secure Sockets Layer (SSL) certificate appears for the switch. By default, the certificate that Netscape and Internet Explorer display will be associated with a warning that the site is not recognized as a secure site. This is because the certificate has not been signed by an approved certification authority. If you want this warning to be replaced by a message confirming that the connection to the switch is secure, you must obtain a unique certificate and a private key and password from a recognized certification authority.

Caution: For maximum security, we recommend you obtain a unique Secure Sockets Layer certificate at the earliest opportunity. This is because the default certificate for the switch is not unique to the hardware you have purchased.

Downloaded from www.Manualslib.com manuals search engine

When you have obtained these, place them on your TFTP server, and use the following command at the switch's command-line interface to replace the default (unrecognized) certificate with an authorized one:

```
Console#copy tftp https-certificate                                    4-62
TFTP server ip address: <server ip-address>
Source certificate file name: <certificate file name>
Source private file name: <private key file name>
Private password: <password for private key>
```

Note: The switch must be reset for the new certificate to be activated. To reset the switch, type: `Console#reload`

Configuring the Secure Shell

The Berkley-standard includes remote access tools originally designed for Unix systems. Some of these tools have also been implemented for Microsoft Windows and other environments. These tools, including commands such as *rlogin* (remote login), *rsh* (remote shell), and *rcp* (remote copy), are not secure from hostile attacks.

The Secure Shell (SSH) includes server/client applications intended as a secure replacement for the older Berkley remote access tools. SSH can also provide remote management access to this switch as a secure replacement for Telnet. When the client contacts the switch via the SSH protocol, the switch generates a public-key that the client uses along with a local user name and password for access authentication. SSH also encrypts all data transfers passing between the switch and SSH-enabled management station clients, and ensures that data traveling over the network arrives unaltered.

Note that you need to install an SSH client on the management station to access the switch for management via the SSH protocol.

Note: The switch supports both SSH Version 1.5 and 2.0.

Command Usage

The SSH server on this switch supports both password and public key authentication. If password authentication is specified by the SSH client, then the password can be authenticated either locally or via a RADIUS or TACACS+ remote authentication server, as specified on the **Authentication Settings** page (page 3-42). If public key authentication is specified by the client, then you must configure authentication keys on both the client and the switch as described in the following section. Note that regardless of whether you use public key or password authentication, you still have to generate authentication keys on the switch (SSH Host Key Settings) and enable the SSH server (Authentication Settings).

To use the SSH server, complete these steps:

1. *Generate a Host Key Pair* – On the SSH Host Key Settings page, create a host public/private key pair.

2. *Provide Host Public Key to Clients* – Many SSH client programs automatically import the host public key during the initial connection setup with the switch.

Downloaded from www.Manualslib.com manuals search engine

Otherwise, you need to manually create a known hosts file on the management station and place the host public key in it. An entry for a public key in the known hosts file would appear similar to the following example:

10.1.0.54 1024 35 15684995401867669259333946775054617325313674890836547254
15020245593199868544358361651999923329781766065830956 10825913212890233
76546801726272571413428762941301196195566782 59566410486957427888146206
51941746772984865468615717739390164779355942303577413098022737087794545
24083971752646358058176716709574804776117

3. *Import Client's Public Key to the Switch* – Use the **copy tftp public-key** command (page 4-62) to copy a file containing the public key for all the SSH client's granted management access to the switch. (Note that these clients must be configured locally on the switch via the User Accounts page as described on page 4-25.) The clients are subsequently authenticated using these keys. The current firmware only accepts public key files based on standard UNIX format as shown in the following example:

1024 35 13410816856098939210409449201554253476316419218729589211431738800555361616310517759408386863110929123222682851925437460310093718772119969631781366277414168985132049117204830339254324101637997592371449011938006090253948408482717819437228840253311595213486102290297898272135326713162943253281891504530639391664 3 steve@192.168.1.19

4. *Set the Optional Parameters* – On the SSH Settings page, configure the optional parameters, including the authentication timeout, the number of retries, and the server key size.

5. *Enable SSH Service* – On the SSH Settings page, enable the SSH server on the switch.

6. *Challenge-Response Authentication* – When an SSH client attempts to contact the switch, the SSH server uses the host key pair to negotiate a session key and encryption method. Only clients that have a private key corresponding to the public keys stored on the switch can access. The following exchanges take place during this process:

   a. The client sends its public key to the switch.
   b. The switch compares the client's public key to those stored in memory.
   c. If a match is found, the switch uses the public key to encrypt a random sequence of bytes, and sends this string to the client.
   d. The client uses its private key to decrypt the bytes, and sends the decrypted bytes back to the switch.
   e. The switch compares the decrypted bytes to the original bytes it sent. If the two sets match, this means that the client's private key corresponds to an authorized public key, and the client is authenticated.

Notes: **1.** To use SSH with only password authentication, the host public key must still be given to the client, either during initial connection or manually entered into the known host file. However, you do not need to configure the client's keys.

Downloaded from www.Manualslib.com manuals search engine

2. The SSH server supports up to four client sessions. The maximum number of client sessions includes both current Telnet sessions and SSH sessions.

Generating the Host Key Pair

A host public/private key pair is used to provide secure communications between an SSH client and the switch. After generating this key pair, you must provide the host public key to SSH clients and import the client's public key to the switch as described in the proceeding section (Command Usage).

Field Attributes

- **Public-Key of Host-Key** – The public key for the host.
  - RSA: The first field indicates the size of the host key (e.g., 1024), the second field is the encoded public exponent (e.g., 65537), and the last string is the encoded modulus.
  - DSA: The first field indicates that the encryption method used by SSH is based on the Digital Signature Standard (DSS). The last string is the encoded modulus.
- **Host-Key Type** – The key type used to generate the host key pair (i.e., public and private keys). (Range: RSA, DSA, Both: Default: RSA)

  The SSH server uses RSA or DSA for key exchange when the client first establishes a connection with the switch, and then negotiates with the client to select either DES (56-bit) or 3DES (168-bit) for data encryption.
- **Save Host-Key from Memory to Flash** – Saves the host key from RAM (i.e., volatile memory to flash memory. Otherwise, the host key pair is stored to RAM by default. Note that you must select this item prior to generating the host-key pair.
- **Generate** – This button is used to generate the host key pair. Note that you must first generate the host key pair before you can enable the SSH server on the SSH Server Settings page.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Security, SSH Host-Key Settings. Select the host-key type from the drop-down box, select the option to save the host key from memory to flash (if required) prior to generating the key, and then click Generate.

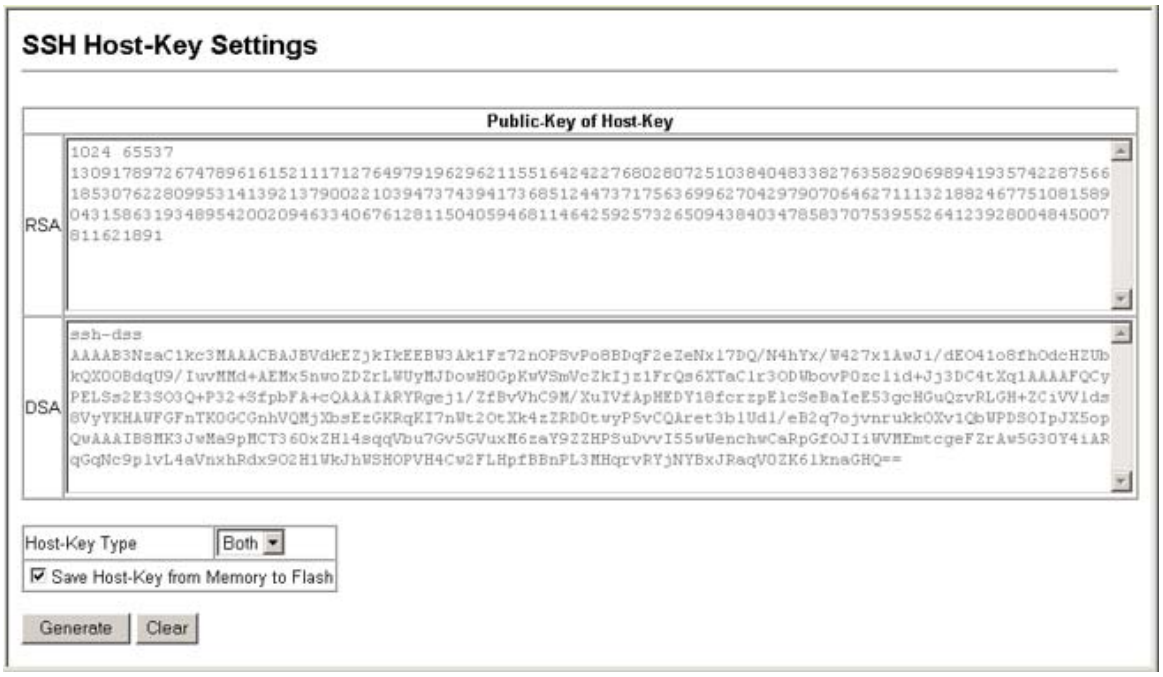

Figure 3-24. Secure Shell Host-Key Settings

CLI – This example generates a host-key pair using both the RSA and DSA algorithms, stores the keys to flash memory, and then displays the host's public keys.

```
Console#ip ssh crypto host-key generate                                    4-34
Console#ip ssh save host-key                                               4-34
Console#show public-key host                                               4-34
Host:
RSA:
1024 65537 12725092254492640213133651454613118967905519236007602865300676182409690947448320102524878965977592168322225584652387791546479807396314033869257931051057652122430528078658854857892726029378660892368414232759121276032591968369705343933643844522333518828717389689451172929051081391964202519093210432857904576489 1
DSA:
ssh-dss AAAAB3NzaC1kc3MAAACBAN6zwIqCqDb3869jYVXlME1sHL0EcE/Re6hlasfEthIwmjhLY4O0jqJZpcEQUgCfYlum0Y2uoLka+Py9ieGWQ8f2gobUZKIICuKg6vjO9XTs7XKc05xfzkBiKviDa+2OrIz6UK+6vFOgvUDFedlnixYTVo+h5v8r0ea2rpnO6DkZAAAAFQCNZn/x17dwpW8RrVDQnSWw4Qk+6QAAAIEAptkGeB6B5hwagH4gUOCY6i1TmrmSiJgfwO9OqRPUMbCAkCC+uzxatOo7drnIZypMx+Sx5RUdMGgKS+9ywsa1cWqHeFY5ilc3lDCNBueeLykZzVS+RS+azTKIk/zrJh8GLGNq375R55yRxFvmcGIn/Q7IphPqyJ3o9MK8LFDfmJEAAACAL8A6tESiswP2OFqX7VGoEbzVDSOIRTMFy3iUXtvGyQAOVSy67Mfc3lMtgqPRUOYXDiwIBp5NXgilCg5z7VqbmRm28mWc5a//f8TUAgPNWKV6W0hqmshQdotVzDR1e+XKNTZj0uTwWfjO5Kytdn4MdoTHgrbl/DMdAfjnte8MZZs=

Console#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring the SSH Server

The SSH server includes basic settings for authentication.

Field Attributes

- **SSH Server Status** – Allows you to enable/disable the SSH server on the switch. (Default: Enabled)
- **Version** – The Secure Shell version number. Version 2.0 is displayed, but the switch supports management access via either SSH Version 1.5 or 2.0 clients.
- **SSH Authentication Timeout** – Specifies the time interval in seconds that the SSH server waits for a response from a client during an authentication attempt. (Range: 1 to 120 seconds; Default: 120 seconds)
- **SSH Authentication Retries** – Specifies the number of authentication attempts that a client is allowed before authentication fails and the client has to restart the authentication process. (Range: 1-5 times; Default: 3)
- **SSH Server-Key Size** – Specifies the SSH server key size. (Range: 512-896 bits)
  - The server key is a private key that is never shared outside the switch.
  - The host key is shared with the SSH client, and is fixed at 1024 bits.

Web – Click Security, SSH, Settings. Enable SSH and adjust the authentication parameters as required, then click Apply. Note that you must first generate the host key pair on the SSH Host-Key Settings page before you can enable the SSH server.

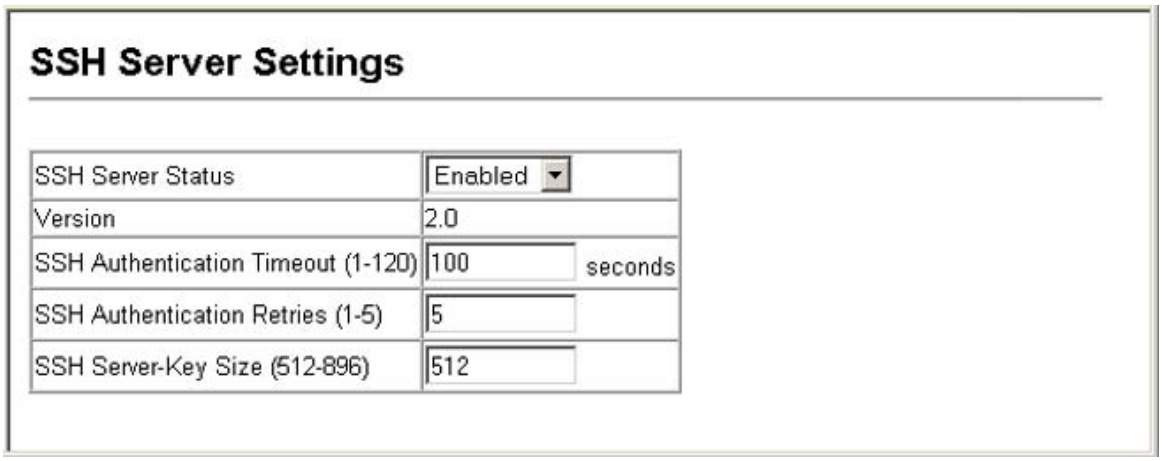

Figure 3-25. Secure Shell Server Settings

Downloaded from www.Manualslib.com manuals search engine

CLI – This example enables SSH, sets the authentication parameters, and displays the current configuration. It shows that the administrator has made a connection via SHH, and then disables this connection.

```
Console(config)#ip ssh server                                          4-34
Console(config)#ip ssh timeout 100                                     4-35
Console(config)#ip ssh authentication-retries 5                        4-36
Console(config)#ip ssh server-key size 512                             4-36
Console(config)#end
Console#show ip ssh                                                    4-39
SSH Enabled - version 2.0
Negotiation timeout: 120 secs; Authentication retries: 3
Server key size: 768 bits
Console#show ssh                                                       4-39
Connection Version State                Username Encryption
  0          2.0   Session-Started      admin    ctos aes128-cbc-hmac-md5
                                                  stoc aes128-cbc-hmac-md5
Console#disconnect 0                                                   4-18
Console#
```

Configuring Port Security

Port security is a feature that allows you to configure a switch port with one or more device MAC addresses that are authorized to access the network through that port.

When port security is enabled on a port, the switch stops learning new MAC addresses on the specified port. Only incoming traffic with source addresses already stored in the dynamic or static address table will be accepted as authorized to access the network through that port. If a device with an unauthorized MAC address attempts to use the switch port, the intrusion will be detected and the switch can automatically take action by disabling the port and sending a trap message.

To use port security, first allow the switch to dynamically learn the <source MAC address, VLAN> pair for frames received on a port for an initial training period, and then enable port security to stop address learning. Be sure you enable the learning function long enough to ensure that all valid VLAN members have been registered on the selected port. Note that you can also restrict the maximum number of addresses that can be learned by a port.

To add new VLAN members at a later time, you can manually add secure addresses with the Static Address Table (page 3-100), or turn off port security to reenable the learning function long enough for new VLAN members to be registered. Learning may then be disabled again, if desired, for security.

Command Usage

- A secure port has the following restrictions:
  - Cannot use port monitoring.
  - Cannot be a multi-VLAN port.
  - It cannot be used as a member of a static or dynamic trunk.
  - It should not be connected to a network interconnection device.
- If a port is disabled (shut down) due to a security violation, it must be manually re-enabled from the Port/Port Configuration page (page 3-77).

Downloaded from www.Manualslib.com manuals search engine

Command Attributes

- **Port** – Port number.
- **Name** – Descriptive text (page 4-131).
- **Action** – Indicates the action to be taken when a port security violation is detected:
  - **None**: No action should be taken. (This is the default.)
  - **Trap**: Send an SNMP trap message.
  - **Shutdown**: Disable the port.
  - **Trap and Shutdown**: Send an SNMP trap message and disable the port.
- **Security Status** – Enables or disables port security on the port. (Default: Disabled)
- **Max MAC Count** – The maximum number of MAC addresses that can be learned on a port. (Range: 0 - 20)
- **Trunk** – Trunk number if port is a member (page 3-80 and 3-81).

Web – Click Security, Port Security. Set the action to take when an invalid address is detected on a port, mark the checkbox in the Status column to enable security for a port, set the maximum number of MAC addresses allowed on a port, and click Apply.

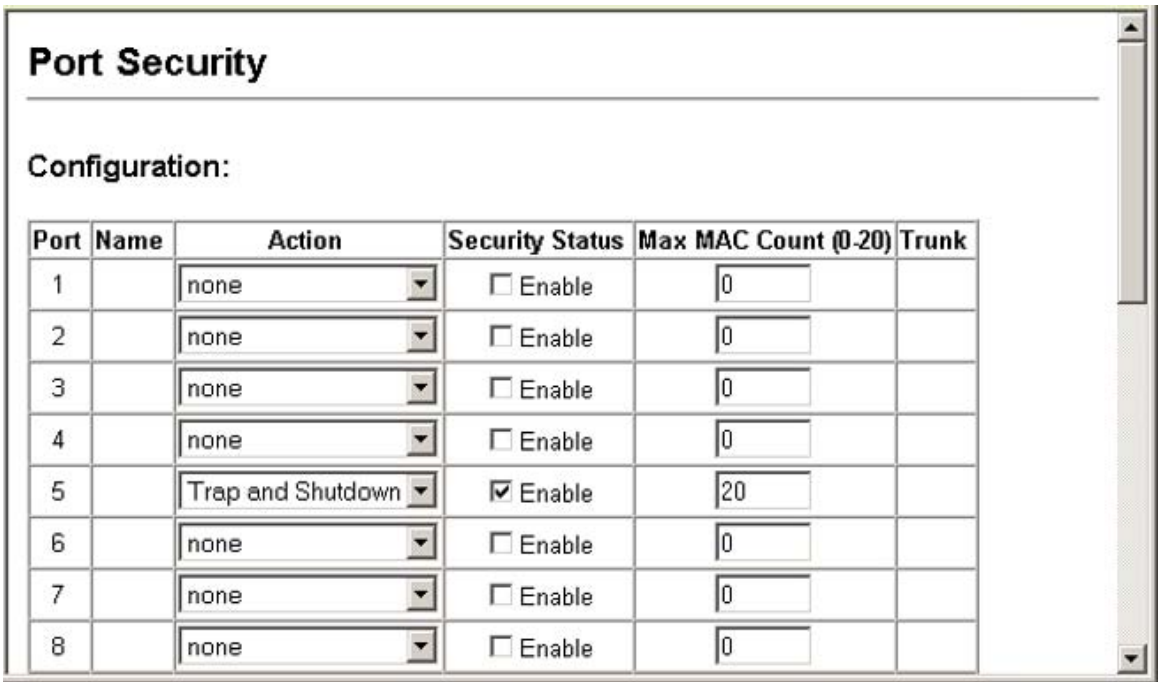

Figure 3-26. Configuring Port Security

CLI – This example sets the command mode to Port 5, sets the port security action to send a trap and disable the port, and then enables port security for the switch.

```
Console(config)#interface ethernet 1/5
Console(config-if)#port security action trap-and-shutdown          4-75
Console(config-if)#port security
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring 802.1x Port Authentication

Network switches can provide open and easy access to network resources by simply attaching a client PC. Although this automatic configuration and access is a desirable feature, it also allows unauthorized personnel to easily intrude and possibly gain access to sensitive network data.

The IEEE 802.1x (dot1x) standard defines a port-based access control procedure that prevents unauthorized access to a network by requiring users to first submit credentials for authentication. Access to all switch ports in a network can be centrally controlled from a server, which means that authorized users can use the same credentials for authentication from any point within the network.

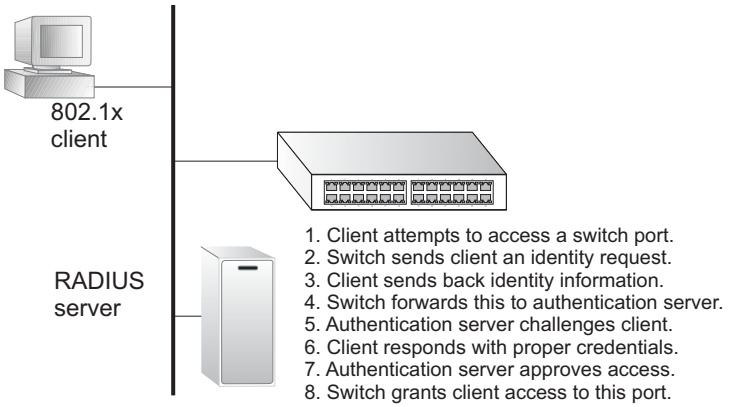
802.1x
client
RADIUS
server
1. Client attempts to access a switch port.
2. Switch sends client an identity request.
3. Client sends back identity information.
4. Switch forwards this to authentication server.
5. Authentication server challenges client.
6. Client responds with proper credentials.
7. Authentication server approves access.
8. Switch grants client access to this port.

This switch uses the Extensible Authentication Protocol over LANs (EAPOL) to exchange authentication protocol messages with the client, and a remote RADIUS authentication server to verify user identity and access rights. When a client (i.e., Supplicant) connects to a switch port, the switch (i.e., Authenticator) responds with an EAPOL identity request. The client provides its identity (such as a user name) in an EAPOL response to the switch, which it forwards to the RADIUS server. The RADIUS server verifies the client identity and sends an access challenge back to the client. The EAP packet from the RADIUS server contains not only the challenge, but the authentication method to be used. The client can reject the authentication method and request another, depending on the configuration of the client software and the RADIUS server. The authentication method can be MD5 only. The client responds to the appropriate method with its credentials, such as a password or certificate. The RADIUS server verifies the client credentials and responds with an accept or reject packet. If authentication is successful, the switch allows the client to access the network. Otherwise, network access is denied and the port remains blocked.

The operation of 802.1x on the switch requires the following:

- The switch must have an IP address assigned.
- RADIUS authentication must be enabled on the switch and the IP address of the RADIUS server specified.
- Each switch port that will be used must be set to dot1x “Auto” mode.
- Each client that needs to be authenticated must have dot1x client software installed and properly configured.
- The RADIUS server and 802.1x client support EAP. (The switch only supports EAPOL in order to pass the EAP packets from the server to the client.)

Downloaded from www.Manualslib.com manuals search engine

- The RADIUS server and client also have to support the same EAP authentication type – MD5. (Some clients have native support in Windows, otherwise the dot1x client must support it.)

Displaying 802.1x Global Settings

The dot1x protocol includes global parameters that control the client authentication process that runs between the client and the switch (i.e., authenticator), as well as the client identity lookup process that runs between the switch and authentication server. These parameters are described in this section.

Command Attributes

- **dot1x Re-authentication** – Indicates if switch port requires a client to be re-authenticated after a certain period of time.
- **dot1x Max Request Count** – The maximum number of times the switch port will retransmit an EAP request packet to the client before it times out the authentication session.
- **Timeout for Quiet Period** – Indicates the time that a switch port waits after the Max Request Count has been exceeded before attempting to acquire a new client.
- **Timeout for Re-authentication Period** – Indicates the time period after which a connected client must be re-authenticated.
- **Timeout for TX Period** – The time period during an authentication session that the switch waits before re-transmitting an EAP packet.
- **Supplicant timeout** – The time the switch waits for a client response to an EAP request.
- **Server timeout** – The time the switch waits for a response from the authentication server (RADIUS) to an authentication request.
- **Re-authentication Max Count** – The number of times the switch will attempt to re-authenticate a connected client before the port becomes unauthorized.

Web – Click Security, 802.1x, Information.

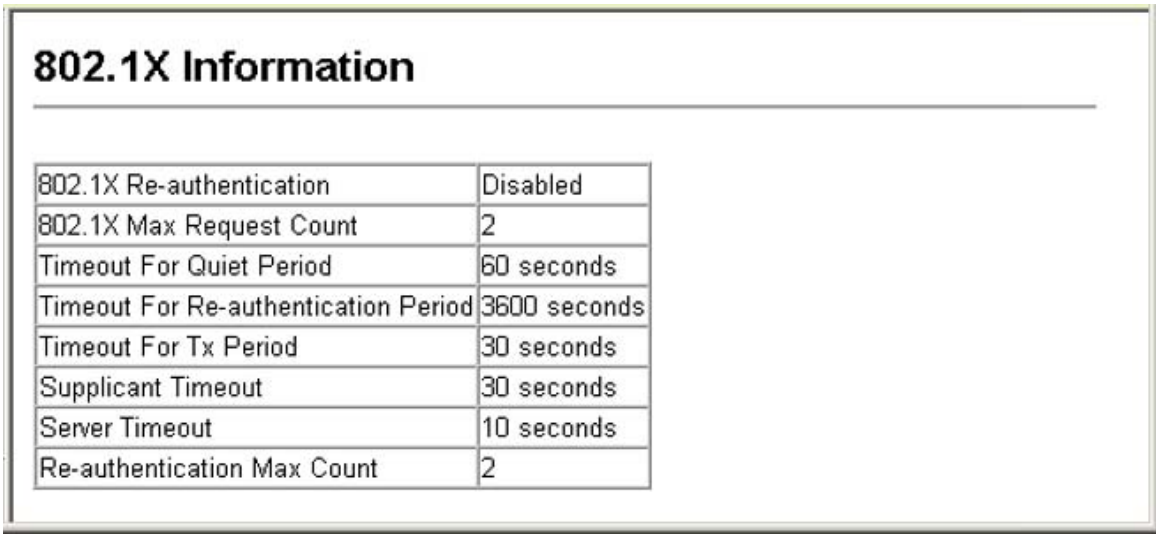

Figure 3-27. 802.1X Information

Downloaded from www.Manualslib.com manuals search engine

CLI – This example shows the default protocol settings for 802.1x. For a description of the additional entries displayed in the CLI, See “show dot1x” on page 4-81.

```
Console#show dot1x                                                    4-81
Global 802.1X Parameters
 reauth-enabled: yes
 reauth-period:  300
 quiet-period:   350
 tx-period:      300
 supp-timeout:   30
 server-timeout: 30
 reauth-max:     2
 max-req:        2

802.1X Port Summary
 Port Name     Status     Operation Mode               Mode     Authorized
      1/1   disabled        Single-Host      ForceAuthorized            n/a
      1/2   disabled        Single-Host      ForceAuthorized            n/a
:
     1/23   disabled        Single-Host      ForceAuthorized            yes
     1/24    enabled        Single-Host                 Auto            yes

802.1X Port Details

802.1X is disabled on port 1
:
802.1X is enabled on port 24
Status              Unauthorized
Operation mode      Single-Host
Max count           5
Port-control        Auto
Supplicant          00-00-00-00-00-00
Current Identifier  0

Authenticator State Machine
State               Connecting
Reauth Count        3

Backend State Machine
State               Idle
Request Count       0
Identifier(Server)  0

Reauthentication State Machine
State               Initialize
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring 802.1x Global Settings

The dot1x protocol includes global parameters that control the client authentication process that runs between the client and the switch (i.e., authenticator), as well as the client identity lookup process that runs between the switch and authentication server. The configuration options for parameters are described in this section.

Command Attributes

- **dot1X Re-authentication** – Sets the client to be re-authenticated after the interval specified by the Timeout for Re-authentication Period. Re-authentication can be used to detect if a new device is plugged into a switch port. (Default: Disabled)
- **dot1X Max Request Count** – Sets the maximum number of times the switch port will retransmit an EAP request packet to the client before it times out the authentication session. (Range: 1-10; Default 2)
- **Timeout for Quiet Period** – Sets the time that a switch port waits after the dot1X Max Request Count has been exceeded before attempting to acquire a new client. (Range: 1-65535 seconds; Default: 60 seconds)
- **Timeout for Re-authentication Period** – Sets the time period after which a connected client must be re-authenticated. (Range: 1-65535 seconds; Default: 3600 seconds)
- **Timeout for TX Period** – Sets the time period during an authentication session that the switch waits before re-transmitting an EAP packet. (Range: 1-65535; Default: 30 seconds)
- **authentication dot1x default*** – Sets the default authentication server type. Note that the specified authentication server type must be enabled and properly configured for dot1x to function properly. (Options: radius).

* CLI only.

Web – Select Security, 802.1x, Configuration. Enable dot1x globally for the switch, modify any of the parameters required, and then click Apply.

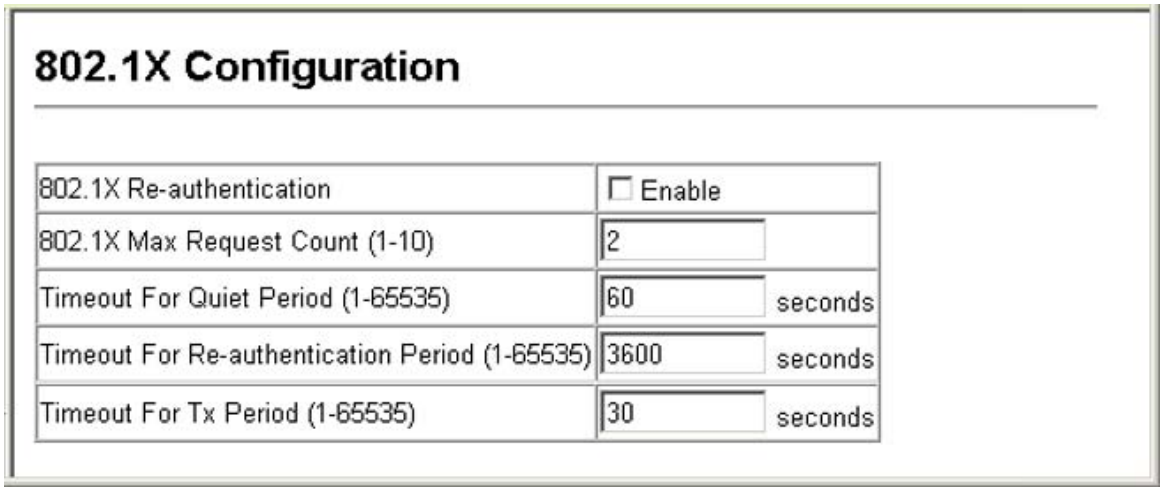

Figure 3-28. 802.1X Configuration

Downloaded from www.Manualslib.com manuals search engine

CLI – This enables re-authentication and sets all of the global parameters for 802.1x.

```
Console(config)#dot1x re-authentication                          4-80
Console(config)#dot1x max-req 5                                  4-78
Console(config)#dot1x timeout quiet-period 40                    4-80
Console(config)#dot1x timeout re-auth 5                          4-80
Console(config)#dot1x timeout tx-period 40                       4-81
Console(config)#authentication dot1x default radius              4-77
Console(config)#
```

Configuring Port Authorization Mode

When dot1x is enabled, you need to specify the dot1x authentication mode configured for each port.

Command Attributes

- **Status** – Indicates if authentication is enabled or disabled on the port.
- **Operation Mode** – Allows single or multiple hosts (clients) to connect to an 802.1X-authorized port. (Range: Single-Host, Multi-Host; Default: Single-Host)
- **Max Count** – The maximum number of hosts that can connect to a port when the Multi-Host operation mode is selected. (Range: 1-20; Default: 5)
- **Mode** – Sets the authentication mode to one of the following options:
  - **Auto** – Requires a dot1x-aware client to be authorized by the authentication server. Clients that are not dot1x-aware will be denied access.
  - **Force-Authorized** – Forces the port to grant access to all clients, either dot1x-aware or otherwise.
  - **Force-Unauthorized** – Forces the port to deny access to all clients, either dot1x-aware or otherwise.
- **Authorized** –
  - **Yes** – Connected client is authorized.
  - **No** – Connected client is not authorized.
  - *Blank* – Displays nothing when dot1x is disabled on a port.
- **Supplicant** – Indicates the MAC address of a connected client.
- **Trunk** – Indicates if the port is configured as a trunk port.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Security, 802.1x, Port Configuration. Select the authentication mode from the drop-down box and click Apply.

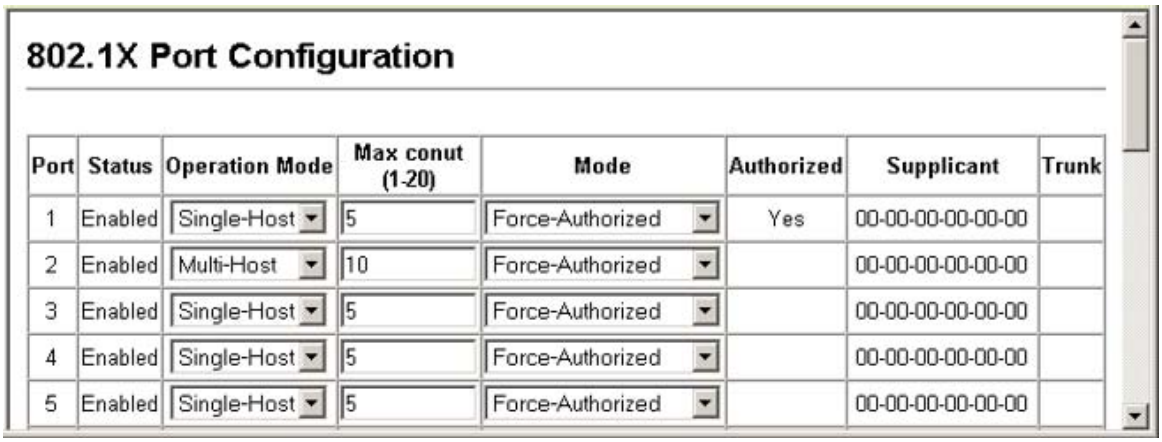

Figure 3-29. 802.1X Port Configuration

CLI – This example sets the authentication mode to enable 802.1x on port 2, and allows up to ten clients to connect to this port.

```
Console(config)#interface ethernet 1/2                          4-130
Console(config-if)#dot1x port-control auto                      4-78
Console(config-if)#dot1x operation-mode multi-host max-count 10 4-79
Console(config-if)#
```

Displaying 802.1x Statistics

This switch can display statistics for dot1x protocol exchanges for any port.

Statistical Values

Table 3-30. 802.1X Statistics

Parameter	Description
Rx EXPOL Start	The number of EAPOL Start frames that have been received by this Authenticator.
Rx EAPOL Logoff	The number of EAPOL Logoff frames that have been received by this Authenticator.
Rx EAPOL Invalid	The number of EAPOL frames that have been received by this Authenticator in which the frame type is not recognized.
Rx EAPOL Total	The number of valid EAPOL frames of any type that have been received by this Authenticator.
Rx EAP Resp/Id	The number of EAP Resp/Id frames that have been received by this Authenticator.
Rx EAP Resp/Oth	The number of valid EAP Response frames (other than Resp/Id frames) that have been received by this Authenticator.
Rx EAP LenError	The number of EAPOL frames that have been received by this Authenticator in which the Packet Body Length field is invalid.
Rx Last EAPOLVer	The protocol version number carried in the most recently received EAPOL frame.

Downloaded from www.Manualslib.com manuals search engine

Table 3-30. 802.1X Statistics	
Parameter	**Description**
Rx Last EAPOLSrc	The source MAC address carried in the most recently received EAPOL frame.
Tx EAPOL Total	The number of EAPOL frames of any type that have been transmitted by this Authenticator.
Tx EAP Req/Id	The number of EAP Req/Id frames that have been transmitted by this Authenticator.
Tx EAP Req/Oth	The number of EAP Request frames (other than Rq/Id frames) that have been transmitted by this Authenticator.

Web – Select Security, 802.1x, Statistics. Select the required port and then click Query. Click Refresh to update the statistics.

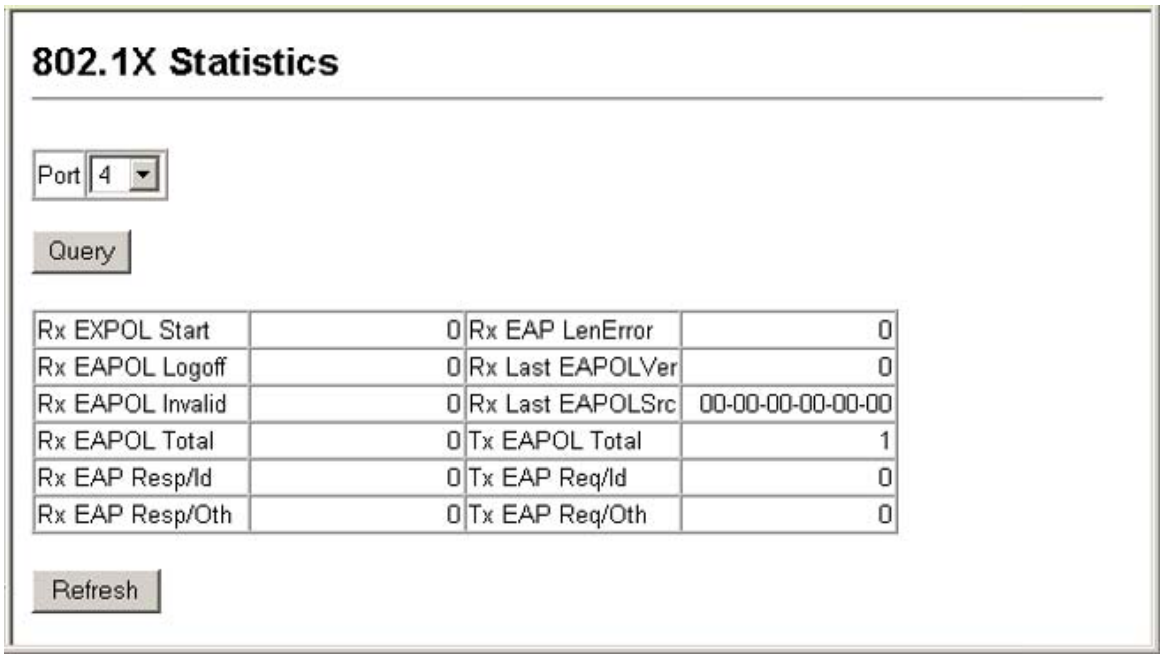

Figure 3-31. 802.1X Statistics

CLI – This example displays the 802.1x statistics for port 4.

```
Console#show dot1x statistics interface ethernet 1/4                4-81

Eth 1/4
Rx: EXPOL      EAPOL      EAPOL      EAPOL      EAP      EAP      EAP
    Start      Logoff     Invalid    Total      Resp/Id  Resp/Oth LenError
        2          0          0       1007       672        0        0

    Last       Last
EAPOLVer      EAPOLSrc
       1      00-00-E8-98-73-21

Tx: EAPOL      EAP      EAP
    Total      Req/Id   Req/Oth
     2017      1005        0
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Access Control Lists

Access Control Lists (ACL) provide packet filtering for IP frames (based on address, protocol, Layer 4 protocol port number or TCP control code) or any frames (based on MAC address or Ethernet type). To filter incoming packets, first create an access list, add the required rules, specify a mask to modify the precedence in which the rules are checked, and then bind the list to a specific port.

Configuring Access Control Lists

An ACL is a sequential list of permit or deny conditions that apply to IP addresses, MAC addresses, or other more specific criteria. This switch tests ingress or egress packets against the conditions in an ACL one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match for a list of all permit rules, the packet is dropped; and if no rules match for a list of all deny rules, the packet is accepted.

Command Usage

The following restrictions apply to ACLs:

- Each ACL can have up to 32 rules.
- The maximum number of ACLs is 41 per port.
- You must configure a mask for an ACL rule before you can bind it to a port or set the queue or frame priorities associated with the rule.
- When an ACL is bound to an interface as an egress filter, all entries in the ACL must be deny rules. Otherwise, the bind operation will fail.
- The switch does not support the explicit “deny any any” rule for the egress IP ACL or the egress MAC ACLs. If these rules are included in ACL, and you attempt to bind the ACL to an interface for egress checking, the bind operation will fail.

The order in which active ACLs are checked is as follows:

1. User-defined rules in the Egress MAC ACL for egress ports.
2. User-defined rules in the Egress IP ACL for egress ports.
3. User-defined rules in the Ingress MAC ACL for ingress ports.
4. User-defined rules in the Ingress IP ACL for ingress ports.
5. Explicit default rule (permit any any) in the ingress IP ACL for ingress ports.
6. Explicit default rule (permit any any) in the ingress MAC ACL for ingress ports.
7. If no explicit rule is matched, the implicit default is permit all.

Downloaded from www.Manualslib.com manuals search engine

Setting the ACL Name and Type

Use the ACL Configuration page to designate the name and type of an ACL.

Command Attributes

- **Name** – Name of the ACL. (Maximum length: 16 characters)
- **Type** – There are three filtering modes:
  - Standard: IP ACL mode that filters packets based on the source IP address.
  - Extended: IP ACL mode that filters packets based on source or destination IP address, as well as protocol type and protocol port number. If the “TCP” protocol is specified, then you can also filter packets based on the TCP control code.
  - MAC: MAC ACL mode that filters packets based on the source or destination MAC address and the Ethernet frame type (RFC 1060).

Web – Click Security, ACL, Configuration. Enter an ACL name in the Name field, select the list type (IP Standard, IP Extended, or MAC), and click Add to open the configuration page for the new list.

Figure 3-32. ACL Configuration

CLI – This example creates a standard IP ACL named bill.

```
Console(config)#access-list ip standard bill                    4-85
Console(config-std-acl)#
```

Configuring a Standard IP ACL

Command Attributes

- **Action** – An ACL can contain all permit rules or all deny rules. (Default: Permit rules)
- **IP** – Specifies the source IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and SubMask fields. (Options: Any, Host, IP; Default: Any)
- **Address** – Source IP address.

Downloaded from www.Manualslib.com manuals search engine

- **SubMask** – A subnet mask containing four integers from 0 to 255, each separated by a period. The mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The mask is bitwise ANDed with the specified source IP address, and compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.

Web – Specify the action (i.e., Permit or Deny). Select the address type (Any, Host, or IP). If you select “Host,” enter a specific address. If you select “IP,” enter a subnet address and the mask for an address range. Then click Add.

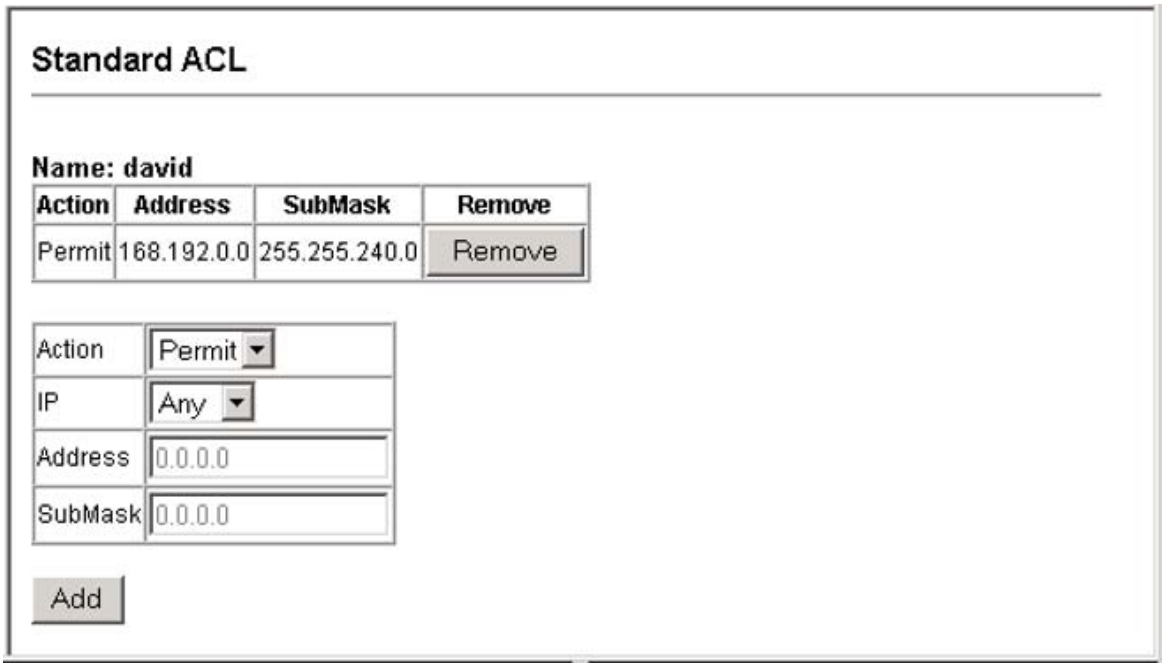

Figure 3-33. Configuring a Standard ACL

CLI – This example configures one permit rule for the specific address 10.1.1.21 and another rule for the address range 168.92.16.x – 168.92.31.x using a bitmask.

```
Console(config-std-acl)#permit host 10.1.1.21                    4-86
Console(config-std-acl)#permit 168.92.16.0 255.255.240.0
Console(config-std-acl)#
```

Configuring an Extended IP ACL

Command Attributes

- **Action** – An ACL can contain either all permit rules or all deny rules. (Default: Permit rules)
- **Src/Dst IP** – Specifies the source or destination IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and SubMask fields. (Options: Any, Host, IP; Default: Any)
- **Src/Dst Address** – Source or destination IP address.
- **Src/Dst SubMask** – Subnet mask for source or destination address. (See the description for SubMask on page 3-62.)

Downloaded from www.Manualslib.com manuals search engine

- **Service Type** – Packet priority settings based on the following criteria:
  - **Precedence** – IP precedence level. (Range: 0-7)
  - **TOS** – Type of Service level. (Range: 0-15)
  - **DSCP** – DSCP priority level. (Range: 0-64)
- **Protocol** – Specifies the protocol type to match as TCP, UDP or Others, where others indicates a specific protocol number (0-255). (Options: TCP, UDP, Others; Default: TCP)
- **Src/Dst Port** – Source/destination port number for the specified protocol type. (Range: 0-65535)
- **Src/Dst Port Bitmask** – Decimal number representing the port bits to match. (Range: 0-65535)
- **Control Code** – Decimal number (representing a bit string) that specifies flag bits in byte 14 of the TCP header. (Range: 0-63)
- **Control Bitmask** – Decimal number representing the code bits to match.
  The control bitmask is a decimal number (for an equivalent binary bit mask) that is applied to the control code. Enter a decimal number, where the equivalent binary bit “1” means to match a bit and “0” means to ignore a bit. The following bits may be specified:
  - 1 (fin) – Finish
  - 2 (syn) – Synchronize
  - 4 (rst) – Reset
  - 8 (psh) – Push
  - 16 (ack) – Acknowledgement
  - 32 (urg) – Urgent pointer

  For example, use the code value and mask below to catch packets with the following flags set:
  - SYN flag valid, use control-code 2, control bitmask 2
  - Both SYN and ACK valid, use control-code 18, control bitmask 18
  - SYN valid and ACK invalid, use control-code 2, control bitmask 18

Downloaded from www.Manualslib.com manuals search engine

Web – Specify the action (i.e., Permit or Deny). Specify the source and/or destination addresses. Select the address type (Any, Host, or IP). If you select "Host," enter a specific address. If you select "IP," enter a subnet address and the mask for an address range. Set any other required criteria, such as service type, protocol type, or TCP control code. Then click Add.

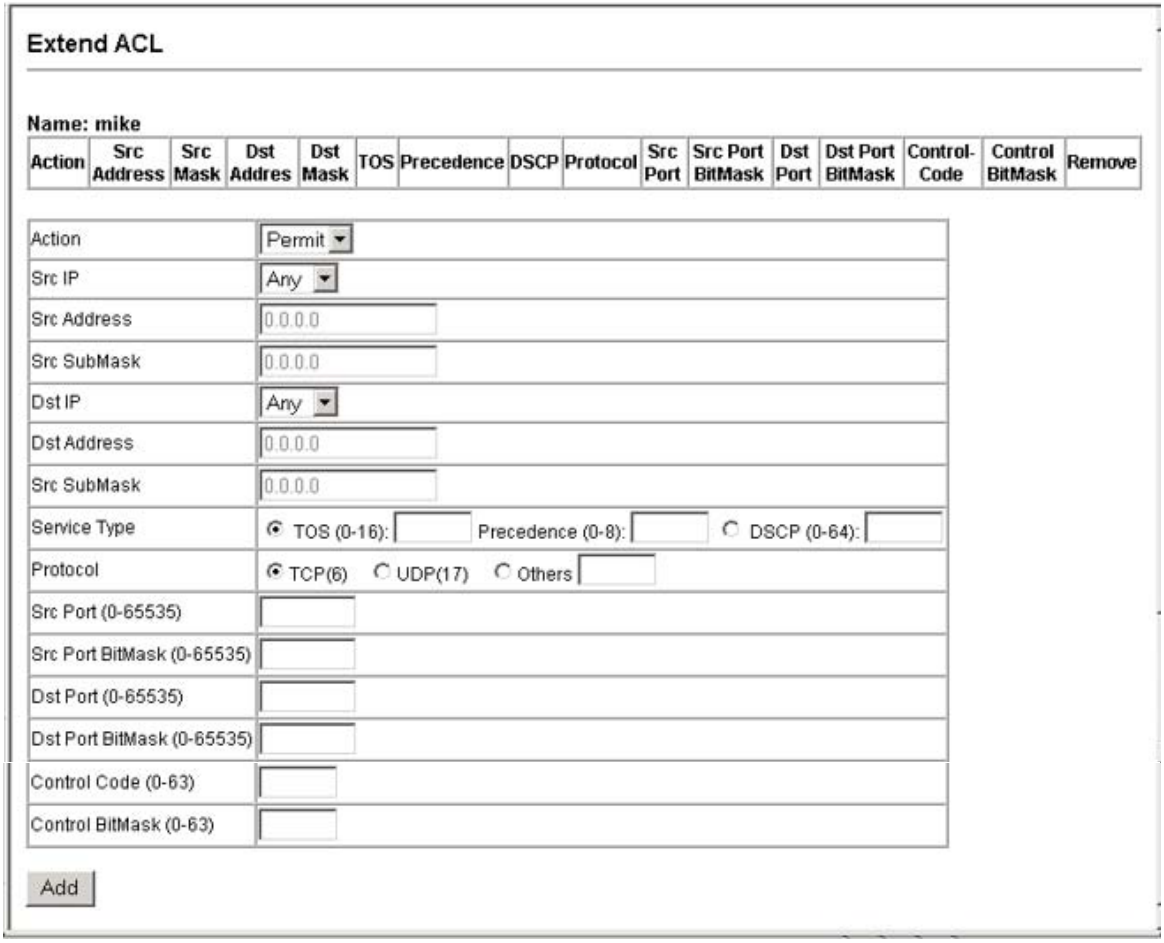

Figure 3-34. Configuring an Extended ACL

CLI – This example adds three rules:

(1) Accept any incoming packets if the source address is in subnet 10.7.1.x. For example, if the rule is matched; i.e., the rule (10.7.1.0 & 255.255.255.0) equals the masked address (10.7.1.2 & 255.255.255.0), the packet passes through.

(2) Allow TCP packets from class C addresses 192.168.1.0 to any destination address when set for destination TCP port 80 (i.e., HTTP).

(3) Permit all TCP packets from class C addresses 192.168.1.0 with the TCP control code set to "SYN."

```
Console(config-ext-acl)#permit 10.7.1.1 255.255.255.0 any            4-87
Console(config-ext-acl)#permit 192.168.1.0 255.255.255.0 any dport 80
Console(config-ext-acl)#permit 192.168.1.0 255.255.255.0 any tcp
  control-code 2 2
Console(config-std-acl)#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring a MAC ACL

Command Attributes

- **Action** – An ACL can contain all permit rules or all deny rules. (Default: Permit rules)
- **Source/Destination MAC** – Use “Any” to include all possible addresses, “Host” to indicate a specific MAC address, or “MAC” to specify an address range with the Address and Bitmask fields. (Options: Any, Host, MAC; Default: Any)
- **Source/Destination MAC Address** – Source or destination MAC address.
- **Source/Destination MAC Bitmask** – Hexidecimal mask for source or destination MAC address.
- **VID** – VLAN ID. (Range: 1-4095)
- **VID Mask** – VLAN bitmask. (Range: 1-4095)
- **Ethernet Type** – This option can only be used to filter Ethernet II formatted packets. (Range: 600-fff hex.)

  A detailed listing of Ethernet protocol types can be found in RFC 1060. A few of the more common types include 0800 (IP), 0806 (ARP), 8137 (IPX).
- **Ethernet Type Mask** – Protocol bitmask. (Range: 600-fff hex.)
- **Packet Format** – This attribute includes the following packet types:
  - **Any** – Any Ethernet packet type.
  - **Untagged-eth2** – Untagged Ethernet II packets.
  - **Untagged-802.3** – Untagged Ethernet 802.3 packets.
  - **Tagged-eth2** – Tagged Ethernet II packets.
  - **Tagged-802.3** – Tagged Ethernet 802.3 packets.

Command Usage

- Egress MAC ACLs only work for destination-mac-known packets, not for multicast, broadcast, or destination-mac-unknown packets.

Downloaded from www.Manualslib.com manuals search engine

Web – Specify the action (i.e., Permit or Deny). Specify the source and/or destination addresses. Select the address type (Any, Host, or MAC). If you select "Host," enter a specific address (e.g., 11-22-33-44-55-66). If you select "MAC," enter a base address and a hexidecimal bitmask for an address range. Set any other required criteria, such as VID, Ethernet type, or packet format. Then click Add.

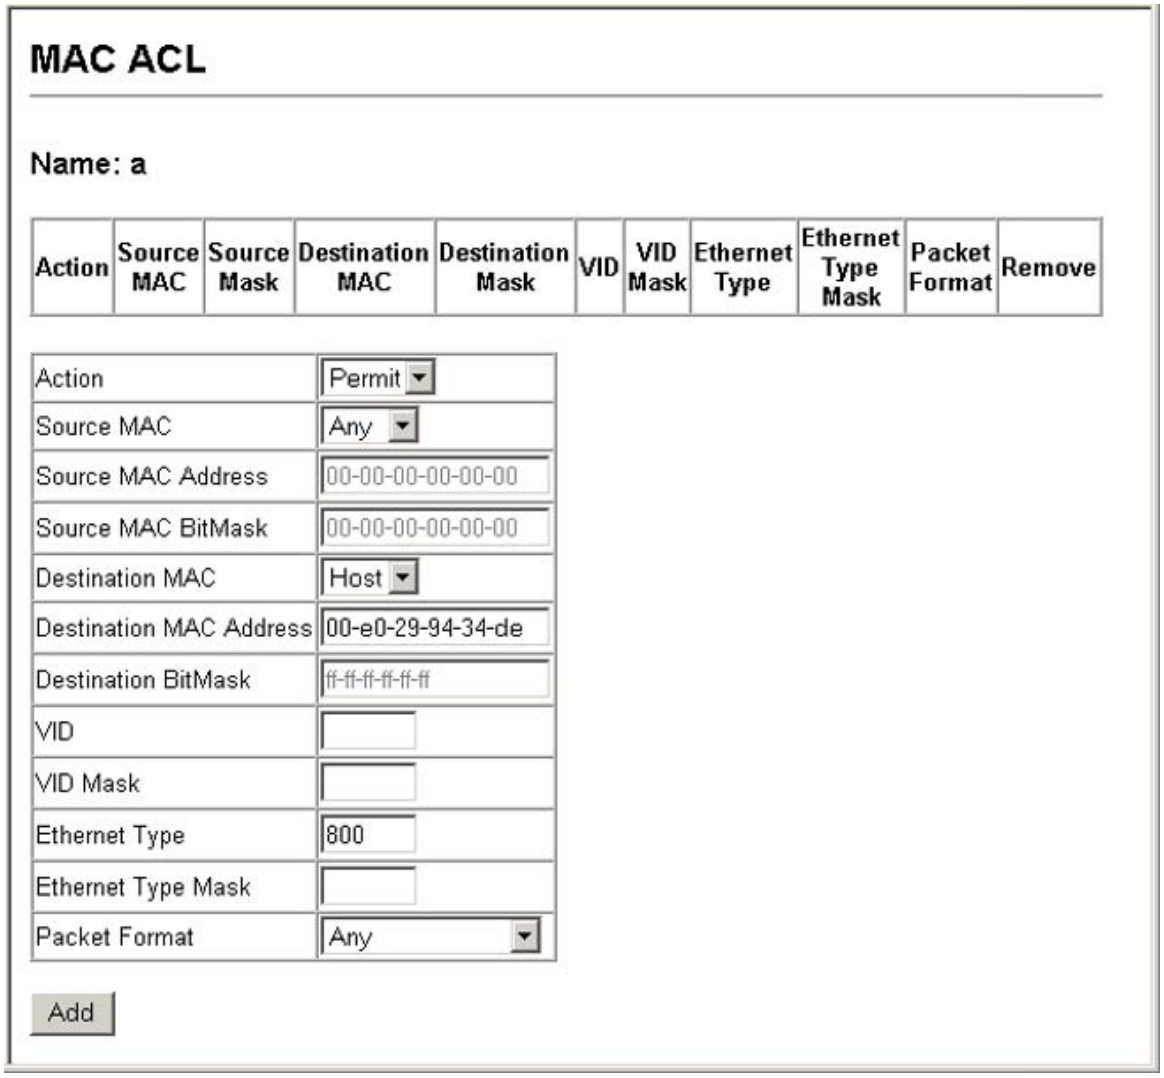

Figure 3-35. Configuring a MAC ACL

CLI – This rule permits packets from any source MAC address to the destination address 00-e0-29-94-34-de where the Ethernet type is 0800.

```
Console(config-mac-acl)#permit any host 00-e0-29-94-34-de
  ethertype 0800                                              4-99
Console(config-mac-acl)#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring ACL Masks

You must specify masks that control the order in which ACL rules are checked. The switch includes two system default masks that pass/filter packets matching the permit/deny rules specified in an ingress ACL. You can also configure up to seven user-defined masks for an ingress or egress ACL. A mask must be bound exclusively to one of the basic ACL types (i.e., Ingress IP ACL, Egress IP ACL, Ingress MAC ACL or Egress MAC ACL), but a mask can be bound to up to four ACLs of the same type.

Command Usage

- Up to seven entries can be assigned to an ACL mask.
- Packets crossing a port are checked against all the rules in the ACL until a match is found. The order in which these packets are checked is determined by the mask, and not the order in which the ACL rules are entered.
- First create the required ACLs and the ingress or egress masks before mapping an ACL to an interface.
- You must configure a mask for an ACL rule before you can bind it to a port or set the queue or frame priorities associated with the rule.

Specifying the Mask Type

Use the ACL Mask Configuration page to edit the mask for the Ingress IP ACL, Egress IP ACL, Ingress MAC ACL or Egress MAC ACL.

Web – Click Security, ACL, ACL Mask Configuration. Click Edit for one of the basic mask types to open the configuration page.

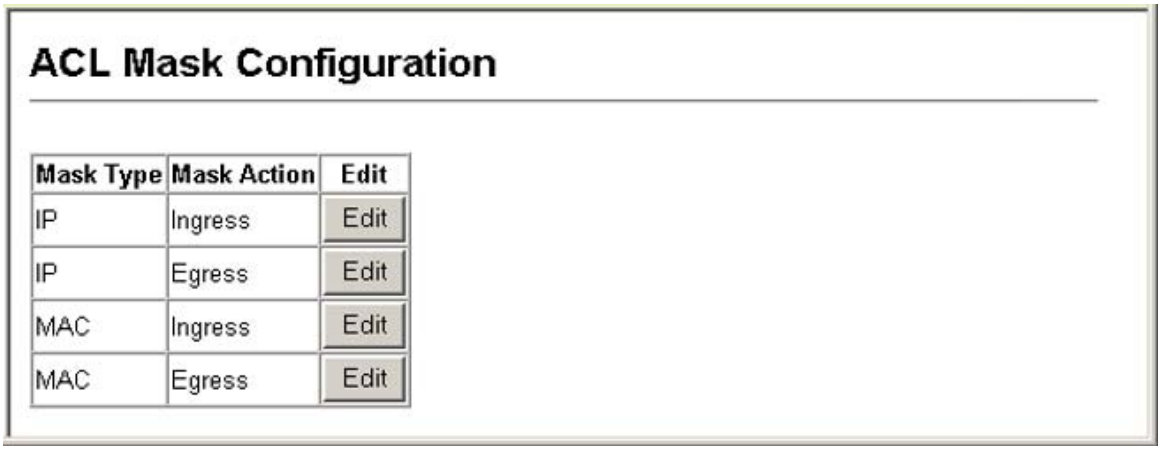

Figure 3-36. ACL Mask Configuration

CLI – This example creates an IP ingress mask, and then adds two rules. Each rule is checked in order of precedence to look for a match in the ACL entries. The first entry matching a mask is applied to the inbound packet.

```
Console(config)#access-list ip mask-precedence in                    4-89
Console(config-ip-mask-acl)#mask host any                            4-90
Console(config-ip-mask-acl)#mask 255.255.255.0 any
Console(config-ip-mask-acl)#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring an IP ACL Mask

This mask defines the fields to check in the IP header.

Command Usage

- Masks that include an entry for a Layer 4 protocol source port or destination port can only be applied to packets with a header length of exactly five bytes.

Command Attributes

- **Src/Dst IP** – Specifies the source or destination IP address. Use “Any” to match any address, “Host” to specify a host address (not a subnet), or “IP” to specify a range of addresses. (Options: Any, Host, IP; Default: Any)
- **Src/Dst IP Bitmask** – Source or destination address of rule must match this bitmask. (See the description for SubMask on page 3-62.)
- **Protocol Bitmask** – Check the protocol field.
- **Service Type** – Check the rule for the specified priority type. (Options: Precedence, TOS, DSCP; Default: TOS)
- **Src/Dst Port Bitmask** – Protocol port of rule must match this bitmask. (Range: 0-65535)
- **Control Bitmask** – Control flags of rule must match this bitmask. (Range: 0-63)

Downloaded from www.Manualslib.com manuals search engine

Web – Configure the mask to match the required rules in the IP ingress or egress ACLs. Set the mask to check for any source or destination address, a specific host address, or an address range. Include other criteria to search for in the rules, such as a protocol type or one of the service types. Or use a bitmask to search for specific protocol port(s) or TCP control code(s). Then click Add.

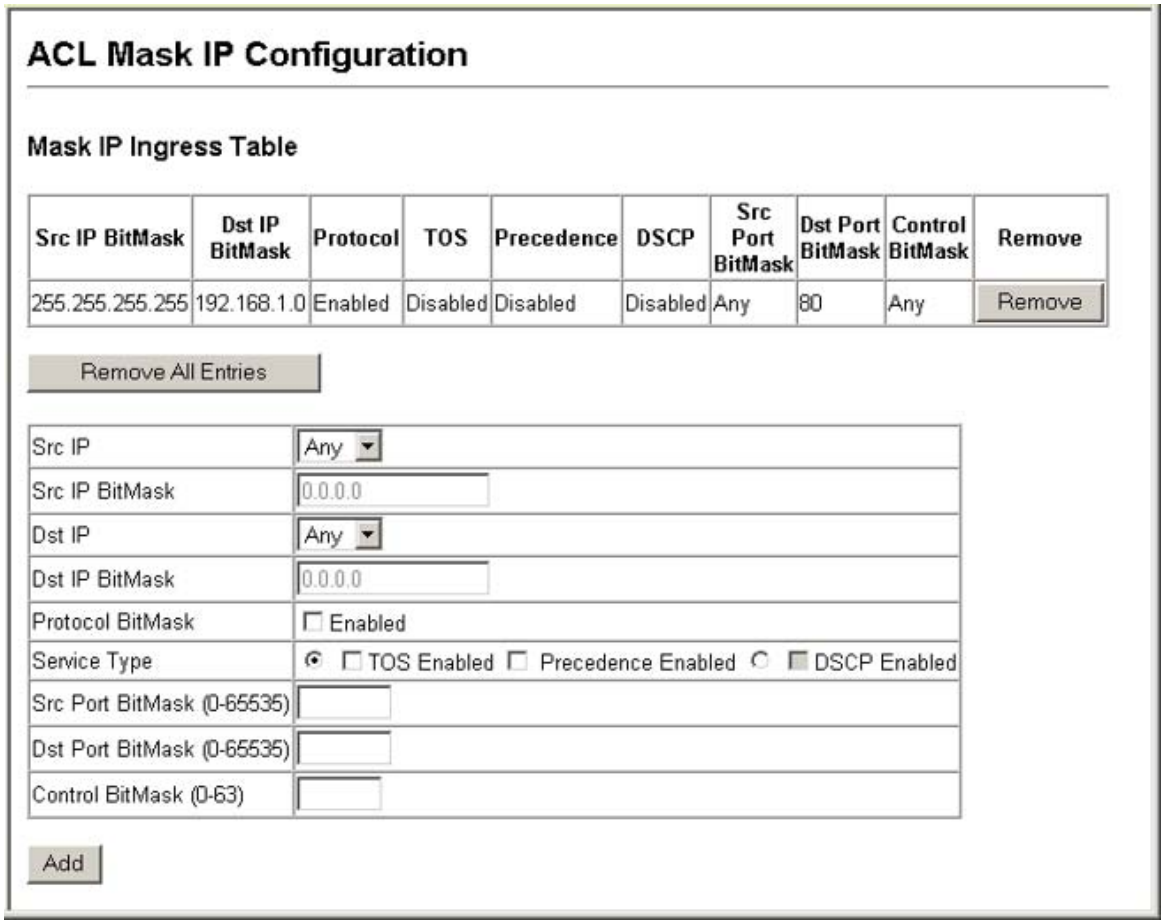

Figure 3-37. ACL IP Mask Configuration

CLI – This shows that the entries in the mask override the precedence in which the rules are entered into the ACL. In the following example, packets with the source address 10.1.1.1 are dropped because the “deny 10.1.1.1 255.255.255.255” rule has the higher precedence according the “mask host any” entry.

```
Console(config)#access-list ip standard A2                          4-85
Console(config-std-acl)#permit 10.1.1.0 255.255.255.0              4-86
Console(config-std-acl)#deny 10.1.1.1 255.255.255.255
Console(config-std-acl)#exit
Console(config)#access-list ip mask-precedence in                   4-89
Console(config-ip-mask-acl)#mask host any                           4-90
Console(config-ip-mask-acl)#mask 255.255.255.0 any
Console(config-ip-mask-acl)#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring a MAC ACL Mask

This mask defines the fields to check in the packet header.

Command Usage

You must configure a mask for an ACL rule before you can bind it to a port.

Command Attributes

- **Source/Destination MAC** – Use “Any” to match any address, “Host” to specify the host address for a single node, or “MAC” to specify a range of addresses. (Options: Any, Host, MAC; Default: Any)
- **Source/Destination MAC Bitmask** – Address of rule must match this bitmask.
- **VID Bitmask** – VLAN ID of rule must match this bitmask.
- **Ethernet Type Bitmask** – Ethernet type of rule must match this bitmask.
- **Packet Format Bitmask** – A packet format must be specified in the rule.

Web – Configure the mask to match the required rules in the MAC ingress or egress ACLs. Set the mask to check for any source or destination address, a host address, or an address range. Use a bitmask to search for specific VLAN ID(s) or Ethernet type(s). Or check for rules where a packet format was specified. Then click Add.

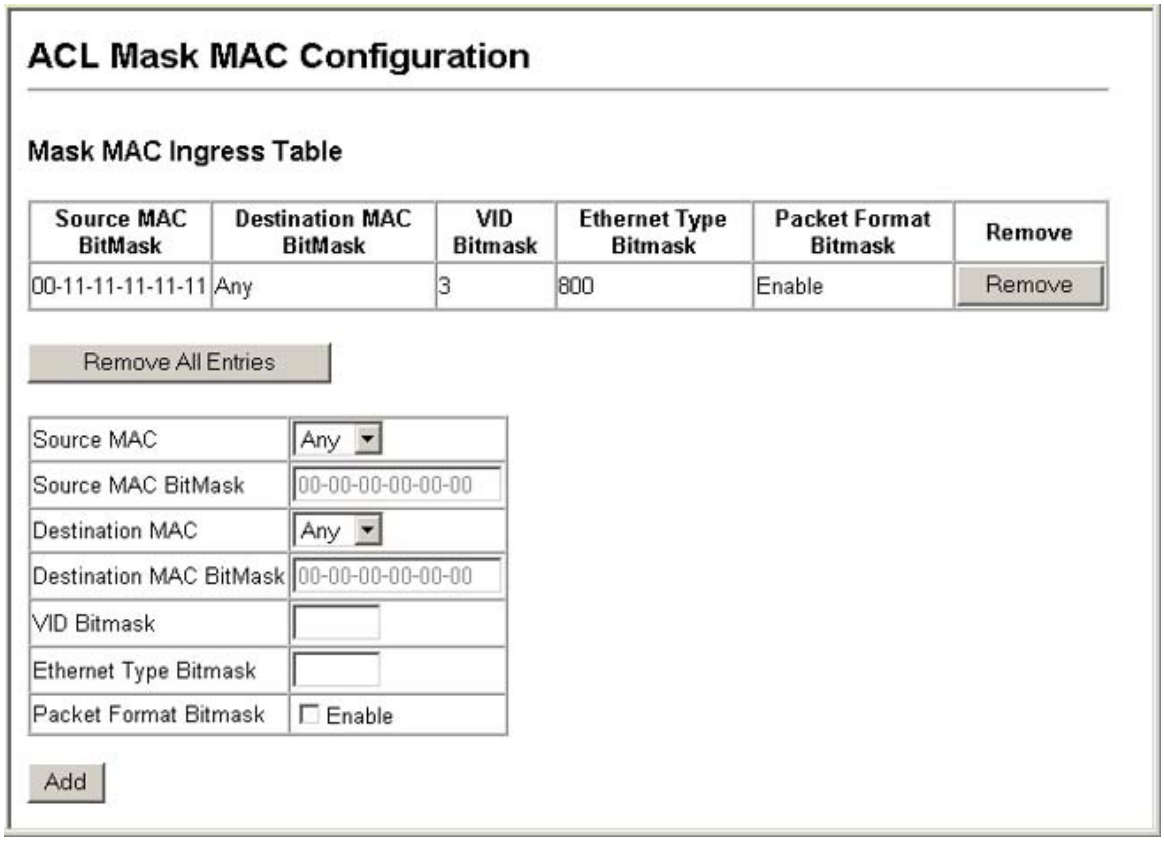

Figure 3-38. ACL MAC Mask Configuration

Downloaded from www.Manualslib.com manuals search engine

CLI – This example shows how to create an Ingress MAC ACL and bind it to a port. You can then see that the order of the rules have been changed by the mask.

```
Console(config)#access-list mac M4                                    4-98
Console(config-mac-acl)#permit any any                                4-99
Console(config-mac-acl)#deny tagged-eth2 00-11-11-11-11-11
  ff-ff-ff-ff-ff-ff any vid 3                                         4-99
Console(config-mac-acl)#end
Console#show access-list                                              4-107
MAC access-list M4:
   permit any any
   deny tagged-eth2 host 00-11-11-11-11-11 any vid 3
Console(config)#access-list mac mask-precedence in                    4-101
Console(config-mac-mask-acl)#mask pktformat ff-ff-ff-ff-ff-ff any vid4-102
Console(config-mac-mask-acl)#exit
Console(config)#interface ethernet 1/12                               4-130
Console(config-if)#mac access-group M4 in                             4-104
Console(config-if)#end
Console#show access-list
MAC access-list M4:
   deny tagged-eth2 host 00-11-11-11-11-11 any vid 3
   permit any any
MAC ingress mask ACL:
   mask pktformat host any vid
Console#
```

Binding a Port to an Access Control List

After configuring the Access Control Lists (ACL), you can bind the ports that need to filter traffic to the appropriate ACLs. You can only bind a port to one ACL for each basic type – IP ingress, IP egress, MAC ingress and MAC egress.

Command Usage

- You must configure a mask for an ACL rule before you can bind it to a port.
- This switch supports ACLs for both ingress and egress filtering. However, you can only bind one IP ACL and one MAC ACL to any port for ingress filtering, and one IP ACL and one MAC ACL to any port for egress filtering. In other words, only four ACLs can be bound to an interface – Ingress IP ACL, Egress IP ACL, Ingress MAC ACL and Egress MAC ACL.
- When an ACL is bound to an interface as an egress filter, all entries in the ACL must be deny rules. Otherwise, the bind operation will fail.
- The switch does not support the explicit “deny any any” rule for the egress IP ACL or the egress MAC ACLs. If these rules are included in ACL, and you attempt to bind the ACL to an interface for egress checking, the bind operation will fail.

Command Attributes

- **Port** – Fixed port or SFP module. (Range: 1-24)
- **IP** – Specifies the IP ACL to bind to a port.
- **MAC** – Specifies the MAC ACL to bind to a port.
- **IN** – ACL for ingress packets.
- **OUT** – ACL for egress packets.
- *ACL Name* – Name of the ACL.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Security, ACL, Port Binding. Mark the Enable field for the port you want to bind to an ACL for ingress or egress traffic, select the required ACL from the drop-down list, then click Apply.

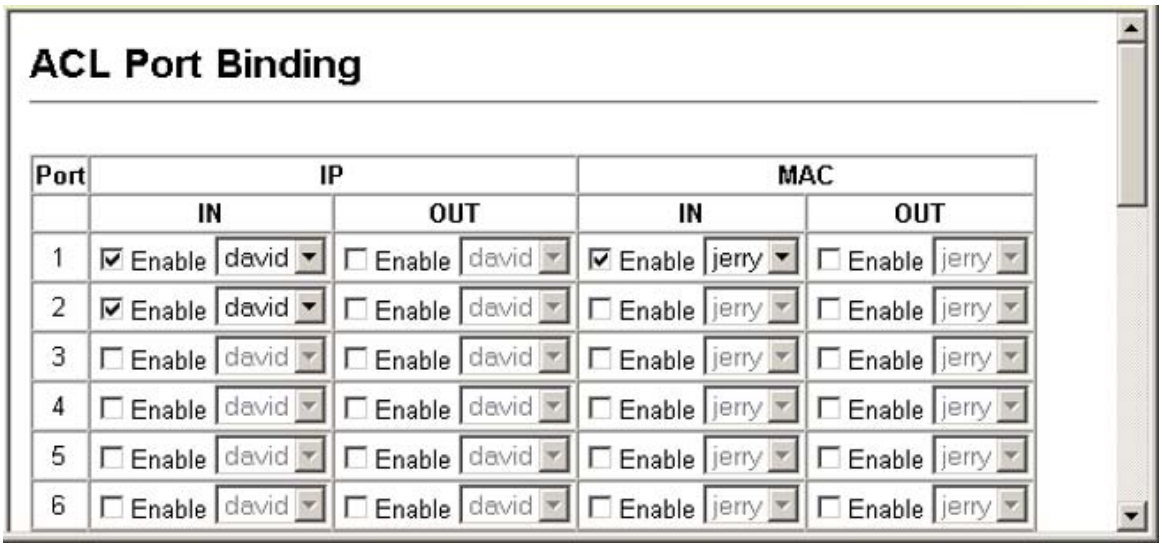
ACL Port Binding
Port
IP
MAC
IN
OUT
IN
OUT
1 Enable david Enable david Enable jerry Enable jerry
2 Enable david Enable david Enable jerry Enable jerry
3 Enable david Enable david Enable jerry Enable jerry
4 Enable david Enable david Enable jerry Enable jerry
5 Enable david Enable david Enable jerry Enable jerry
6 Enable david Enable david Enable jerry Enable jerry

Figure 3-39. ACL Port Binding

CLI – This examples assigns an IP and MAC ingress ACL to port 1, and an IP ingress ACL to port 2.

```
Console(config)#interface ethernet 1/1                          4-130
Console(config-if)#ip access-group david in                     4-94
Console(config-if)#mac access-group jerry in                    4-104
Console(config-if)#exit
Console(config)#interface ethernet 1/2
Console(config-if)#ip access-group david in
Console(config-if)#
```

Filtering IP Addresses for Management Access

You can specify the client IP addresses that are allowed management access to the switch through the web interface, SNMP, or Telnet.

Command Usage

- The management interfaces are open to all IP addresses by default. Once you add an entry to a filter list, access to that interface is restricted to the specified addresses.
- If anyone tries to access a management interface on the switch from an invalid address, the switch will reject the connection, enter an event message in the system log, and send a trap message to the trap manager.
- IP address can be configured for SNMP, web and Telnet access respectively. Each of these groups can include up to five different sets of addresses, either individual addresses or address ranges.

Downloaded from www.Manualslib.com manuals search engine

- When entering addresses for the same group (i.e., SNMP, web or Telnet), the switch will not accept overlapping address ranges. When entering addresses for different groups, the switch will accept overlapping address ranges.
- You cannot delete an individual address from a specified range. You must delete the entire range, and reenter the addresses.
- You can delete an address range just by specifying the start address, or by specifying both the start address and end address.

Command Attributes

- **Web IP Filter** – Configures IP address(es) for the web group.
- **SNMP IP Filter** – Configures IP address(es) for the SNMP group.
- **Telnet IP Filter** – Configures IP address(es) for the Telnet group.
- **IP Filter List** – IP address which are allowed management access to this interface.
- **Start IP Address** – A single IP address, or the starting address of a range.
- **End IP Address** – The end address of a range.

Web – Click Security, IP Filter. Enter the addresses that are allowed management access to an interface, and click Add IP Filtering Entry.

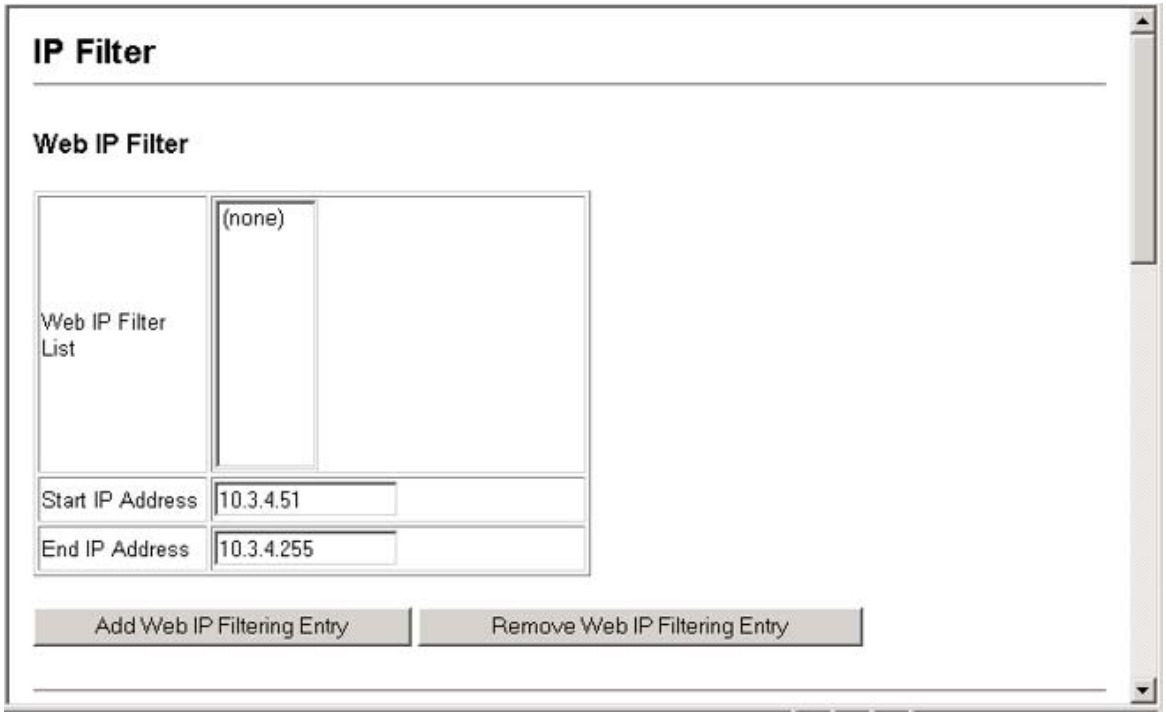

Figure 3-12. Filtering IP Addresses

CLI – This example restricts management access for Telnet and SNMP clients.

```
Console(config)#management telnet-client 192.168.1.19                4-113
Console(config)#management telnet-client 192.168.1.25 192.168.1.30
Console(config)#snmp ip filter 10.1.2.3 255.255.255.255              4-113
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

Port Configuration

Displaying Connection Status

You can use the Port Information or Trunk Information pages to display the current connection status, including link state, speed/duplex mode, flow control, and auto-negotiation.

Field Attributes (Web)

- **Name** – Interface label.
- **Type** – Indicates the port type. (1000BASE-T, 1000BASE-SX, 1000BASE-LX or 100BASE-FX)
- **Admin Status** – Shows if the interface is enabled or disabled.
- **Oper Status** – Indicates if the link is Up or Down.
- **Speed Duplex Status** – Shows the current speed and duplex mode. (Auto, or fixed choice)
- **Flow Control Status** – Indicates the type of flow control currently in use. (IEEE 802.3x, Back-Pressure or None)
- **Autonegotiation** – Shows if auto-negotiation is enabled or disabled.
- **Forced Mode**[1] – Shows the forced/preferred port type to use for combination ports 21-24. (Copper-Forced, Copper-Preferred-Auto, SFP-Forced, SFP-Preferred-Auto)
- **Trunk Member**[1] – Shows if port is a trunk member.
- **Creation**[2] – Shows if a trunk is manually configured or dynamically set via LACP.

1: Port Information only.
2: Trunk Information only

Web – Click Port, Port Information or Trunk Information.

Port Information

Port	Name	Type	Admin Status	Oper Status	Speed Duplex Status	Flow Control Status	Autonegotiation	Forced Mode	Trunk Member
1		1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
2		1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
3		1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
4		1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
5		1000Base-TX	Enabled	Up	100full	None	Enabled	None	

Figure 3-40. Port Information

Downloaded from www.Manualslib.com manuals search engine

Field Attributes (CLI)

Basic information:

- **Port type** – Indicates the port type. (1000BASE-T, 1000BASE-SX, 1000BASE-LX or 100BASE-FX)
- **MAC address** – The physical layer address for this port. (To access this item on the web, see "Setting the Switch's IP Address" on page 3-12.)

Configuration:

- **Name** – Interface label.
- **Port admin** – Shows if the interface is enabled or disabled (i.e., up or down).
- **Speed-duplex** – Shows the current speed and duplex mode. (Auto, or fixed choice)
- **Capabilities** – Specifies the capabilities to be advertised for a port during auto-negotiation. (To access this item on the web, see "Configuring Interface Connections" on page 3-48.) The following capabilities are supported.
  - **10half** - Supports 10 Mbps half-duplex operation
  - **10full** - Supports 10 Mbps full-duplex operation
  - **100half** - Supports 100 Mbps half-duplex operation
  - **100full** - Supports 100 Mbps full-duplex operation
  - **1000full** - Supports 1000 Mbps full-duplex operation
  - **Sym** - Transmits and receives pause frames for flow control
  - **FC** - Supports flow control
- **Broadcast storm** – Shows if broadcast storm control is enabled or disabled.
- **Broadcast storm limit** – Shows the broadcast storm threshold. (500 - 262143 packets per second)
- **Flow control** – Shows if flow control is enabled or disabled.
- **LACP** – Shows if LACP is enabled or disabled.
- **Port Security** – Shows if port security is enabled or disabled.
- **Max MAC count** – Shows the maximum number of MAC address that can be learned by a port. (0 - 20 addresses)
- **Port security action** – Shows the response to take when a security violation is detected. (shutdown, trap, trap-and-shutdown)
- **Combo forced mode** – Shows the forced/preferred port type to use for combination ports 21-24. (copper forced, copper preferred auto, SFP forced, SFP preferred auto)

Current status:

- **Link Status** – Indicates if the link is up or down.
- **Operation speed-duplex** – Shows the current speed and duplex mode.
- **Flow control type** – Indicates the type of flow control currently in use. (IEEE 802.3x, Back-Pressure or none)

Downloaded from www.Manualslib.com manuals search engine

CLI – This example shows the connection status for Port 5.

```
Console#show interfaces status ethernet 1/5                    4-138
Information of Eth 1/13
 Basic information:
  Port type: 1000T
  Mac address: 00-30-f1-47-58-46
 Configuration:
  Name:
  Port admin: Up
  Speed-duplex: Auto
  Capabilities: 10half, 10full, 100half, 100full, 1000full,
  Broadcast storm: Enabled
  Broadcast storm limit: 500 packets/second
  Flow control: Disabled
  Lacp: Disabled
  Port security: Disabled
  Max MAC count: 0
  Port security action: None
  Combo forced mode: SFP preferred auto
 Current status:
  Link status: Up
  Port operation status: Up
  Operation speed-duplex: 100full
  Flow control type: None
Console#
```

Configuring Interface Connections

You can use the Port Configuration or Trunk Configuration page to enable/disable an interface, set auto-negotiation and the interface capabilities to advertise, or manually fix the speed, duplex mode, and flow control.

Command Attributes

- **Name** – Allows you to label an interface. (Range: 1-64 characters)
- **Admin** – Allows you to manually disable an interface. You can disable an interface due to abnormal behavior (e.g., excessive collisions), and then reenable it after the problem has been resolved. You may also disable an interface for security reasons.
- **Speed/Duplex** – Allows you to manually set the port speed and duplex mode.
- **Flow Control** – Allows automatic or manual selection of flow control.
- **Autonegotiation** (Port Capabilities) – Allows auto-negotiation to be enabled/disabled. When auto-negotiation is enabled, you need to specify the capabilities to be advertised. When auto-negotiation is disabled, you can force the settings for speed, mode, and flow control.The following capabilities are supported.
  - **10half** - Supports 10 Mbps half-duplex operation
  - **10full** - Supports 10 Mbps full-duplex operation
  - **100half** - Supports 100 Mbps half-duplex operation
  - **100full** - Supports 100 Mbps full-duplex operation
  - **1000full** - Supports 1000 Mbps full-duplex operation
  - **Sym** (Gigabit only) - Check this item to transmit and receive pause frames, or clear it to auto-negotiate the sender and receiver for asymmetric pause frames.

Downloaded from www.Manualslib.com manuals search engine

(*The current switch chip only supports symmetric pause frames.*)

- **FC** - Supports flow control
  Flow control can eliminate frame loss by "blocking" traffic from end stations or segments connected directly to the switch when its buffers fill. When enabled, back pressure is used for half-duplex operation and IEEE 802.3x for full-duplex operation. (Avoid using flow control on a port connected to a hub unless it is actually required to solve a problem. Otherwise back pressure jamming signals may degrade overall performance for the segment attached to the hub.)

(Default: Autonegotiation enabled; Advertised capabilities for 1000BASE-T – 10half, 10full, 100half, 100full, 1000full; 1000BASE-SX/LX/LH – 1000full)

- **Forced Mode** – Shows the forced/preferred port type to use for the combination ports 21-24.
  - **Copper-Forced** - Always uses the built-in RJ-45 port.
  - **Copper-Preferred-Auto** - Uses the built-in RJ-45 port if both combination types are functioning and the RJ-45 port has a valid link.
  - **SFP-Forced** - Always uses the SFP port (even if module is not installed).
  - **SFP-Preferred-Auto** - Uses SFP port if both combination types are functioning and the SFP port has a valid link.
- **Trunk** – Indicates if a port is a member of a trunk. To create trunks and select port members, see "Creating Trunk Groups" on page 3-79.

Note: Auto-negotiation must be disabled before you can configure or force the interface to use the Speed/Duplex Mode or Flow Control options.

Web – Click Port, Port Configuration or Trunk Configuration. Modify the required interface settings, and click Apply.

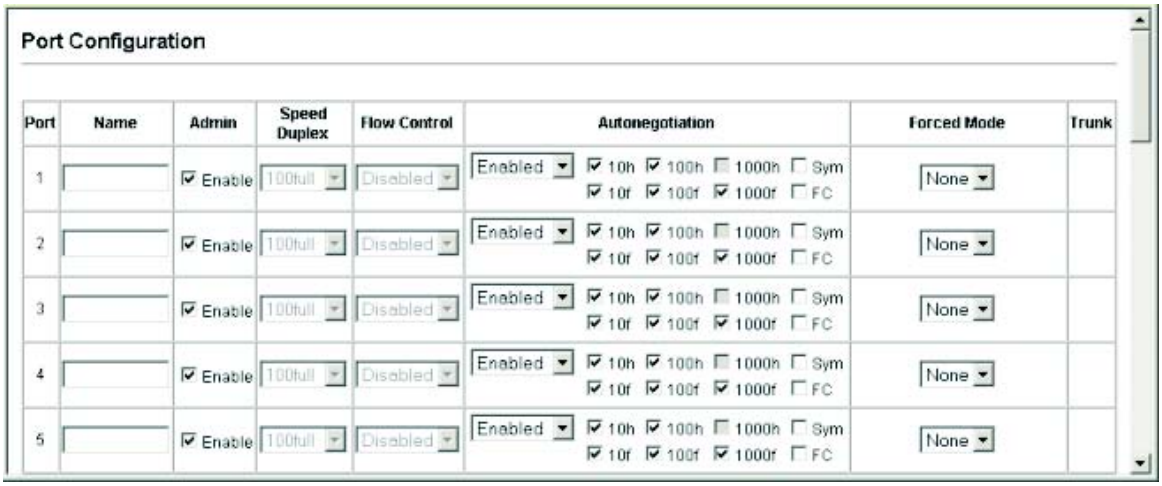

Figure 3-41. Port Configuration

Downloaded from www.Manualslib.com manuals search engine

CLI – Select the interface, and then enter the required settings.

```
Console(config)#interface ethernet 1/13                          4-130
Console(config-if)#description RD SW#13                          4-131
Console(config-if)#shutdown                                      4-135
.
Console(config-if)#no shutdown
Console(config-if)#no negotiation                                4-132
Console(config-if)#speed-duplex 100half                          4-131
Console(config-if)#flowcontrol                                   4-134
.
Console(config-if)#negotiation
Console(config-if)#capabilities 100half                          4-133
Console(config-if)#capabilities 100full
Console(config-if)#capabilities flowcontrol
Console(config-if)#exit
Console(config)#interface ethernet 1/21
Console(config-if)#combo-forced-mode copper-forced               4-135
Console(config-if)#
```

Creating Trunk Groups

You can create multiple links between devices that work as one virtual, aggregate link. A port trunk offers a dramatic increase in bandwidth for network segments where bottlenecks exist, as well as providing a fault-tolerant link between two devices. You can create up to six trunks at a time.

The switch supports both static trunking and dynamic Link Aggregation Control Protocol (LACP). Static trunks have to be manually configured at both ends of the link, and the switches must comply with the Cisco EtherChannel standard. On the other hand, LACP configured ports can automatically negotiate a trunked link with LACP-configured ports on another device. You can configure any number of ports on the switch as LACP, as long as they are not already configured as part of a static trunk. If ports on another device are also configured as LACP, the switch and the other device will negotiate a trunk link between them. If an LACP trunk consists of more than four ports, all other ports will be placed in a standby mode. Should one link in the trunk fail, one of the standby ports will automatically be activated to replace it.

Command Usage

Besides balancing the load across each port in the trunk, the other ports provide redundancy by taking over the load if a port in the trunk fails. However, before making any physical connections between devices, use the web interface or CLI to specify the trunk on the devices at both ends. When using a port trunk, take note of the following points:

- Finish configuring port trunks before you connect the corresponding network cables between switches to avoid creating a loop.
- You can create up to six trunks on the switch, with up to eight ports per trunk.
- The ports at both ends of a connection must be configured as trunk ports.
- When configuring static trunks on switches of different types, they must be compatible with the Cisco EtherChannel standard.

Downloaded from www.Manualslib.com manuals search engine

- The ports at both ends of a trunk must be configured in an identical manner, including communication mode (i.e., speed, duplex mode and flow control), VLAN assignments, and CoS settings.
- All the ports in a trunk have to be treated as a whole when moved from/to, added or deleted from a VLAN.
- STP, VLAN, and IGMP settings can only be made for the entire trunk.

Statically Configuring a Trunk

Command Usage

- When configuring static trunks, you may not be able to link switches of different types, depending on the manufacturer's implementation. However, note that the static trunks on this switch are Cisco EtherChannel compatible.
- To avoid creating a loop in the network, be sure you add a static trunk via the configuration interface before connecting the ports, and also disconnect the ports before removing a static trunk via the configuration interface.

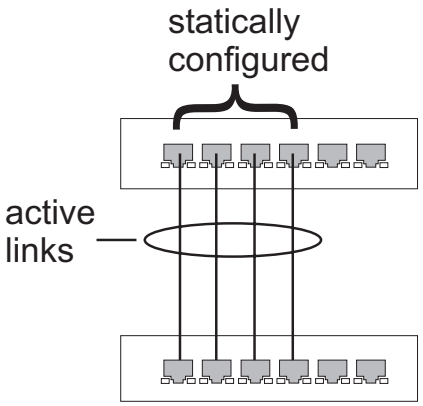

Web – Click Port, Trunk Membership. Enter a trunk ID of 1-6 in the Trunk field, select any of the switch ports from the scroll-down port list, and click Add. After you have completed adding ports to the member list, click Apply.

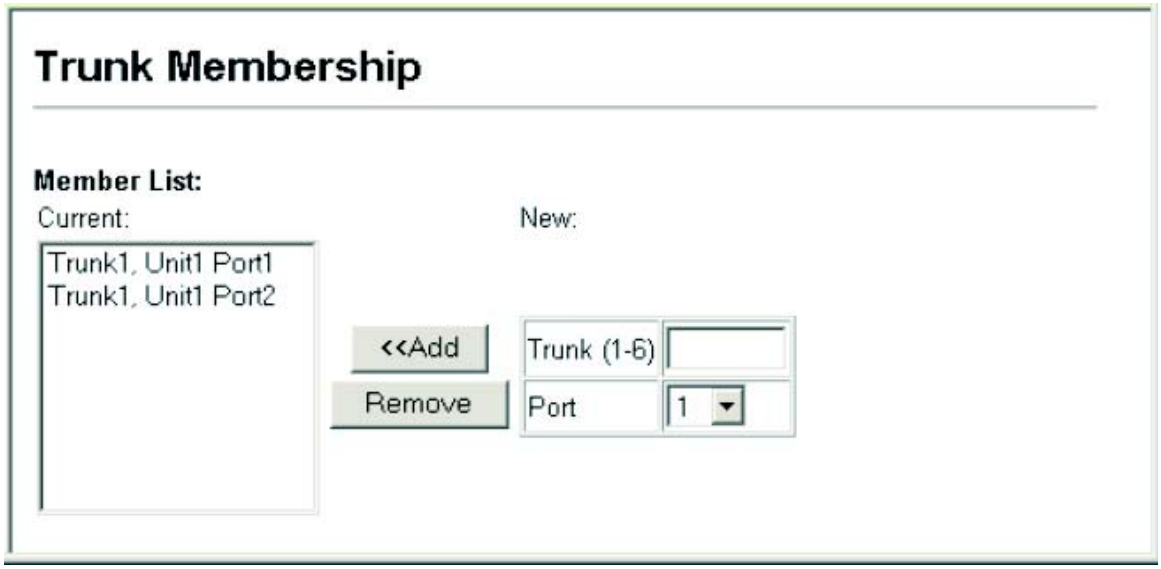

Figure 3-42. Trunk Membership

Downloaded from www.Manualslib.com manuals search engine

CLI – This example creates trunk 2 with ports 1 and 2. Just connect these ports to two static trunk ports on another switch to form a trunk.

```
Console(config)#interface port-channel 2                              4-130
Console(config-if)#exit
Console(config)#interface ethernet 1/1                                4-130
Console(config-if)#channel-group 1                                    4-148
Console(config-if)#exit
Console(config)#interface ethernet 1/2
Console(config-if)#channel-group 1
Console(config-if)#end
Console#show interfaces status port-channel 1                         4-138
Information of Trunk 1
 Basic information:
  Port type: 1000T
  Mac address: 00-00-E8-AA-AA-01
 Configuration:
  Name:
  Port admin: Up
  Speed-duplex: Auto
  Capabilities: 10half, 10full, 100half, 100full, 1000full,
  Flow control: Disabled
  Port security: Disabled
  Max MAC count: 0
  Port security action: None
  Combo forced mode: None
 Current status:
  Created by: User
  Link status: Down
  Operation speed-duplex: 1000full
  Flow control type: None
  Member Ports: Eth1/1, Eth1/2,
Console#
```

Enabling LACP on Selected Ports

Command Usage

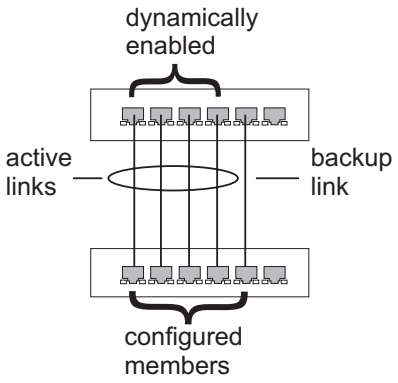

- To avoid creating a loop in the network, be sure you enable LACP before connecting the ports, and also disconnect the ports before disabling LACP.
- If the target switch has also enabled LACP on the connected ports, the trunk will be activated automatically.
- A trunk formed with another switch using LACP will automatically be assigned the next available trunk ID.
- If more than four ports attached to the same target switch have LACP enabled, the additional ports will be placed in standby mode, and will only be enabled if one of the active links fails.
- All ports on both ends of an LACP trunk must be configured for full duplex, either by forced mode or auto-negotiation.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Port, LACP, Configuration. Select any of the switch ports from the scroll-down port list and click Add. After you have completed adding ports to the member list, click Apply.

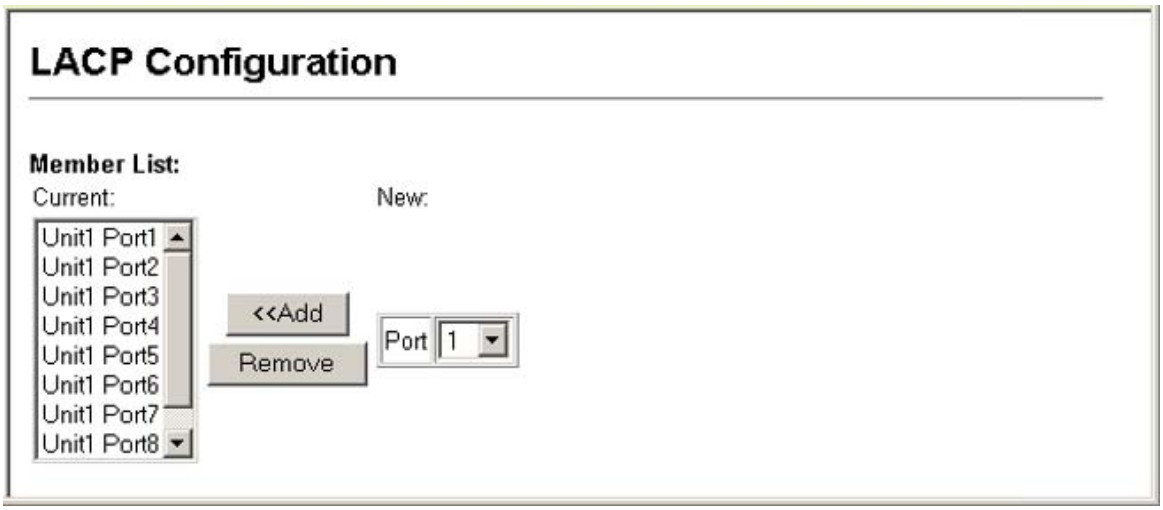

Figure 3-43. LACP Configuration

CLI – The following example enables LACP for ports 1 to 6. Just connect these ports to LACP-enabled trunk ports on another switch to form a trunk.

```
Console(config)#interface ethernet 1/1                                  4-128
Console(config-if)#lacp                                                 4-149
Console(config-if)#exit
:
Console(config)#interface ethernet 1/6
Console(config-if)#lacp
Console(config-if)#end
Console#show interfaces status port-channel 1                           4-138
Information of Trunk 1
 Basic information:
  Port type: 1000T
  Mac address: 22-22-22-22-22-2d
 Configuration:
  Name:
  Port admin status: Up
  Speed-duplex: Auto
  Capabilities: 10half, 10full, 100half, 100full, 1000full,
  Flow control status: Disabled
  Port security: Disabled
  Max MAC count: 0
  Port security action: None
  Combo forced mode: None
 Current status:
  Created by: Lacp
  Link status: Up
  Port operation status: Up
  Operation speed-duplex: 1000full
  Flow control type: None
  Member Ports: Eth1/1, Eth1/2, Eth1/3, Eth1/4, Eth1/5, Eth1/6,
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring LACP Parameters

Dynamically Creating a Port Channel –

Ports assigned to a common port channel must meet the following criteria:

- Ports must have the same LACP System Priority.
- Ports must have the same LACP port Admin Key.
- However, if the “port channel” Admin Key is set (page 4-142), then the port Admin Key must be set to the same value for a port to be allowed to join a channel group.

  Note – If the port channel admin key (lacp admin key, page 4-152) is not set (through the CLI) when a channel group is formed (i.e., it has a null value of 0), this key is set to the same value as the port admin key used by the interfaces that joined the group (lacp admin key, as described in this section and on page 4-151).

Command Attributes

Set Port Actor – This menu sets the local side of an aggregate link; i.e., the ports on this switch.

- **Port** – Port number. (Range: 1-24)
- **System Priority** – LACP system priority is used to determine link aggregation group (LAG) membership, and to identify this device to other switches during LAG negotiations. (Range: 0-65535; Default: 32768)
  - Ports must be configured with the same system priority to join the same LAG.
  - System priority is combined with the switch’s MAC address to form the LAG identifier. This identifier is used to indicate a specific LAG during LACP negotiations with other systems.
- **Admin Key** – The LACP administration key must be set to the same value for ports that belong to the same LAG. (Range: 0-65535; Default: 0)
- **Port Priority** – If a link goes down, LACP port priority is used to select a backup link. (Range: 0-65535; Default: 32768)

Set Port Partner – This menu sets the remote side of an aggregate link; i.e., the ports on the attached device. The command attributes have the same meaning as those used for the port actor. However, configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Port, LACP, Aggregation Port. Set the System Priority, Admin Key, and Port Priority for the Port Actor. You can optionally configure these settings for the Port Partner. (Be aware that these settings only affect the administrative state of the partner, and will not take effect until the next time an aggregate link is formed with this device.) After you have completed setting the port LACP parameters, click Apply.

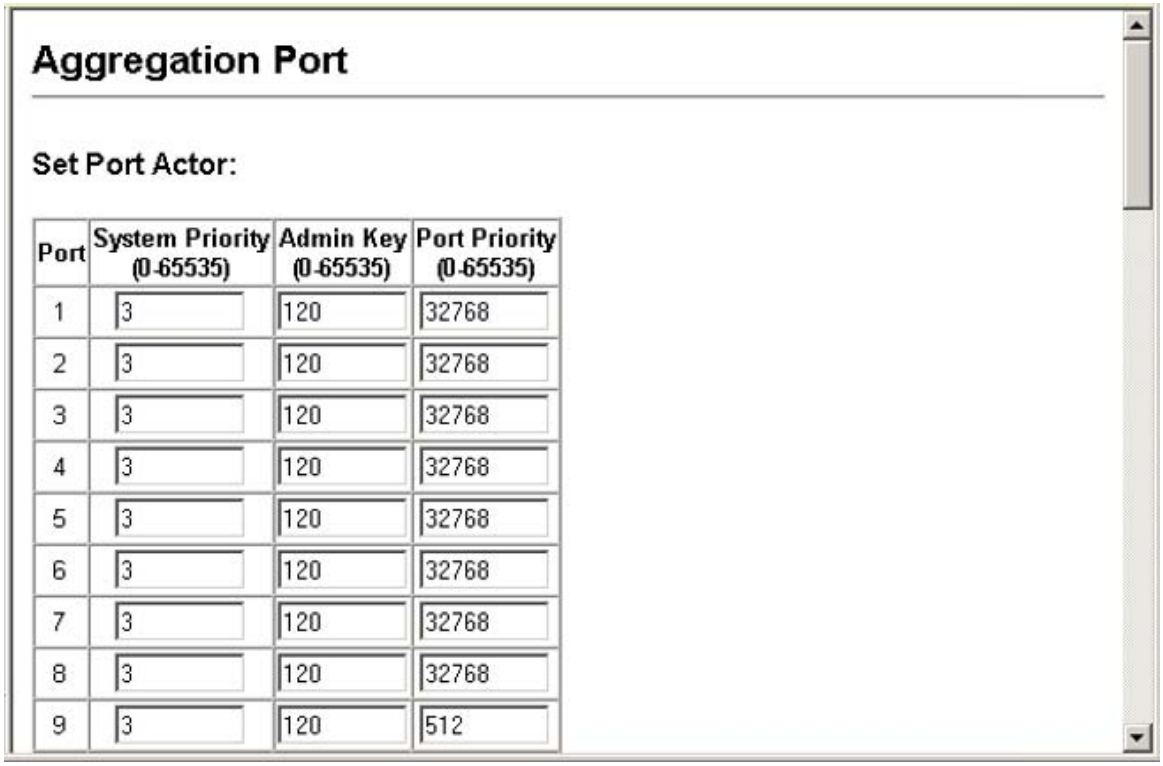

Figure 3-44. LACP Aggregation Port Settings

Downloaded from www.Manualslib.com manuals search engine

CLI – The following example configures LACP parameters for ports 1-6. Ports 1-4 are used as active members of the LAG; ports 5 and 6 are set to backup mode.

```
Console(config)#interface ethernet 1/1                                  4-128
Console(config-if)#lacp actor system-priority 3                         4-150
Console(config-if)#lacp actor admin-key 120                             4-151
Console(config-if)#lacp actor port-priority 128                         4-153
Console(config-if)#exit
⋮
Console(config)#interface ethernet 1/6
Console(config-if)#lacp actor system-priority 3
Console(config-if)#lacp actor admin-key 120
Console(config-if)#lacp actor port-priority 512
Console(config-if)#end
Console#sh lacp sysid                                                   4-153
Channel Group    System Priority    System MAC Address
-------------------------------------------------------------------------------
            1              32768     00-00-E9-31-31-31
            2              32768     00-00-E9-31-31-31
            3              32768     00-00-E9-31-31-31
            4              32768     00-00-E9-31-31-31
            5              32768     00-00-E9-31-31-31
            6              32768     00-00-E9-31-31-31
Console#show lacp 1 internal                                            4-153
Channel group : 1
-------------------------------------------------------------------------------
Oper Key : 120
Admin Key : 120
Console#
```

Displaying LACP Port Counters

You can display statistics for LACP protocol messages.

Counter Information

Table 3-45. LACP Port Counters Information

Field	Description
LACPDUs Sent	Number of valid LACPDUs transmitted from this channel group.
LACPDUs Received	Number of valid LACPDUs received on this channel group.
Marker Sent	Number of valid Marker PDUs transmitted from this channel group.
Marker Received	Number of valid Marker PDUs received by this channel group.
LACPDUs Unknown Pkts	Number of frames received that either (1) Carry the Slow Protocols Ethernet Type value, but contain an unknown PDU, or (2) are addressed to the Slow Protocols group MAC Address, but do not carry the Slow Protocols Ethernet Type.
LACPDUs Illegal Pkts	Number of frames that carry the Slow Protocols Ethernet Type value, but contain a badly formed PDU or an illegal value of Protocol Subtype.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Port, LACP, Port Counters Information. Select a member port to display the corresponding information.

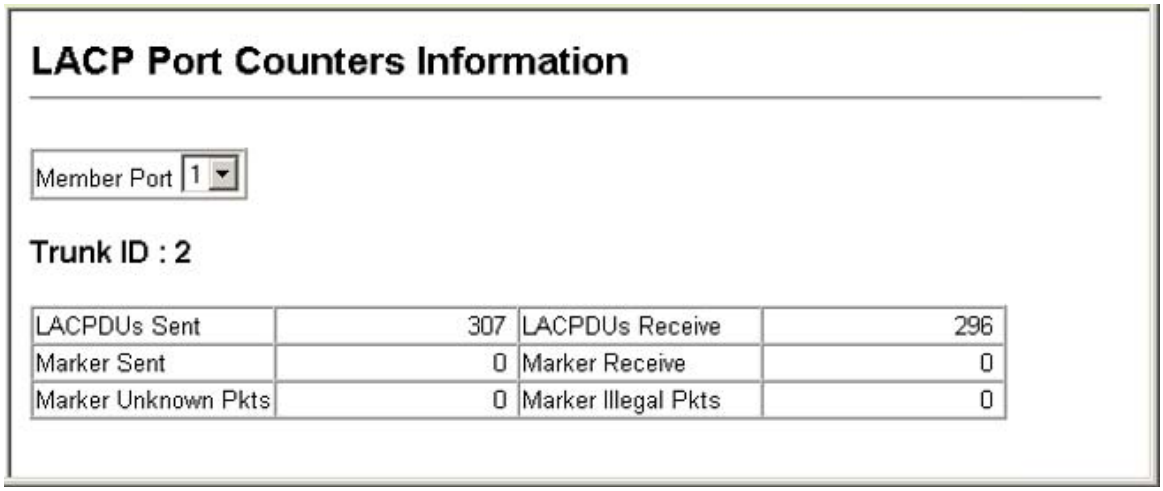
LACP Port Counters Information
Member Port 1
Trunk ID : 2
LACPDUs Sent 307 LACPDUs Receive 296
Marker Sent 0 Marker Receive 0
Marker Unknown Pkts 0 Marker Illegal Pkts 0

Figure 3-46. LACP Port Counters Information

CLI – The following example displays LACP counters for port channel 1.

```
Console#show 1 lacp counters                                          4-153
Channel group : 1
-------------------------------------------------------------------------
Eth 1/ 1
-------------------------------------------------------------------------
  LACPDUs Sent : 21
  LACPDUs Received : 21
  Marker Sent : 0
  Marker Received : 0
  LACPDUs Unknown Pkts : 0
  LACPDUs Illegal Pkts : 0
:
Console#
```

Displaying LACP Settings and Status for the Local Side

You can display configuration settings and the operational state for the local side of an link aggregation.

Internal Configuration Information

Table 3-47. LACP Settings - Local Side

Field	Description
Oper Key	Current operational value of the key for the aggregation port.
Admin Key	Current administrative value of the key for the aggregation port.
LACPDUs Internal	Number of seconds before invalidating received LACPDU information.
LACP System Priority	LACP system priority assigned to this port channel.

Downloaded from www.Manualslib.com manuals search engine

Table 3-47. LACP Settings - Local Side	
Field	**Description**
LACP Port Priority	LACP port priority assigned to this interface within the channel group.
Admin State, Oper State	Administrative or operational values of the actor's state parameters: • Expired – The actor's receive machine is in the expired state; • Defaulted – The actor's receive machine is using defaulted operational partner information, administratively configured for the partner. • Distributing – If false, distribution of outgoing frames on this link is disabled; i.e., distribution is currently disabled and is not expected to be enabled in the absence of administrative changes or changes in received protocol information. • Collecting – Collection of incoming frames on this link is enabled; i.e., collection is currently enabled and is not expected to be disabled in the absence of administrative changes or changes in received protocol information. • Synchronization – The System considers this link to be IN_SYNC; i.e., it has been allocated to the correct Link Aggregation Group, the group has been associated with a compatible Aggregator, and the identity of the Link Aggregation Group is consistent with the System ID and operational Key information transmitted. • Aggregation – The system considers this link to be aggregatable; i.e., a potential candidate for aggregation. • Long timeout – Periodic transmission of LACPDUs uses a slow transmission rate. • LACP-Activity – Activity control value with regard to this link. (0: Passive; 1: Active)

Web – Click Port, LACP, Port Internal Information. Select a port channel to display the corresponding information.

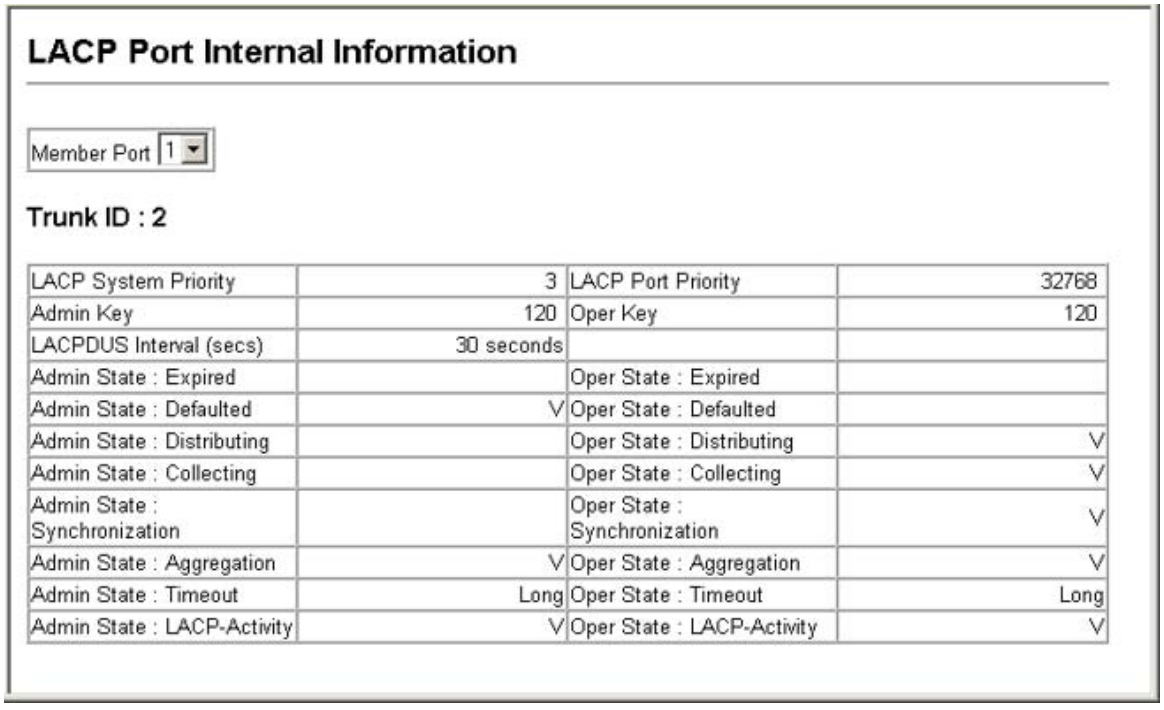
LACP Port Internal Information
Member Port 1
Trunk ID : 2
LACP System Priority 3 LACP Port Priority 32768
Admin Key 120 Oper Key 120
LACPDUS Interval (secs) 30 seconds
Admin State : Expired Oper State : Expired
Admin State : Defaulted V Oper State : Defaulted
Admin State : Distributing Oper State : Distributing V
Admin State : Collecting Oper State : Collecting V
Admin State : Synchronization Oper State : Synchronization V
Admin State : Aggregation V Oper State : Aggregation V
Admin State : Timeout Long Oper State : Timeout Long
Admin State : LACP-Activity V Oper State : LACP-Activity V

Figure 3-48. LACP Settings - Local Side

Downloaded from www.Manualslib.com manuals search engine

CLI – The following example displays the LACP configuration settings and operational state for the local side of port channel 1.

```
Console#show 1 lacp internal                                          4-153
Channel group : 1
------------------------------------------------------------------------
Oper Key : 4
Admin Key : 0
Eth 1/1
------------------------------------------------------------------------
  LACPDUs Internal : 30 sec
  LACP System Priority : 32768
  LACP Port Priority : 32768
  Admin Key : 4
  Oper Key : 4
  Admin State : defaulted, aggregation, long timeout, LACP-activity
  Oper State : distributing, collecting, synchronization, aggregation,
               long timeout, LACP-activity
:
Console#
```

Displaying LACP Settings and Status for the Remote Side

You can display configuration settings and the operational state for the remote side of an link aggregation.

Neighbor Configuration Information

Table 3-49. LACP Settings - Remote Side

Field	Description
Partner Admin System ID	LAG partner's system ID assigned by the user.
Partner Oper System ID	LAG partner's system ID assigned by the LACP protocol.
Partner Admin Port Number	Current administrative value of the port number for the protocol Partner.
Partner Oper Port Number	Operational port number assigned to this aggregation port by the port's protocol partner.
Port Admin Priority	Current administrative value of the port priority for the protocol partner.
Port Oper Priority	Priority value assigned to this aggregation port by the partner.
Admin Key	Current administrative value of the Key for the protocol partner.
Oper Key	Current operational value of the Key for the protocol partner.
Admin State	Administrative values of the partner's state parameters. (See preceding table.)
Oper State	Operational values of the partner's state parameters. (See preceding table.)

Downloaded from www.Manualslib.com manuals search engine

Web – Click Port, LACP, Port Neighbors Information. Select a port channel to display the corresponding information.

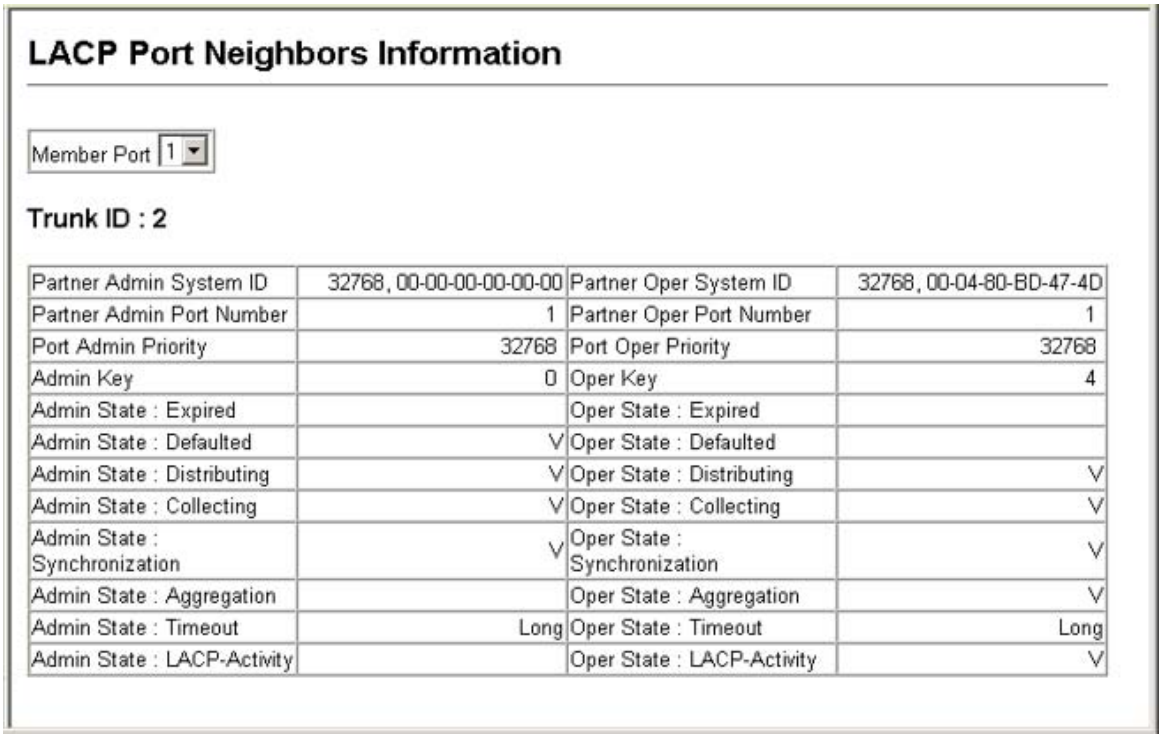

LACP Port Neighbors Information

Member Port 1

Trunk ID : 2

Partner Admin System ID	32768, 00-00-00-00-00-00	Partner Oper System ID	32768, 00-04-80-BD-47-4D
Partner Admin Port Number	1	Partner Oper Port Number	1
Port Admin Priority	32768	Port Oper Priority	32768
Admin Key	0	Oper Key	4
Admin State : Expired		Oper State : Expired	
Admin State : Defaulted	V	Oper State : Defaulted	
Admin State : Distributing	V	Oper State : Distributing	V
Admin State : Collecting	V	Oper State : Collecting	V
Admin State : Synchronization	V	Oper State : Synchronization	V
Admin State : Aggregation		Oper State : Aggregation	V
Admin State : Timeout	Long	Oper State : Timeout	Long
Admin State : LACP-Activity		Oper State : LACP-Activity	V

Figure 3-50. LACP Port Settings - Remote Side

CLI – The following example displays the LACP configuration settings and operational state for the remote side of port channel 1.

```
Console#show 1 lacp neighbors                                          4-153
Channel group 1 neighbors
-------------------------------------------------------------------------------
Eth 1/1
-------------------------------------------------------------------------------
  Partner Admin System ID : 32768, 00-00-00-00-00-00
  Partner Oper System ID : 32768, 00-00-00-00-00-01
  Partner Admin Port Number : 1
  Partner Oper Port Number : 1
  Port Admin Priority : 32768
  Port Oper Priority : 32768
  Admin Key : 0
  Oper Key : 4
  Admin State : defaulted, distributing, collecting, synchronization,
                long timeout,
  Oper State : distributing, collecting, synchronization, aggregation,
               long timeout, LACP-activity
:
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Setting Broadcast Storm Thresholds

Broadcast storms may occur when a device on your network is malfunctioning, or if application programs are not well designed or properly configured. If there is too much broadcast traffic on your network, performance can be severely degraded or everything can come to complete halt.

You can protect your network from broadcast storms by setting a threshold for broadcast traffic for each port. Any broadcast packets exceeding the specified threshold will then be dropped.

Command Usage

- Broadcast Storm Control is enabled by default.
- The default threshold is 500 packets per second.
- Broadcast control does not effect IP multicast traffic.
- The specified threshold applies to all ports on the switch.

Command Attributes

- **Protect Status** – Shows whether or not broadcast storm control has been enabled. (Default: Enabled)
- **Threshold** – Threshold as percentage of port bandwidth. (Options: 500-262143 packets per second; Default: 500 packets per second)

Web – Click Port, Port Broadcast Control. Set the threshold any port, click Apply.

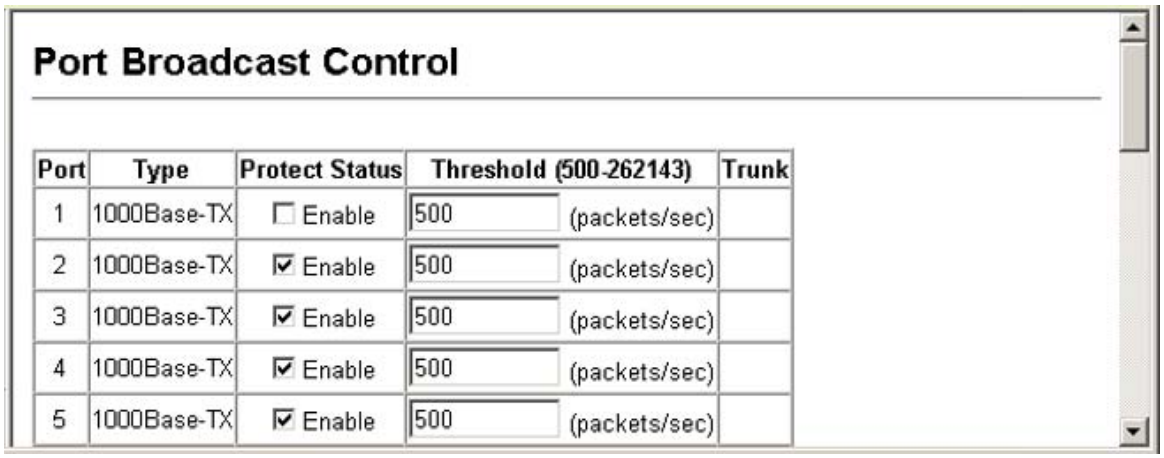

Figure 3-51. Port Broadcast Control

Downloaded from www.Manualslib.com manuals search engine

CLI – Specify any interface, and then enter the threshold. The following disables broadcast storm control for port 1, and then sets broadcast suppression at 600 packets per second for port 2.

```
Console(config)#interface ethernet 1/1                                  4-130
Console(config-if)#no switchport broadcast                              4-136
Console(config-if)#exit
Console(config)#interface ethernet 1/2
Console(config-if)#switchport broadcast packet-rate 600                 4-136
Console(config-if)#end
Console#show interfaces switchport ethernet 1/2                         4-140
Information of Eth 1/2
 Broadcast threshold: Enabled, 600 packets/second
 Lacp status: Disabled
 Ingress rate limit: disable,1000M bits per second
 Egress rate limit: disable,1000M bits per second
 VLAN membership mode: Hybrid
 Ingress rule: Disabled
 Acceptable frame type: All frames
 Native VLAN: 1
 Priority for untagged traffic: 0
 Gvrp status: Disabled
 Allowed Vlan:    1(u),
 Forbidden Vlan:
Console#
```

Configuring Port Mirroring

You can mirror traffic from any source port to a target port for real-time analysis. You can then attach a logic analyzer or RMON probe to the target port and study the traffic crossing the source port in a completely unobtrusive manner.

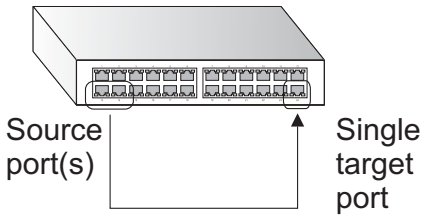

Command Usage

- Monitor port speed should match or exceed source port speed, otherwise traffic may be dropped from the monitor port.
- All mirror sessions have to share the same destination port.
- When mirroring port traffic, the target port must be included in the same VLAN as the source port.

Command Attributes

- **Mirror Sessions** – Displays a list of current mirror sessions.
- **Source Port** – The port whose traffic will be monitored.
- **Type** – Allows you to select which traffic to mirror to the target port, Rx (receive), Tx (transmit), or Both.
- **Target Port** – The port that will “duplicate” or “mirror” the traffic on the source port.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Port, Mirror. Specify the source port, the traffic type to be mirrored, and the monitor port, then click Add.

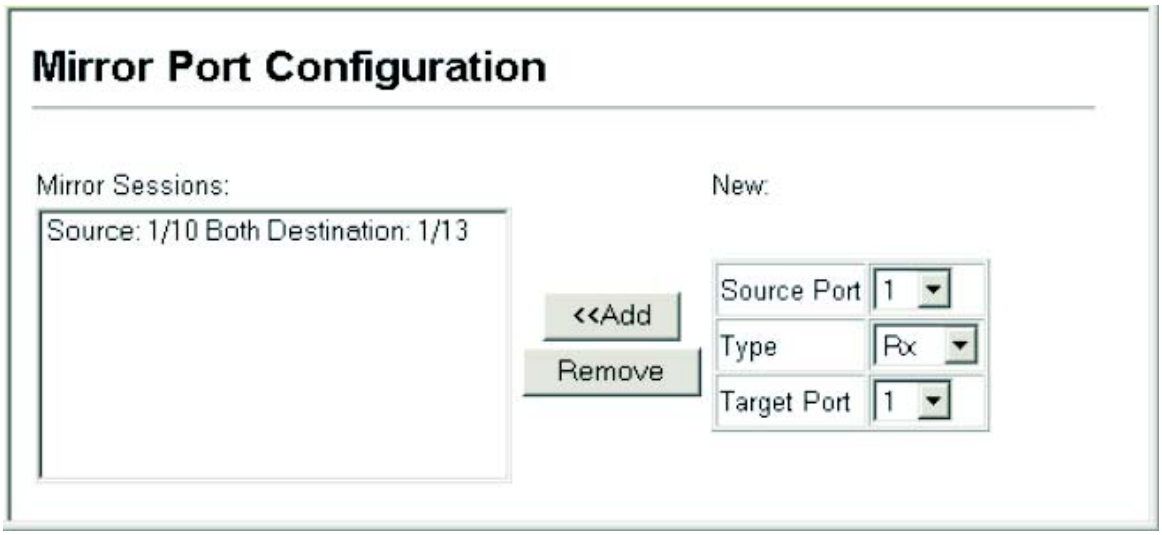

Figure 3-52. Mirror Port Configuration

CLI – Use the interface command to select the monitor port, then use the port monitor command to specify the source port. Note that default mirroring under the CLI is for both received and transmitted packets.

```
Console(config)#interface ethernet 1/10                    4-128
Console(config-if)#port monitor ethernet 1/13              4-141
Console(config-if)#
```

Configuring Rate Limits

This function allows the network manager to control the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic coming out of the switch. Traffic that falls within the rate limit is transmitted, while packets that exceed the acceptable amount of traffic are dropped.

Rate limiting can be applied to individual ports or trunks. When an interface is configured with this feature, the traffic rate will be monitored by the hardware to verify conformity. Non-conforming traffic is dropped, conforming traffic is forwarded without any changes.

Command Attribute

- **Rate Limit** – Sets the output rate limit for an interface.
  Default Status – Disabled
  Default Rate – 1000 Mbps
  Range – 1 - 1000 Mbps

Downloaded from www.Manualslib.com manuals search engine

Web - Click Rate Limit, Input/Output Port/Trunk Configuration. Set the Input Rate Limit Status or Output Rate Limit Status, then set the rate limit for the individual interfaces, and click Apply.

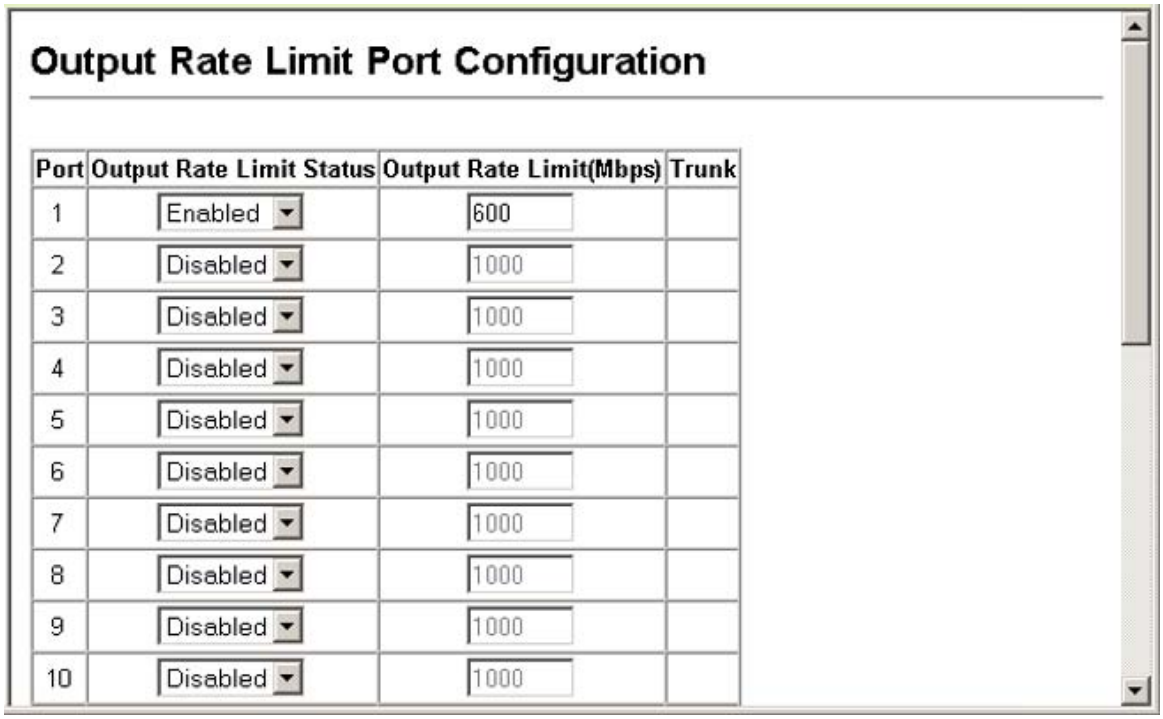

Figure 3-53. Output Rate Limit Port Configuration

CLI - This example sets the rate limit for input and output traffic passing through port 1 to 600 Mbps.

```
Console(config)#interface ethernet 1/1                          4-130
Console(config-if)#rate-limit input 600                         4-146
Console(config-if)#rate-limit output 600
Console(config-if)#
```

Showing Port Statistics

You can display standard statistics on network traffic from the Interfaces Group and Ethernet-like MIBs, as well as a detailed breakdown of traffic based on the RMON MIB. Interfaces and Ethernet-like statistics display errors on the traffic passing through each port. This information can be used to identify potential problems with the switch (such as a faulty port or unusually heavy loading). RMON statistics provide access to a broad range of statistics, including a total count of different frame types and sizes passing through each port. All values displayed have been accumulated since the last system reboot, and are shown as counts per second. Statistics are refreshed every 60 seconds by default.

Note: RMON groups 2, 3 and 9 can only be accessed using SNMP management software such as HP OpenView.

Downloaded from www.Manualslib.com manuals search engine

Statistical Values

Table 3-54. Displaying Port Statistics	
Parameter	**Description**
Interface Statistics	
Received Octets	The total number of octets received on the interface, including framing characters.
Received Unicast Packets	The number of subnetwork-unicast packets delivered to a higher-layer protocol.
Received Multicast Packets	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a multicast address at this sub-layer.
Received Broadcast Packets	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a broadcast address at this sub-layer.
Received Discarded Packets	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
Received Unknown Packets	The number of packets received via the interface which were discarded because of an unknown or unsupported protocol.
Received Errors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Transmit Octets	The total number of octets transmitted out of the interface, including framing characters.
Transmit Unicast Packets	The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.
Transmit Multicast Packets	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent.
Transmit Broadcast Packets	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent.
Transmit Discarded Packets	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
Transmit Errors	The number of outbound packets that could not be transmitted because of errors.
Etherlike Statistics	
Alignment Errors	The number of alignment errors (missynchronized data packets).
Late Collisions	The number of times that a collision is detected later than 512 bit-times into the transmission of a packet.
FCS Errors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check. This count does not include frames received with frame-too-long or frame-too-short error.

Downloaded from www.Manualslib.com manuals search engine

Table 3-54. Displaying Port Statistics	
Parameter	**Description**
Excessive Collisions	A count of frames for which transmission on a particular interface fails due to excessive collisions. This counter does not increment when the interface is operating in full-duplex mode.
Single Collision Frames	The number of successfully transmitted frames for which transmission is inhibited by exactly one collision.
Internal MAC Transmit Errors	A count of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error.
Multiple Collision Frames	A count of successfully transmitted frames for which transmission is inhibited by more than one collision.
Carrier Sense Errors	The number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame.
SQE Test Errors	A count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular interface.
Frames Too Long	A count of frames received on a particular interface that exceed the maximum permitted frame size.
Deferred Transmissions	A count of frames for which the first transmission attempt on a particular interface is delayed because the medium was busy.
Internal MAC Receive Errors	A count of frames for which reception on a particular interface fails due to an internal MAC sublayer receive error.
RMON Statistics	
Drop Events	The total number of events in which packets were dropped due to lack of resources.
Jabbers	The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS or alignment error.
Received Bytes	Total number of bytes of data received on the network. This statistic can be used as a reasonable indication of Ethernet utilization.
Collisions	The best estimate of the total number of collisions on this Ethernet segment.
Received Frames	The total number of frames (bad, broadcast and multicast) received.
Broadcast Frames	The total number of good frames received that were directed to the broadcast address. Note that this does not include multicast packets.
Multicast Frames	The total number of good frames received that were directed to this multicast address.
CRC/Alignment Errors	The number of CRC/alignment errors (FCS or alignment errors).
Undersize Frames	The total number of frames received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
Oversize Frames	The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.

Downloaded from www.Manualslib.com manuals search engine

Table 3-54. Displaying Port Statistics	
Parameter	**Description**
Fragments	The total number of frames received that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS or alignment error.
64 Bytes Frames	The total number of frames (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets).
65-127 Byte Frames 128-255 Byte Frames 256-511 Byte Frames 512-1023 Byte Frames 1024-1518 Byte Frames 1519-1536 Byte Frames	The total number of frames (including bad packets) received and transmitted where the number of octets fall within the specified range (excluding framing bits but including FCS octets).

Web – Click Port, Port Statistics. Select the required interface, and click Query. You can also use the Refresh button at the bottom of the page to update the screen.

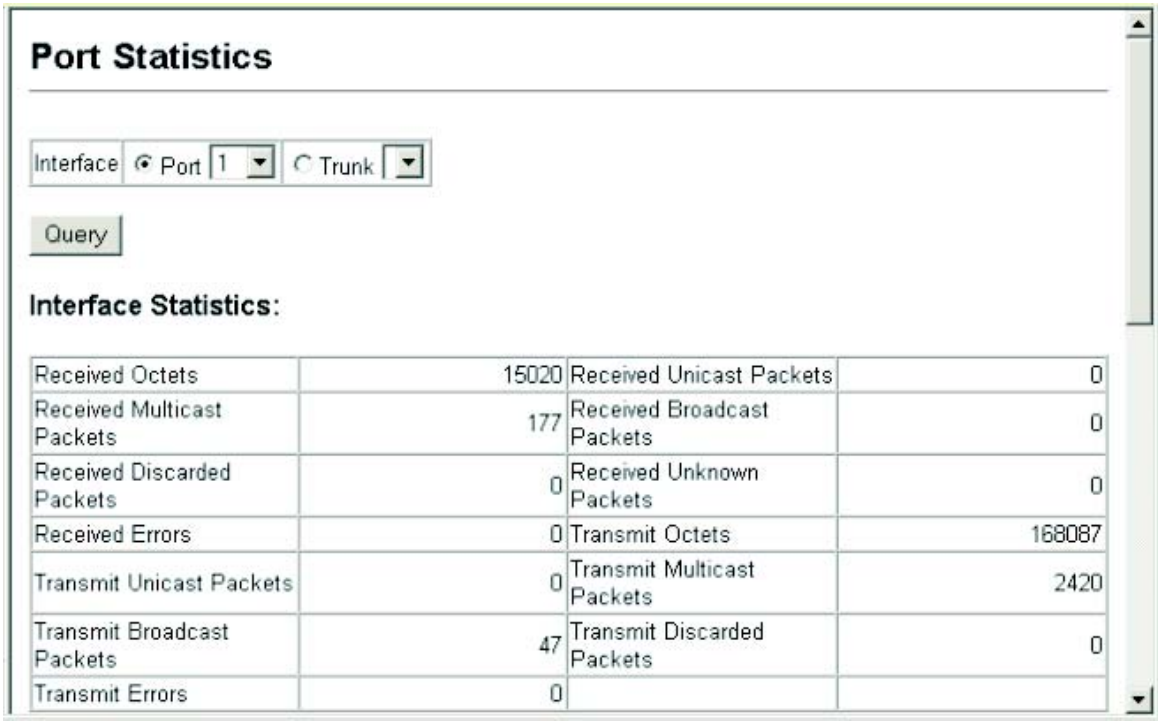

Downloaded from www.Manualslib.com manuals search engine

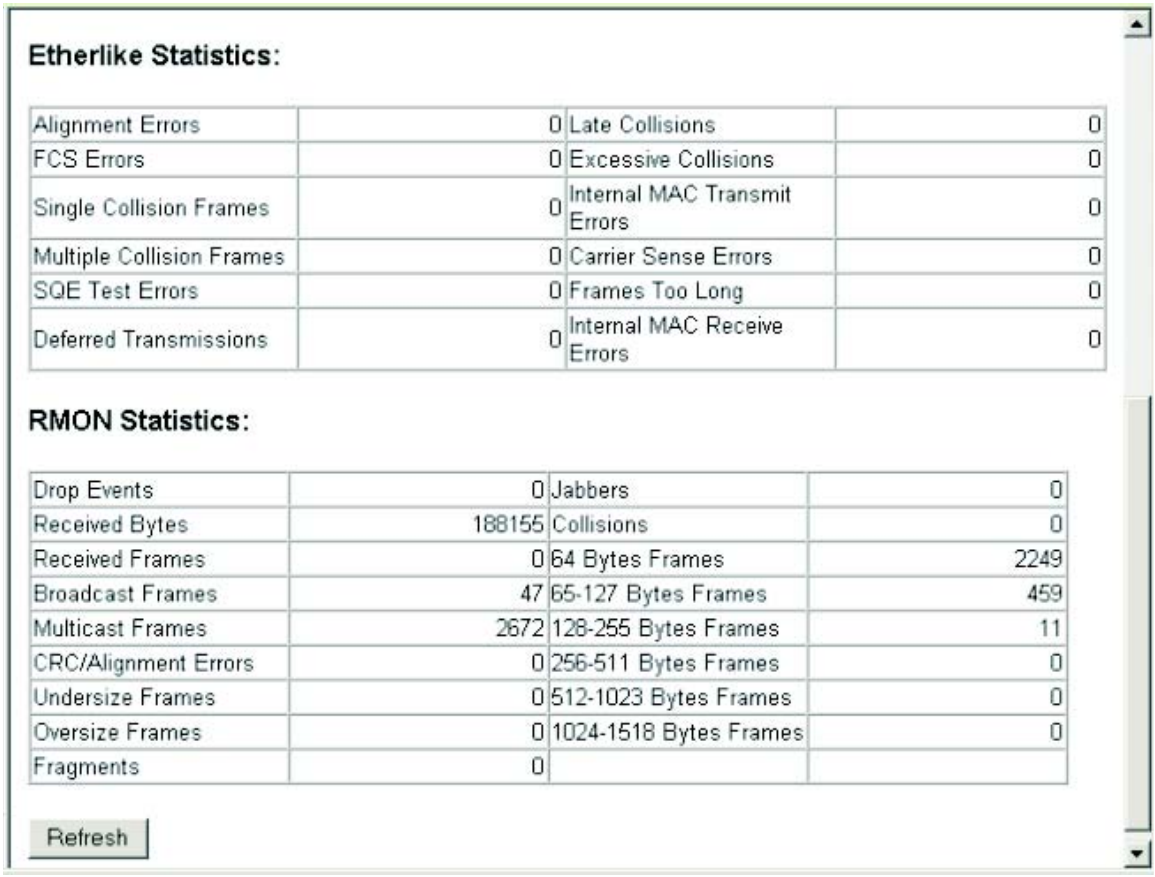

Etherlike Statistics:

Alignment Errors	0	Late Collisions	0
FCS Errors	0	Excessive Collisions	0
Single Collision Frames	0	Internal MAC Transmit Errors	0
Multiple Collision Frames	0	Carrier Sense Errors	0
SQE Test Errors	0	Frames Too Long	0
Deferred Transmissions	0	Internal MAC Receive Errors	0

RMON Statistics:

Drop Events	0	Jabbers	0
Received Bytes	188155	Collisions	0
Received Frames	0	64 Bytes Frames	2249
Broadcast Frames	47	65-127 Bytes Frames	459
Multicast Frames	2672	128-255 Bytes Frames	11
CRC/Alignment Errors	0	256-511 Bytes Frames	0
Undersize Frames	0	512-1023 Bytes Frames	0
Oversize Frames	0	1024-1518 Bytes Frames	0
Fragments	0		

Refresh

Figure 3-55. Displaying Port Statistics

Downloaded from www.Manualslib.com manuals search engine

CLI – This example shows statistics for port 13.

```
Console#show interfaces counters ethernet 1/13                    4-139
Ethernet 1/13
 Iftable stats:
  Octets input: 868453, Octets output: 3492122
  Unicast input: 7315, Unitcast output: 6658
  Discard input: 0, Discard output: 0
  Error input: 0, Error output: 0
  Unknown protos input: 0, QLen output: 0
 Extended iftable stats:
  Multi-cast input: 0, Multi-cast output: 17027
  Broadcast input: 231, Broadcast output: 7
 Ether-like stats:
  Alignment errors: 0, FCS errors: 0
  Single Collision frames: 0, Multiple collision frames: 0
  SQE Test errors: 0, Deferred transmissions: 0
  Late collisions: 0, Excessive collisions: 0
  Internal mac transmit errors: 0, Internal mac receive errors: 0
  Frame too longs: 0, Carrier sense errors: 0
  Symbol errors: 0
 RMON stats:
  Drop events: 0, Octets: 4422579, Packets: 31552
  Broadcast pkts: 238, Multi-cast pkts: 17033
  Undersize pkts: 0, Oversize pkts: 0
  Fragments: 0, Jabbers: 0
  CRC align errors: 0, Collisions: 0
  Packet size <= 64 octets: 25568, Packet size 65 to 127 octets: 1616
  Packet size 128 to 255 octets: 1249, Packet size 256 to 511 octets: 1449
  Packet size 512 to 1023 octets: 802, Packet size 1024 to 1518 octets: 871
```

Alcatel Mapping Adjacency Protocol (AMAP)

The AMAP protocol enables a switch to discover the topology of other AMAP-aware devices in the network. The protocol allows each switch to determine if other AMAP-aware switches are adjacent to it. Note that two switches are adjacent if and only if the following two requirements are satisfied:

1. There exists a Spanning Tree path between them.
2. There exists no other AMAP-aware device between the two switches on that Spanning Tree path.

Configuring AMAP

The AMAP protocol discovers adjacent switches by sending and receiving AMAP “Hello” packets on active Spanning Tree ports. Each port can be defined as being in one of three logical states of processing the AMAP "Hello" packets: discovery, common, or passive.

Command Attributes

- **AMAP Status** – Enables or disables AMAP on the switch. (Default: enabled)
- **Discovery** – The initial state where a port transmits a “Hello” packet to detect an adjacent switch and then waits for a response.

Downloaded from www.Manualslib.com manuals search engine

- **Common** – The port has detected an adjacent switch and periodically sends “Hello” packets to determine that it is still present.
- **Passive** – A port enters this state if there is no response to a Discovery “hello” packet. This is a receive-only state and no “Hello” packets are transmitted. If a “Hello” packet is received from an adjacent switch, the port enters the Common state and then transmits a “Hello” packet in reply.

Use the AMAP Global Configuration screen to enable/disable AMAP and configure timeout parameters.

Web – Click Alcatel, AMAP, Settings. Select whether to enable AMAP, enter the desired timeout intervals and click ‘Apply’.

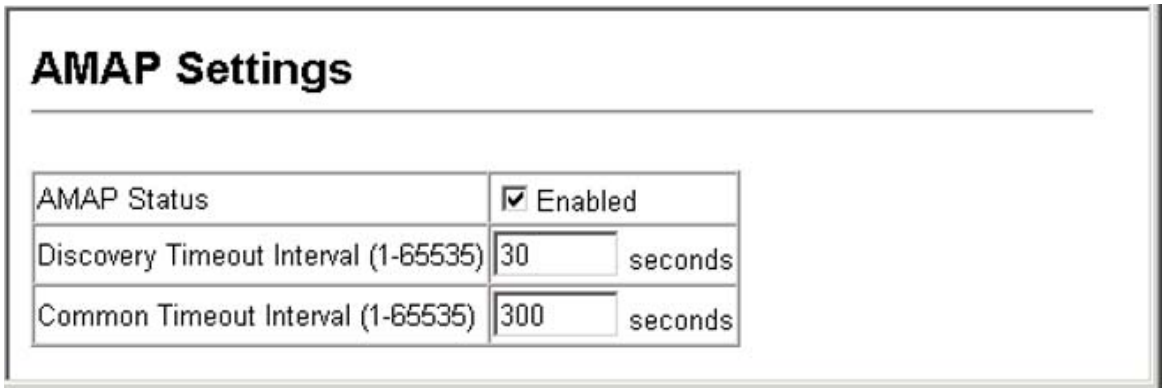

Figure 3-56. AMAP Settings

CLI – This example enables AMAP, sets the discovery timer to 200 seconds and displays the current AMAP settings.

```
Console(config)#amap enable
Console(config)#amap discovery timer 200
Console(config)#exit
Console#sh amap
AMAP is currently enabled
AMAP Common Phase Timeout Interval (seconds) = 300
AMAP Discovery Phase Timeout Interval (seconds) = 200
Console#
```

Displaying AMAP Detected Devices

To display any AMAP detected devices on the network use the ‘Display’ page.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Alcatel, AMAP, Information.

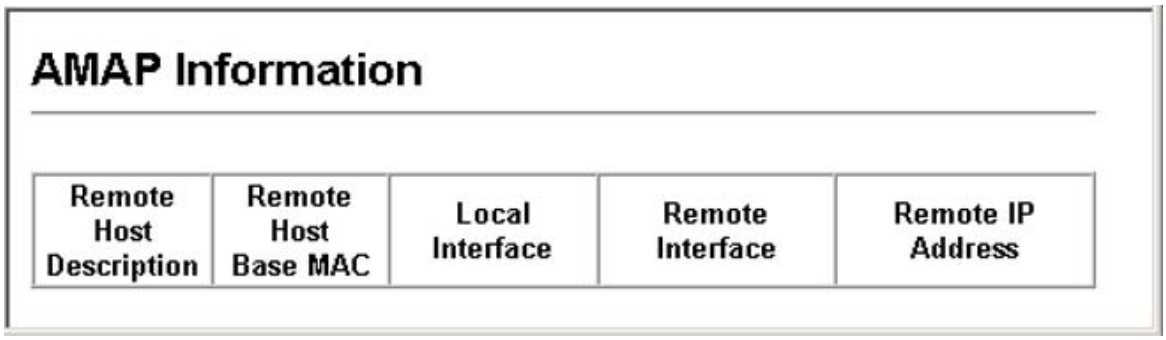

Figure 3-57. AMAP Information

CLI – There is no equvilent CLI command to display detected devices.

Address Table Settings

Switches store the addresses for all known devices. This information is used to pass traffic directly between the inbound and outbound ports. All the addresses learned by monitoring traffic are stored in the dynamic address table. You can also manually configure static addresses that are bound to a specific port.

Setting Static Addresses

A static address can be assigned to a specific interface on this switch. Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table.

Command Attributes

- **Static Address Counts*** – The number of manually configured addresses.
- **Current Static Address Table** – Lists all the static addresses.
- **Interface** – Port or trunk associated with the device assigned a static address.
- **MAC Address** – Physical address of a device mapped to this interface.
- **VLAN** – ID of configured VLAN (1-4094).

* Web Only

Downloaded from www.Manualslib.com manuals search engine

Web – Click Address Table, Static Addresses. Specify the interface, the MAC address and VLAN, then click Add Static Address.

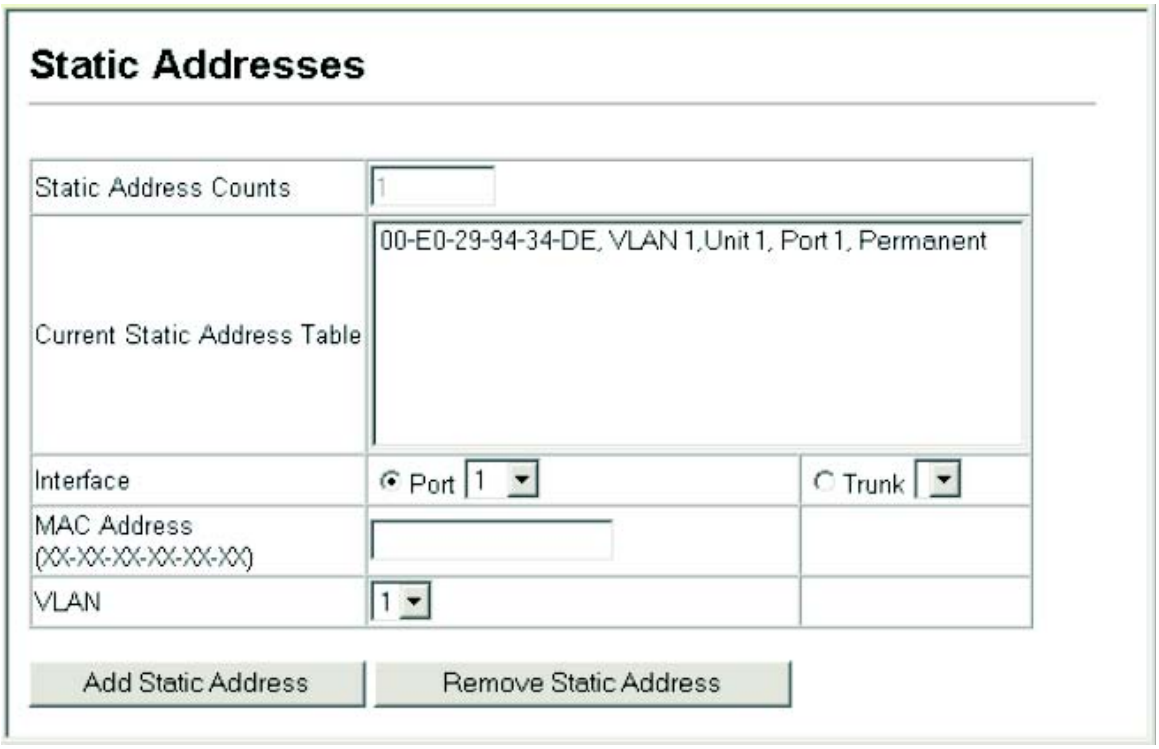

Figure 3-58. Setting a Static Address Table

CLI – This example adds an address to the static address table, but sets it to be deleted when the switch is reset.

```
Console(config)#mac-address-table static 00-e0-29-94-34-de interface
  ethernet 1/1 vlan 1 delete-on-reset                              4-157
Console(config)#
```

Displaying the Address Table

The Dynamic Address Table contains the MAC addresses learned by monitoring the source address for traffic entering the switch. When the destination address for inbound traffic is found in the database, the packets intended for that address are forwarded directly to the associated port. Otherwise, the traffic is flooded to all ports.

Command Attributes

- **Interface** – Indicates a port or trunk.
- **MAC Address** – Physical address associated with this interface.
- **VLAN** – ID of configured VLAN (1-4094).
- **Address Table Sort Key** – You can sort the information displayed based on MAC address, VLAN or interface (port or trunk).

Downloaded from www.Manualslib.com manuals search engine

Web – Click Address Table, Dynamic Addresses. Specify the search type (i.e., mark the Interface, MAC Address, or VLAN checkbox), select the method of sorting the displayed addresses, and then click Query.

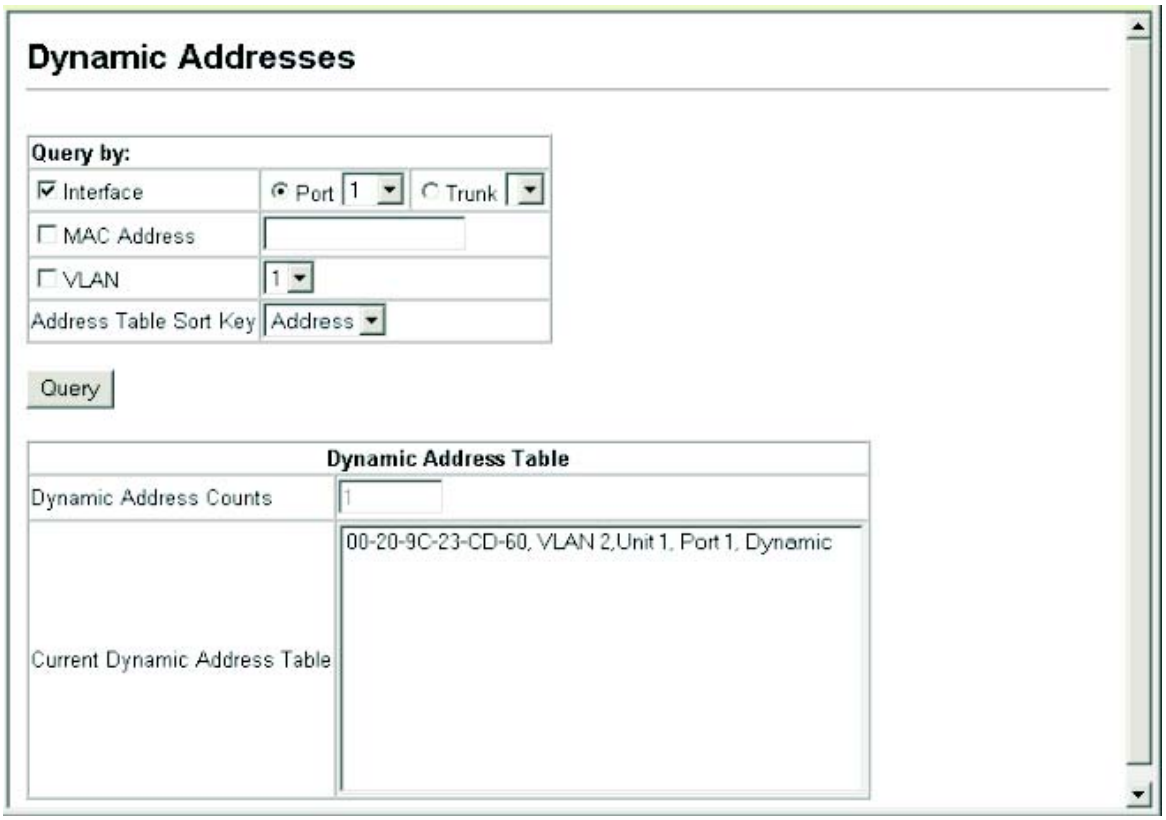

Figure 3-59. Setting a Dynamic Address Table

CLI – This example also displays the address table entries for port 1.

```
Console#show mac-address-table interface ethernet 1/1              4-158
 Interface Mac Address       Vlan Type
 --------- ----------------- ---- -----------------
  Eth 1/ 1 00-E0-29-94-34-DE    1 Permanent
  Eth 1/ 1 00-20-9C-23-CD-60    2 Learned
Console#
```

Changing the Aging Time

You can set the aging time for entries in the dynamic address table.

Command Attributes

- **Aging Time** – The time after which a learned entry is discarded. (Range: 10-1000000 seconds; Default: 300 seconds)

Downloaded from www.Manualslib.com manuals search engine

Web – Click Address Table, Address Aging. Specify the new aging time, click Apply.

Figure 3-60. Address Aging

CLI – This example sets the aging time to 400 seconds.

```
Console(config)#mac-address-table aging-time 400                    4-159
Console(config)#
```

Spanning Tree Algorithm Configuration

The Spanning Tree Algorithm (STA) can be used to detect and disable network loops, and to provide backup links between switches, bridges or routers. This allows the switch to interact with other bridging devices (that is, an STA-compliant switch, bridge or router) in your network to ensure that only one route exists between any two stations on the network, and provide backup links which automatically take over when a primary link goes down.

The spanning tree algorithms supported by this switch include these versions:

- STP – Spanning Tree Protocol (IEEE 802.1D)
- RSTP – Rapid Spanning Tree Protocol (IEEE 802.1w)
- MSTP – Multiple Spanning Tree Protocol (IEEE 802.1s)

STA uses a distributed algorithm to select a bridging device (STA-compliant switch, bridge or router) that serves as the root of the spanning tree network. It selects a root port on each bridging device (except for the root device) which incurs the lowest path cost when forwarding a packet from that device to the root device. Then it selects a designated bridging device from each LAN which incurs the lowest path cost when forwarding a packet from that LAN to the root device. All ports connected to designated bridging devices are assigned as designated ports. After determining the lowest cost spanning tree, it enables all root ports and designated ports, and disables all other ports. Network packets are therefore only forwarded between root ports and designated ports, eliminating any possible network loops.

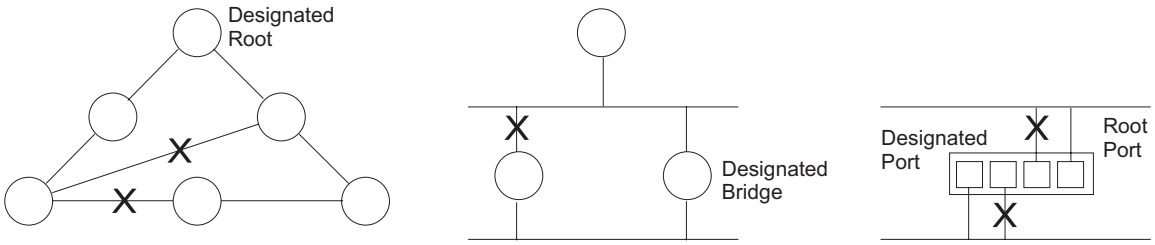

Figure 3-61. Spanning Tree BPDUs

Downloaded from www.Manualslib.com manuals search engine

Once a stable network topology has been established, all bridges listen for Hello BPDUs (Bridge Protocol Data Units) transmitted from the Root Bridge. If a bridge does not get a Hello BPDU after a predefined interval (Maximum Age), the bridge assumes that the link to the Root Bridge is down. This bridge will then initiate negotiations with other bridges to reconfigure the network to reestablish a valid network topology.

RSTP is designed as a general replacement for the slower, legacy STP. RSTP is also incorporated into MSTP. RSTP achieves must faster reconfiguration (i.e., around one tenth of the time required by STP) by reducing the number of state changes before active ports start learning, predefining an alternate route that can be used when a node or port fails, and retaining the forwarding database for ports insensitive to changes in the tree structure when reconfiguration occurs.

When using STP or RSTP, it may be difficult to maintain a stable path between all VLAN members. Frequent changes in the tree structure can easily isolate some of the group members. MSTP (an extension of RSTP) is designed to support independent spanning trees based on VLAN groups. Once you specify the VLANs to include in a Multiple Spanning Tree Instance (MSTI), the protocol will automatically build an MSTI tree to maintain connectivity among each of the VLANs. MSTP maintains contact with the global network because each instance is treated as an RSTP node in the Common Spanning Tree (CST).

Displaying Global Settings

You can display a summary of the current bridge STA information that applies to the entire switch using the STA Information screen.

Field Attributes

- **Spanning Tree State** – Shows if the switch is enabled to participate in an STA-compliant network.
- **Bridge ID** – A unique identifier for this bridge, consisting of the bridge priority and MAC address (where the address is taken from the switch system).
- **Max Age** – The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network. (References to “ports” in this section mean “interfaces,” which includes both ports and trunks.)
- **Hello Time** – Interval (in seconds) at which the root device transmits a configuration message.

Downloaded from www.Manualslib.com manuals search engine

- **Forward Delay** – The maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.
- **Designated Root** – The priority and MAC address of the device in the Spanning Tree that this switch has accepted as the root device.
  - **Root Port** – The number of the port on this switch that is closest to the root. This switch communicates with the root device through this port. If there is no root port, then this switch has been accepted as the root device of the Spanning Tree network.
  - **Root Path Cost** – The path cost from the root port on this switch to the root device.
- **Configuration Changes** – The number of times the Spanning Tree has been reconfigured.
- **Last Topology Change** – Time since the Spanning Tree was last reconfigured.

These additional parameters are only displayed for the CLI:

- **Spanning tree mode** – Specifies the type of spanning tree used on this switch:
  - **STP**: Spanning Tree Protocol (IEEE 802.1D)
  - **RSTP**: Rapid Spanning Tree (IEEE 802.1w)
  - **MSTP**: Multiple Spanning Tree (IEEE 802.1s)
- **Instance** – Instance identifier of this spanning tree. (This is always 0 for the CIST.)
- **Vlans configuration** – VLANs assigned to the CIST.
- **Priority** – Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device.
- **Root Hello Time** – Interval (in seconds) at which this device transmits a configuration message.
- **Root Maximum Age** – The maximum time (in seconds) this device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. If the root port ages out STA information (provided in the last configuration message), a new root port is selected from among the device ports attached to the network. (References to “ports” in this section means “interfaces,” which includes both ports and trunks.)
- **Root Forward Delay** – The maximum time (in seconds) this device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.

Downloaded from www.Manualslib.com manuals search engine

- **Root Hold Time** – The interval (in seconds) during which no more than two bridge configuration protocol data units shall be transmitted by this node.
- **Max hops** – The max number of hop counts for the MST region.
- **Remaining hops** – The remaining number of hop counts for the MST instance.
- **Transmission limit** – The minimum interval between the transmission of consecutive RSTP/MSTP BPDUs.
- **Path Cost Method** – The path cost is used to determine the best path between devices. The path cost method is used to determine the range of values that can be assigned to each interface.

Web – Click Spanning Tree, STA, Information.

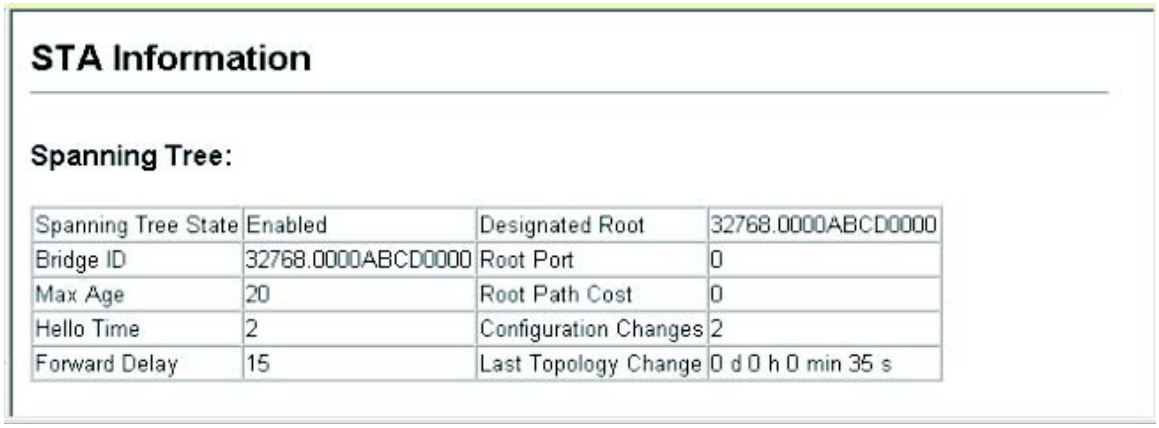

STA Information

Spanning Tree:

Spanning Tree State	Enabled	Designated Root	32768.0000ABCD0000
Bridge ID	32768.0000ABCD0000	Root Port	0
Max Age	20	Root Path Cost	0
Hello Time	2	Configuration Changes	2
Forward Delay	15	Last Topology Change	0 d 0 h 0 min 35 s

Figure 3-62. STA Information

CLI – This command displays global STA settings, followed by settings for each port.

```
Console#show spanning-tree                                          4-177
Spanning-tree information
---------------------------------------------------------------------
 Spanning tree mode               :MSTP
 Spanning tree enable/disable     :enable
 Instance                         :0
 Vlans configuration              :1-4094
 Priority                         :32768
 Bridge Hello Time (sec.)         :2
 Bridge Max Age (sec.)            :20
 Bridge Forward Delay (sec.)      :15
 Root Hello Time (sec.)           :2
 Root Max Age (sec.)              :20
 Root Forward Delay (sec.)        :15
 Max hops                         :20
 Remaining hops                   :20
 Designated Root                  :32768.0.0000ABCD0000
 Current root port                :1
 Current root cost                :200000
 Number of topology changes       :1
 Last topology changes time (sec.):13380
 Transmission limit               :3
 Path Cost Method                 :long
```

Note: The current root port and current root cost display as zero when this device is not connected to the network.

Downloaded from www.Manualslib.com manuals search engine

Configuring Global Settings

Global settings apply to the entire switch.

Command Usage

- Spanning Tree Protocol

  Uses RSTP for the internal state machine, but sends only 802.1D BPDUs. This creates one spanning tree instance for the entire network. If multiple VLANs are implemented on a network, the path between specific VLAN members may be inadvertently disabled to prevent network loops, thus isolating group members. When operating multiple VLANs, we recommend selecting the MSTP option.

- Rapid Spanning Tree Protocol

  RSTP supports connections to either STP or RSTP nodes by monitoring the incoming protocol messages and dynamically adjusting the type of protocol messages the RSTP node transmits, as described below:

  - STP Mode – If the switch receives an 802.1D BPDU (i.e., STP BPDU) after a port's migration delay timer expires, the switch assumes it is connected to an 802.1D bridge and starts using only 802.1D BPDUs.
  - RSTP Mode – If RSTP is using 802.1D BPDUs on a port and receives an RSTP BPDU after the migration delay expires, RSTP restarts the migration delay timer and begins using RSTP BPDUs on that port.

- Multiple Spanning Tree Protocol
  - To allow multiple spanning trees to operate over the network, you must configure a related set of bridges with the same MSTP configuration, allowing them to participate in a specific set of spanning tree instances.
  - A spanning tree instance can exist only on bridges that have compatible VLAN instance assignments.
  - Be careful when switching between spanning tree modes. Changing modes stops all spanning-tree instances for the previous mode and restarts the system in the new mode, temporarily disrupting user traffic.

Command Attributes

Basic Configuration of Global Settings

- **Spanning Tree State** – Enables/disables STA on this switch. (Default: Enabled)
- **Spanning Tree Type** – Specifies the type of spanning tree used on this switch:
  - **STP**: Spanning Tree Protocol (IEEE 802.1D); i.e., when this option is selected, the switch will use RSTP set to STP forced compatibility mode).
  - **RSTP**: Rapid Spanning Tree (IEEE 802.1w); RSTP is the default.
  - **MSTP**: Multiple Spanning Tree (IEEE 802.1s)

Downloaded from www.Manualslib.com manuals search engine

- **Priority** – Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device. (Note that lower numeric values indicate higher priority.)
  - Default: 32768
  - Range: 0-61440, in steps of 4096
  - Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440

Root Device Configuration

- **Hello Time** – Interval (in seconds) at which the root device transmits a configuration message.
  - Default: 2
  - Minimum: 1
  - Maximum: The lower of 10 or [(Max. Message Age / 2) -1]
- **Maximum Age** – The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network. (References to “ports” in this section mean “interfaces,” which includes both ports and trunks.)
  - Default: 20
  - Minimum: The higher of 6 or [2 x (Hello Time + 1)].
  - Maximum: The lower of 40 or [2 x (Forward Delay - 1)]
- **Forward Delay** – The maximum time (in seconds) this device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.
  - Default: 15
  - Minimum: The higher of 4 or [(Max. Message Age / 2) + 1]
  - Maximum: 30

Downloaded from www.Manualslib.com manuals search engine

Configuration Settings for RSTP

The following attributes apply to both RSTP and MSTP:

- **Path Cost Method** – The path cost is used to determine the best path between devices. The path cost method is used to determine the range of values that can be assigned to each interface.
  - Long: Specifies 32-bit based values that range from 1-200,000,000. (This is the default.)
  - Short: Specifies 16-bit based values that range from 1-65535.
- **Transmission Limit** – The maximum transmission rate for BPDUs is specified by setting the minimum interval between the transmission of consecutive protocol messages. (Range: 1-10; Default: 3)

Configuration Settings for MSTP

- **Max Instance Numbers** – The maximum number of MSTP instances to which this switch can be assigned. (Default: 32)
- **Configuration Digest** – Comparible topology identity number.
- **Region Revision*** – The revision for this MSTI. (Range: 0-65535; Default: 0)
- **Region Name*** – The name for this MSTI. (Maximum length: 32 characters)
- **Maximum Hop Count** – The maximum number of hops allowed in the MST region before a BPDU is discarded. (Range: 1-40; Default: 20)

* The MST name and revision number are both required to uniquely identify an MST region.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Spanning Tree, STA, Configuration. Modify the required attributes, and click Apply.

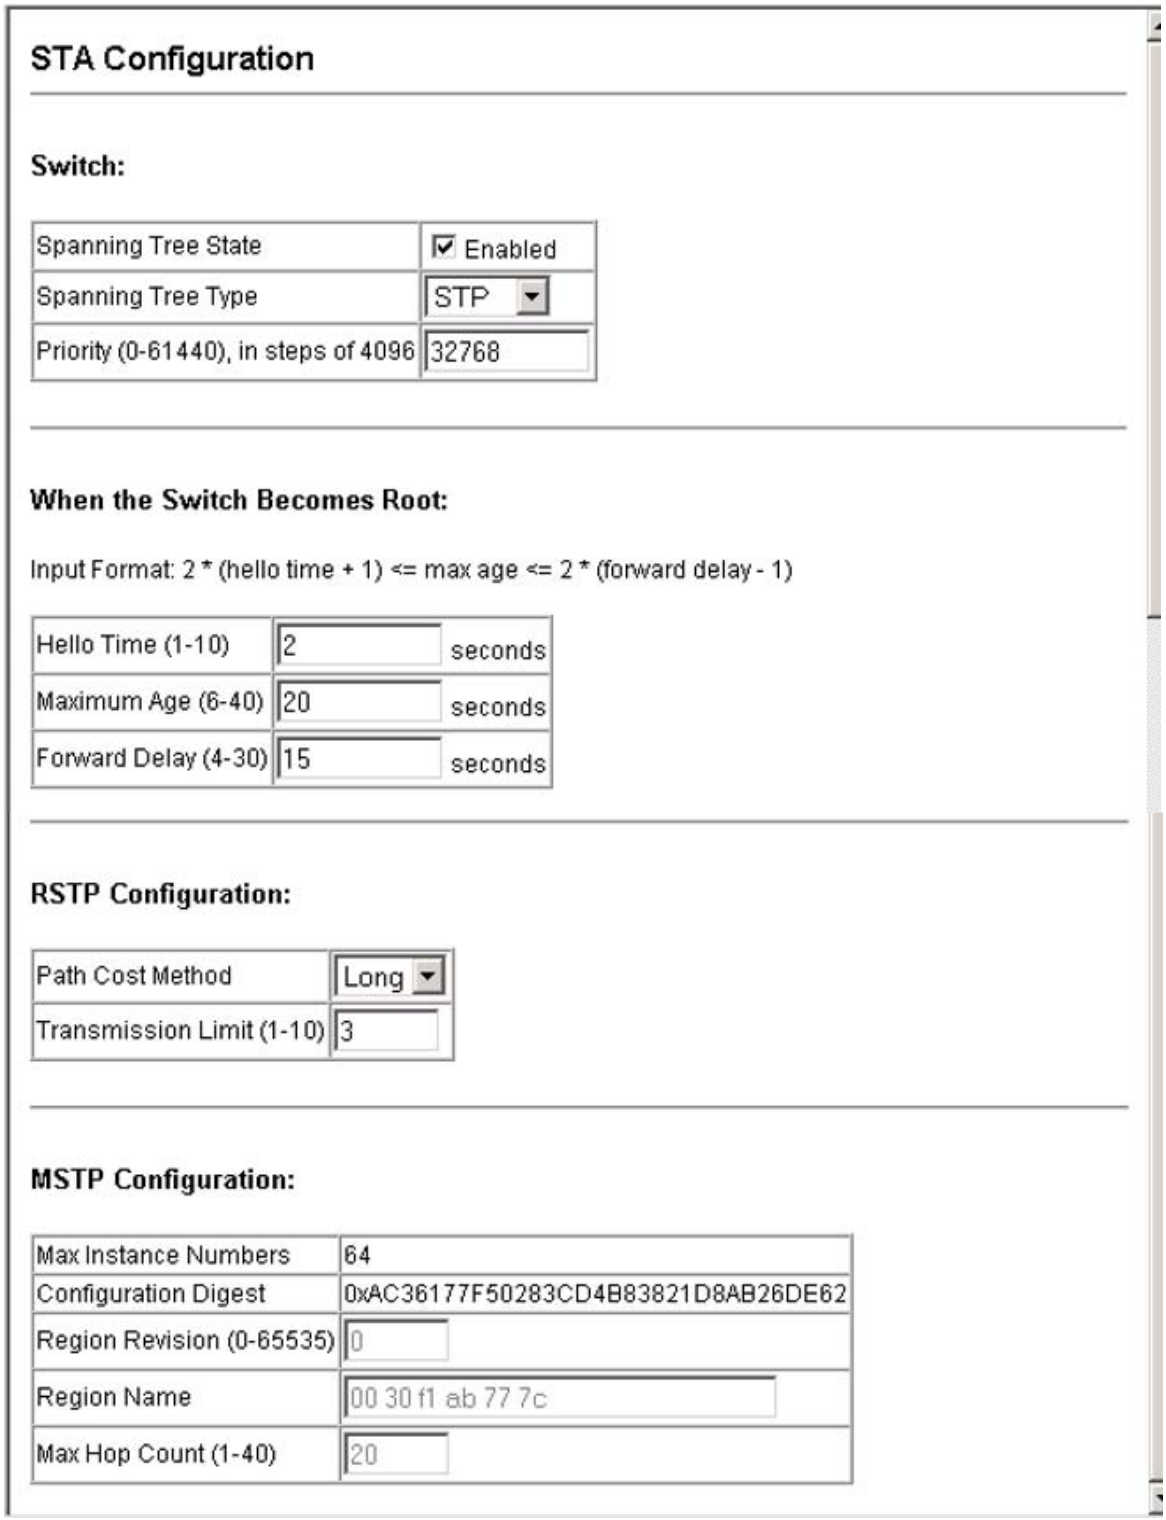

Figure 3-63. STA Configuration

Downloaded from www.Manualslib.com manuals search engine

CLI – This example enables Spanning Tree Protocol, sets the mode to MST, and then configures the STA and MSTP parameters.

```
Console(config)#spanning-tree                                          4-161
Console(config)#spanning-tree mode mst                                 4-162
Console(config)#spanning-tree priority 40000                           4-165
Console(config)#spanning-tree hello-time 5                             4-164
Console(config)#spanning-tree max-age 38                               4-164
Console(config)#spanning-tree forward-time 20                          4-163
Console(config)#spanning-tree pathcost method long                     4-166
Console(config)#spanning-tree transmission-limit 4                     4-166
Console(config)#Console(config)#spanning-tree mst-configuration        4-167
Console(config-mstp)#revision 1                                        4-169
Console(config-mstp)#name R&D                                          4-169
Console(config-mstp)#max-hops 30                                       4-170
Console(config-mstp)#
```

Displaying Interface Settings

The STA Port Information and STA Trunk Information pages display the current status of ports and trunks in the Spanning Tree.

Field Attributes

- **Spanning Tree** – Shows if STA has been enabled on this interface.
- **STA Status** – Displays current state of this port within the Spanning Tree:
  - **Discarding** - Port receives STA configuration messages, but does not forward packets.
  - **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
  - **Forwarding** - Port forwards packets, and continues learning addresses.

  The rules defining port status are:
  - A port on a network segment with no other STA compliant bridging device is always forwarding.
  - If two ports of a switch are connected to the same segment and there is no other STA device attached to this segment, the port with the smaller ID forwards packets and the other is discarding.
  - All ports are discarding when the switch is booted, then some of them change state to learning, and then to forwarding.
- **Forward Transitions** – The number of times this port has transitioned from the Learning state to the Forwarding state.
- **Designated Cost** – The cost for a packet to travel from this port to the root in the current Spanning Tree configuration. The slower the media, the higher the cost.
- **Designated Bridge** – The bridge priority and MAC address of the device through which this port must communicate to reach the root of the Spanning Tree.
- **Designated Port** – The port priority and number of the port on the designated bridging device through which this switch must communicate with the root of the Spanning Tree.

Downloaded from www.Manualslib.com manuals search engine

- **Oper Link Type** – The operational point-to-point status of the LAN segment attached to this interface. This parameter is determined by manual configuration or by auto-detection, as described for Admin Link Type in STA Port Configuration on page 3-114.
- **Oper Edge Port** – This parameter is initialized to the setting for Admin Edge Port in STA Port Configuration on page 3-114 (i.e., true or false), but will be set to false if a BPDU is received, indicating that another bridge is attached to this port.
- **Port Role** – Roles are assigned according to whether the port is part of the active topology connecting the bridge to the root bridge (i.e., **root** port), connecting a LAN through the bridge to the root bridge (i.e., **designated** port), or is the MSTI regional root (i.e., **master** port); or is an **alternate** or **backup** port that may provide connectivity if other bridges, bridge ports, or LANs fail or are removed. The role is set to disabled (i.e., **disabled** port) if a port has no role within the spanning tree.
- **Trunk Member** – Indicates if a port is a member of a trunk. (STA Port Information only)

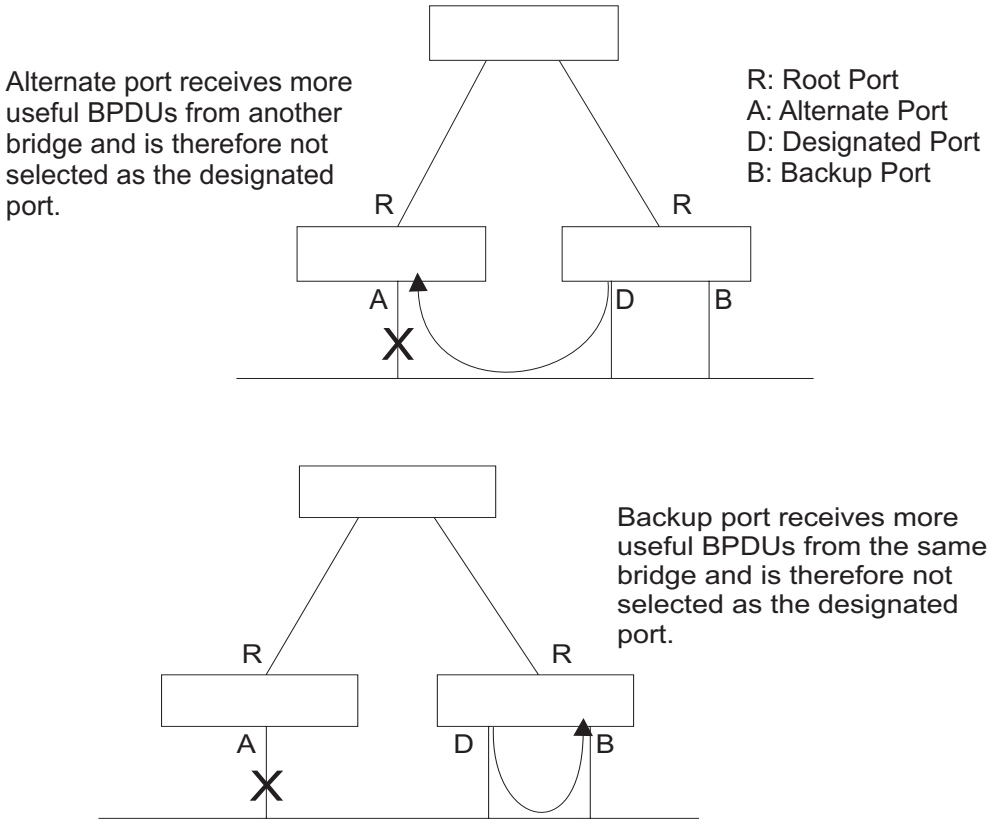

Figure 3-64. STA Port Roles

These additional parameters are only displayed for the CLI:

- **Admin status** – Shows if this interface is enabled.
- **External path cost** – The path cost for the IST. This parameter is used by the STA to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.)

Downloaded from www.Manualslib.com manuals search engine

- **Internal path cost** – The path cost for the MST. See the proceeding item.
- **Priority** – Defines the priority used for this port in the Spanning Tree Algorithm. If the path cost for all ports on a switch is the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Algorithm is detecting network loops. Where more than one port is assigned the highest priority, the port with the lowest numeric identifier will be enabled.
- **Designated root** – The priority and MAC address of the device in the Spanning Tree that this switch has accepted as the root device.
- **Fast forwarding** – This field provides the same information as Admin Edge port, and is only included for backward compatibility with earlier products.
- **Admin Edge Port** – You can enable this option if an interface is attached to a LAN segment that is at the end of a bridged LAN or to an end node. Since end nodes **cannot** cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to reconfigure when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device.
- **Admin Link Type** – The link type attached to this interface.
  - Point-to-Point – A connection to exactly one other bridge.
  - Shared – A connection to two or more bridges.
  - Auto – The switch automatically determines if the interface is attached to a point-to-point link or to shared media.

Web – Click Spanning Tree, STA, Port Information or STA Trunk Information.

STA Port Information

Port	Spanning Tree	STA Status	Forward Transitions	Designated Cost	Designated Bridge	Designated Port	Oper Link Type	Oper Edge Port	Port Role	Trunk Member
1	Enabled	Forwarding	7	200000	32768.0.0030F1552000	128.24	Point-to-Point	Disabled	Root	
2	Enabled	Discarding	0	200000	61440.0.0000E9313131	128.2	Point-to-Point	Enabled	Disabled	
3	Enabled	Discarding	0	200000	61440.0.0000E9313131	128.3	Point-to-Point	Enabled	Disabled	
4	Enabled	Discarding	0	200000	61440.0.0000E9313131	128.4	Point-to-Point	Enabled	Disabled	
5	Enabled	Discarding	0	200000	61440.0.0000E9313131	128.5	Point-to-Point	Enabled	Disabled	

Figure 3-65. STA Port Information

Downloaded from www.Manualslib.com manuals search engine

CLI – This example shows the STA attributes for port 5.

```
Console#show spanning-tree ethernet 1/5                          4-177
Eth  1/ 5 information
---------------------------------------------------------------
 Admin status          : enable
 Role                  : disable
 State                 : discarding
 External path cost    : 10000
 Internal path cost    : 10000
 Priority              : 128
 Designated cost       : 200000
 Designated port       : 128.5
 Designated root       : 61440.0.0000E9313131
 Designated bridge     : 61440.0.0000E9313131
 Fast forwarding       : enable
 Forward transitions   : 0
 Admin edge port       : enable
 Oper edge port        : enable
 Admin Link type       : auto
 Oper Link type        : point-to-point
 Spanning Tree Status  : enable
Console#
```

Configuring Interface Settings

You can configure RSTP and MSTP attributes for specific interfaces, including port priority, path cost, link type, and edge port. You may use a different priority or path cost for ports of the same media type to indicate the preferred path, link type to indicate a point-to-point connection or shared-media connection, and edge port to indicate if the attached device can support fast forwarding.

Command Attributes

The following attributes are read-only and cannot be changed:

- **STA State** – Displays current state of this port within the Spanning Tree. (See Displaying Interface Settings on page 3-111 for additional information.)
  - **Discarding** - Port receives STA configuration messages, but does not forward packets.
  - **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
  - **Forwarding** - Port forwards packets, and continues learning addresses.
- **Trunk** – Indicates if a port is a member of a trunk. (STA Port Configuration only)

The following interface attributes can be configured:

- **Spanning Tree** – Enables/disables STA on this interface. (Default: Enabled).

Downloaded from www.Manualslib.com manuals search engine

- **Priority** – Defines the priority used for this port in the Spanning Tree Protocol. If the path cost for all ports on a switch are the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Protocol is detecting network loops. Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.
  - Default: 128
  - Range: 0-240, in steps of 16
- **Path Cost** – This parameter is used by the STP to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.) Note that when the Path Cost Method is set to short (page 3-63), the maximum path cost is 65,535.
  - Range –
    - Ethernet: 200,000-20,000,000
    - Fast Ethernet: 20,000-2,000,000
    - Gigabit Ethernet: 2,000-200,000
  - Default –
    - Ethernet – Half duplex: 2,000,000; full duplex: 1,000,000; trunk: 500,000
    - Fast Ethernet – Half duplex: 200,000; full duplex: 100,000; trunk: 50,000
    - Gigabit Ethernet – Full duplex: 10,000; trunk: 5,000
- **Admin Link Type** – The link type attached to this interface.
  - Point-to-Point – A connection to exactly one other bridge.
  - Shared – A connection to two or more bridges.
  - Auto – The switch automatically determines if the interface is attached to a point-to-point link or to shared media. (This is the default setting.)
- **Admin Edge Port** (Fast Forwarding) – You can enable this option if an interface is attached to a LAN segment that is at the end of a bridged LAN or to an end node. Since end nodes **cannot** cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to initiate reconfiguration when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device. (Default: Disabled)
- **Migration** – If at any time the switch detects STP BPDUs, including Configuration or Topology Change Notification BPDUs, it will automatically set the selected interface to forced STP-compatible mode. However, you can also use the Protocol Migration button to manually re-check the appropriate BPDU format (RSTP or STP-compatible) to send on the selected interfaces. (Default: Disabled)

Downloaded from www.Manualslib.com manuals search engine

Web – Click Spanning Tree, STA, Port Configuration or Trunk Configuration. Modify the required attributes, then click Apply.

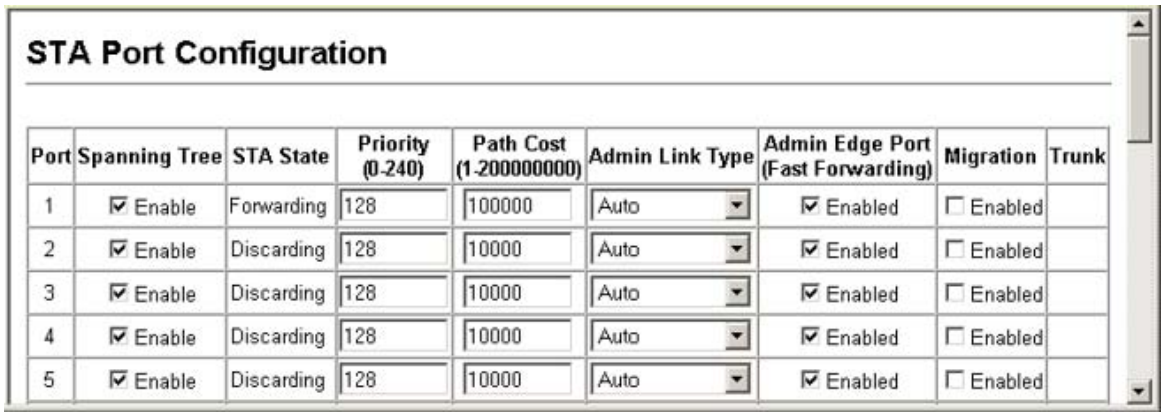
STA Port Configuration
Port
Spanning Tree
STA State
Priority (0-240)
Path Cost (1-200000000)
Admin Link Type
Admin Edge Port (Fast Forwarding)
Migration
Trunk
1 Enable Forwarding 128 100000 Auto Enabled Enabled
2 Enable Discarding 128 10000 Auto Enabled Enabled
3 Enable Discarding 128 10000 Auto Enabled Enabled
4 Enable Discarding 128 10000 Auto Enabled Enabled
5 Enable Discarding 128 10000 Auto Enabled Enabled

Figure 3-66. STA Port Configuration

CLI – This example sets STA attributes for port 7.

```
Console(config)#interface ethernet 1/7                          4-130
Console(config-if)#no no spanning-tree spanning-disabled        4-171
Console(config-if)#spanning-tree port-priority 0                4-172
Console(config-if)#spanning-tree cost 50                        4-171
Console(config-if)#spanning-tree link-type auto                 4-174
Console(config-if)#no spanning-tree edge-port                   4-172
Console(config-if)#spanning-tree protocol-migration             4-176
Console(config-if)#
```

Configuring Multiple Spanning Trees

MSTP generates a unique spanning tree for each instance. This provides multiple pathways across the network, thereby balancing the traffic load, preventing wide-scale disruption when a bridge node in a single instance fails, and allowing for faster convergence of a new topology for the failed instance.

By default all VLANs are assigned to the Internal Spanning Tree (MST Instance 0) that connects all bridges and LANs within the MST region. This switch supports up to 32 instances. You should try to group VLANs which cover the same general area of your network. However, remember that you must configure all bridges within the same MSTI Region (page 3-109) with the same set of instances, and the same instance (on each bridge) with the same set of VLANs. Also, note that RSTP treats each MSTI region as a single node, connecting all regions to the Common Spanning Tree.

To use multiple spanning trees:

1. Set the spanning tree type to MSTP (STA Configuration, page 3-107).
2. Enter the spanning tree priority for the selected MST instance (MSTP VLAN Configuration).
3. Add the VLANs that will share this MSTI (MSTP VLAN Configuration).

Note: All VLANs are automatically added to the IST (Instance 0).

Downloaded from www.Manualslib.com manuals search engine

To ensure that the MSTI maintains connectivity across the network, you must configure a related set of bridges with the same MSTI settings.

Command Attributes

- **MST Instance** – Instance identifier of this spanning tree. (Default: 0)
- **Priority** – The priority of a spanning tree instance. (Range: 0-61440 in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440; Default: 32768)
- **VLANs in MST Instance** – VLANs assigned this instance.
- **MST ID** – Instance identifier to configure. (Range: 0-57; Default: 0)
- **VLAN ID** – VLAN to assign to this selected MST instance. (Range: 1-4094)

The other global attributes are described under "Displaying Global Settings," page 3-107. The attributes displayed by the CLI for individual interfaces are described under "Displaying Interface Settings," page 3-111.

Web – Click Spanning Tree, MSTP, VLAN Configuration. Select an instance identifier from the list, set the instance priority, and click Apply. To add the VLAN members to an MSTI instance, enter the instance identifier, the VLAN identifier, and click Add.

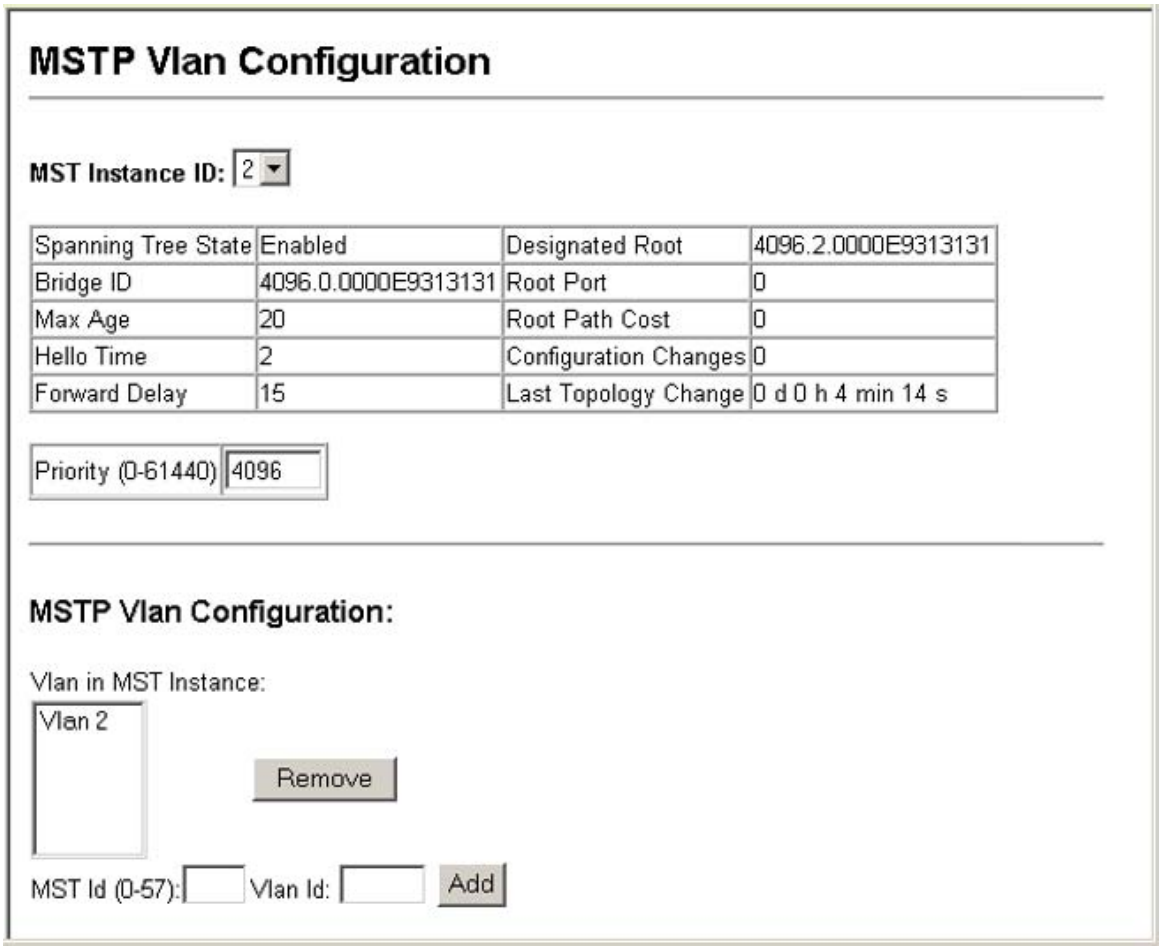

Figure 3-67. MSTP Vlan Configuration

Downloaded from www.Manualslib.com manuals search engine

CLI – This displays STA settings for instance 1, followed by settings for each port.

```
Console#show spanning-tree mst 2                                    4-177
Spanning-tree information
---------------------------------------------------------------------
 Spanning tree mode               :MSTP
 Spanning tree enable/disable     :enable
 Instance                         :2
 Vlans configuration              :2
 Priority                         :4096
 Bridge Hello Time (sec.)         :2
 Bridge Max Age (sec.)            :20
 Bridge Forward Delay (sec.)      :15
 Root Hello Time (sec.)           :2
 Root Max Age (sec.)              :20
 Root Forward Delay (sec.)        :15
 Max hops                         :20

 Remaining hops                   :20
 Designated Root                  :4096.2.0000E9313131
 Current root port                :0
 Current root cost                :0
 Number of topology changes       :0
 Last topology changes time (sec.):646
 Transmission limit               :3
 Path Cost Method                 :long
---------------------------------------------------------------------
Eth  1/ 7 information
---------------------------------------------------------------------
 Admin status         : enable
 Role                 : disable
 State                : discarding
 External path cost   : 10000
 Internal path cost   : 10000
 Priority             : 128
 Designated cost      : 0
 Designated port      : 128.7
 Designated root      : 4096.2.0000E9313131
 Designated bridge    : 4096.2.0000E9313131
 Fast forwarding      : enable
 Forward transitions  : 0
 Admin edge port      : enable
 Oper edge port       : enable
 Admin Link type      : auto
 Oper Link type       : point-to-point
 Spanning Tree Status : enable
.
.
.
```

CLI – This example sets the priority for MSTI 1, and adds VLANs 1-5 to this MSTI.

```
Console(config)#spanning-tree mst-configuration                     4-167
Console(config-mst)#mst 1 priority 4096                             4-168
Console(config-mstp)#mst 1 vlan 1-5                                 4-167
Console(config-mst)#
```


Downloaded from www.Manualslib.com manuals search engine

Displaying Interface Settings for MSTP

The MSTP Port Information and MSTP Trunk Information pages display the current status of ports and trunks in the selected MST instance.

Field Attributes

- **MST Instance ID** – Instance identifier to configure. (Range: 0-57; Default: 0)

The other attributes are described under "Displaying Interface Settings," page 3-111.

Web – Click Spanning Tree, MSTP, Port Information or Trunk Information. Select the required MST instance to display the current spanning tree values.

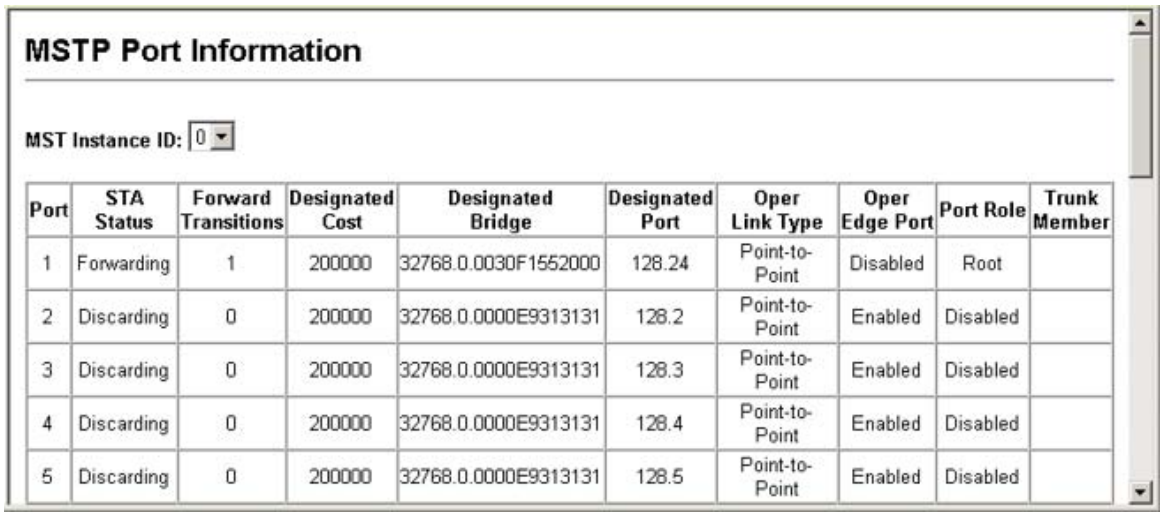

MSTP Port Information

MST Instance ID: 0

Port	STA Status	Forward Transitions	Designated Cost	Designated Bridge	Designated Port	Oper Link Type	Oper Edge Port	Port Role	Trunk Member
1	Forwarding	1	200000	32768.0.0030F1552000	128.24	Point-to-Point	Disabled	Root	
2	Discarding	0	200000	32768.0.0000E9313131	128.2	Point-to-Point	Enabled	Disabled	
3	Discarding	0	200000	32768.0.0000E9313131	128.3	Point-to-Point	Enabled	Disabled	
4	Discarding	0	200000	32768.0.0000E9313131	128.4	Point-to-Point	Enabled	Disabled	
5	Discarding	0	200000	32768.0.0000E9313131	128.5	Point-to-Point	Enabled	Disabled	

Figure 3-68. MSTP Port Information

Downloaded from www.Manualslib.com manuals search engine

CLI – This displays STA settings for instance 0, followed by settings for each port. The settings for instance 0 are global settings that apply to the IST (page 3-104), the settings for other instances only apply to the local spanning tree.

```
Console#show spanning-tree mst 0                                    4-177
Spanning-tree information
---------------------------------------------------------------
 Spanning tree mode               :MSTP
 Spanning tree enable/disable     :enable
 Instance                         :0
 Vlans configuration              :1-4094
 Priority                         :32768
 Bridge Hello Time (sec.)         :2
 Bridge Max Age (sec.)            :20
 Bridge Forward Delay (sec.)      :15
 Root Hello Time (sec.)           :2
 Root Max Age (sec.)              :20
 Root Forward Delay (sec.)        :15
 Max hops                         :20
 Remaining hops                   :20
 Designated Root                  :32768.0.0000ABCD0000
 Current root port                :1
 Current root cost                :200000
 Number of topology changes       :1
 Last topology changes time (sec.):645
 Transmission limit               :3
 Path Cost Method                 :long
---------------------------------------------------------------
Eth  1/ 1 information
---------------------------------------------------------------
 Admin status         : enable
 Role                 : root
 State                : forwarding
 External path cost   : 100000
 Internal path cost   : 100000
 Priority             : 128
 Designated cost      : 200000
 Designated port      : 128.24
 Designated root      : 32768.0.0000ABCD0000
 Designated bridge    : 32768.0.0030F1552000
 Fast forwarding      : disable
 Forward transitions  : 1
 Admin edge port      : enable
 Oper edge port       : disable
 Admin Link type      : auto
 Oper Link type       : point-to-point
 Spanning Tree Status : enable
.
.
```


Downloaded from www.Manualslib.com manuals search engine

Configuring Interface Settings for MSTP

You can configure the STA interface settings for an MST Instance using the MSTP Port Configuration and MSTP Trunk Configuration pages.

Field Attributes

The following attributes are read-only and cannot be changed:

- **STA State** – Displays current state of this port within the Spanning Tree. (See Displaying Interface Settings on page 3-111 for additional information.)
  - **Discarding** - Port receives STA configuration messages, but does not forward packets.
  - **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
  - **Forwarding** - Port forwards packets, and continues learning addresses.
- **Trunk** – Indicates if a port is a member of a trunk. (STA Port Configuration only)

The following interface attributes can be configured:

- **MST Instance ID** – Instance identifier to configure. (Range: 0-57; Default: 0)
- **Priority** – Defines the priority used for this port in the Spanning Tree Protocol. If the path cost for all ports on a switch are the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Protocol is detecting network loops. Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.
  - Default: 128
  - Range: 0-240, in steps of 16
- **MST Path Cost** – This parameter is used by the MSTP to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.) Note that when the Path Cost Method is set to short (page 3-63), the maximum path cost is 65,535.
  - Range –
    - Ethernet: 200,000-20,000,000
    - Fast Ethernet: 20,000-2,000,000
    - Gigabit Ethernet: 2,000-200,000
  - Default –
    - Ethernet – Half duplex: 2,000,000; full duplex: 1,000,000; trunk: 500,000
    - Fast Ethernet – Half duplex: 200,000; full duplex: 100,000; trunk: 50,000
    - Gigabit Ethernet – Full duplex: 10,000; trunk: 5,000

Downloaded from www.Manualslib.com manuals search engine

Web – Click Spanning Tree, MSTP, Port Configuration or Trunk Configuration. Enter the priority and path cost for an interface, and click Apply.

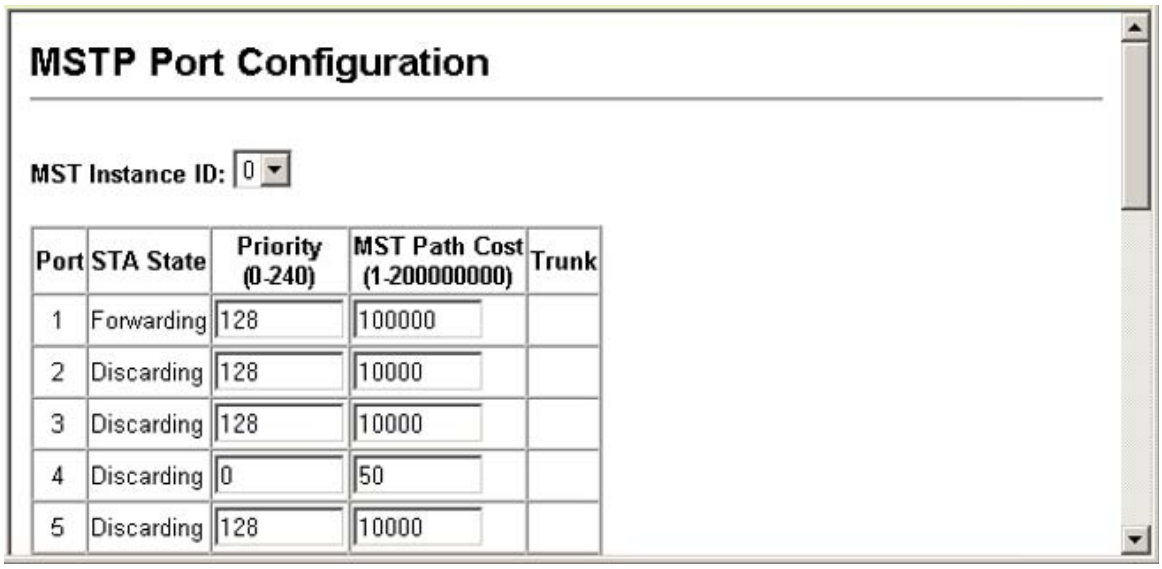
MSTP Port Configuration
MST Instance ID: 0
Port STA State Priority (0-240) MST Path Cost (1-200000000) Trunk
1 Forwarding 128 100000
2 Discarding 128 10000
3 Discarding 128 10000
4 Discarding 0 50
5 Discarding 128 10000

Figure 3-69. MSTP Port Configuration

CLI – This example sets the MSTP attributes for port 4.

```
Console(config)#interface ethernet 1/4                          4-130
Console(config-if)#spanning-tree mst port-priority 0            4-176
Console(config-if)#spanning-tree mst cost 50                    4-175
Console(config-if)
```

VLAN Configuration

Overview

In large networks, routers are used to isolate broadcast traffic for each subnet into separate domains. This switch provides a similar service at Layer 2 by using VLANs to organize any group of network nodes into separate broadcast domains. VLANs confine broadcast traffic to the originating group, and can eliminate broadcast storms in large networks. This also provides a more secure and cleaner network environment.

An IEEE 802.1Q VLAN is a group of ports that can be located anywhere in the network, but communicate as though they belong to the same physical segment.

VLANs help to simplify network management by allowing you to move devices to a new VLAN without having to change any physical connections. VLANs can be easily organized to reflect departmental groups (such as Marketing or R&D), usage groups (such as e-mail), or multicast groups (used for multimedia applications such as videoconferencing).

VLANs provide greater network efficiency by reducing broadcast traffic, and allow you to make network changes without having to update IP addresses or IP subnets.

Downloaded from www.Manualslib.com manuals search engine

VLANs inherently provide a high level of network security since traffic must pass through a configured Layer 3 link to reach a different VLAN.

This switch supports the following VLAN features:

- Up to 255 VLANs based on the IEEE 802.1Q standard
- Distributed VLAN learning across multiple switches using explicit or implicit tagging and GVRP protocol
- Port overlapping, allowing a port to participate in multiple VLANs
- End stations can belong to multiple VLANs
- Passing traffic between VLAN-aware and VLAN-unaware devices
- Priority tagging

Assigning Ports to VLANs

Before enabling VLANs for the switch, you must first assign each port to the VLAN group(s) in which it will participate. By default all ports are assigned to VLAN 1 as untagged ports. Add a port as a tagged port if you want it to carry traffic for one or more VLANs, and any intermediate network devices or the host at the other end of the connection supports VLANs. Then assign ports on the other VLAN-aware network devices along the path that will carry this traffic to the same VLAN(s), either manually or dynamically using GVRP. However, if you want a port on this switch to participate in one or more VLANs, but none of the intermediate network devices nor the host at the other end of the connection supports VLANs, then you should add this port to the VLAN as an untagged port.

Note: VLAN-tagged frames can pass through VLAN-aware or VLAN-unaware network interconnection devices, but the VLAN tags should be stripped off before passing it on to any end-node host that does not support VLAN tagging.

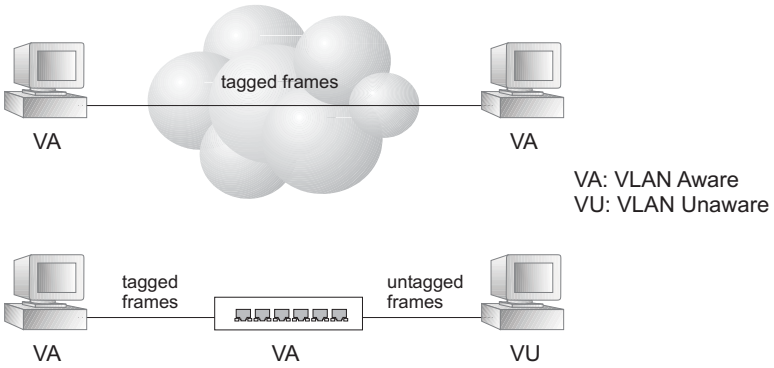

Figure 3-70. Tagged and Untagged Frames

VLAN Classification – When the switch receives a frame, it classifies the frame in one of two ways. If the frame is untagged, the switch assigns the frame to an associated VLAN (based on the default VLAN ID of the receiving port). But if the frame is tagged, the switch uses the tagged VLAN ID to identify the port broadcast domain of the frame.

Downloaded from www.Manualslib.com manuals search engine

Port Overlapping – Port overlapping can be used to allow access to commonly shared network resources among different VLAN groups, such as file servers or printers.

Untagged VLANs – Untagged (or static) VLANs are typically used to reduce broadcast traffic and to increase security. A group of network users assigned to a VLAN form a broadcast domain that is separate from other VLANs configured on the switch. Packets are forwarded only between ports that are designated for the same VLAN. Untagged VLANs can be used to manually isolate user groups or subnets. However, you should use IEEE 802.3 tagged VLANs with GVRP whenever possible to fully automate VLAN registration.

Automatic VLAN Registration – GVRP (GARP VLAN Registration Protocol) defines a system whereby the switch can automatically learn the VLANs to which each end station should be assigned. If an end station (or its network adapter) supports the IEEE 802.1Q VLAN protocol, it can be configured to broadcast a message to your network indicating the VLAN groups it wants to join. When this switch receives these messages, it will automatically place the receiving port in the specified VLANs, and then forward the message to all other ports. When the message arrives at another switch that supports GVRP, it will also place the receiving port in the specified VLANs, and pass the message on to all other ports. VLAN requirements are propagated in this way throughout the network. This allows GVRP-compliant devices to be automatically configured for VLAN groups based solely on endstation requests.

To implement GVRP in a network, first add the host devices to the required VLANs (using the operating system or other application software), so that these VLANs can be propagated onto the network. For both the edge switches attached directly to these hosts, and core switches in the network, enable GVRP on the links between these devices. You should also determine security boundaries in the network and disable GVRP on the boundary ports to prevent advertisements from being propagated, or forbid those ports from joining restricted VLANs.

Downloaded from www.Manualslib.com manuals search engine

Note: If you have host devices that do not support GVRP, you should configure static or untagged VLANs for the switch ports connected to these devices (as described in "Adding Static Members to VLANs (VLAN Index)" on page 3-130). But you can still enable GVRP on these edge switches, as well as on the core switches in the network.

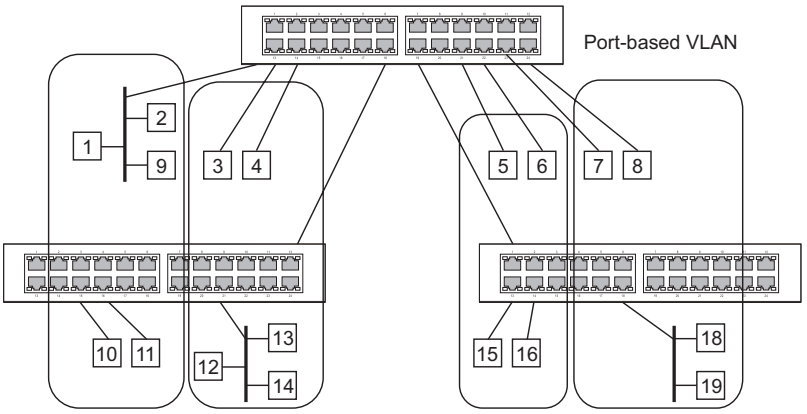

Figure 3-71. Port Based VLANs

Forwarding Tagged/Untagged Frames

If you want to create a small port-based VLAN for devices attached directly to a single switch, you can assign ports to the same untagged VLAN. However, to participate in a VLAN group that crosses several switches, you should create a VLAN for that group and enable tagging on all ports.

Ports can be assigned to multiple tagged or untagged VLANs. Each port on the switch is therefore capable of passing tagged or untagged frames. When forwarding a frame from this switch along a path that contains any VLAN-aware devices, the switch should include VLAN tags. When forwarding a frame from this switch along a path that does not contain any VLAN-aware devices (including the destination host), the switch must first strip off the VLAN tag before forwarding the frame. When the switch receives a tagged frame, it will pass this frame onto the VLAN(s) indicated by the frame tag. However, when this switch receives an untagged frame from a VLAN-unaware device, it first decides where to forward the frame, and then inserts a VLAN tag reflecting the ingress port's default VID.

Enabling or Disabling GVRP (Global Setting)

GARP VLAN Registration Protocol (GVRP) defines a way for switches to exchange VLAN information in order to register VLAN members on ports across the network. VLANs are dynamically configured based on join messages issued by host devices and propagated throughout the network. GVRP must be enabled to permit automatic VLAN registration, and to support VLANs which extend beyond the local switch. (Default: Disabled)

Downloaded from www.Manualslib.com manuals search engine

Web – Click VLAN, 802.1Q VLAN, GVRP Status. Enable or disable GVRP, and click Apply.

Figure 3-72. GVRP Status

CLI – This example enables GVRP for the switch.

```
Console(config)#bridge-ext gvrp                                    4-193
Console(config)#
```

Displaying Basic VLAN Information

The VLAN Basic Information page displays basic information on the VLAN type supported by the switch.

Field Attributes

- **VLAN Version Number*** – The VLAN version used by this switch as specified in the IEEE 802.1Q standard.
- **Maximum VLAN ID** – Maximum VLAN ID recognized by this switch.
- **Maximum Number of Supported VLANs** – Maximum number of VLANs that can be configured on this switch.

* Web Only

Web – Click VLAN, 802.1Q VLAN, Basic Information.

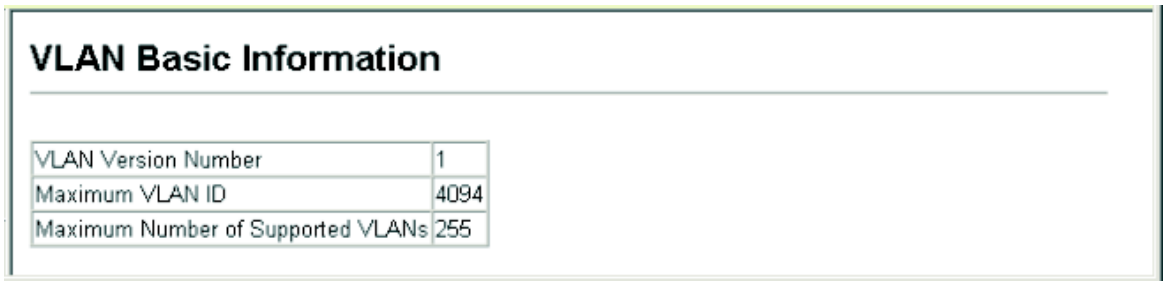

Figure 3-73. Basic VLAN Information

Downloaded from www.Manualslib.com manuals search engine

CLI – Enter the following command.

```
Console#show bridge-ext                                          4-193
 Max support vlan numbers: 255
 Max support vlan ID: 4094
 Extended multicast filtering services: No
 Static entry individual port: Yes
 VLAN learning: IVL
 Configurable PVID tagging: Yes
 Local VLAN capable: Yes
 Traffic classes: Enabled
 Global GVRP status: Disabled
 GMRP: Disabled
Console#
```

Displaying Current VLANs

The VLAN Current Table shows the current port members of each VLAN and whether or not the port supports VLAN tagging. Ports assigned to a large VLAN group that crosses several switches should use VLAN tagging. However, if you just want to create a small port-based VLAN for one or two switches, you can disable tagging.

Command Attributes (Web)

- **VLAN ID** – ID of configured VLAN (1-4094).
- **Up Time at Creation** – Time this VLAN was created (i.e., System Up Time).
- **Status** – Shows how this VLAN was added to the switch.
  - **Dynamic GVRP**: Automatically learned via GVRP.
  - **Permanent**: Added as a static entry.
- **Egress Ports** – Shows all the VLAN port members.
- **Untagged Ports** – Shows the untagged VLAN port members.

Downloaded from www.Manualslib.com manuals search engine

Web – Click VLAN, 802.1Q VLAN, Current Table. Select any ID from the scroll-down list.

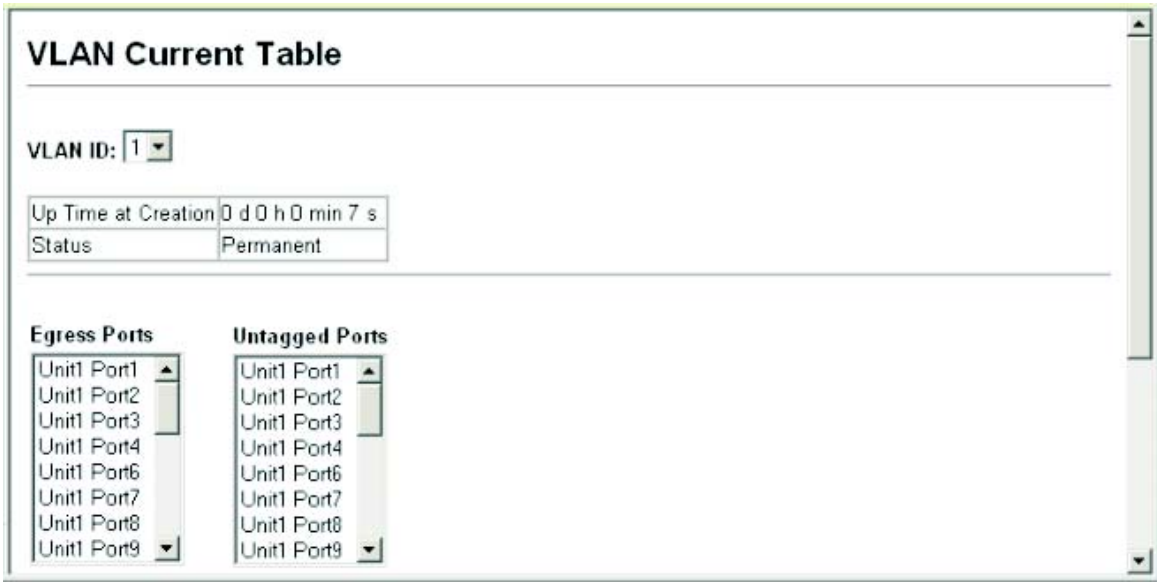

Figure 3-74. VLAN Current Table

Command Attributes (CLI)

- **VLAN** – ID of configured VLAN (1-4094, no leading zeroes).
- **Type** – Shows how this VLAN was added to the switch.
  - **Dynamic**: Automatically learned via GVRP.
  - **Static**: Added as a static entry.
- **Name** – Name of the VLAN (1 to 32 characters).
- **Status** – Shows if this VLAN is enabled or disabled.
  - **Active**: VLAN is operational.
  - **Suspend**: VLAN is suspended; i.e., does not pass packets.
- **Ports / Channel groups** – Shows the VLAN interface members.

CLI – Current VLAN information can be displayed with the following command.

```
Console#show vlan id 1                                              4-187
VLAN Type    Name        Status   Ports/Channel groups
---- ------- ----------- ------   -----------------------------------
1    Static  DefaultVlan  Active Eth1/1  Eth1/2  Eth1/3  Eth1/4  Eth1/5
                                  Eth1/6  Eth1/7  Eth1/8  Eth1/9  Eth1/10
                                  Eth1/11 Eth1/12 Eth1/13 Eth1/14 Eth1/15
                                  Eth1/16 Eth1/17 Eth1/18 Eth1/19 Eth1/20
                                  Eth1/21 Eth1/22 Eth1/23 Eth1/24
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Creating VLANs

Use the VLAN Static List to create or remove VLAN groups. To propagate information about VLAN groups used on this switch to external network devices, you must specify a VLAN ID for each of these groups.

Command Attributes

- **Current** – Lists all the current VLAN groups created for this system. Up to 255 VLAN groups can be defined. VLAN 1 is the default untagged VLAN.
- **New** – Allows you to specify the name and numeric identifier for a new VLAN group. (The VLAN name is only used for management on this system; it is not added to the VLAN tag.)
- **VLAN ID** – ID of configured VLAN (1-4094, no leading zeroes).
- **VLAN Name** – Name of the VLAN (1 to 32 characters).
- **Status** (Web) – Enables or disables the specified VLAN.
  - **Enable**: VLAN is operational.
  - **Disable**: VLAN is suspended; i.e., does not pass packets.
- **State** (CLI) – Enables or disables the specified VLAN.
  - **Active**: VLAN is operational.
  - **Suspend**: VLAN is suspended; i.e., does not pass packets.
- **Add** – Adds a new VLAN group to the current list.
- **Remove** – Removes a VLAN group from the current list. If any port is assigned to this group as untagged, it will be reassigned to VLAN group 1 as untagged.

Web – Click VLAN, 802.1Q VLAN, Static List. To create a new VLAN, enter the VLAN ID and VLAN name, mark the Enable checkbox to activate the VLAN, and then click Add.

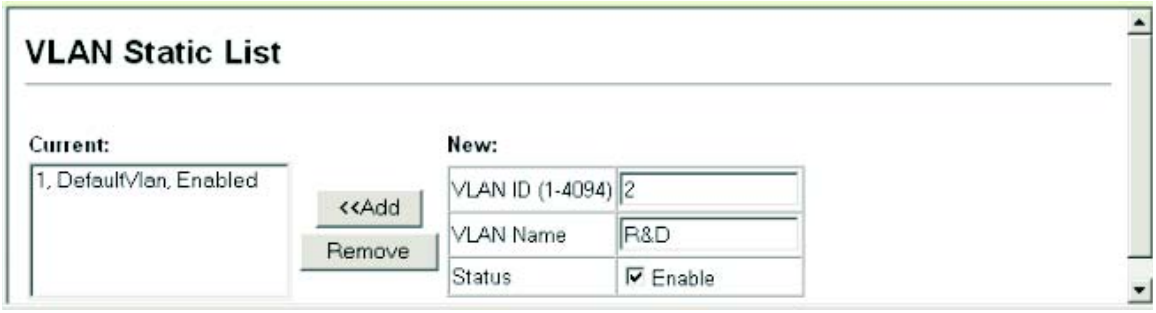

Figure 3-75. VLAN Static List

Downloaded from www.Manualslib.com manuals search engine

CLI – This example creates a new VLAN.

```
Console(config)#vlan database                                          4-180
Console(config-vlan)#vlan 2 name R&D media ethernet state active       4-180
Console(config-vlan)#end
Console#show vlan                                                      4-187
VLAN Type    Name             Status    Ports/Channel groups
---- ------- ---------------- --------- ---------------------------------
   1  Static      DefaultVlan    Active Eth1/ 1 Eth1/ 2 Eth1/ 3 Eth1/ 4 Eth1/ 5
                                        Eth1/ 6 Eth1/ 7 Eth1/ 8 Eth1/ 9 Eth1/10
                                        Eth1/11 Eth1/12 Eth1/13 Eth1/14 Eth1/15
                                        Eth1/16 Eth1/17 Eth1/18 Eth1/19 Eth1/20
                                        Eth1/21 Eth1/22 Eth1/23 Eth1/24
   2  Static              R&D    Active
Console(config-vlan)#
```

Adding Static Members to VLANs (VLAN Index)

Use the VLAN Static Table to configure port members for the selected VLAN index. Assign ports as tagged if they are connected to 802.1Q VLAN compliant devices, or untagged they are not connected to any VLAN-aware devices. Or configure a port as forbidden to prevent the switch from automatically adding it to a VLAN via the GVRP protocol.

Notes: **1.** You can also use the VLAN Static Membership by Port page to configure VLAN groups based on the port index (page 3-132). However, note that this configuration page can only add ports to a VLAN as tagged members.

2. VLAN 1 is the default untagged VLAN containing all ports on the switch, and can only be modified by first reassigning the default port VLAN ID as described under “Configuring VLAN Behavior for Interfaces” on page 3-133.

Command Attributes

- **VLAN** – ID of configured VLAN (1-4094, no leading zeroes).
- **Name** – Name of the VLAN (1 to 32 characters).
- **Status** – Enables or disables the specified VLAN.
  - **Enable**: VLAN is operational.
  - **Disable**: VLAN is suspended; i.e., does not pass packets.
- **Port** – Port identifier.
- **Trunk** – Trunk identifier.

Downloaded from www.Manualslib.com manuals search engine

- **Membership Type** – Select VLAN membership for each interface by marking the appropriate radio button for a port or trunk:
  - **Tagged**: Interface is a member of the VLAN. All packets transmitted by the port will be tagged, that is, carry a tag and therefore carry VLAN or CoS information.
  - **Untagged**: Interface is a member of the VLAN. All packets transmitted by the port will be untagged, that is, not carry a tag and therefore not carry VLAN or CoS information. Note that an interface must be assigned to at least one group as an untagged port.
  - **Forbidden**: Interface is forbidden from automatically joining the VLAN via GVRP. For more information, see “Automatic VLAN Registration” on page 3-124.
  - **None**: Interface is not a member of the VLAN. Packets associated with this VLAN will not be transmitted by the interface.
- **Trunk Member** – Indicates if a port is a member of a trunk. To add a trunk to the selected VLAN, use the last table on the VLAN Static Table page.

Web – Click VLAN, 802.1Q VLAN, Static Table. Select a VLAN ID from the scroll-down list. Modify the VLAN name and status if required. Select the membership type by marking the appropriate radio button in the list of ports or trunks. Click Apply.

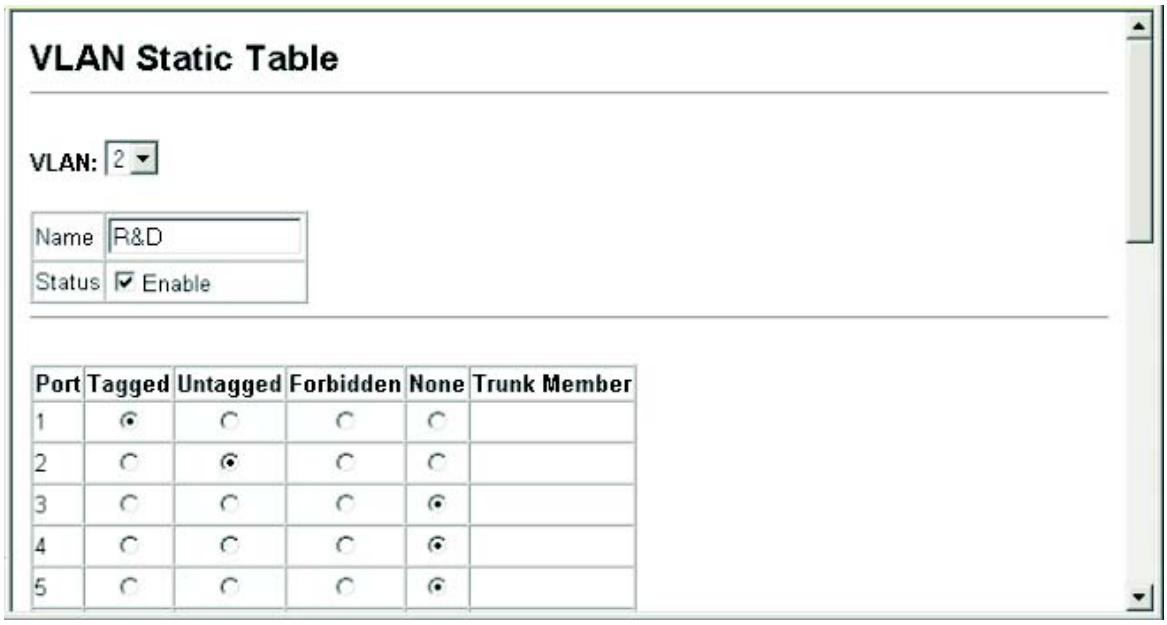

Figure 3-76. VLAN Static Table

CLI – The following example adds tagged and untagged ports to VLAN 2.

```
Console(config)#interface ethernet 1/1                              4-130
Console(config-if)#switchport allowed vlan add 2 tagged             4-185
Console(config-if)#exit
Console(config)#interface ethernet 1/2
Console(config-if)#switchport allowed vlan add 2 untagged
Console(config-if)#exit
Console(config)#interface ethernet 1/13
Console(config-if)#switchport allowed vlan add 2 tagged
```


Downloaded from www.Manualslib.com manuals search engine

Adding Static Members to VLANs (Port Index)

Use the VLAN Static Membership by Port menu to assign VLAN groups to the selected interface as a tagged member.

Command Attributes

- **Interface** – Port or trunk identifier.
- **Member** – VLANs for which the selected interface is a tagged member.
- **Non-Member** – VLANs for which the selected interface is not a tagged member.

Web – Open VLAN, 802.1Q VLAN, Static Membership. Select an interface from the scroll-down box (Port or Trunk). Click Query to display membership information for the interface. Select a VLAN ID, and then click Add to add the interface as a tagged member, or click Remove to remove the interface. After configuring VLAN membership for each interface, click Apply.

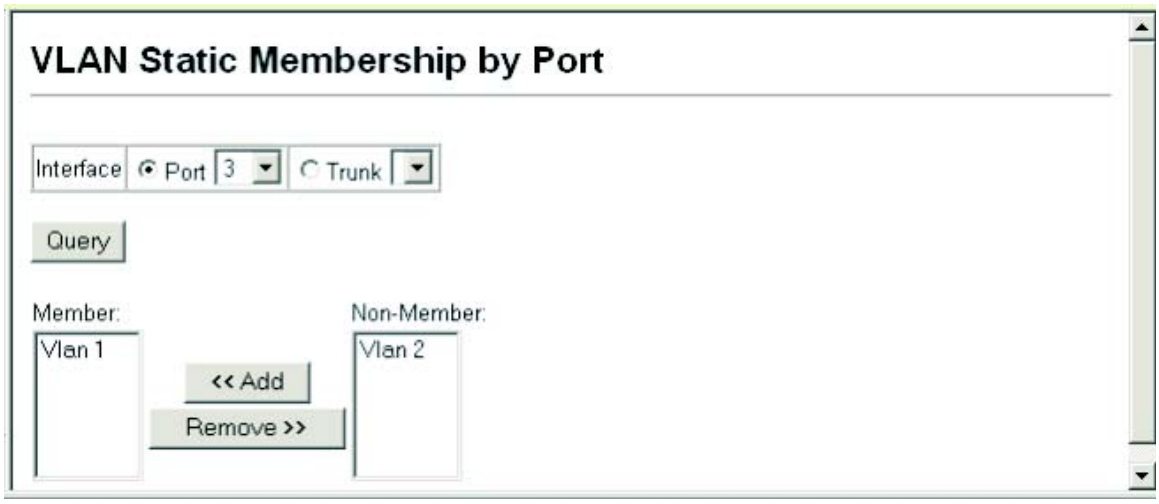

Figure 3-77. VLAN Static Membership by Port

CLI – This example adds Port 3 to VLAN 1 as a tagged port, and removes Port 3 from VLAN 2.

```
Console(config)#interface ethernet 1/3                          4-128
Console(config-if)#switchport allowed vlan add 1 tagged         4-185
Console(config-if)#switchport allowed vlan remove 2
```


Downloaded from www.Manualslib.com manuals search engine

Configuring VLAN Behavior for Interfaces

You can configure VLAN behavior for specific interfaces, including the default VLAN identifier (PVID), accepted frame types, ingress filtering, GVRP status, and GARP timers.

Command Usage

- **GVRP** – GARP VLAN Registration Protocol defines a way for switches to exchange VLAN information in order to automatically register VLAN members on interfaces across the network.
- **GARP** – Group Address Registration Protocol is used by GVRP to register or deregister client attributes for client services within a bridged LAN. The default values for the GARP timers are independent of the media access method or data rate. These values should not be changed unless you are experiencing difficulties with GVRP registration/deregistration.

Command Attributes

- **PVID** – VLAN ID assigned to untagged frames received on the interface. (Default: 1)
  - If an interface is not a member of VLAN 1 and you assign its PVID to this VLAN, the interface will automatically be added to VLAN 1 as an untagged member. For all other VLANs, an interface must first be configured as an untagged member before you can assign its PVID to that group.
- **Acceptable Frame Type** – Sets the interface to accept all frame types, including tagged or untagged frames, or only tagged frames. When set to receive all frame types, any received frames that are untagged are assigned to the default VLAN. (Option: All, Tagged; Default: All)
- **Ingress Filtering** – Determines how to process frames tagged for VLANs for which the ingress port is not a member. (Default: Disabled)
  - Ingress filtering only affects tagged frames.
  - If ingress filtering is disabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be flooded to all other ports (except for those VLANs explicitly forbidden on this port).
  - If ingress filtering is enabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be discarded.
  - Ingress filtering does not affect VLAN independent BPDU frames, such as GVRP or STP. However, they do affect VLAN dependent BPDU frames, such as GMRP.
- **GVRP Status** – Enables/disables GVRP for the interface. GVRP must be globally enabled for the switch before this setting can take effect. (See “Displaying Bridge Extension Capabilities” on page 3-11.) When disabled, any GVRP packets received on this port will be discarded and no GVRP registrations will be propagated from other ports. (Default: Disabled)
- **GARP Join Timer*** – The interval between transmitting requests/queries to participate in a VLAN group. (Range: 20-1000 centiseconds; Default: 20)

Downloaded from www.Manualslib.com manuals search engine

- **GARP Leave Timer*** – The interval a port waits before leaving a VLAN group. This time should be set to more than twice the join time. This ensures that after a Leave or LeaveAll message has been issued, the applicants can rejoin before the port actually leaves the group. (Range: 60-3000 centiseconds; Default: 60)
- **GARP LeaveAll Timer*** – The interval between sending out a LeaveAll query message for VLAN group participants and the port leaving the group. This interval should be considerably larger than the Leave Time to minimize the amount of traffic generated by nodes rejoining the group.
  (Range: 500-18000 centiseconds; Default: 1000)
- **Mode** – Indicates VLAN membership mode for an interface. (Default: 1Q Trunk)
  - **1Q Trunk** – Specifies a port as an end-point for a VLAN trunk. A trunk is a direct link between two switches, so the port transmits tagged frames that identify the source VLAN.
  - **Hybrid** – Specifies a hybrid VLAN interface. The port may transmit tagged or untagged frames.
- **Trunk Member** – Indicates if a port is a member of a trunk. To add a trunk to the selected VLAN, use the last table on the VLAN Static Table page.

* Timer settings must follow this rule: 2 x (join timer) < leave timer < leaveAll timer

Web – Click VLAN, 802.1Q VLAN, Port Configuration or VLAN Trunk Configuration. Fill in the required settings for each interface, click Apply.

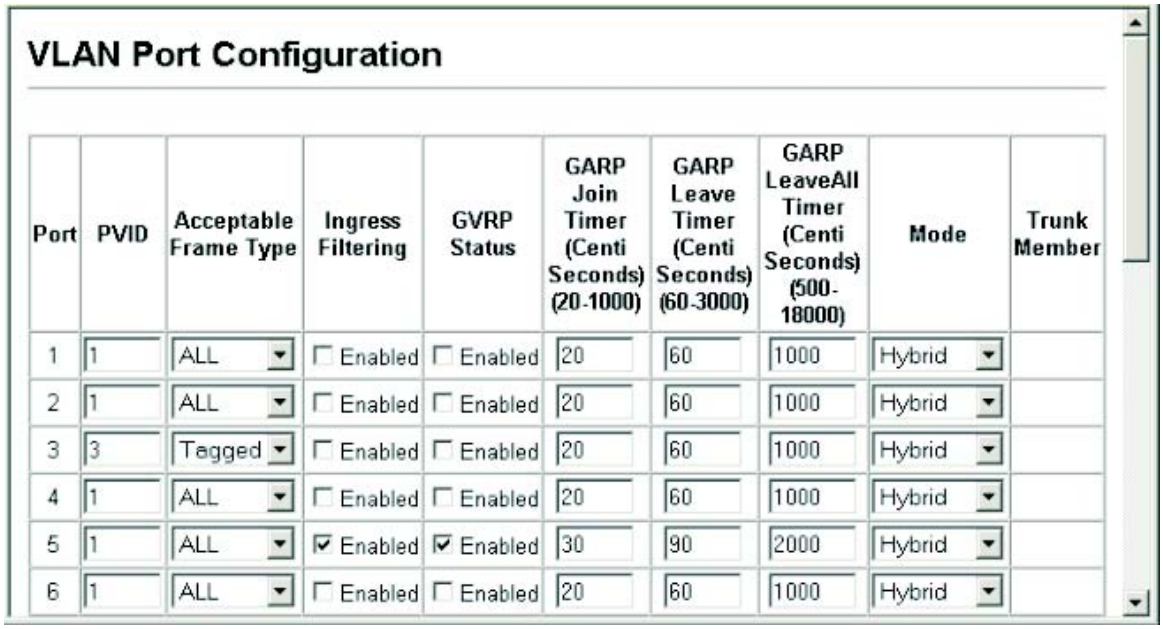
VLAN Port Configuration
Port
PVID
Acceptable Frame Type
Ingress Filtering
GVRP Status
GARP Join Timer (Centi Seconds) (20-1000)
GARP Leave Timer (Centi Seconds) (60-3000)
GARP LeaveAll Timer (Centi Seconds) (500-18000)
Mode
Trunk Member
1 1 ALL Enabled Enabled 20 60 1000 Hybrid
2 1 ALL Enabled Enabled 20 60 1000 Hybrid
3 3 Tagged Enabled Enabled 20 60 1000 Hybrid
4 1 ALL Enabled Enabled 20 60 1000 Hybrid
5 1 ALL Enabled Enabled 30 90 2000 Hybrid
6 1 ALL Enabled Enabled 20 60 1000 Hybrid

Figure 3-78. VLAN Port Configuration

Downloaded from www.Manualslib.com manuals search engine

CLI – This example sets port 3 to accept only tagged frames, assigns PVID 3 as the native VLAN ID, enables GVRP, sets the GARP timers, and then sets the switchport mode to hybrid.

```
Console(config)#interface ethernet 1/3                                  4-130
Console(config-if)#switchport acceptable-frame-types tagged             4-183
Console(config-if)#switchport ingress-filtering                         4-183
Console(config-if)#switchport native vlan 3                             4-184
Console(config-if)#switchport gvrp                                      4-194
Console(config-if)#garp timer join 20                                   4-195
Console(config-if)#garp timer leave 90
Console(config-if)#garp timer leaveall 2000
Console(config-if)#switchport mode hybrid                               4-182
Console(config-if)#
```

Configuring Private VLANs

Private VLANs provide port-based security and isolation between ports within the assigned VLAN. Data traffic on downlink ports can only be forwarded to, and from, uplink ports. (Note that private VLANs and normal VLANs can exist simultaneously within the same switch.)

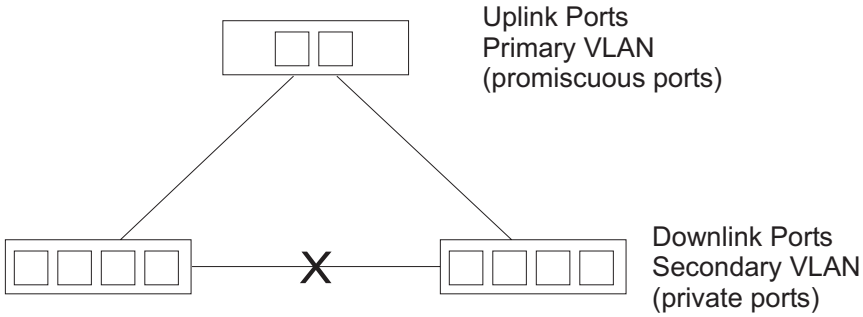

Figure 3-79. Configuring PVLANs

Enabling Private VLANs

Use the Private VLAN Status page to enable/disable the Private VLAN function.

Web – Click VLAN, Private VLAN, Status. Select Enable or Disable from the scroll-down box, and click Apply.

Figure 3-80. PVLAN Status

CLI – This example enables private VLANs.

```
Console(config)#pvlan                                                   4-191
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring Uplink and Downlink Ports

Use the Private VLAN Link Status page to set ports as downlink or uplink ports. Ports designated as downlink ports can not communicate with any other ports on the switch except for the uplink ports. Uplink ports can communicate with any other ports on the switch and with any designated downlink ports.

Web – Click VLAN, Private VLAN, Link Status. Mark the ports that will serve as uplinks and downlinks for the private VLAN, then click Apply.

Figure 3-81. PVLAN Link Status

CLI – This configures ports 3 and 4 as uplinks and ports 5 and 6 as downlinks.

```
Console(config)#pvlan uplink 1/3-4 downlink 1/5-6                    4-191
Console(config)#
```

Configuring Protocol-Based VLANs

The network devices required to support multiple protocols cannot be easily grouped into a common VLAN. This may require non-standard devices to pass traffic between different VLANs in order to encompass all the devices participating in a specific protocol. This kind of configuration deprives users of the basic benefits of VLANs, including security and easy accessibility.

To avoid these problems, you can configure this switch with protocol-based VLANs that divide the physical network into logical VLAN groups for each required protocol. When a frame is received at a port, its VLAN membership can then be determined based on the protocol type being used by the inbound packets.

Command Usage

To configure protocol-based VLANs, follow these steps:

1. First configure VLAN groups for the protocols you want to use (page 3-129). Although not mandatory, we suggest configuring a separate VLAN for each major protocol running on your network. Do not add port members at this time.
2. Create a protocol group for each of the protocols you want to assign to a VLAN using the Protocol VLAN Configuration page.
3. Then map the protocol for each interface to the appropriate VLAN using the Protocol VLAN Port Configuration page.

Downloaded from www.Manualslib.com manuals search engine

Configuring Protocol Groups

Create a protocol group for one or more protocols.

Command Attributes

- **Protocol Group ID** – Group identifier of this protocol group. (Range: 1-2147483647)
- **Frame Type** – Frame type used by this protocol. (Options: Ethernet, RFC_1042, LLC_other)
- **Protocol Type** – The only option for the LLC_other frame type is IPX_raw. The options for all other frames types include: IP, ARP, RARP.

Web – Click VLAN, Protocol VLAN, Configuration. Enter a protocol group ID, frame type and protocol type, then click Apply.

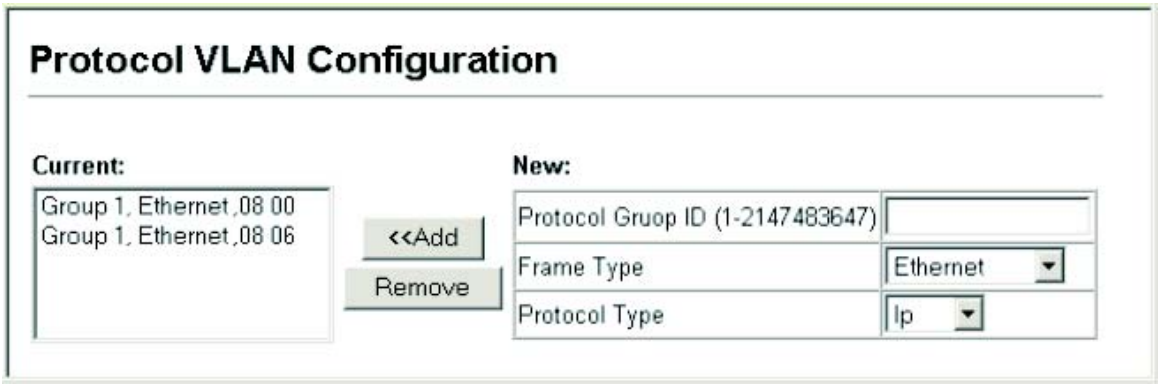

Figure 3-82. Protocol VLAN Configuration

CLI – The following creates protocol group 1, and then specifies Ethernet frames with IP and ARP protocol types.

```
Console(config)#protocol-vlan protocol-group 1
  add frame-type ethernet protocol-type ip                    4-188
Console(config)#protocol-vlan protocol-group 1
  add frame-type ethernet protocol-type arp
Console(config)#
```

Mapping Protocols to VLANs

Map a protocol group to a VLAN for each interface that will participate in the group.

Command Usage

- When creating a protocol-based VLAN, only assign interfaces using this configuration screen. If you assign interfaces using any of the other VLAN commands such as VLAN Static Table (page 3-130) or VLAN Static Membership (page 3-132), these interfaces will admit traffic of any protocol type into the associated VLAN.

Downloaded from www.Manualslib.com manuals search engine

- When a frame enters a port that has been assigned to a protocol VLAN, it is processed in the following manner:
  - If the frame is tagged, it will be processed according to the standard rules applied to tagged frames.
  - If the frame is untagged and the protocol type matches, the frame is forwarded to the appropriate VLAN.
  - If the frame is untagged but the protocol type does not match, the frame is forwarded to the default VLAN for this interface.

Command Attributes

- **Interface** – Port or trunk identifier.
- **Protocol Group ID** – Group identifier of this protocol group. (Range: 1-2147483647)
- **VLAN ID** – VLAN to which matching protocol traffic is forwarded. (Range: 1-4094)

Web – Click VLAN, Protocol VLAN, Port Configuration. Select a a port or trunk, enter a protocol group ID, the corresponding VLAN ID, and click Apply.

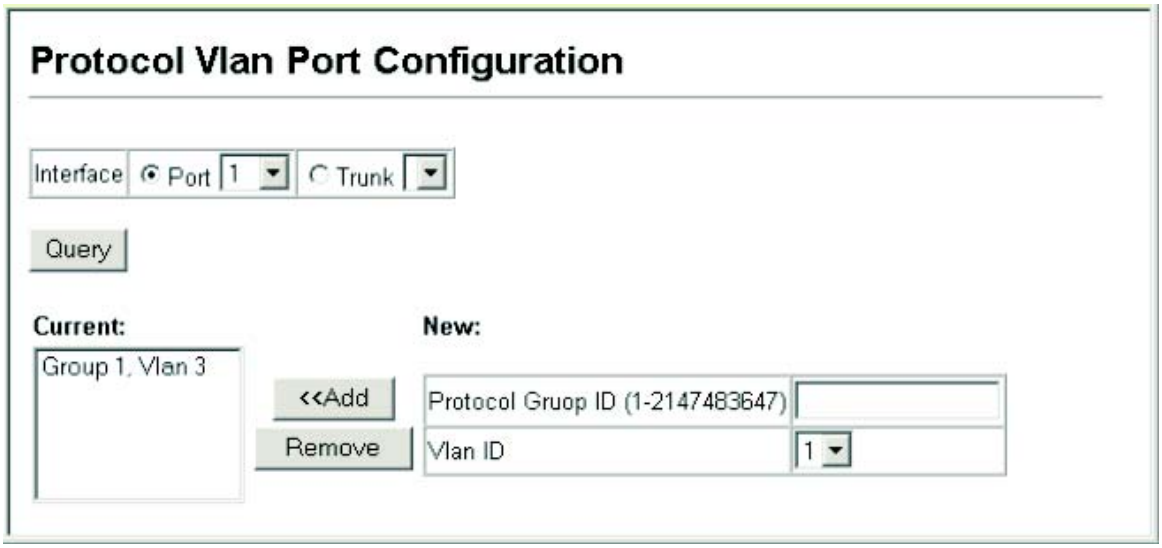

Figure 3-83. Protocol VLAN Port Configuration

CLI – The following maps the traffic entering Port 1 which matches the protocol type specified in protocol group 1 to VLAN 3.

```
Console(config)#interface ethernet 1/1
Console(config-if)#protocol-vlan protocol-group 1 vlan 3            4-189
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Class of Service Configuration

Class of Service (CoS) allows you to specify which data packets have greater precedence when traffic is buffered in the switch due to congestion. This switch supports CoS with eight priority queues for each port. Data packets in a port's high-priority queue will be transmitted before those in the lower-priority queues. You can set the default priority for each interface, and configure the mapping of frame priority tags to the switch's priority queues.

Queue weights are reviewed on a continual looped basis from the maximum priority to the lowest priority. The frequency of servicing of the priority queues depends on the number of packets held in each queue. If there is a large volume of traffic in a high priority queue this will cause a slow down in the frequency of servicing until such time as that traffic has been sent.

Setting the Default Priority for Interfaces

You can specify the default port priority for each interface on the switch. All untagged packets entering the switch are tagged with the specified default port priority, and then sorted into the appropriate priority queue at the output port.

Command Usage

- This switch provides four priority queues for each port. It uses Weighted Round Robin to prevent head-of-queue blockage.
- The default priority applies for an untagged frame received on a port set to accept all frame types (i.e, receives both untagged and tagged frames). This priority does not apply to IEEE 802.1Q VLAN tagged frames. If the incoming frame is an IEEE 802.1Q VLAN tagged frame, the IEEE 802.1p User Priority bits will be used.
- If the output port is an untagged member of the associated VLAN, these frames are stripped of all VLAN tags prior to transmission.

Command Attributes

- **Default Priority*** – The priority that is assigned to untagged frames received on the specified interface. (Range: 0 - 7, Default: 0)
- **Number of Egress Traffic Classes** – The number of queue buffers provided for each port.

* CLI displays this information as "Priority for untagged traffic."

Downloaded from www.Manualslib.com manuals search engine

Web – Click Priority, Default Port Priority or Default Trunk Priority. Modify the default priority for any interface, then click Apply.

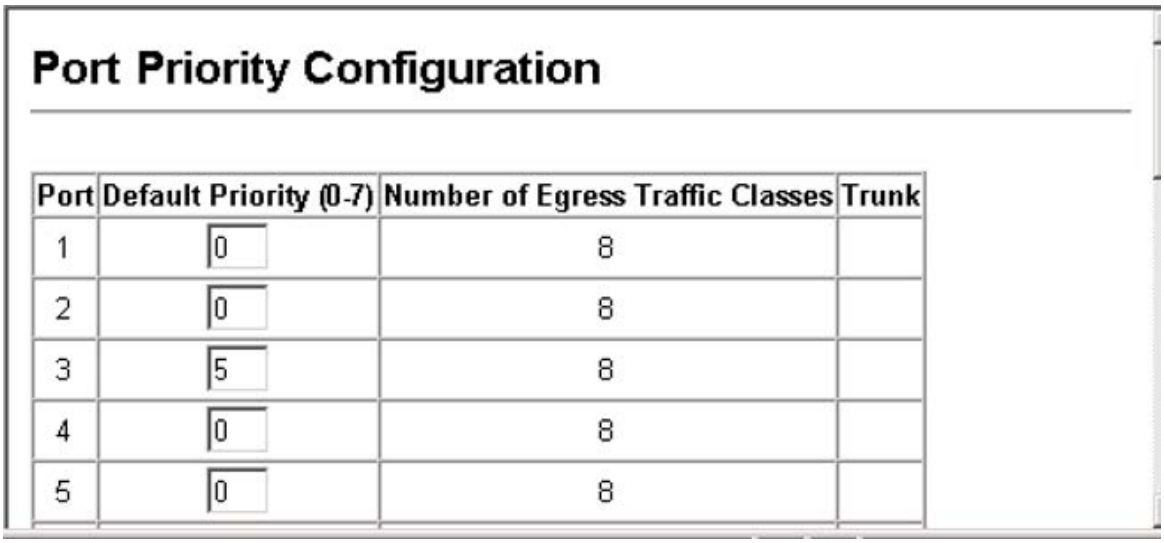

Port Priority Configuration

Port	Default Priority (0-7)	Number of Egress Traffic Classes	Trunk
1	0	8	
2	0	8	
3	5	8	
4	0	8	
5	0	8	

Figure 3-84. Port Priority Configuration

CLI – This example assigns a default priority of 5 to port 3.

```
Console(config)#interface ethernet 1/3                          4-130
Console(config-if)#switchport priority default 5                4-197
Console(config-if)#end
Console#show interfaces switchport ethernet 1/5                 4-140
Information of Eth 1/5
 Broadcast threshold: Enabled, 500 packets/second
 Lacp status: Disabled
 Ingress rate limit: disable,1000M bits per second
 Egress rate limit: disable,1000M bits per second
 VLAN membership mode: Hybrid
 Ingress rule: Disabled
 Acceptable frame type: All frames
 Native VLAN: 1
 Priority for untagged traffic: 5
 Gvrp status: Disabled
 Allowed Vlan:    1(u),
 Forbidden Vlan:
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Mapping CoS Values to Egress Queues

This switch processes Class of Service (CoS) priority tagged traffic by using eight priority queues for each port, with service schedules based on strict or Weighted Round Robin (WRR). Up to eight separate traffic priorities are defined in IEEE 802.1p. The default priority levels are assigned according to recommendations in the IEEE 802.1p standard as shown in the following table.

Table 3-85. Mapping CoS Values to Egress Queues

Queue	0	1	2	3	4	5	6	7
Priority	2	0	1	3	4	5	6	7

The priority levels recommended in the IEEE 802.1p standard for various network applications are shown in the following table. However, you can map the priority levels to the switch's output queues in any way that benefits application traffic for your own network.

Table 3-86. Priority Levels

Priority Level	**Traffic Type**
1	Background
2	(Spare)
0 (default)	Best Effort
3	Excellent Effort
4	Controlled Load
5	Video, less than 100 milliseconds latency and jitter
6	Voice, less than 10 milliseconds latency and jitter
7	Network Control

Command Attributes

- **Priority** – CoS value. (Range: 0-7, where 7 is the highest priority)
- **Traffic Class*** – Output queue buffer. (Range: 0-7, where 7 is the highest CoS priority queue)

* CLI shows Queue ID.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Priority, Traffic Classes. Mark an interface and click Select to display the current mapping of CoS values to output queues. Assign priorities to the traffic classes (i.e., output queues) for the selected interface, then click Apply.

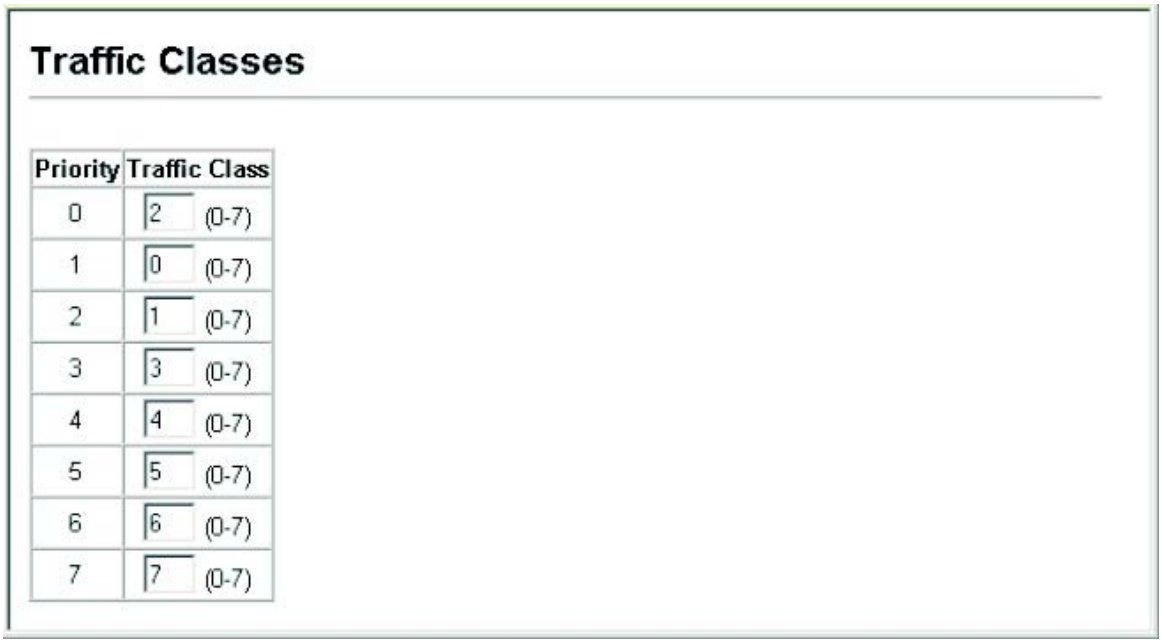

Figure 3-87. Traffic Classes

CLI – The following example shows how to change the CoS assignments to a one-to-one mapping.

```
Console(config)#interface ethernet 1/1                          4-130
Console(config)#queue cos-map 0 0                               4-200
Console(config)#queue cos-map 1 1
Console(config)#queue cos-map 2 2
Console(config)#end
Console#show queue cos-map ethernet 1/1                         4-202
Information of Eth 1/1
 Traffic Class : 0 1 2 3 4 5 6 7
 Priority Queue: 0 1 2 3 4 5 6 7
```

* Mapping specific values for CoS priorities is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

Downloaded from www.Manualslib.com manuals search engine

Selecting the Queue Mode

You can set the switch to service the queues based on a strict rule that requires all traffic in a higher priority queue to be processed before lower priority queues are serviced, or use Weighted Round-Robin (WRR) queuing that specifies a relative weight of each queue. WRR uses a predefined relative weight for each queue that determines the percentage of service time the switch services each queue before moving on to the next queue. This prevents the head-of-line blocking that can occur with strict priority queuing.

Command Attributes

- **WRR** - Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights 1, 2, 4, 6, 8, 10, 12, 14 for queues 0 through 7 respectively. (This is the default selection.)
- **Strict** - Services the egress queues in sequential order, transmitting all traffic in the higher priority queues before servicing lower priority queues.

Web – Click Priority, Queue Mode. Select Strict or WRR, then click Apply.

Figure 3-88. Selecting the Queue Mode

CLI – The following sets the queue mode to strict priority service mode.

```
Console(config)#queue mode strict                                    4-201
Console(config)#exit
Console#show queue mode                                              4-201

Queue mode: strict
Console#
```

Setting the Service Weight for Traffic Classes

This switch uses the Weighted Round Robin (WRR) algorithm to determine the frequency at which it services each priority queue. As described in “Mapping CoS Values to Egress Queues” on page 3-141, the traffic classes are mapped to one of the eight egress queues provided for each port. You can assign a weight to each of these queues (and thereby to the corresponding traffic priorities). This weight sets the frequency at which each queue will be polled for service, and subsequently affects the response time for software applications assigned a specific priority value.

Command Attributes

- **WRR Setting Table*** – Displays a list of weights for each traffic class (i.e., queue).
- **Weight Value** – Set a new weight for the selected traffic class. (Range: 1-15)

* CLI shows Queue ID.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Priority, Queue Scheduling. Select the interface, highlight a traffic class (i.e., output queue), enter a weight, then click Apply.

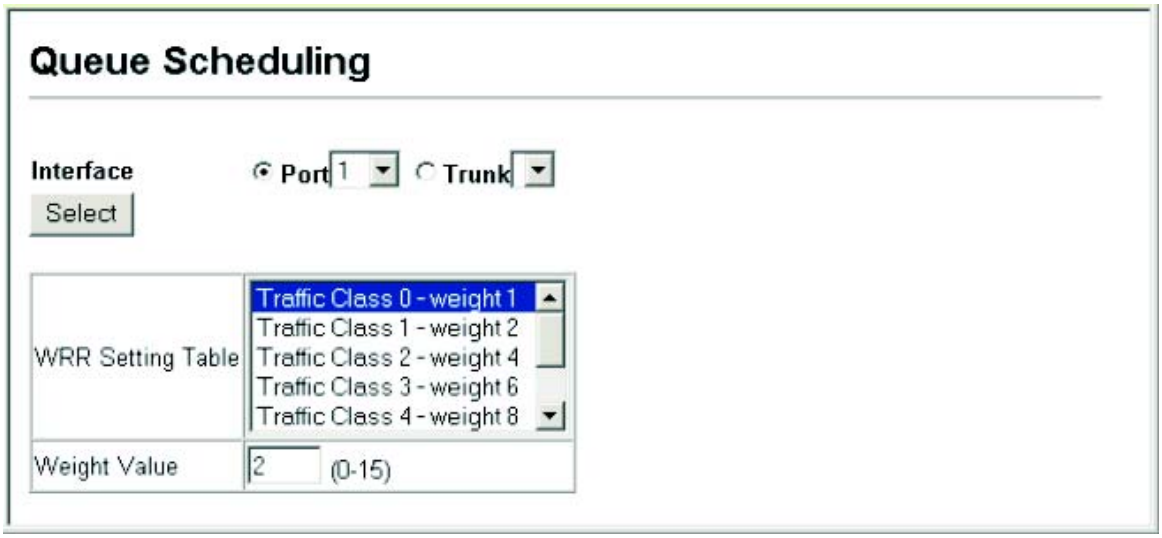

Figure 3-89. Queue Scheduling

CLI – The following example shows how to assign WRR weights to each of the priority queues.

```
Console(config)#interface ethernet 1/1
Console(config-if)#queue bandwidth 1 3 5 7 9 11 13 15                4-199
Console(config)#exit
Console#show queue bandwidth                                         4-201
Information of Eth 1/1
 Queue ID  Weight
 --------  ------
    0        1
    1        3
    2        5
    3        7
    4        9
    5        11
    6        13
    7        15
Information of Eth 1/2
 Queue ID  Weight
⋮
```


Downloaded from www.Manualslib.com manuals search engine

Mapping Layer 3/4 Priorities to CoS Values

This switch supports several common methods of prioritizing layer 3/4 traffic to meet application requirements. Traffic priorities can be specified in the IP header of a frame, using the priority bits in the Type of Service (ToS) octet or the number of the TCP port. If priority bits are used, the ToS octet may contain three bits for IP Precedence or six bits for Differentiated Services Code Point (DSCP) service. When these services are enabled, the priorities are mapped to a Class of Service value by the switch, and the traffic then sent to the corresponding output queue.

Because different priority information may be contained in the traffic, this switch maps priority values to the output queues in the following manner:

- The precedence for priority mapping is IP Port Priority, IP Precedence or DSCP Priority, and then Default Port Priority.
- IP Precedence and DSCP Priority cannot both be enabled. Enabling one of these priority types will automatically disable the other.

Selecting IP Precedence/DSCP Priority

The switch allows you to choose between using IP Precedence or DSCP priority. Select one of the methods or disable this feature.

Command Attributes

- **Disabled** – Disables both priority services. (This is the default setting.)
- **IP Precedence** – Maps layer 3/4 priorities using IP Precedence.
- **IP DSCP** – Maps layer 3/4 priorities using Differentiated Services Code Point Mapping.

Web – Click Priority, IP Precedence/DSCP Priority Status. Select Disabled, IP Precedence or IP DSCP from the scroll-down menu.

Figure 3-90. IP Precedence/DSCP Priority Status

CLI – The following example enables IP Precedence service on the switch.

```
Console(config)#map ip precedence                                    4-204
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

Mapping IP Precedence

The Type of Service (ToS) octet in the IPv4 header includes three precedence bits defining eight different priority levels ranging from highest priority for network control packets to lowest priority for routine traffic. The default IP Precedence values are mapped one-to-one to Class of Service values (i.e., Precedence value 0 maps to CoS value 0, and so forth). Bits 6 and 7 are used for network control, and the other bits for various application types. ToS bits are defined in the following table.

Table 3-91. Mapping IP Precedence

Priority Level	Traffic Type	Priority Level	Traffic Type
7	Network Control	3	Flash
6	Internetwork Control	2	Immediate
5	Critical	1	Priority
4	Flash Override	0	Routine

Command Attributes

- **IP Precedence Priority Table** – Shows the IP Precedence to CoS map.
- **Class of Service Value** – Maps a CoS value to the selected IP Precedence value. Note that "0" represents low priority and "7" represent high priority.

Web – Click Priority, IP Precedence Priority. Select an entry from the IP Precedence Priority Table, enter a value in the Class of Service Value field, and then click Apply.

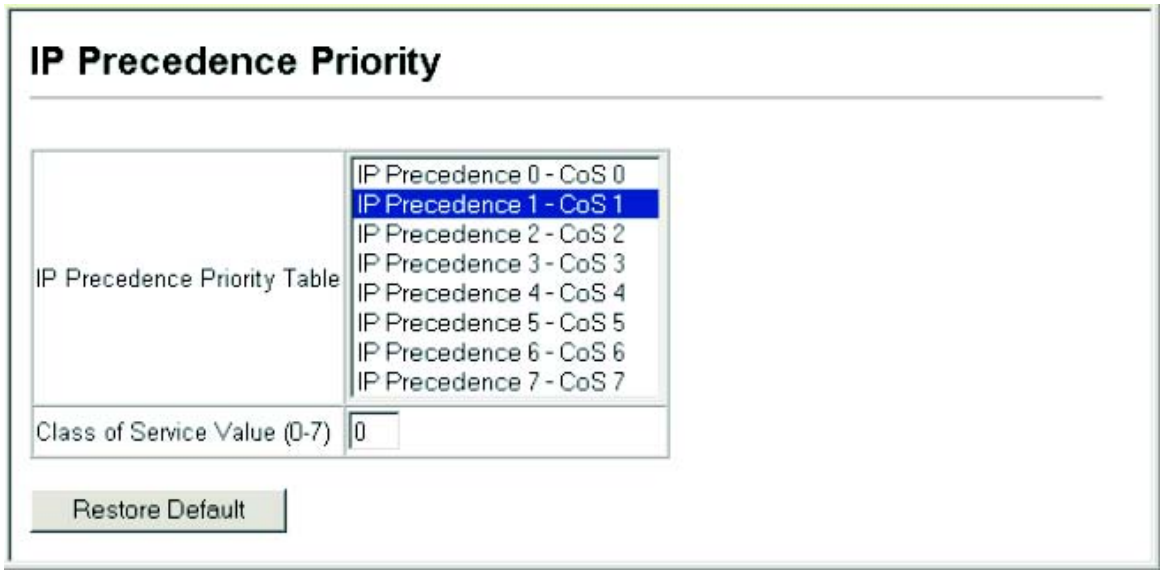
IP Precedence Priority
IP Precedence Priority Table
IP Precedence 0 - CoS 0
IP Precedence 1 - CoS 1
IP Precedence 2 - CoS 2
IP Precedence 3 - CoS 3
IP Precedence 4 - CoS 4
IP Precedence 5 - CoS 5
IP Precedence 6 - CoS 6
IP Precedence 7 - CoS 7
Class of Service Value (0-7)
0
Restore Default

Figure 3-92. Assigning CoS Values to IP Precedence

Downloaded from www.Manualslib.com manuals search engine

CLI – The following example globally enables IP Precedence service on the switch, maps IP Precedence value 1 to CoS value 0 (on port 1), and then displays the IP Precedence settings.

```
Console(config)#map ip precedence                                    4-204
Console(config)#interface ethernet 1/1                               4-130
Console(config-if)#map ip precedence 1 cos 0                         4-204
Console(config-if)#end
Console#show map ip precedence ethernet 1/1                          4-208
Precedence mapping status: disabled

 Port      Precedence COS
 --------- ---------- ---
  Eth 1/ 1          0   0
  Eth 1/ 1          1   0
  Eth 1/ 1          2   2
  Eth 1/ 1          3   3
  Eth 1/ 1          4   4
  Eth 1/ 1          5   5
  Eth 1/ 1          6   6
  Eth 1/ 1          7   7
Console#
```

* Mapping specific values for IP Precedence is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

Mapping DSCP Priority

The DSCP is six bits wide, allowing coding for up to 64 different forwarding behaviors. The DSCP replaces the ToS bits, but it retains backward compatibility with the three precedence bits so that non-DSCP compliant, ToS-enabled devices, will not conflict with the DSCP mapping. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding. The DSCP default values are defined in the following table. Note that all the DSCP values that are not specified are mapped to CoS value 0.

Table 3-93. Mapping DSCP Priority

IP DSCP Value	CoS Value
0	0
8	1
10, 12, 14, 16	2
18, 20, 22, 24	3
26, 28, 30, 32, 34, 36	4
38, 40, 42	5
48	6
46, 56	7

Command Attributes

- **DSCP Priority Table –** Shows the DSCP Priority to CoS map.
- **Class of Service Value –** Maps a CoS value to the selected DSCP Priority value. Note that “0” represents low priority and “7” represent high priority.

Downloaded from www.Manualslib.com manuals search engine

Note: IP DSCP settings apply to all interfaces.

Web – Click Priority, IP DSCP Priority. Select an entry from the DSCP table, enter a value in the Class of Service Value field, then click Apply.

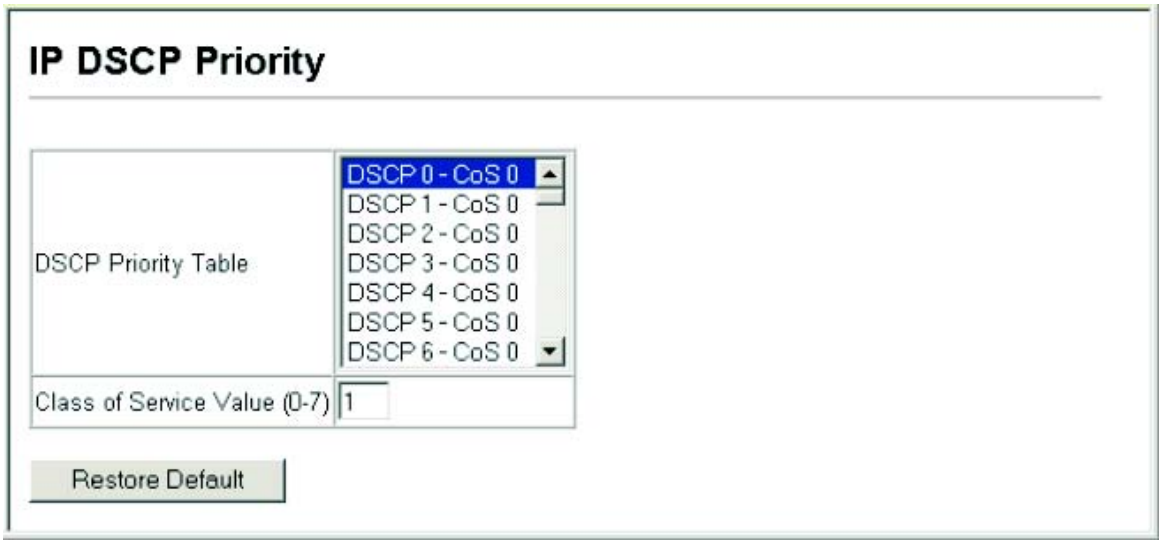
IP DSCP Priority
DSCP Priority Table
DSCP 0 - CoS 0
DSCP 1 - CoS 0
DSCP 2 - CoS 0
DSCP 3 - CoS 0
DSCP 4 - CoS 0
DSCP 5 - CoS 0
DSCP 6 - CoS 0
Class of Service Value (0-7)
1
Restore Default

Figure 3-94. Mapping IP DSCP Priority

CLI – The following example globally enables DSCP Priority service on the switch, maps DSCP value 0 to CoS value 1 (on port 1), and then displays the DSCP Priority settings.

```
Console(config)#map ip dscp                                          4-205
Console(config)#interface ethernet 1/1                               4-130
Console(config-if)#map ip dscp 1 cos 0                               4-206
Console(config-if)#end
Console#show map ip dscp ethernet 1/1                                4-209
DSCP mapping status: disabled

 Port      DSCP COS
 --------- ---- ---
  Eth 1/ 1    0   0
  Eth 1/ 1    1   0
  Eth 1/ 1    2   0
  Eth 1/ 1    3   0
⋮
  Eth 1/ 1   61   0
  Eth 1/ 1   62   0
  Eth 1/ 1   63   0
Console#
```

* Mapping specific values for IP DSCP is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

Downloaded from www.Manualslib.com manuals search engine

Mapping IP Port Priority

You can also map network applications to Class of Service values based on the IP port number (i.e., TCP/UDP port number) in the frame header. Some of the more common TCP service ports include: HTTP: 80, FTP: 21, Telnet: 23 and POP3: 110.

Command Attributes

- **IP Port Priority Status** – Enables or disables the IP port priority.
- **Interface** – Selects the port or trunk interface to which the settings apply.
- **IP Port Priority Table** – Shows the IP port to CoS map.
- **IP Port Number (TCP/UDP)** – Set a new IP port number.
- **Class of Service Value** – Sets a CoS value for a new IP port. Note that "0" represents low priority and "7" represent high priority.

Note: IP Port Priority settings apply to all interfaces.

Web – Click Priority, IP Port Status. Set IP Port Priority Status to Enabled.

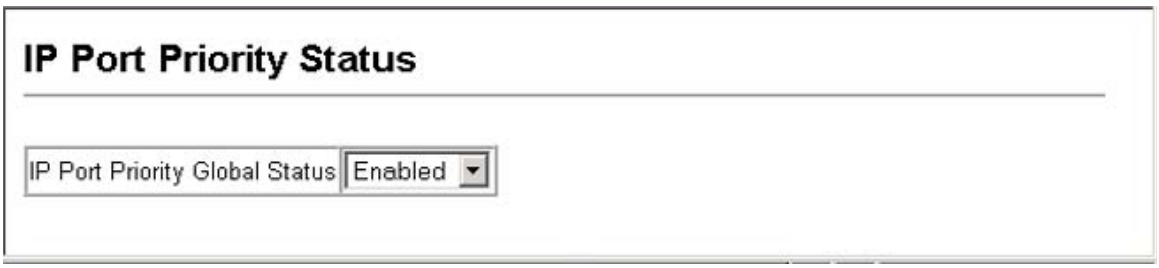

Figure 3-13. Globally Enabling the IP Port Priority Status

Web – Click Priority, IP Port Priority. Select a port or trunk from the Interface field. Enter the port number for a network application in the IP Port Number box and the new CoS value in the Class of Service box, and then click Add IP Port.

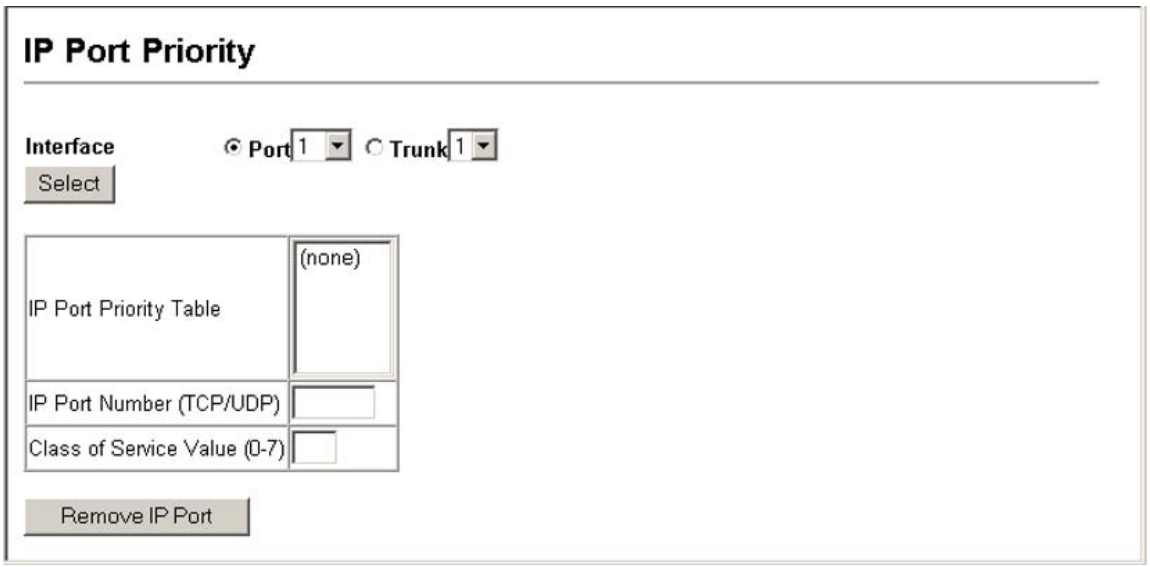

Figure 3-14. Mapping Switch Ports and Trunks to IP TCP/UDP Priority

* Mapping specific values for IP Precedence is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

Downloaded from www.Manualslib.com manuals search engine

CLI – The following example globally enables IP Port Priority service on the switch, maps HTTP traffic on port 5 to CoS value 0, and then displays all the IP Port Priority settings for that port.

```
Console(config)#map ip port
Console(config)#interface ethernet 1/5
Console(config-if)#map ip port 80 cos 0
Console(config-if)#end
Console#show map ip port ethernet 1/5
TCP port mapping status: disabled

 Port      Port no. COS
 --------- -------- ---
  Eth 1/ 5       80   0
Console#
```

* Mapping specific values for IP Port Priority is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

Mapping CoS Values to ACLs

Use the ACL CoS Mapping page to set the output queue for packets matching an ACL rule as shown in the following table. Note that the specified CoS value is only used to map the matching packet to an output queue; it is not written to the packet itself. For information on mapping the CoS values to output queues, see page 3-141.

Table 3-95. Mapping CoS Values to ACLs

Priority	0	1	2	3	4	5	6	7
Queue	1	2	0	3	4	5	6	7

Command Usage

You must configure an ACL mask before you can map CoS values to the rule.

Command Attributes

- **Port** – Port identifier.
- **Name*** – Name of ACL.
- **Type** – Type of ACL (IP or MAC).
- **CoS Priority** – CoS value used for packets matching an IP ACL rule. (Range: 0-7)

* For information on configuring ACLs, see page 3-61.

Downloaded from www.Manualslib.com manuals search engine

Web – Click Priority, ACL CoS Priority. Enable mapping for any port, select an ACL from the scroll-down list, then click Apply.

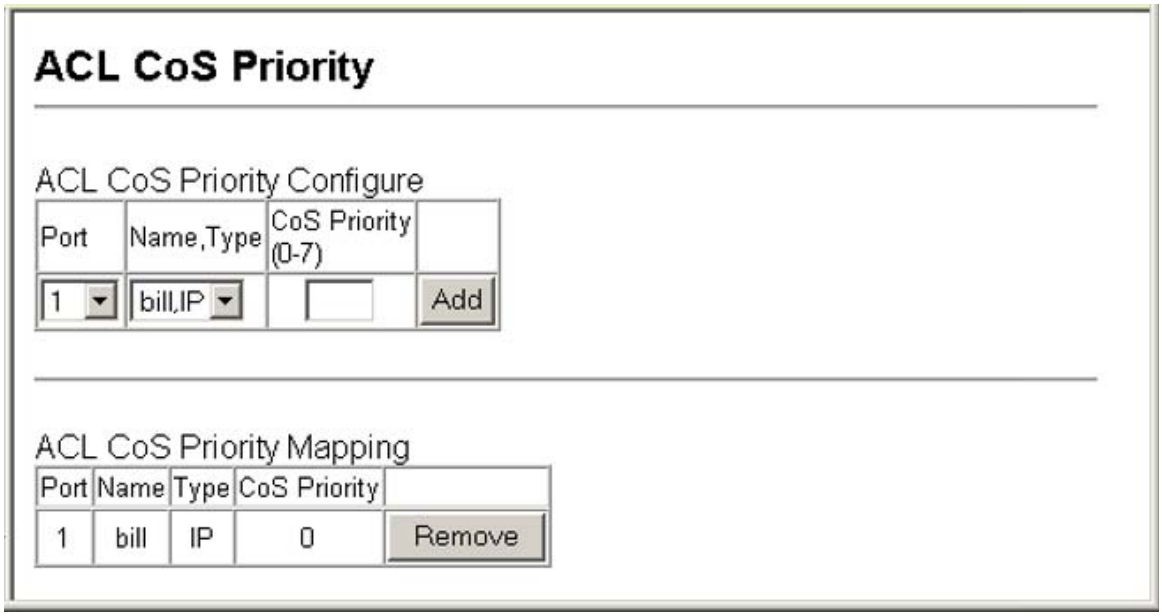

Figure 3-96. ACL CoS Priority

CLI – This example assigns a CoS value of zero to packets matching rules within the specified ACL on port 24.

```
Console(config)#interface ethernet 1/24                          4-130
Console(config-if)#map access-list ip bill cos 0                 4-95
Console(config-if)#
```

Changing Priorities Based on ACL Rules

You can change traffic priorities for frames matching the defined ACL rule. (This feature is commonly referred to as ACL packet marking.) This switch can change the IEEE 802.1p priority, IP Precedence, or DSCP[2]; or change the IEEE 802.1p priority of Layer 2 frames. (This feature is commonly referred to as ACL packet marking.) Use the no form to remove the ACL marker.

Command Usage

- You must configure an ACL mask before you can change priorities based on a rule.
- Traffic priorities may be included in the IEEE 802.1p priority tag. This tag is also incorporated as part of the overall IEEE 802.1Q VLAN tag. The 802.1p priority may be set for either Layer 2 or IP frames.
- The IP frame header also includes priority bits in the Type of Service (ToS) octet. The Type of Service octet may contain three bits for IP Precedence or six bits for Differentiated Services Code Point (DSCP)[2] service. Note that the IP frame header can include either the IP Precedence or DSCP[2] priority type.
- The precedence for priority mapping by this switch is IP Precedence or DSCP Priority, and then 802.1p priority.

Downloaded from www.Manualslib.com manuals search engine

Command Attributes

- **Port** – Port identifier.
- **Name**[1] – Name of ACL.
- **Type** – Type of ACL (IP or MAC).
- **Precedence** – IP Precedence value. (Range: 0-7)
- **DSCP** – Differentiated Services Code Point value. (Range: 0-63)
- **802.1p Priority** – Class of Service value in the IEEE 802.1p priority tag. (Range: 0-7; 7 is the highest priority)

1 For information on configuring ACLs, see page 3-61.

Web – Click Priority, ACL Marker. Select a port and an ACL rule. To specify a ToS priority, mark the Precedence/DSCP* check box, select Precedence or DSCP* from the scroll-down box, and enter a priority. To specify an 802.1p priority, mark the 802.1p Priority check box, and enter a priority. Then click Add.

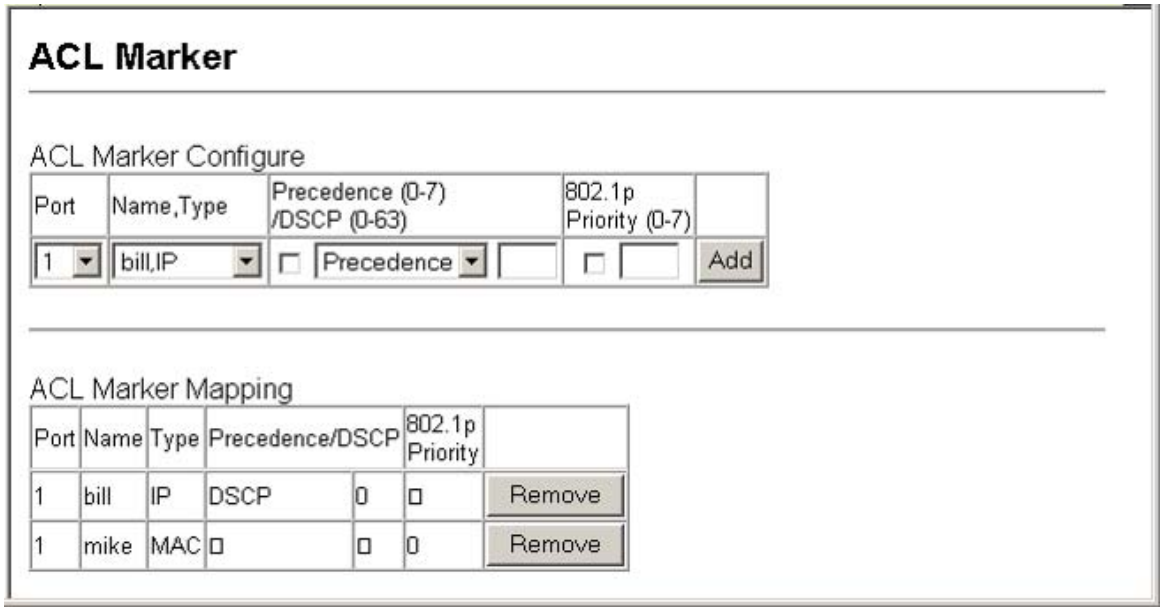

Figure 3-97. ACL Marker

CLI – This example changes the DSCP priority for packets matching an IP ACL rule, and the 802.1p priority for packets matching a MAC ACL rule.

```
Console(config)#interface ethernet 1/1                              4-130
Console(config-if)#match access-list ip bill set dscp 0             4-96
Console(config-if)#match access-list mac mike set priority 0        4-106
Console(config-if)#end
Console#show marking                                                 4-97
Interface ethernet 1/1
 match access-list IP bill set DSCP 0
 match access-list MAC a set priority 0
```


Downloaded from www.Manualslib.com manuals search engine

Quality of Service

The commands described in this section are used to configure Quality of Service (QoS) classification criteria and service policies. Differentiated Services (DiffServ) provides policy-based management mechanisms used for prioritizing network resources to meet the requirements of specific traffic types on a per hop basis. Each packet is classified upon entry into the network based on access lists, IP Precedence or DSCP values, or VLAN lists. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding.

All switches or routers that access the Internet rely on class information to provide the same forwarding treatment to packets in the same class. Class information can be assigned by end hosts, or switches or routers along the path. Priority can be assigned based on a general policy, or a detailed examination of the packet. Detailed examination of the packet needs to take place closer to the network edge so that core switches and routers are not overloaded.

Switches and routers along the path can use class information to prioritize the resources allocated to different traffic classes. The manner in which an individual device handles traffic in the DiffServ architecture is called per-hop behavior. All devices along a path should be configured in a consistent manner to construct an end-to-end QoS solution.

Notes:
1. When creating Class Maps and Policy Maps do not use the character ‘&’ in either name.
2. Currently you may only configure one rule per Class Map.
3. The ingress rate for a Policy Map must be set before setting the egress rate.
4. You must create a Class Map before creating a Policy Map.

Configuring Quality of Service Parameters

To create a service policy for a specific category or ingress traffic, follow these steps:

1. Use the Class Map to designate a class name for a specific category of traffic.
2. Edit the rules for each class to specify a type of traffic based on an access list, a list of DSCP or IP Precedence values, or a list of VLANs.
3. Use the Policy Map to assign a policy name for a specific manner in which ingress traffic will be handled.
4. Assign policy rules to each class by "setting" the QoS value for the matching traffic class. The policy rule can also be configured to monitor the average flow and burst rate, and drop any traffic that exceeds the specified rate, or just reduce the DSCP service level for traffic exceeding the specified rate.
5. Use the Service Policy to assign a policy map to a specific interface.

Downloaded from www.Manualslib.com manuals search engine

Use the Policy Map page to specify a policy map. Then use the Class Map page to configure a policy map. And finally, use the **set** and **police** commands to specify the match criteria, where the:

- **set -** classifies the service that an IP packet will receive.
- **police** - defines the maximum throughput, burst rate, drop rate, and the action that results from a policy violation.

Configuring a Class Map

A class map is used for matching packets to a specified class.

Command Attributes

- **Modify Name and Description** — Configures the name and a brief description of a class map. (Range: 1-32 characters for the name; 1-256 characters for the description)
- **Edit Rules** — Opens the Match Class Settings page. Enter the criteria used to classify traffic on this page.

Class Table

- **Class Name** — Name of the class map. (Range: 1-32 characters)
- **Match Any** — Only one match command is permitted per class map, so the match-any field refers to the criteria specified by the lone match command.
- **Specified Criteria** — Displays the currently specified match criteria for this class map.
- **Remove** — Deletes the selected criteria.

Criteria

- **ACL List** — Name of an access control list. Any type of ACL can be specified, including standard or extended IP ACLs and MAC ACLs. (Range: 1-16 characters)
- **IP DSCP** — List of DSCP values. Up to 8 values can be specified, each separated by a space. (Range: 0-63)
- **IP Precedence** — List of IP Precedence values. Up to 8 values can be specified, each separated by a space. (Range: 0-7)
- **VLAN** — List of VLANs. Up to 30 VLANs can be specified, each separated by a space. A range of VLANs can be entered using a hyphen. (Range:1-4094)
- **Add Class** — Select this to create a class map used for matching packets to the specified class, and enter the Class Configuration page.
- **Remove Class** — Deletes a specified class.

Command Usage

- Currently you may only configure one rule per Class Map.
- When creating Class Maps do not use the character ‘&’ in the name.

Downloaded from www.Manualslib.com manuals search engine

Web – Click QoS, DiffServ, then click Add Class to create a new class, or Edit Rules to change the rules of an existing class.

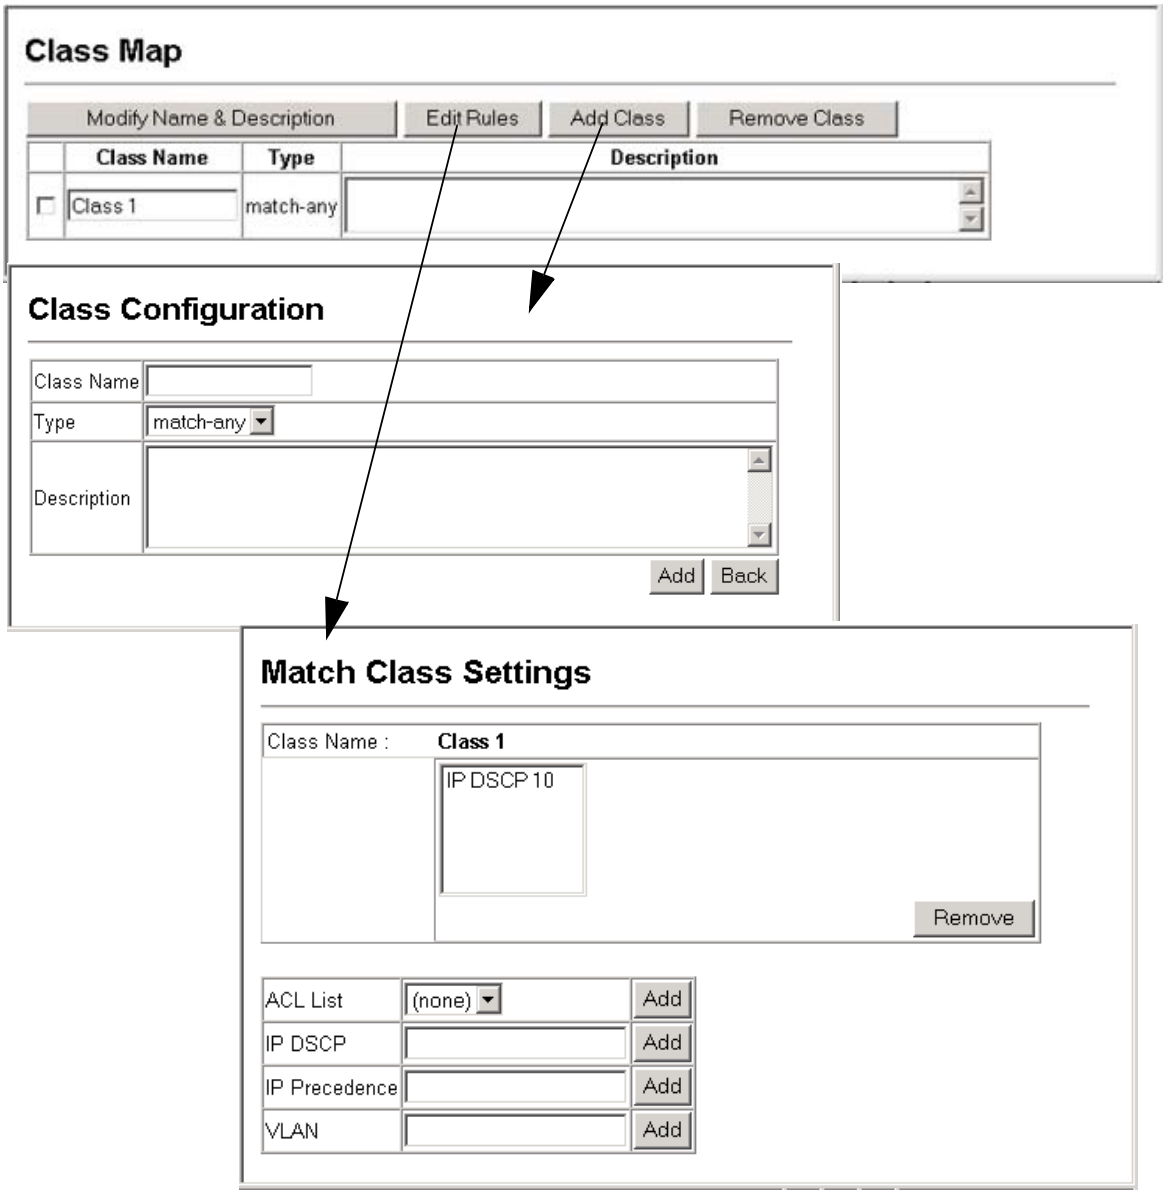

Figure 3-98. Configuring Class Maps

CLI - This example creates a class map call “rd-class,” and sets it to match packets marked for DSCP service value 3.

```
Console(config)#class-map rd_class match-any                    4-214
Console(config-cmap)#match ip dscp 3                            4-212
Console(config-cmap)#
```


Downloaded from www.Manualslib.com manuals search engine

Creating QoS Policies

This function creates a policy map that can be attached to multiple interfaces.

Create a policy map, specify the name of the policy map, and then use the class parameters to configure policies for traffic that matches criteria defined in a class map.

A policy map can contain multiple class statements that can be applied to the same interface with the Service Policy Settings Page. Or you can create a separate policy map for each type of traffic that may enter a port.

You can configure up to 8 policers on Fast Ethernet ingress ports, and up to 128 policers on Gigabit Ethernet ingress ports.

Policing is based on a token bucket, where bucket depth (i.e., the maximum burst before the bucket overflows) is by specified the *burst-byte* field, and the average rate tokens are removed from the bucket is by specified by the *rate-bps* option.

Use the Policy Map page to specify the name of the policy map, and use the Policy Table to configure policies for traffic that match criteria defined in a class map.

A policy map can contain multiple class statements that can be applied to the same interface with the Service Policy Settings page. Or you can create a separate policy map for each type of traffic that may enter a port.

Command Attributes

Policy Map

- **Modify Name and Description** — Configures the name and a brief description of a policy map. (Range: 1-32 characters for the name; 1-256 characters for the description)
- **Edit Classes** — Opens the Policy Rule Settings page. Enter the criteria used to classify traffic on this page.
- **Add Policy** — Select this to create a policy map used for matching packets to the specified class, and enter the Policy Configuration page.

Downloaded from www.Manualslib.com manuals search engine

Policy Table

- **Policy Name** — Name of policy map.
- **Class Name** — Name of class map.
- **Action** — Classification of IP traffic by CoS, DSCP, or IP Precedence.
- **Meter** — Defines the maximum throughput, burst rate, and the action that results from a policy violation.
  - **Rate (bps)** — Rate in kilobits per second.
  - **Burst (byte)** — Burst in bytes.
- **Exceed Action** — Specifies whether the traffic that exceeds the specified rate will be dropped or the DSCP service level will be reduced.
- **Remove Class** — Deletes a class.

Policy Options

- **Class Name** — Name of class map. (Range: 1-32 characters)
- **Action** — Classifies IP traffic by setting a CoS, DSCP, or IP Precedence in a packet. (Range - Class of Service (CoS) value: 0-7, Differentiated Service Code Point (DSCP) value: 0-63, IP Precedence value: 0-7)
- **Meter** — Check this to define the maximum throughput, burst rate, and the action that results from a policy violation.
  - **Rate (bps)** — Rate in kilobits per second. (Range: 1-100000 Kbps or maximum port speed, whichever is lower)
  - **Burst (byte)** — Burst in bytes. (Range: 64-1522)
- **Exceed** — Specifies whether the traffic that exceeds the specified rate will be dropped or the DSCP service level will be reduced.
  - **Set** — This defines an enforcer to decrease the DSCP handling priority. (See police command 4-215).
  - **Drop** — This drops traffic that exceeds the specified limit.
- **Add** — Adds the specified criteria to the policy map.
- **Remove Policy** — Deletes a specified policy.

Command Usage

- You must set the ingress rate before you may set the egress rate.
- When creating Policy Maps do not use the character '&' in the name.
- You must create a Class Map before creating a Policy Map.

Downloaded from www.Manualslib.com manuals search engine

Web – Click QoS, DiffServ, Policy Map to display the list of existing policy maps. To add a new policy map click Add Policy. To configure the policy rule settings click Edit Classes.

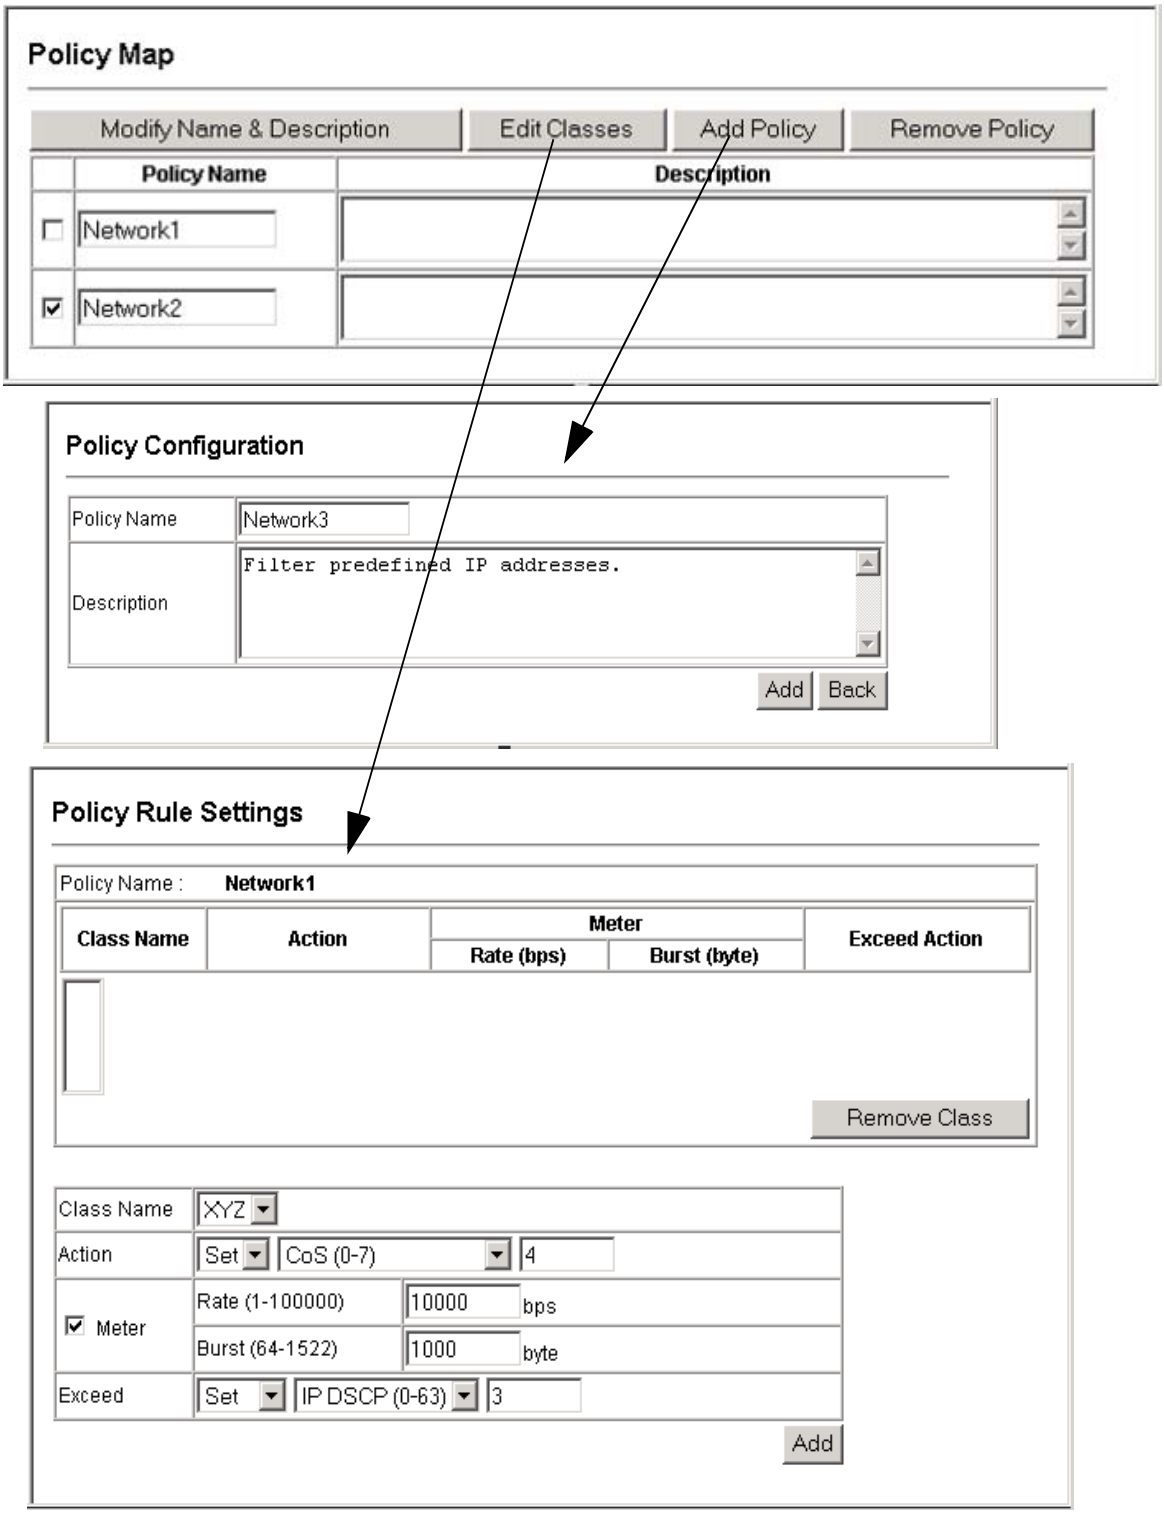

Figure 3-99. Configuring Policy Maps

Downloaded from www.Manualslib.com manuals search engine

CLI – This example creates a policy map called “rd-policy,” sets the average bandwidth the 1 Mbps, the burst rate to 1522 bps, and the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 100000 1522 exceed-action drop
Console(config-pmap-c)#
```

Attaching a Policy Map to Ingress and Egress Queues

This function applies a policy map defined in the Policy Map, Policy Rule Settings page to a particular interface.

You can only assign one policy map to an interface.

Command Attributes

- **Ports** — Specifies a port.
- **Ingress/Egress** — Applies the rule to ingress, and or egress traffic.
- **Enabled** — Check this to enable a policy map on a specified port.

Web – Click QoS, DiffServ, Service Policy Settings. Check Enabled to choose a Policy Map for a port.

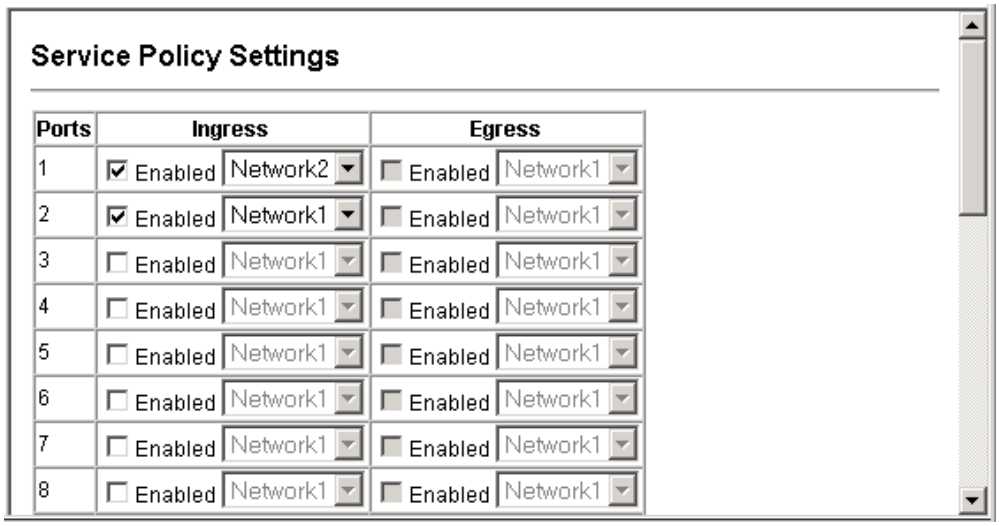

Figure 3-100. Service Policy Settings

CLI - This example applies a service policy to an ingress interface.

```
Console(config)#interface ethernet 1/1                          4-130
Console(config-if)#service-policy input rd_service              4-216
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Multicast Filtering

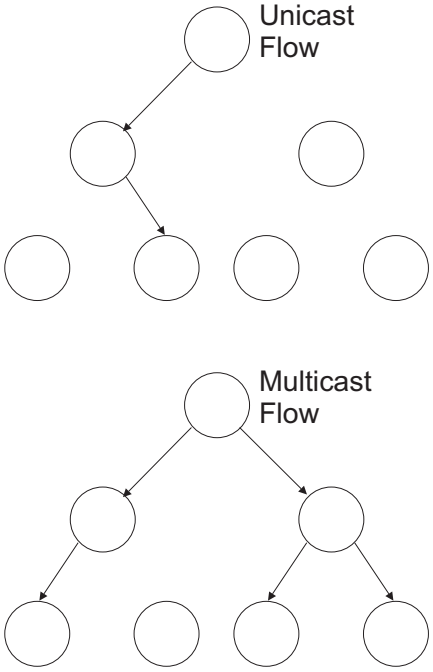

Multicasting is used to support real-time applications such as videoconferencing or streaming audio. A multicast server does not have to establish a separate connection with each client. It merely broadcasts its service to the network, and any hosts that want to receive the multicast register with their local multicast switch/router. Although this approach reduces the network overhead required by a multicast server, the broadcast traffic must be carefully pruned at every multicast switch/router it passes through to ensure that traffic is only passed on to the hosts which subscribed to this service.

This switch uses IGMP (Internet Group Management Protocol) to query for any attached hosts that want to receive a specific multicast service. It identifies the ports containing hosts requesting to join the service and sends data out to those ports only. It then propagates the service request up to any neighboring multicast switch/router to ensure that it will continue to receive the multicast service. This procedure is called multicast filtering.

The purpose of IP multicast filtering is to optimize a switched network's performance, so multicast packets will only be forwarded to those ports containing multicast group hosts or multicast routers/switches, instead of flooding traffic to all ports in the subnet (VLAN).

Layer 2 IGMP (Snooping and Query)

IGMP Snooping and Query – If multicast routing is not supported on other switches in your network, you can use IGMP Snooping and Query (page 3-161) to monitor IGMP service requests passing between multicast clients and servers, and dynamically configure the switch ports which need to forward multicast traffic.

Static IGMP Router Interface – If IGMP snooping cannot locate the IGMP querier, you can manually designate a known IGMP querier (i.e., a multicast router/switch) connected over the network to an interface on your switch (page 3-163). This interface will then join all the current multicast groups supported by the attached router/switch to ensure that multicast traffic is passed to all appropriate interfaces within the switch.

Static IGMP Host Interface – For multicast applications that you need to control more carefully, you can manually assign a multicast service to specific interfaces on the switch (page 3-165).

Downloaded from www.Manualslib.com manuals search engine

Configuring IGMP Snooping and Query Parameters

You can configure the switch to forward multicast traffic intelligently. Based on the IGMP query and report messages, the switch forwards traffic only to the ports that request multicast traffic. This prevents the switch from broadcasting the traffic to all ports and possibly disrupting network performance.

Command Usage

- **IGMP Snooping** – This switch can passively snoop on IGMP Query and Report packets transferred between IP multicast routers/switches and IP multicast host groups to identify the IP multicast group members. It simply monitors the IGMP packets passing through it, picks out the group registration information, and configures the multicast filters accordingly.
- **IGMP Querier** – A router, or multicast-enabled switch, can periodically ask their hosts if they want to receive multicast traffic. If there is more than one router/switch on the LAN performing IP multicasting, one of these devices is elected "querier" and assumes the role of querying the LAN for group members. It then propagates the service requests on to any upstream multicast switch/router to ensure that it will continue to receive the multicast service.

Note: Multicast routers use this information, along with a multicast routing protocol such as DVMRP or PIM, to support IP multicasting across the Internet.

Command Attributes

- **IGMP Status** — When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic. This is also referred to as IGMP Snooping. (Default: Enabled)
- **Act as IGMP Querier** — When enabled, the switch can serve as the Querier, which is responsible for asking hosts if they want to receive multicast traffic. (Default: Enabled)
- **IGMP Query Count** — Sets the maximum number of queries issued for which there has been no response before the switch takes action to drop a client from the multicast group. (Range: 2-10, Default: 2)
- **IGMP Query Interval** — Sets the frequency at which the switch sends IGMP host-query messages. (Range: 60-125 seconds, Default: 125)
- **IGMP Report Delay** — Sets the time between receiving an IGMP Report for an IP multicast address on a port before the switch sends an IGMP Query out of that port and removes the entry from its list. (Range: 5-30 seconds, Default: 10)
- **IGMP Query Timeout** — The time the switch waits after the previous querier stops before it considers the router port (i.e., the interface which had been receiving query packets) to have expired. (Range: 300-500 seconds, Default: 300)
- **IGMP Version** — Sets the protocol version for compatibility with other devices on the network. (Range: 1-2; Default: 2)

Notes: 1. All systems on the subnet must support the same version.
2. Some attributes are only enabled for IGMPv2, including IGMP Report Delay and IGMP Query Timeout.

Downloaded from www.Manualslib.com manuals search engine

Web – Click IGMP Snooping, IGMP Configuration. Adjust the IGMP settings as required, and then click Apply. (The default settings are shown below.)

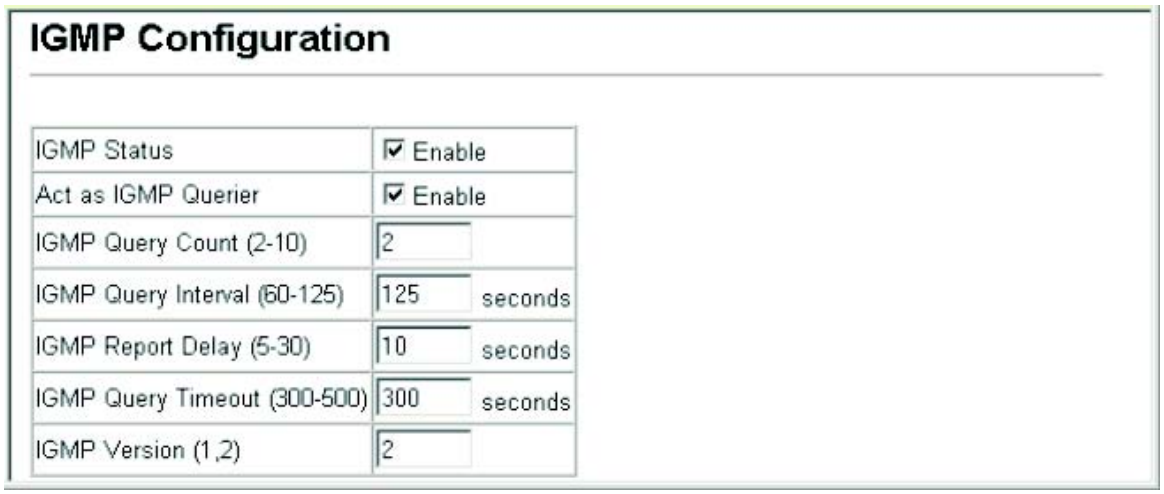

Figure 3-101. IGMP Configuration

CLI – This example modifies the settings for multicast filtering, and then displays the current status.

```
Console(config)#ip igmp snooping                                    4-218
Console(config)#ip igmp snooping querier                            4-222
Console(config)#ip igmp snooping query-count 10                     4-222
Console(config)#ip igmp snooping query-interval 100                 4-223
Console(config)#ip igmp snooping query-max-response-time 20         4-224
Console(config)#ip igmp snooping query-time-out 300                 4-224
Console(config)#ip igmp snooping version 2                          4-220
Console(config)#exit
Console#show ip igmp snooping                                       4-220
 Service status          : Enabled
 Querier status          : Enabled
 Query count             : 10
 Query interval          : 100 sec
 Query max response time : 20 sec
 Router port expire time: 300 sec
 IGMP snooping version   : Version 2
Console#
```

Displaying Interfaces Attached to a Multicast Router

Multicast routers that are attached to ports on the switch use information obtained from IGMP, along with a multicast routing protocol such as DVMRP or PIM, to support IP multicasting across the Internet. These routers may be dynamically discovered by the switch or statically assigned to an interface on the switch.

You can use the Multicast Router Port Information page to display the ports on this switch attached to a neighboring multicast router/switch for each VLAN ID.

Command Attributes

- **VLAN ID** – ID of configured VLAN (1-4094).
- **Multicast Router List** – Multicast routers dynamically discovered by this switch or those that are statically assigned to an interface on this switch.

Downloaded from www.Manualslib.com manuals search engine

Web – Click IGMP Snooping, Multicast Router Port Information. Select the required VLAN ID from the scroll-down list to display the associated multicast routers.

Figure 3-102. Multicast Router Port Information

CLI – This example shows that Port 11 has been statically configured as a port attached to a multicast router.

```
Console#show ip igmp snooping mrouter vlan 1                    4-226
 VLAN M'cast Router Port Type
 ---- ------------------ -------
    1           Eth 1/11 Static
```

Specifying Static Interfaces for a Multicast Router

Depending on your network connections, IGMP snooping may not always be able to locate the IGMP querier. Therefore, if the IGMP querier is a known multicast router/ switch connected over the network to an interface (port or trunk) on your switch, you can manually configure the interface (and a specified VLAN) to join all the current multicast groups supported by the attached router. This can ensure that multicast traffic is passed to all the appropriate interfaces within the switch.

Command Attributes

- **Interface** – Activates the Port or Trunk scroll down list.
- **VLAN ID** – Selects the VLAN to propagate all multicast traffic coming from the attached multicast router.
- **Port** or **Trunk** – Specifies the interface attached to a multicast router.

Downloaded from www.Manualslib.com manuals search engine

Web – Click IGMP Snooping, Static Multicast Router Port Configuration. Specify the interfaces attached to a multicast router, indicate the VLAN which will forward all the corresponding multicast traffic, and then click Add. After you have finished adding interfaces to the list, click Apply.

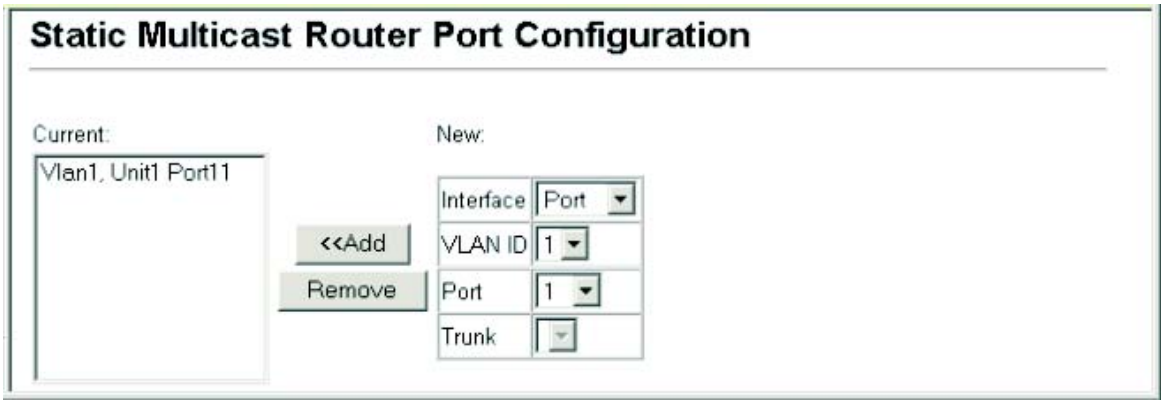

Figure 3-103. Static Multicast Router Port Configuration

CLI – This example configures port 11 as a multicast router port within VLAN 1.

```
Console(config)#ip igmp snooping vlan 1 mrouter ethernet 1/11        4-225
Console(config)#exit
Console#show ip igmp snooping mrouter vlan 1                         4-226
 VLAN M'cast Router Port Type
 ---- ----------------- -------
    1           Eth 1/11  Static
```

Displaying Port Members of Multicast Services

You can display the port members associated with a specified VLAN and multicast service.

Command Attribute

- **VLAN ID** – Selects the VLAN for which to display port members.
- **Multicast IP Address** – The IP address for a specific multicast service.
- **Multicast Group Port List** – Shows the interfaces that have already been assigned to the selected VLAN to propagate a specific multicast service.

Downloaded from www.Manualslib.com manuals search engine

Web – Click IGMP Snooping, IP Multicast Registration Table. Select a VLAN ID and the IP address for a multicast service from the scroll-down lists. The switch will display all the interfaces that are propagating this multicast service.

Figure 3-104. IP Multicast Registration Table

CLI – This example displays all the known multicast services supported on VLAN 1, along with the ports propagating the corresponding services. The Type field shows if this entry was learned dynamically or was statically configured.

```
Console#show bridge 1 multicast vlan 1                                    4-221
 VLAN M'cast IP addr. Member ports Type
 ---- --------------- ------------ -------
    1      224.1.1.12      Eth1/12    USER
    1       224.1.2.3      Eth1/12    IGMP
Console#
```

Assigning Ports to Multicast Services

Multicast filtering can be dynamically configured using IGMP Snooping and IGMP Query messages as described in “Configuring IGMP Snooping and Query Parameters” on page 3-161. For certain applications that require tighter control, you may need to statically configure a multicast service on the switch. First add all the ports attached to participating hosts to a common VLAN, and then assign the multicast service to that VLAN group.

Command Usage

- Static multicast addresses are never aged out.
- When a multicast address is assigned to an interface in a specific VLAN, the corresponding traffic can only be forwarded to ports within that VLAN.

Downloaded from www.Manualslib.com manuals search engine

Command Attribute

- **Interface** – Activates the Port or Trunk scroll down list.
- **VLAN ID** – Selects the VLAN to propagate all multicast traffic coming from the attached multicast router/switch.
- **Multicast IP** – The IP address for a specific multicast service
- **Port** or **Trunk** – Specifies the interface attached to a multicast router/switch.

Web – Click IGMP Snooping, IGMP Member Port Table. Specify the interface attached to a multicast service (via an IGMP-enabled switch or multicast router), indicate the VLAN that will propagate the multicast service, specify the multicast IP address, and click Add. After you have completed adding ports to the member list, click Apply.

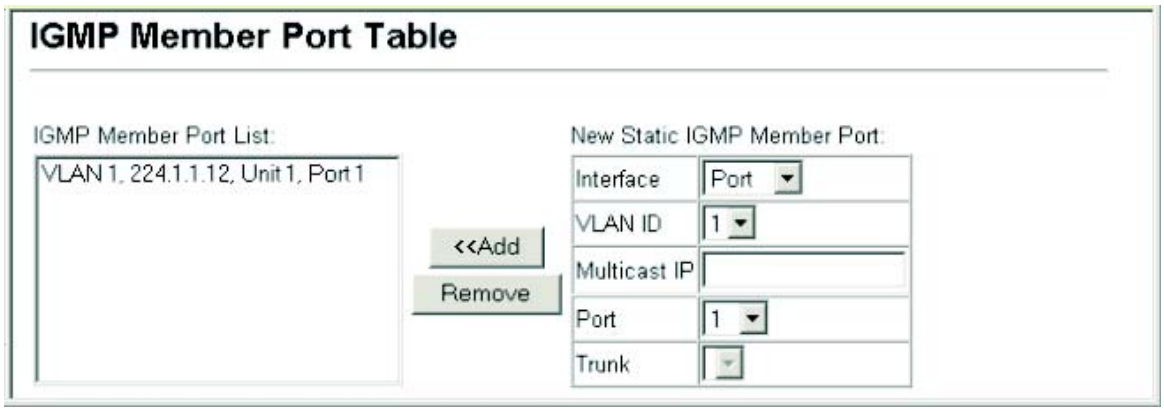

Figure 3-105. IGMP Member Port Table

CLI – This example assigns a multicast address to VLAN 1, and then displays all the known multicast services supported on VLAN 1.

```
Console(config)#ip igmp snooping vlan 1 static 224.1.1.12
  ethernet 1/12                                                    4-219
Console(config)#exit
Console#show mac-address-table multicast vlan 1                    4-221
 VLAN M'cast IP addr. Member ports Type
 ---- --------------- ------------ -------
    1      224.1.1.12      Eth1/12    USER
    1       224.1.2.3      Eth1/12    IGMP
Console#
```

Configuring Domain Name Service

The Domain Naming System (DNS) service on this switch allows host names to be mapped to IP addresses using static table entries or by redirection to other name servers on the network. When a client device designates this switch as a DNS server, the client will attempt to resolve host names into IP addresses by forwarding DNS queries to the switch, and waiting for a response.

You can manually configure entries in the DNS table used for mapping domain names to IP addresses, configure default domain names, or specify one or more name servers to use for domain name to address translation.

Downloaded from www.Manualslib.com manuals search engine

Configuring General DNS Server Parameters

Command Usage

- To enable DNS service on this switch, first configure one or more name servers, and then enable domain lookup status.
- To append domain names to incomplete host names received from a DNS client (i.e., not formatted with dotted notation), you can specify a default domain name or a list of domain names to be tried in sequential order.
- If there is no domain list, the default domain name is used. If there is a domain list, the default domain name is not used.
- When an incomplete host name is received by the DNS server on this switch and a domain name list has been specified, the switch will work through the domain list, appending each domain name in the list to the host name, and checking with the specified name servers for a match.
- When more than one name server is specified, the servers are queried in the specified sequence until a response is received, or the end of the list is reached with no response.
- Note that if all name servers are deleted, DNS will automatically be disabled.

Command Attributes

- **Domain Lookup Status** – Enables DNS host name-to-address translation.
- **Default Domain Name*** – Defines the default domain name appended to incomplete host names. (Range: 1-64 alphanumeric characters)
- **Domain Name List*** – Defines define a list of domain names that can be appended to incomplete host names. (Range: 1-64 alphanumeric characters. 1-5 names)
- **Name Server List** – Specifies the address of one or more domain name servers to use for name-to-address resolution. (Range: 1-6 IP addresses)

* Do not include the initial dot that separates the host name from the domain name.

Downloaded from www.Manualslib.com manuals search engine

Web – Select DNS, General Configuration. Set the default domain name or list of domain names, specify one or more name servers to use to use for address resolution, enable domain lookup status, and click Apply.

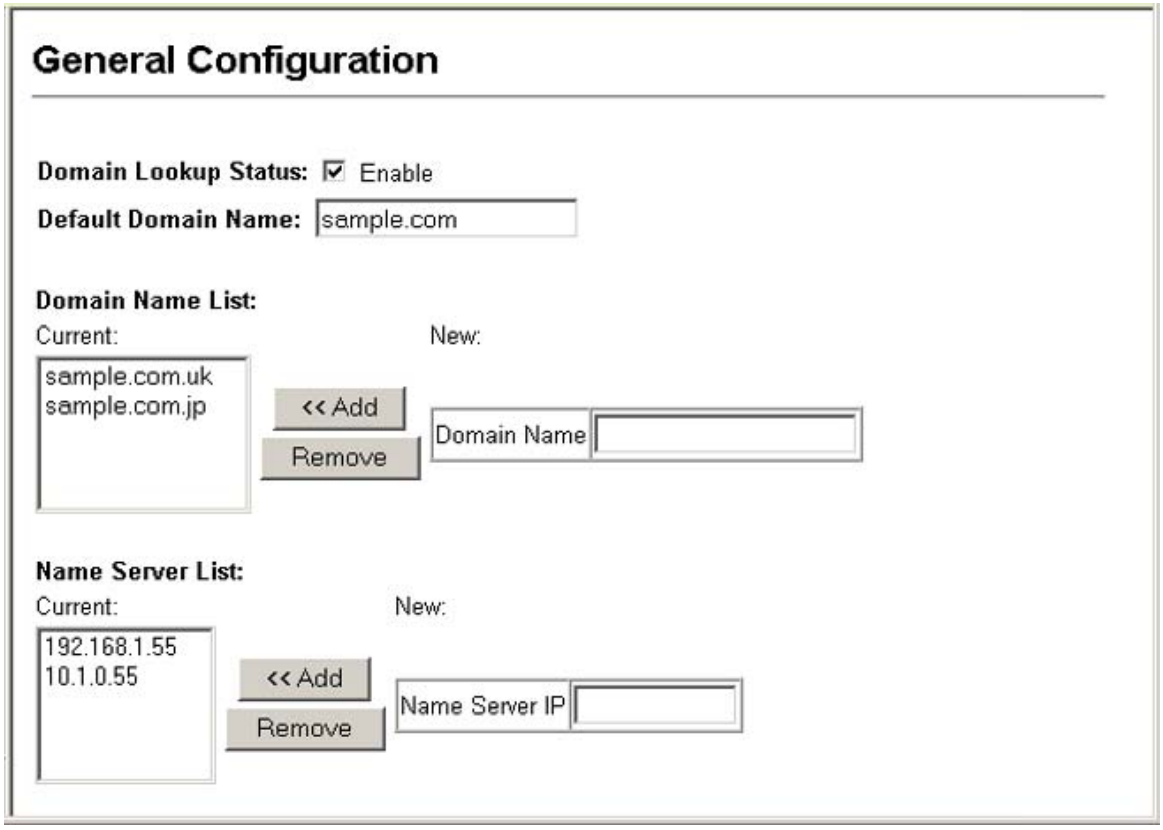

Figure 3-106. DNS Configuration

CLI - This example sets a default domain name and a domain list. However, remember that if a domain list is specified, the default domain name is not used.

```
Console(config)#ip domain-name sample.com                          4-123
Console(config)#ip domain-list sample.com.uk                       4-124
Console(config)#ip domain-list sample.com.jp
Console(config)#ip domain-server 192.168.1.55 10.1.0.55            4-125
Console(config)#ip domain-lookup                                   4-126
Console#show dns                                                   4-127
Domain Lookup Status:
    DNS enabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.uk
    .sample.com.jp
Name Server List:
    192.168.1.55
    10.1.0.55
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Configuring Static DNS Host to Address Entries

You can manually configure static entries in the DNS table that are used to map domain names to IP addresses.

Command Usage

- Static entries may be used for local devices connected directly to the attached network, or for commonly used resources located elsewhere on the network.
- Servers or other network devices may support one or more connections via multiple IP addresses. If more than one IP address is associated with a host name in the static table or via information returned from a name server, a DNS client can try each address in succession, until it establishes a connection with the target device.

Field Attributes

- **Host Name** – Name of a host device that is mapped to one or more IP addresses. (Range: 1-64 characters)
- **IP Address** – Internet address(es) associated with a host name. (Range: 1-8 addresses)
- **Alias** – Displays the host names that are mapped to the same address(es) as a previously configured entry.

Downloaded from www.Manualslib.com manuals search engine

Web – Select DNS, Static Host Table. Enter a host name and one or more corresponding addresses, then click Apply.

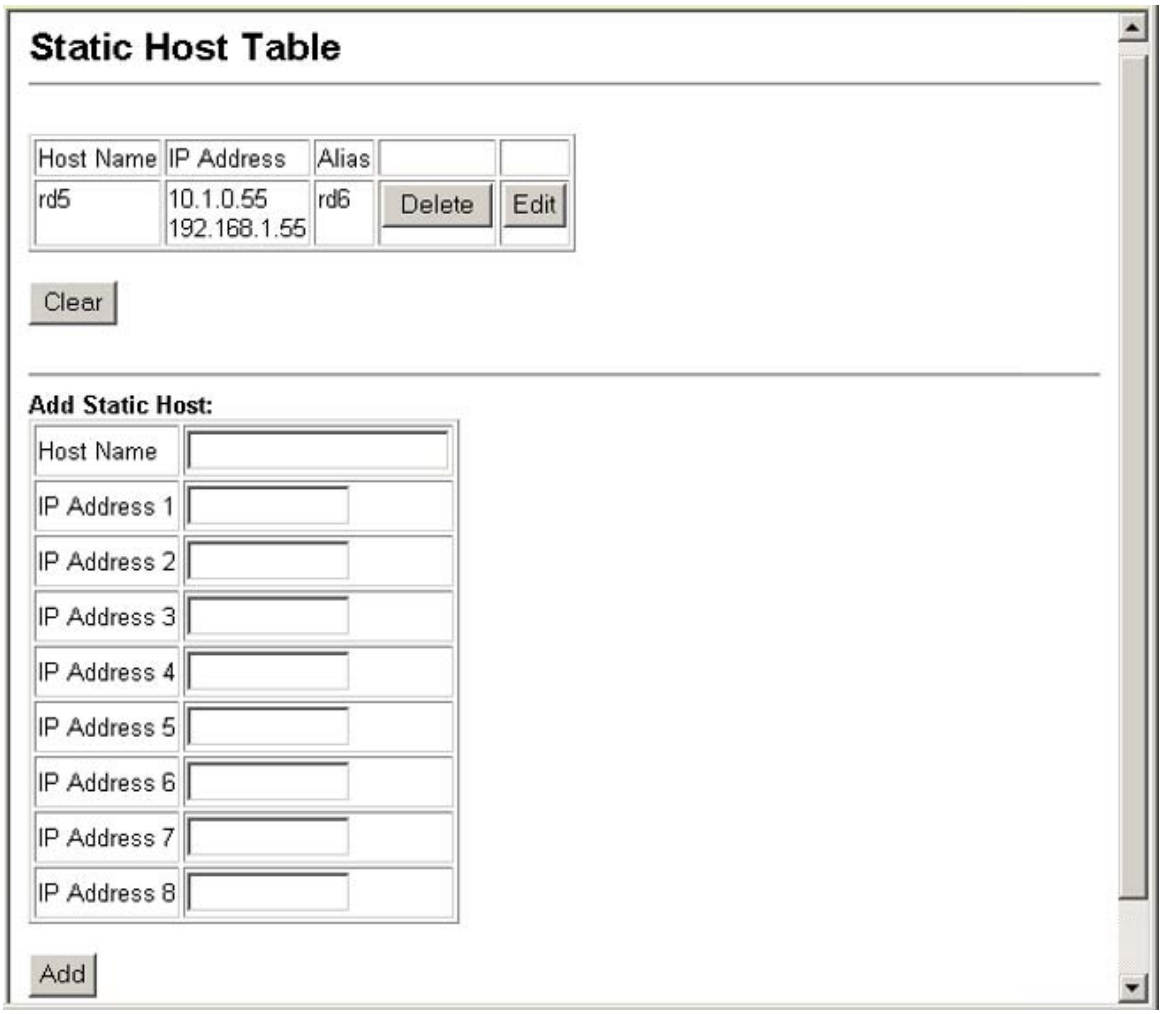

Figure 3-107. DNS Static Host Table

CLI - This example maps two address to a host name, and then configures an alias host name for the same addresses.

```
Console(config)#ip host rd5 192.168.1.55 10.1.0.55                    4-122
Console(config)#ip host rd6 10.1.0.55
Console#show host                                                     4-127

Hostname
 rd5
Inet address
 10.1.0.55 192.168.1.55
Alias
 1.rd6
```


Downloaded from www.Manualslib.com manuals search engine

Displaying the DNS Cache

You can display entries in the DNS cache that have been learned via the designated name servers.

Field Attributes

- **No** – The entry number for each resource record.
- **Flag** – The flag is always “4” indicating a cache entry and therefore unreliable.
- **Type** – This field includes CNAME which specifies the canonical or primary name for the owner, and ALIAS which specifies multiple domain names which are mapped to the same IP address as an existing entry.
- **IP** – The IP address associated with this record.
- **TTL** – The time to live reported by the name server.
- **Domain** – The domain name associated with this record.

Web – Select DNS, Cache.

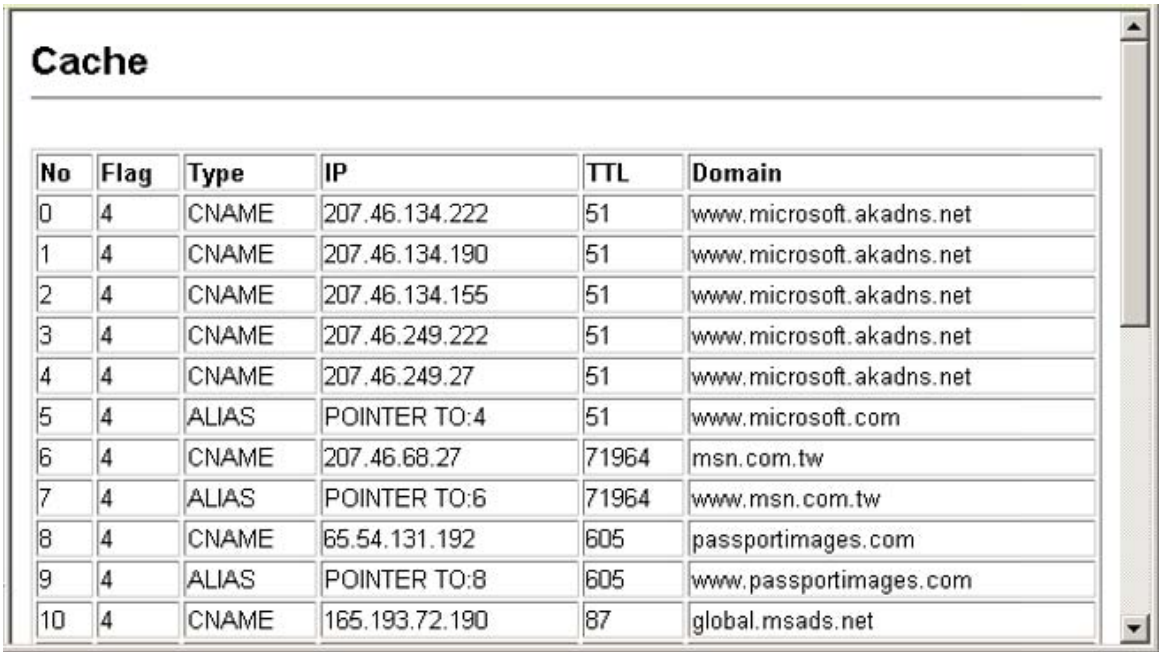
Cache
No Flag Type IP TTL Domain
0 4 CNAME 207.46.134.222 51 www.microsoft.akadns.net
1 4 CNAME 207.46.134.190 51 www.microsoft.akadns.net
2 4 CNAME 207.46.134.155 51 www.microsoft.akadns.net
3 4 CNAME 207.46.249.222 51 www.microsoft.akadns.net
4 4 CNAME 207.46.249.27 51 www.microsoft.akadns.net
5 4 ALIAS POINTER TO:4 51 www.microsoft.com
6 4 CNAME 207.46.68.27 71964 msn.com.tw
7 4 ALIAS POINTER TO:6 71964 www.msn.com.tw
8 4 CNAME 65.54.131.192 605 passportimages.com
9 4 ALIAS POINTER TO:8 605 www.passportimages.com
10 4 CNAME 165.193.72.190 87 global.msads.net

Figure 3-108. Displaying the DNS Cache

Downloaded from www.Manualslib.com manuals search engine

CLI - This example displays all the resource records learned from the designated name servers.

```
Console#show dns cache                                              4-128
NO      FLAG    TYPE    IP              TTL     DOMAIN
0         4     CNAME   207.46.134.222  51      www.microsoft.akadns.net
1         4     CNAME   207.46.134.190  51      www.microsoft.akadns.net
2         4     CNAME   207.46.134.155  51      www.microsoft.akadns.net
3         4     CNAME   207.46.249.222  51      www.microsoft.akadns.net
4         4     CNAME   207.46.249.27   51      www.microsoft.akadns.net
5         4     ALIAS   POINTER TO:4    51      www.microsoft.com
6         4     CNAME   207.46.68.27    71964   msn.com.tw
7         4     ALIAS   POINTER TO:6    71964   www.msn.com.tw
8         4     CNAME   65.54.131.192   605     passportimages.com
9         4     ALIAS   POINTER TO:8    605     www.passportimages.com
10        4     CNAME   165.193.72.190  87      global.msads.net
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Chapter 4: Command Line Interface

This chapter describes how to use the Command Line Interface (CLI).

Using the Command Line Interface

Accessing the CLI

When accessing the management interface for the switch over a direct connection to the server's console port, or via a Telnet connection, the switch can be managed by entering command keywords and parameters at the prompt. Using the switch's command-line interface (CLI) is very similar to entering commands on a UNIX system.

Console Connection

To access the switch through the console port, perform these steps:

1. At the console prompt, enter the user name and password. (The default user names are "admin" and "guest" with corresponding passwords of "admin" and "guest.") When the administrator user name and password is entered, the CLI displays the "Console#" prompt and enters privileged access mode (i.e., Privileged Exec). But when the guest user name and password is entered, the CLI displays the "Console>" prompt and enters normal access mode (i.e., Normal Exec).
2. Enter the necessary commands to complete your desired tasks.
3. When finished, exit the session with the "quit" or "exit" command.

After connecting to the system through the console port, the login screen displays:

```
User Access Verification

Username: admin
Password:

       CLI session with the OmniStack 6300 is opened.
      To end the CLI session, enter [Exit].
Console#
```

Telnet Connection

Telnet operates over the IP transport protocol. In this environment, your management station and any network device you want to manage over the network must have a valid IP address. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. Each address consists of a network portion and host portion. For example, the IP address assigned to this switch, 10.1.0.1, consists of a network portion (10.1.0) and a host portion (1).

Note: The IP address for this switch is unassigned by default.

Downloaded from www.Manualslib.com manuals search engine

To access the switch through a Telnet session, you must first set the IP address for the switch, and set the default gateway if you are managing the switch from a different IP subnet. For example,

```
Console(config)#interface vlan 1
Console(config-if)#ip address 10.1.0.254 255.255.255.0
Console(config-if)#exit
Console(config)#ip default-gateway 10.1.0.254
```

If your corporate network is connected to another network outside your office or to the Internet, you need to apply for a registered IP address. However, if you are attached to an isolated network, then you can use any IP address that matches the network segment to which you are attached.

After you configure the switch with an IP address, you can open a Telnet session by performing these steps:

1. From the remote host, enter the Telnet command and the IP address of the device you want to access.
2. At the prompt, enter the user name and system password. The CLI will display the “Vty-0#” prompt for the administrator to show that you are using privileged access mode (i.e., Privileged Exec), or “Vty-0>” for the guest to show that you are using normal access mode (i.e., Normal Exec).
3. Enter the necessary commands to complete your desired tasks.
4. When finished, exit the session with the “quit” or “exit” command.

After entering the Telnet command, the login screen displays:

```
Username: admin
Password:

       CLI session with the OmniStack 6300-24 is opened.
       To end the CLI session, enter [Exit].

Vty-0#
```

Note: You can open up to four sessions to the device via Telnet.

Downloaded from www.Manualslib.com manuals search engine

Entering Commands

This section describes how to enter CLI commands.

Keywords and Arguments

A CLI command is a series of keywords and arguments. Keywords identify a command, and arguments specify configuration parameters. For example, in the command “show interfaces status ethernet 1/5,” **show interfaces** and **status** are keywords, **ethernet** is an argument that specifies the interface type, and **1/5** specifies the unit/port.

You can enter commands as follows:

- To enter a simple command, enter the command keyword.
- To enter multiple commands, enter each command in the required order. For example, to enable Privileged Exec command mode, and display the startup configuration, enter:

  ```
  Console>enable
  Console#show startup-config
  ```

- To enter commands that require parameters, enter the required parameters after the command keyword. For example, to set a password for the administrator, enter:

  ```
  Console(config)#username admin password 0 smith
  ```

Minimum Abbreviation

The CLI will accept a minimum number of characters that uniquely identify a command. For example, the command “configure” can be entered as **con**. If an entry is ambiguous, the system will prompt for further input.

Command Completion

If you terminate input with a Tab key, the CLI will print the remaining characters of a partial keyword up to the point of ambiguity. In the “logging history” example, typing **log** followed by a tab will result in printing the command up to “**logging**.”

Getting Help on Commands

You can display a brief description of the help system by entering the **help** command. You can also display command syntax by using the “?” character to list keywords or parameters.

Downloaded from www.Manualslib.com manuals search engine

Showing Commands

If you enter a "?" at the command prompt, the system will display the first level of keywords for the current command class (Normal Exec or Privileged Exec) or configuration class (Global, ACL, Interface, Line, VLAN Database, or MSTP). You can also display a list of valid keywords for a specific command. For example, the command "**show ?**" displays a list of possible show commands:

```
Console#show ?
  access-group       Access groups
  access-list        Access lists
  amap               Show AMAP status
  bridge-ext         Bridge extend information
  calendar           Date information
  class map          Display class maps
  dns                DNS information
  dot1x              Show 802.1x content
  garp               Garp property
  gvrp               Show GVRP information of interface
  history            Information of history
  hosts              Host information
  interfaces         Information of interfaces
  ip                 IP information
  lacp               Show lacp statistic
  line               TTY line information
  logging            Show the contents of logging buffers
  mac                MAC access lists
  mac-address-table  Set configuration of the address table
  management         Show management ip filter
  map                Map priority
  marking            Specify marker
  policy-map         Display policy maps
  port               Characteristics of the port
  protocol-vlan      Protocol-vlan information
  public-key         Show information of public key
  pvlan              Information of private VLAN
  queue              Information of priority queue
  radius-server      RADIUS server information
  running-config     The system configuration of running
  snmp               SNMP statistics
  sntp               Sntp
  spanning-tree      Specify spanning-tree
  ssh                Secure shell
  startup-config     The system configuration of starting up
  system             Information of system
  tacacs-server      Login by tacacs server
  users              Display information about terminal lines
  version            System hardware and software status
  vlan               Switch VLAN Virtual Interface
Console#show
```

The command "**show interfaces ?**" will display the following information:

```
Console#show interfaces ?
  counters       Information of interfaces counters
  protocol-vlan  Protocol-vlan information
  status         Information of interfaces status
  switchport     Information of interfaces switchport
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Partial Keyword Lookup

If you terminate a partial keyword with a question mark, alternatives that match the initial letters are provided. (Remember not to leave a space between the command and question mark.) For example "**s?**" shows all the keywords starting with "s."

```
Console#show s?
snmp           sntp           spanning-tree   ssh           startup-config
system
Console#
```

Negating the Effect of Commands

For many configuration commands you can enter the prefix keyword "**no**" to cancel the effect of a command or reset the configuration to the default value. For example, the **logging** command will log system messages to a host server. To disable logging, specify the **no logging** command. This guide describes the negation effect for all applicable commands.

Using Command History

The CLI maintains a history of commands that have been entered. You can scroll back through the history of commands by pressing the up arrow key. Any command displayed in the history list can be executed again, or first modified and then executed.

Using the **show history** command displays a longer list of recently executed commands.

Understanding Command Modes

The command set is divided into Exec and Configuration classes. Exec commands generally display information on system status or clear statistical counters. Configuration commands, on the other hand, modify interface parameters or enable certain switching functions. These classes are further divided into different modes. Available commands depend on the selected mode. You can always enter a question mark "**?**" at the prompt to display a list of the commands available for the current mode. The command classes and associated modes are displayed in the following table:

Table 4-1. Command Modes

Class	Mode	
Exec	Normal Privileged	
Configuration	Global*	Access Control List Interface Line Multiple Spanning Tree VLAN Database

* You must be in Privileged Exec mode to access the Global configuration mode.
You must be in Global Configuration mode to access any of the other configuration modes.

Downloaded from www.Manualslib.com manuals search engine

Exec Commands

When you open a new console session on the switch with the user name and password “guest,” the system enters the Normal Exec command mode (or guest mode), displaying the “Console>” command prompt. Only a limited number of the commands are available in this mode. You can access all commands only from the Privileged Exec command mode (or administrator mode). To access Privilege Exec mode, open a new console session with the user name and password “admin.” The system will now display the “Console#” command prompt. You can also enter Privileged Exec mode from within Normal Exec mode, by entering the **enable** command, followed by the privileged level password “super” (page 4-26).

To enter Privileged Exec mode, enter the following user names and passwords:

```
Username: admin
Password: [admin login password]

       CLI session with the OmniStack 6300-24 is opened.
       To end the CLI session, enter [Exit].

Console#
```

```
 Username: guest
 Password: [guest login password]

        CLI session with the OmniStack 6300-24 is opened.
        To end the CLI session, enter [Exit].

 Console#enable
 Password: [privileged level password]
 Console#
```

Configuration Commands

Configuration commands are privileged level commands used to modify switch settings. These commands modify the running configuration only and are not saved when the switch is rebooted. To store the running configuration in non-volatile storage, use the **copy running-config startup-config** command.

The configuration commands are organized into different modes:

- Global Configuration - These commands modify the system level configuration, and include commands such as **hostname** and **snmp-server community**.
- Access Control List Configuration - These commands are used for packet filtering.
- Interface Configuration - These commands modify the port configuration such as **speed-duplex** and **negotiation**.
- Line Configuration - These commands modify the console port and Telnet configuration, and include command such as **parity** and **databits**.
- VLAN Configuration - Includes the command to create VLAN groups.
- Multiple Spanning Tree Configuration - These commands configure settings for the selected multiple spanning tree instance.

Downloaded from www.Manualslib.com manuals search engine

To enter the Global Configuration mode, enter the command **configure** in Privileged Exec mode. The system prompt will change to "Console(config)#" which gives you access privilege to all Global Configuration commands.

```
Console#configure
Console(config)#
```

To enter the other modes, at the configuration prompt type one of the following commands. Use the **exit** or **end** command to return to the Privileged Exec mode.

Table 4-2. Configuration Command Modes

Mode	Command	Prompt	Page
Line	line {console | vty}	Console(config-line)#	4-10
Access Control List	access-list ip standard access-list ip extended access-list ip mask-precedence access-list mac access-list mac mask-precedence	Console(config-std-acl) Console(config-ext-acl) Console(config-ip-mask-acl) Console(config-mac-acl) Console(config-mac-mask-acl)	4-83
Interface	interface {ethernet *port* | port-channel *id*| vlan *id*}	Console(config-if)#	4-130
VLAN	vlan database	Console(config-vlan)	4-179
MSTP	spanning-tree mst-configuration	Console(config-mstp)#	4-167
QoS	class-map	Console(config-cmap)#	4-211

For example, you can use the following commands to enter interface configuration mode, and then return to Privileged Exec mode

```
Console(config)#interface ethernet 1/5
.
.
.
Console(config-if)#exit
Console(config)#
```

Command Line Processing

Commands are not case sensitive. You can abbreviate commands and parameters as long as they contain enough letters to differentiate them from any other currently available commands or parameters. You can use the Tab key to complete partial commands, or enter a partial command followed by the "?" character to display a list of possible matches. You can also use the following editing keystrokes for command-line processing:

Table 4-3. Keystroke Commands

Keystroke	Function
Ctrl-A	Shifts cursor to start of command line.
Ctrl-B	Shifts cursor to the left one character.
Ctrl-C	Terminates the current task and displays the command prompt.
Ctrl-E	Shifts cursor to end of command line.

Downloaded from www.Manualslib.com manuals search engine

Table 4-3. Keystroke Commands	
Keystroke	**Function**
Ctrl-F	Shifts cursor to the right one character.
Ctrl-K	Deletes all characters from the cursor to the end of the line.
Ctrl-L	Repeats current command line on a new line.
Ctrl-N	Enters the next command line in the history buffer.
Ctrl-P	Enters the last command.
Ctrl-R	Repeats current command line on a new line.
Ctrl-U	Deletes from the cursor to the beginning of the line.
Ctrl-W	Deletes the last word typed.
Esc-B	Moves the cursor back one word.
Esc-D	Deletes from the cursor to the end of the word.
Esc-F	Moves the cursor forward one word.
Delete key or backspace key	Erases a mistake when entering a command.

Downloaded from www.Manualslib.com manuals search engine

Command Groups

The system commands can be broken down into the functional groups shown below.

Table 4-4. Command Groups

Command Group	Description	Page
Line	Sets communication parameters for the serial port and Telnet, including baud rate and console time-out	4-10
General	Basic commands for entering privileged access mode, restarting the system, or quitting the CLI	4-19
System Management	Controls system logs, system passwords, user name, browser management options, and a variety of other system information	4-23
Flash/File	Manages code image or switch configuration files	4-62
Authentication	Configures logon access using local or remote authentication; also configures port security and IEEE 802.1x port access control	4-67
Access Control List	Provides filtering for IP frames (based on address, protocol, TCP/UDP port number or TCP control code) or non-IP frames (based on MAC address or Ethernet type)	4-83
SNMP	Activates authentication failure traps; configures community access strings, and trap managers; also configures IP address filtering	4-108
DHCP	Configures DHCP client	4-120
DNS	Configures DNS services	4-122
Interface	Configures the connection parameters for all Ethernet ports, aggregated links, and VLANs	4-130
Mirror Port	Mirrors data to another port for analysis without affecting the data passing through or the performance of the monitored port	4-141
AMAP	The AMAP protocol discovers adjacent switches by sending and receiving AMAP “Hello” packets on active Spanning Tree ports	4-143
Rate Limiting	Controls the maximum rate for traffic transmitted or received on a port	4-146
Link Aggregation	Statically groups multiple ports into a single logical trunk; configures Link Aggregation Control Protocol for port trunks	4-147
Address Table	Configures the address table for filtering specified addresses, displays current entries, clears the table, or sets the aging time	4-157
Spanning Tree	Configures Spanning Tree settings for the switch	4-160
VLANs	Configures VLAN settings, and defines port membership for VLAN groups; also enables or configures private VLANs and protocol VLANs	4-179
GVRP and Bridge Extension	Configures GVRP settings that permit automatic VLAN learning; shows the configuration for the bridge extension MIB	4-192
Priority	Sets port priority for untagged frames, selects strict priority or weighted round robin, relative weight for each priority queue, also sets priority for TCP traffic types, IP precedence, and DSCP	4-197
Quality of Service	Configures QoS parameters	4-210
Multicast Filtering	Configures IGMP multicast filtering, query parameters, and specifies ports attached to a multicast router	4-218
IP Interface	Configures IP address for the switch	4-227

Downloaded from www.Manualslib.com manuals search engine

The access mode shown in the following tables is indicated by these abbreviations:

NE (Normal Exec)
PE (Privileged Exec)
GC (Global Configuration)
ACL (Access Control List Configuration)
IC (Interface Configuration)
LC (Line Configuration)
VC (VLAN Database Configuration)
MST (Multiple Spanning Tree)

Line Commands

You can access the onboard configuration program by attaching a VT100 compatible device to the server's serial port. These commands are used to set communication parameters for the serial port or Telnet (i.e., a virtual terminal).

Table 4-5. Line Commands

Command	Function	Mode	Page
line	Identifies a specific line for configuration and starts the line configuration mode	GC	4-10
login	Enables password checking at login	LC	4-11
password	Specifies a password on a line	LC	4-12
timeout login response	Sets the interval that the system waits for a login attempt	LC	4-13
exec-timeout	Sets the interval that the command interpreter waits until user input is detected	LC	4-14
password-thresh	Sets the password intrusion threshold, which limits the number of failed logon attempts	LC	4-14
silent-time*	Sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts exceeds the threshold set by the **password-thresh** command	LC	4-15
databits*	Sets the number of data bits per character that are interpreted and generated by hardware	LC	4-16
parity*	Defines the generation of a parity bit	LC	4-16
speed*	Sets the terminal baud rate	LC	4-17
stopbits*	Sets the number of the stop bits transmitted per byte	LC	4-17
disconnect	Terminates a line connection	PE	4-18
show line	Displays a terminal line's parameters	NE, PE	4-18

* These commands only apply to the serial port.

line

This command identifies a specific line for configuration, and to process subsequent line configuration commands.

Syntax

line {**console** | **vty**}

- **console** - Console terminal line.
- **vty** - Virtual terminal for remote console access (i.e., Telnet).

Downloaded from www.Manualslib.com manuals search engine

Default Setting

There is no default line.

Command Mode

Global Configuration

Command Usage

Telnet is considered a virtual terminal connection and will be shown as “Vty” in screen displays such as **show users**. However, the serial communication parameters (e.g., databits) do not affect Telnet connections.

Example

To enter console line mode, enter the following command:

```
Console(config)#line console
Console(config-line)#
```

Related Commands

show line (4-18)
show users (4-60)

login

This command enables password checking at login. Use the **no** form to disable password checking and allow connections without a password.

Syntax

login [**local**]
no login

local - Selects local password checking. Authentication is based on the user name specified with the **username** command.

Default Setting

login local

Command Mode

Line Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- There are three authentication modes provided by the switch itself at login:
  - **login** selects authentication by a single global password as specified by the **password** line configuration command. When using this method, the management interface starts in Normal Exec (NE) mode.
  - **login local** selects authentication via the user name and password specified by the **username** command (i.e., default setting). When using this method, the management interface starts in Normal Exec (NE) or Privileged Exec (PE) mode, depending on the user's privilege level (0 or 15 respectively).
  - **no login** selects no authentication. When using this method, the management interface starts in Normal Exec (NE) mode.
- This command controls login authentication via the switch itself. To configure user names and passwords for remote authentication servers, you must use the RADIUS or TACACS software installed on those servers.

Example

```
Console(config-line)#login local
Console(config-line)#
```

Related Commands

username (4-25)
password (4-12)

password

This command specifies the password for a line. Use the **no** form to remove the password.

Syntax

password {**0** | **7**} *password*
no password

- {**0** | **7**} - 0 means plain password, 7 means encrypted password
- *password* - Character string that specifies the line password. (Maximum length: 8 characters plain text, 32 encrypted, case sensitive)

Default Setting

No password is specified.

Command Mode

Line Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- When a connection is started on a line with password protection, the system prompts for the password. If you enter the correct password, the system shows a prompt. You can use the **password-thresh** command to set the number of times a user can enter an incorrect password before the system terminates the line connection and returns the terminal to the idle state.
- The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the configuration file from a TFTP server. There is no need for you to manually configure encrypted passwords.

Example

```
Console(config-line)#password 0 secret
Console(config-line)#
```

Related Commands

login (4-11)
password-thresh (4-14)

timeout login response

Use this command to set the interval that the system waits for a user to log into the CLI. Use the **no** form to restore the default setting.

Syntax

timeout login response [*seconds*]
no timeout login response

seconds - Integer that specifies the number of seconds. (Range: 0 - 300 seconds; 0: disabled)

Default Setting

CLI: Disabled (0 seconds)
Telnet: 300 seconds

Command Mode

Line Configuration

Command Usage

- If a login attempt is not detected within the timeout interval, the connection is terminated for the session.
- This command applies to both the local console and Telnet connections.
- The timeout for Telnet cannot be disabled.
- Using the command without specifying a timeout restores the default setting.

Downloaded from www.Manualslib.com manuals search engine

Example

To set the timeout to two minutes, enter this command:

```
Console(config-line)#timeout login response 120
Console(config-line)#
```

exec-timeout

This command sets the interval that the system waits until user input is detected. Use the **no** form to restore the default.

Syntax

exec-timeout [*seconds*]
no exec-timeout

seconds - Integer that specifies the number of seconds. (Range: 0 - 65535 seconds; 0: no timeout)

Default Setting

CLI: No timeout
Telnet: 10 minutes

Command Mode

Line Configuration

Command Usage

- If user input is detected within the timeout interval, the session is kept open; otherwise the session is terminated.
- This command applies to both the local console and Telnet connections.
- The timeout for Telnet cannot be disabled.

Example

To set the timeout to two minutes, enter this command:

```
Console(config-line)#exec-timeout 120
Console(config-line)#
```

password-thresh

This command sets the password intrusion threshold which limits the number of failed logon attempts. Use the **no** form to remove the threshold value.

Syntax

password-thresh [*threshold*]
no password-thresh

threshold - The number of allowed password attempts. (Range: 1-120; 0: no threshold)

Default Setting

The default value is three attempts.

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Line Configuration

Command Usage

- When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time before allowing the next logon attempt. (Use the **silent-time** command to set this interval.) When this threshold is reached for Telnet, the Telnet logon interface shuts down.
- This command applies to both the local console and Telnet connections.

Example

To set the password threshold to five attempts, enter this command:

```
Console(config-line)#password-thresh 5
Console(config-line)#
```

Related Commands

silent-time (4-15)

silent-time

This command sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts exceeds the threshold set by the **password-thresh** command. Use the **no** form to remove the silent time value.

Syntax

silent-time [*seconds*]
no silent-time

seconds - The number of seconds to disable console response. (Range: 0-65535; 0: no silent-time)

Default Setting

The default value is no silent-time.

Command Mode

Line Configuration

Example

To set the silent time to 60 seconds, enter this command:

```
Console(config-line)#silent-time 60
Console(config-line)#
```

Related Commands

password-thresh (4-14)

Downloaded from www.Manualslib.com manuals search engine

databits

This command sets the number of data bits per character that are interpreted and generated by the console port. Use the **no** form to restore the default value.

Syntax

databits {**7** | **8**}
no databits

- 7 - Seven data bits per character.
- 8 - Eight data bits per character.

Default Setting

8 data bits per character

Command Mode

Line Configuration

Command Usage

The **databits** command can be used to mask the high bit on input from devices that generate 7 data bits with parity. If parity is being generated, specify 7 data bits per character. If no parity is required, specify 8 data bits per character.

Example

To specify 7 data bits, enter this command:

```
Console(config-line)#databits 7
Console(config-line)#
```

Related Commands

parity (4-16)

parity

This command defines the generation of a parity bit. Use the **no** form to restore the default setting.

Syntax

parity {**none** | **even** | **odd**}
no parity

- **none** - No parity
- **even** - Even parity
- **odd** - Odd parity

Default Setting

No parity

Command Mode

Line Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

Communication protocols provided by devices such as terminals and modems often require a specific parity bit setting.

Example

To specify no parity, enter this command:

```
Console(config-line)#parity none
Console(config-line)#
```

speed

This command sets the terminal line's baud rate. This command sets both the transmit (to terminal) and receive (from terminal) speeds. Use the **no** form to restore the default setting.

Syntax

speed *bps*
no speed

bps - Baud rate in bits per second.
(Options: 9600, 19200, 38400, 57600, 115200 bps, or auto)

Default Setting

auto

Command Mode

Line Configuration

Command Usage

Set the speed to match the baud rate of the device connected to the serial port. Some baud rates available on devices connected to the port might not be supported. The system indicates if the speed you selected is not supported. If you select the "auto" option, the switch will automatically detect the baud rate configured on the attached terminal, and adjust the speed accordingly.

Example

To specify 57600 bps, enter this command:

```
Console(config-line)#speed 57600
Console(config-line)#
```

stopbits

This command sets the number of the stop bits transmitted per byte. Use the **no** form to restore the default setting.

Syntax

stopbits {**1** | **2**}

- 1 - One stop bit
- 2 - Two stop bits

Downloaded from www.Manualslib.com manuals search engine

Default Setting

1 stop bit

Command Mode

Line Configuration

Example

To specify 2 stop bits, enter this command:

```
Console(config-line)#stopbits 2
Console(config-line)#
```

disconnect

Use this command to terminate an SSH, Telnet, or console connection.

Syntax

disconnect *session-id*

session-id – The session identifier for an SSH, Telnet or console connection. (Range: 0-4)

Command Mode

Privileged Exec

Command Usage

Specifying session identifier “0” will disconnect the console connection. Specifying any other identifiers for an active session will disconnect an SSH or Telnet connection.

Example

```
Console#disconnect 1
Console#
```

Related Commands

show ssh (4-39)
show users (4-60)

show line

This command displays the terminal line’s parameters.

Syntax

show line [**console** | **vty**]

- **console** - Console terminal line.
- **vty** - Virtual terminal for remote console access (i.e., Telnet).

Default Setting

Shows all lines

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Normal Exec, Privileged Exec

Example

To show all lines, enter this command:

```
Console#show line
 Console configuration:
  Password threshold: 3 times
  Interactive timeout: Disabled
  Silent time: Disabled
  Baudrate: 9600
  Databits: 8
  Parity: none
  Stopbits: 1
Vty configuration:
  Password threshold: 3 times
  Interactive timeout: 65535
Console#
```

General Commands

Table 4-6. General Commands

Command	Function	Mode	Page
enable	Activates privileged mode	NE	4-19
disable	Returns to normal mode from privileged mode	PE	4-20
configure	Activates global configuration mode	PE	4-20
show history	Shows the command history buffer	NE, PE	4-21
reload	Restarts the system	PE	4-22
end	Returns to Privileged Exec mode	any config. mode	4-22
exit	Returns to the previous configuration mode, or exits the CLI	any	4-22
quit	Exits a CLI session	NE, PE	4-23
help	Shows how to use help	any	NA
?	Shows options for command completion (context sensitive)	any	NA

enable

This command activates Privileged Exec mode. In privileged mode, additional commands are available, and certain commands display additional information. See “Understanding Command Modes” on page 4-5.

Syntax

enable [*level*]

level - Privilege level to log into the device.

The device has two predefined privilege levels: 0: Normal Exec, 15: Privileged Exec. Enter level 15 to access Privileged Exec mode.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

Level 15

Command Mode

Normal Exec

Command Usage

- “super” is the default password required to change the command mode from Normal Exec to Privileged Exec. (To set this password, see the **enable password** command on page 4-26.)
- The “#” character is appended to the end of the prompt to indicate that the system is in privileged access mode.

Example

```
Console>enable
Password: [privileged level password]
Console#
```

Related Commands

disable (4-20)
enable password (4-26)

disable

This command returns to Normal Exec mode from privileged mode. In normal access mode, you can only display basic information on the switch's configuration or Ethernet statistics. To gain access to all commands, you must use the privileged mode. See “Understanding Command Modes” on page 4-5.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

The “>” character is appended to the end of the prompt to indicate that the system is in normal access mode.

Example

```
Console#disable
Console>
```

Related Commands

enable (4-19)

configure

This command activates Global Configuration mode. You must enter this mode to modify any settings on the switch. You must also enter Global Configuration mode

Downloaded from www.Manualslib.com manuals search engine

prior to enabling some of the other configuration modes, including Interface Configuration, Line Configuration, VLAN Database Configuration, and Multiple Spanning Tree Configuration. See “Understanding Command Modes” on page 4-5.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#configure
Console(config)#
```

Related Commands

end (4-22)

show history

This command shows the contents of the command history buffer.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Command Usage

The history buffer size is fixed at 10 Execution commands and 10 Configuration commands.

Example

In this example, the show history command lists the contents of the command history buffer:

```
Console#show history
Execution command history:
 2 config
 1 show history

Configuration command history:
 4 interface vlan 1
 3 exit
 2 interface vlan 1
 1 end

Console#
```

The **!** command repeats commands from the Execution command history buffer when you are in Normal Exec or Privileged Exec Mode, and commands from the Configuration command history buffer when you are in any of the configuration

Downloaded from www.Manualslib.com manuals search engine

modes. In this example, the **!2** command repeats the second command in the Execution history buffer (**config**).

```
Console#!2
Console#config
Console(config)#
```

reload

This command restarts the system.

Note: When the system is restarted, it will always run the Power-On Self-Test. It will also retain all configuration information stored in non-volatile memory by the **copy running-config startup-config** command.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

This command resets the entire system.

Example

This example shows how to reset the switch:

```
Console#reload
System will be restarted, continue <y/n>? y
```

end

This command returns to Privileged Exec mode.

Default Setting

None

Command Mode

Global Configuration, Interface Configuration, Line Configuration, VLAN Database Configuration, and Multiple Spanning Tree Configuration.

Example

This example shows how to return to the Privileged Exec mode from the Interface Configuration mode:

```
Console(config-if)#end
Console#
```

exit

This command returns to the previous configuration mode or exit the configuration program.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Any

Example

This example shows how to return to the Privileged Exec mode from the Global Configuration mode, and then quit the CLI session:

```
Console(config)#exit
Console#exit

Press ENTER to start session
User Access Verification

Username:
```

quit

This command exits the configuration program.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Command Usage

The **quit** and **exit** commands can both exit the configuration program.

Example

This example shows how to quit a CLI session:

```
Console#quit

Press ENTER to start session

User Access Verification

Username:
```

System Management Commands

These commands are used to control system logs, passwords, user names, browser configuration options, and display or configure a variety of other system information.

Table 4-7. System Management Commands

Command Group	Function	Page
Device Designation	Configures information that uniquely identifies this switch	4-24
User Access	Configures the basic user names and passwords for management access	4-25

Downloaded from www.Manualslib.com manuals search engine

Table 4-7. System Management Commands		
Command Group	**Function**	**Page**
IP Filter	Configures IP addresses that are allowed management access	4-27
Web Server	Enables management access via a Web browser	4-29
Secure Shell	Provides secure replacement for Telnet	4-32
Event Logging	Controls logging of error messages	4-41
SMTP Alerts	Configures SMTP email alerts	4-46
Time (System Clock)	Sets the system clock automatically via NTP/SNTP server or manually	4-50
System Status	Displays system configuration, active managers, and version information	4-54
Frame Size	Enables support for jumbo frames	4-61

Device Designation Commands

Table 4-8. Device Designation Commands			
Command	**Function**	**Mode**	**Page**
prompt	Customizes the prompt used in PE and NE mode	GC	4-24
hostname	Specifies the host name for the switch	GC	4-25
snmp-server contact	Sets the system contact string	GC	4-110
snmp-server location	Sets the system location string	GC	4-110

prompt

This command customizes the CLI prompt. Use the **no** form to restore the default prompt.

Syntax

prompt *string*
no prompt

string - Any alphanumeric string to use for the CLI prompt. (Maximum length: 255 characters)

Default Setting

Console

Command Mode

Global Configuration

Example

```
Console(config)#prompt RD2
RD2(config)#
```


Downloaded from www.Manualslib.com manuals search engine

hostname

This command specifies or modifies the host name for this device. Use the **no** form to restore the default host name.

Syntax

hostname *name*
no hostname

name - The name of this host. (Maximum length: 255 characters)

Default Setting

None

Command Mode

Global Configuration

Example

```
Console(config)#hostname RD#1
Console(config)#
```

User Access Commands

The basic commands required for management access are listed in this section. This switch also includes other options for password checking via the console or a Telnet connection (page 4-10), user authentication via a remote authentication server (page 4-67), and host access authentication for specific ports (page 4-76).

Table 4-9. User Access Commands

Command	Function	Mode	Page
username	Establishes a user name-based authentication system at login	GC	4-25
enable password	Sets a password to control access to the Privileged Exec level	GC	4-26

username

This command adds named users, requires authentication at login, specifies or changes a user's password (or specify that no password is required), or specifies or changes a user's access level. Use the **no** form to remove a user name.

Syntax

username *name* {**access-level** *level* | **nopassword** |
password {**0** | **7**} *password*}
no username *name*

- *name* - The name of the user.
  (Maximum length: 8 characters, case sensitive. Maximum users: 16)
- **access-level** *level* - Specifies the user level.
  The device has two predefined privilege levels:
  0: Normal Exec, **15**: Privileged Exec.
- **nopassword** - No password is required for this user to log in.

Downloaded from www.Manualslib.com manuals search engine

- {**0** | **7**} - 0 means plain password, 7 means encrypted password.
- **password** *password* - The authentication password for the user. (Maximum length: 8 characters plain text, 32 encrypted, case sensitive)

Default Setting

- The default access level is Normal Exec.
- The factory defaults for the user names and passwords are:

Table 4-10. User Access Levels

username	access-level	password
guest admin	0 15	guest admin

Command Mode

Global Configuration

Command Usage

The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the configuration file from a TFTP server. There is no need for you to manually configure encrypted passwords.

Example

This example shows how the set the access level and password for a user.

```
Console(config)#username bob access-level 15
Console(config)#username bob password 0 smith
Console(config)#
```

enable password

After initially logging onto the system, you should set the Privileged Exec password. Remember to record it in a safe place. This command controls access to the Privileged Exec level from the Normal Exec level. Use the **no** form to reset the default password.

Syntax

enable password [**level** *level*] {**0** | **7**} *password*
no enable password [**level** *level*]

- **level** *level* - Level 15 for Privileged Exec. (Levels 0-14 are not used.)
- {**0** | **7**} - 0 means plain password, 7 means encrypted password.
- *password* - password for this privilege level. (Maximum length: 8 characters plain text, 32 encrypted, case sensitive)

Default Setting

- The default is level 15.
- The default password is “super”

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

- You cannot set a null password. You will have to enter a password to change the command mode from Normal Exec to Privileged Exec with the **enable** command (page 4-19).
- The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the configuration file from a TFTP server. There is no need for you to manually configure encrypted passwords.

Example

```
Console(config)#enable password level 15 0 admin
Console(config)#
```

Related Commands

enable (4-19)

IP Filter Commands

Table 4-11. IP Filter Commands

Command	Function	Mode	Page
management	Configures IP addresses that are allowed management access	GC	4-27
show management	Displays the switch to be monitored or configured from a browser	PE	4-28

management

This command specifies the client IP addresses that are allowed management access to the switch through various protocols. Use the **no** form to restore the default setting.

Syntax

[**no**] **management** {**all-client** | **http-client** | **snmp-client** | **telnet-client**} *start-address* [*end-address*]

- **all-client** - Adds IP address(es) to the SNMP, Web and Telnet groups.
- **http-client** - Adds IP address(es) to the Web group.
- **snmp-client** - Adds IP address(es) to the SNMP group.
- **telnet-client** - Adds IP address(es) to the Telnet group.
- *start-address* - A single IP address, or the starting address of a range.
- *end-address* - The end address of a range.

Default Setting

All addresses

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

- If anyone tries to access a management interface on the switch from an invalid address, the switch will reject the connection, enter an event message in the system log, and send a trap message to the trap manager.
- IP address can be configured for SNMP, Web and Telnet access respectively. Each of these groups can include up to five different sets of addresses, either individual addresses or address ranges.
- When entering addresses for the same group (i.e., SNMP, Web or Telnet), the switch will not accept overlapping address ranges. When entering addresses for different groups, the switch will accept overlapping address ranges.
- You cannot delete an individual address from a specified range. You must delete the entire range, and reenter the addresses.
- You can delete an address range just by specifying the start address, or by specifying both the start address and end address.

Example

This example restricts management access to the indicated addresses.

```
Console(config)#management all-client 192.168.1.19
Console(config)#management all-client 192.168.1.25 192.168.1.30
Console#
```

show management

This command displays the client IP addresses that are allowed management access to the switch through various protocols.

Syntax

show management {**all-client** | **http-client** | **snmp-client** | **telnet-client**}

- **all-client** - Adds IP address(es) to the SNMP, Web and Telnet groups.
- **http-client** - Adds IP address(es) to the Web group.
- **snmp-client** - Adds IP address(es) to the SNMP group.
- **telnet-client** - Adds IP address(es) to the Telnet group.

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show management all-client
Management Ip Filter
 Http-Client:
   Start ip address      End ip address
-----------------------------------------------
1. 192.168.1.19          192.168.1.19
2. 192.168.1.25          192.168.1.30

 Snmp-Client:
   Start ip address      End ip address
-----------------------------------------------
1. 192.168.1.19          192.168.1.19
2. 192.168.1.25          192.168.1.30

 Telnet-Client:
   Start ip address      End ip address
-----------------------------------------------
1. 192.168.1.19          192.168.1.19
2. 192.168.1.25          192.168.1.30

Console#
```

Web Server Commands

Table 4-12. Web Server Commands

Command	Function	Mode	Page
ip http port	Specifies the port to be used by the Web browser interface	GC	4-29
ip http server	Allows the switch to be monitored or configured from a browser	GC	4-30
ip http secure-server	Enables HTTPS/SSL for encrypted communications	GC	4-30
ip http secure-port	Specifies the UDP port number for HTTPS/SSL	GC	4-31

ip http port

This command specifies the TCP port number used by the Web browser interface. Use the **no** form to use the default port.

Syntax

ip http port *port-number*
no ip http port

port-number - The TCP port to be used by the browser interface. (Range: 1-65535)

Default Setting

80

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#ip http port 769
Console(config)#
```

Related Commands

ip http server (4-30)

ip http server

This command allows this device to be monitored or configured from a browser. Use the **no** form to disable this function.

Syntax

[**no**] **ip http server**

Default Setting

Enabled

Command Mode

Global Configuration

Example

```
Console(config)#ip http server
Console(config)#
```

Related Commands

ip http port (4-29)

ip http secure-server

This command enables the secure hypertext transfer protocol (HTTPS) over the Secure Socket Layer (SSL), providing secure access (i.e., an encrypted connection) to the switch's Web interface. Use the **no** form to disable this function.

Syntax

[**no**] **ip http secure-server**

Default Setting

Enabled

Command Mode

Global Configuration

Command Usage

- Both HTTP and HTTPS service can be enabled independently on the switch. However, you cannot configure the HTTP and HTTPS servers to use the same UDP port.
- If you enable HTTPS, you must indicate this in the URL that you specify in your browser: **https**://*device*[:*port_number*]

Downloaded from www.Manualslib.com manuals search engine

- When you start HTTPS, the connection is established in this way:
  - The client authenticates the server using the server's digital certificate.
  - The client and server negotiate a set of security protocols to use for the connection.
  - The client and server generate session keys for encrypting and decrypting data.
- The client and server establish a secure encrypted connection.
  A padlock icon should appear in the status bar for Internet Explorer 5.x and Netscape Navigator 4.x or later versions.
- The following Web browsers and operating systems currently support HTTPS:

Table 4-13. Compatible Operating Systems

Web Browser	Operating System
Internet Explorer 5.0 or later	Windows 98,Windows NT (with service pack 6a), Windows 2000, Windows XP
Netscape Navigator 4.76 or later	Windows 98,Windows NT (with service pack 6a), Windows 2000, Windows XP, Solaris 2.6

- To specify a secure-site certificate, see "Replacing the Default Secure-site Certificate" on page 3-46. Also refer to the **copy** command on page 4-62.

Example

```
Console(config)#ip http secure-server
Console(config)#
```

Related Commands

ip http secure-port (4-31)
copy tftp https-certificate (4-62)

ip http secure-port

This command specifies the UDP port number used for HTTPS/SSL connection to the switch's Web interface. Use the **no** form to restore the default port.

Syntax

ip http secure-port *port_number*
no ip http secure-port

port_number – The UDP port used for HTTPS/SSL. (Range: 1-65535)

Default Setting

443

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- You cannot configure the HTTP and HTTPS servers to use the same port.
- If you change the HTTPS port number, clients attempting to connect to the HTTPS server must specify the port number in the URL, in this format: **https://***device*:*port_number*

Example

```
Console(config)#ip http secure-port 1000
Console(config)#
```

Related Commands

ip http secure-server (4-30)

Secure Shell Commands

The Berkley-standard includes remote access tools originally designed for Unix systems. Some of these tools have also been implemented for Microsoft Windows and other environments. These tools, including commands such as *rlogin* (remote login), *rsh* (remote shell), and *rcp* (remote copy), are not secure from hostile attacks.

The Secure Shell (SSH) includes server/client applications intended as a secure replacement for the older Berkley remote access tools. SSH can also provide remote management access to this switch as a secure replacement for Telnet. When a client contacts the switch via the SSH protocol, the switch uses a public-key that the client must match along with a local user name and password for access authentication. SSH also encrypts all data transfers passing between the switch and SSH-enabled management station clients, and ensures that data traveling over the network arrives unaltered.

This section describes the commands used to configure the SSH server. However, note that you also need to install a SSH client on the management station when using this protocol to configure the switch.

Note: The switch supports both SSH Version 1.5 and 2.0.

Table 4-14. Secure Shell Commands

Command	Function	Mode	Page
ip ssh server	Enables the SSH server on the switch	GC	4-34
ip ssh timeout	Specifies the authentication timeout for the SSH server	GC	4-35
ip ssh authentication-retries	Specifies the number of retries allowed by a client	GC	4-36
ip ssh server-key size	Sets the SSH server key size	GC	4-36
copy tftp public-key	Copies the user's public key from a TFTP server to the switch	PE	4-62
delete public-key	Deletes the public key for the specified user	PE	4-37
ip ssh crypto host-key generate	Generates the host key	PE	4-37
ip ssh crypto zeroize	Clear the host key from RAM	PE	4-38
ip ssh save host-key	Saves the host key from RAM to flash memory	PE	4-38

Downloaded from www.Manualslib.com manuals search engine

Table 4-14. Secure Shell Commands			
Command	**Function**	**Mode**	**Page**
disconnect	Terminates a line connection	PE	4-18
show ip ssh	Displays the status of the SSH server and the configured values for authentication timeout and retries	PE	4-39
show ssh	Displays the status of current SSH sessions	PE	4-39
show public-key	Shows the public key for the specified user or for the host	PE	4-40
show users	Shows SSH users, including privilege level and public key type	PE	4-60

The SSH server on this switch supports both password and public key authentication. If password authentication is specified by the SSH client, then the password can be authenticated either locally or via a RADIUS or TACACS+ remote authentication server, as specified by the **authentication login** command on page 4-68. If public key authentication is specified by the client, then you must configure authentication keys on both the client and the switch as described in the following section. Note that regardless of whether you use public key or password authentication, you still have to generate authentication keys on the switch and enable the SSH server.

To use the SSH server, complete these steps:

1. Generate a Host Key Pair – Use the **ip ssh crypto host-key generate** command to create a host public/private key pair.

2. Provide Host Public Key to Clients – Many SSH client programs automatically import the host public key during the initial connection setup with the switch. Otherwise, you need to manually create a known hosts file on the management station and place the host public key in it. An entry for a public key in the known hosts file would appear similar to the following example:

   10.1.0.54 1024 35 156849954018676692593339467750546173253136748908365472541502024559319986854435836165199992332978176606583095610825913212890233765468017262725714134287629413011961955667825956641048695742788814620651941746772984865468615717739390164779355942303577413098022737087794545240839717526463580581767167095748047761117

3. Import Client's Public Key to the Switch – Use the **copy tftp public-key** command to copy a file containing the public key for all the SSH client's granted management access to the switch. (Note that these clients must be configured locally on the switch via the User Accounts page as described on page 3-41.) The clients are subsequently authenticated using these keys. The current firmware only accepts public key files based on standard UNIX format as shown in the following example:

   1024 35 134108168560989392104094492015542534763164192187295892114317388005553616163105177594083868631109291232226828519254374603100937187721199696317813662774141689851320491172048303392543241016379975923714490119 38

Downloaded from www.Manualslib.com manuals search engine

00609025394840848271781943722884025331159521348610229029789827213532671
31629432532818915045306393916643 steve@192.168.1.19

4. Set the Optional Parameters – Set other optional parameters, including the authentication timeout, the number of retries, and the server key size.

5. Enable SSH Service – Use the **ip ssh server** command to enable the SSH server on the switch.

6. Configure Challenge-Response Authentication – When an SSH client attempts to contact the switch, the SSH server uses the host key pair to negotiate a session key and encryption method. Only clients that have a private key corresponding to the public keys stored on the switch can gain access. The following exchanges take place during this process:

   a. The client sends its public key to the switch.
   b. The switch compares the client's public key to those stored in memory.
   c. If a match is found, the switch uses the public key to encrypt a random sequence of bytes, and sends this string to the client.
   d. The client uses its private key to decrypt the bytes, and sends the decrypted bytes back to the switch.
   e. The switch compares the decrypted bytes to the original bytes it sent. If the two sets match, this means that the client's private key corresponds to an authorized public key, and the client is authenticated.

Note: To use SSH with only password authentication, the host public key must still be given to the client, either during initial connection or manually entered into the known host file. However, you do not need to configure the client's keys.

ip ssh server

Use this command to enable the Secure Shell (SSH) server on this switch. Use the **no** form to disable this service.

Syntax

ip ssh server
no ip ssh server

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

- The SSH server supports up to four client sessions. The maximum number of client sessions includes both current Telnet sessions and SSH sessions.
- The SSH server uses DSA or RSA for key exchange when the client first establishes a connection with the switch, and then negotiates with the client to select either DES (56-bit) or 3DES (168-bit) for data encryption.
- You must generate the host key before enabling the SSH server.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#ip ssh crypto host-key generate dsa
Console#configure
Console(config)#ip ssh server
Console(config)#
```

Related Commands

ip ssh crypto host-key generate (4-37)
show ssh (4-39)

ip ssh timeout

Use this command to configure the timeout for the SSH server. Use the **no** form to restore the default setting.

Syntax

ip ssh timeout *seconds*
no ip ssh timeout

seconds – The timeout for client response during SSH negotiation. (Range: 1-120)

Default Setting

10 seconds

Command Mode

Global Configuration

Command Usage

The **timeout** specifies the interval the switch will wait for a response from the client during the SSH negotiation phase. Once an SSH session has been established, the timeout for user input is controlled by the **exec-timeout** command for vty sessions.

Example

```
Console(config)#ip ssh timeout 60
Console(config)#
```

Related Commands

exec-timeout (4-14)
show ip ssh (4-39)

Downloaded from www.Manualslib.com manuals search engine

ip ssh authentication-retries

Use this command to configure the number of times the SSH server attempts to reauthenticate a user. Use the **no** form to restore the default setting.

Syntax

ip ssh authentication-retries *count*
no ip ssh authentication-retries

count – The number of authentication attempts permitted after which the interface is reset. (Range: 1-5)

Default Setting

3

Command Mode

Global Configuration

Example

```
Console(config)#ip ssh authentication-retires 2
Console(config)#
```

Related Commands

show ip ssh (4-39)

ip ssh server-key size

Use this command to set the SSH server key size. Use the **no** form to restore the default setting.

Syntax

ip ssh server-key size *key-size*
no ip ssh server-key size

key-size – The size of server key. (Range: 512-896 bits)

Default Setting

768 bits

Command Mode

Global Configuration

Command Usage

- The server key is a private key that is never shared outside the switch.
- The host key is shared with the SSH client, and is fixed at 1024 bits.

Example

```
Console(config)#ip ssh server-key size 512
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

delete public-key

Use this command to delete the specified user's public key.

Syntax

delete public-key *username* [**dsa** | **rsa**]

- *username* – Name of an SSH user. (Range: 1-8 characters)
- **dsa** – DSA public key type.
- **rsa** – RSA public key type.

Default Setting

Deletes both the DSA and RSA key.

Command Mode

Privileged Exec

Example

```
Console#delete public-key admin dsa
Console#
```

ip ssh crypto host-key generate

Use this command to generate the host key pair (i.e., public and private).

Syntax

ip ssh crypto host-key generate [**dsa** | **rsa**]

- **dsa** – DSA key type.
- **rsa** – RSA key type.

Default Setting

Generates both the DSA and RSA key pairs.

Command Mode

Privileged Exec

Command Usage

- This command stores the host key pair in memory (i.e., RAM). Use the **ip ssh save host-key** command to save the host key pair to flash memory.
- Some SSH client programs automatically add the public key to the known hosts file as part of the configuration process. Otherwise, you must manually create a known hosts file and place the host public key in it.
- The SSH server uses this host key to negotiate a session key and encryption method with the client trying to connect to it.

Example

```
Console#ip ssh crypto host-key generate dsa
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Related Commands

ip ssh crypto zeroize (4-38)
ip ssh save host-key (4-38)

ip ssh crypto zeroize

Use this command to clear the host key from memory (i.e. RAM).

Syntax

ip ssh crypto zeroize [**dsa** | **rsa**]

- **dsa** – DSA key type.
- **rsa** – RSA key type.

Default Setting

Clears both the DSA and RSA key.

Command Mode

Privileged Exec

Command Usage

- This command clears the host key from volatile memory (RAM). Use the **no ip ssh save host-key** command to clear the host key from flash memory.
- The SSH server must be disabled before you can execute this command.

Example

```
Console#ip ssh crypto zeroize dsa
Console#
```

Related Commands

ip ssh crypto host-key generate (4-37)
ip ssh save host-key (4-38)
no ip ssh server (4-34)

ip ssh save host-key

Use this command to save host key from RAM to flash memory.

Syntax

ip ssh save host-key [**dsa** | **rsa**]

- **dsa** – DSA key type.
- **rsa** – RSA key type.

Default Setting

Saves both the DSA and RSA key.

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#ip ssh save host-key dsa
Console#
```

Related Commands

ip ssh crypto host-key generate (4-37)

show ip ssh

Use this command to display the connection settings used when authenticating client access to the SSH server.

Command Mode

Privileged Exec

Example

```
Console#show ip ssh
SSH Enabled - version 1.99
Negotiation timeout: 120 secs; Authentication retries: 3
Server key size: 768 bits
Console#
```

show ssh

Use this command to display the current SSH server connections.

Command Mode

Privileged Exec

Example

```
Console#show ssh
Connection Version State                Username Encryption
  0          2.0   Session-Started      admin    ctos aes128-cbc-hmac-md5
                                                 stoc aes128-cbc-hmac-md5
Console#
```

Table 4-15. Secure Shell Information

Field	Description
Session	The session number. (Range: 0-3)
Version	The Secure Shell version number.
State	The authentication negotiation state. (Values: Negotiation-Started, Authentication-Started, Session-Started)
Username	The user name of the client.

Downloaded from www.Manualslib.com manuals search engine

Table 4-15. Secure Shell Information	
Field	**Description**
Encryption	The encryption method is automatically negotiated between the client and server. Options for SSHv1.5 include: DES, 3DES Options for SSHv2.0 can include different algorithms for the client-to-server (ctos) and server-to-client (stoc): aes128-cbc-hmac-sha1 aes192-cbc-hmac-sha1 aes256-cbc-hmac-sha1 3des-cbc-hmac-sha1 blowfish-cbc-hmac-sha1 aes128-cbc-hmac-md5 aes192-cbc-hmac-md5 aes256-cbc-hmac-md5 3des-cbc-hmac-md5 blowfish-cbc-hmac-md5 *Terminology:* DES – Data Encryption Standard (56-bit key) 3DES – Triple-DES (Uses three iterations of DES, 112-bit key) aes – Advanced Encryption Standard (160 or 224-bit key) blowfish – Blowfish (32-448 bit key) cbc – cypher-block chaining sha1 – Secure Hash Algorithm 1 (160-bit hashes) md5 – Message Digest algorithm number 5 (128-bit hashes)

show public-key

Use this command to show the public key for the specified user or for the host.

Syntax

show public-key [**user** [*username*]| **host**]

username – Name of an SSH user. (Range: 1-8 characters)

Default Setting

Shows all public keys.

Command Mode

Privileged Exec

Command Usage

- If no parameters are entered, all keys are displayed. If the user keyword is entered, but no user name is specified, then the public keys for all users are displayed.
- When an RSA key is displayed, the first field indicates the size of the host key (e.g., 1024), the second field is the encoded public exponent (e.g., 35), and the last string is the encoded modulus. When a DSA key is displayed, the first field indicates that the encryption method used by SSH is based on the Digital Signature Standard (DSS), and the last string is the encoded modulus.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show public-key host
Host:
RSA:
1024 35
156849954018676692593339467750546173253136748908365472541502024559319986854435836165199992332978176606583095861082591321289023765468017262725714134287629413011961955667825956641048695742788814620651941746772984865468615717739390164779355942303577413098022737087794545240839717526463580581767167095748047761170
DSA:
ssh-dss AAAB3NzaC1kc3MAAACBAPWKZTPbsRIB8ydEXcxM3dyV/yrDbKStIlnzD/Dg0h2HxcYV44sXZ2JXhamLK6P8bvuiyacWbUW/a4PAtp1KMSdqsKeh3hKoA3vRRSy1N2XFfAKxl5fwFfvJlPdOkFgzLGMinvSNYQwiQXbKTBH0Z4mUZpE85PWxDZMaCNBPjBrRAAAAFQChb4vsdfQGNIjwbvwrNLaQ77isiwAAAIEAsy5YWDC99ebYHNRj5kh47wY4i8cZvH+/p9cnrfwFTMU01VFDly3IR2G395NLy5Qd7ZDxfA9mCOfT/yyEfbobMJZi8oGCstSNOxrZZVnMqWrTYfdrKX7YKBw/Kjw6BmiFq7O+jAhf1Dg45loAc27s6TLdtny1wRq/ow2eTCD5nekAAACBAJ8rMccXTxHLFAczWS7EjOyDbsloBfPuSAb4oAsyjKXKVYNLQkTLZfcFRu41bS2KV5LAwecsigF/+DjKGWtPNIQqabKgYCw2o/dVzX4Gg+yqdTlYmGA7fHGm8ARGeiG4ssFKy4Z6DmYPXFum1Yg0fhLwuHpOSKdxT3kk475S7w0W
Console#
```

Event Logging Commands

Table 4-16. Event Logging Commands

Command	Function	Mode	Page
logging on	Controls logging of error messages	GC	4-41
logging history	Limits syslog messages saved to switch memory based on severity	GC	4-42
logging host	Adds a syslog server host IP address that will receive logging messages	GC	4-43
logging facility	Sets the facility type for remote logging of syslog messages	GC	4-43
logging trap	Limits syslog messages saved to a remote server based on severity	GC	4-44
clear logging	Clears messages from the logging buffer	PE	4-44
show logging	Displays the state of logging	PE	4-45

logging on

This command controls logging of error messages, sending debug or error messages to switch memory. The **no** form disables the logging process.

Syntax

[**no**] **logging on**

Default Setting

None

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

The logging process controls error messages saved to switch memory. You can use the **logging history** command to control the type of error messages that are stored.

Example

```
Console(config)#logging on
Console(config)#
```

Related Commands

logging history (4-42)
clear logging (4-44)

logging history

This command limits syslog messages saved to switch memory based on severity. The **no** form returns the logging of syslog messages to the default level.

Syntax

logging history {**flash** | **ram**} *level*
no logging history {**flash** | **ram**}

- **flash** - Event history stored in flash memory (i.e., permanent memory).
- **ram** - Event history stored in temporary RAM (i.e., memory flushed on power reset).
- *level* - One of the level arguments listed below. Messages sent include the selected level down to level 0. (Range: 0-7)

Table 4-17. Logging Messages

Level Argument	Level	Description
debugging	7	Debugging messages
informational	6	Informational messages only
notifications	5	Normal but significant condition, such as cold start
warnings	4	Warning conditions (e.g., return false, unexpected return)
errors	3	Error conditions (e.g., invalid input, default used)
critical	2	Critical conditions (e.g., memory allocation, or free memory error - resource exhausted)
alerts	1	Immediate action needed
emergencies	0	System unusable

* There are only Level 2, 5 and 6 error messages for the current firmware release.

Default Setting

Flash: errors (level 3 - 0)
RAM: warnings (level 7 - 0)

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

The message level specified for flash memory must be a higher priority (i.e., numerically lower) than that specified for RAM.

Example

```
Console(config)#logging history ram 0
Console(config)#
```

logging host

This command adds a syslog server host IP address that will receive logging messages. Use the **no** form to remove a syslog server host.

Syntax

[**no**] **logging host** *host_ip_address*

host_ip_address - The IP address of a syslog server.

Default Setting

None

Command Mode

Global Configuration

Command Usage

- By using this command more than once you can build up a list of host IP addresses.
- The maximum number of host IP addresses allowed is five.

Example

```
Console(config)#logging host 10.1.0.3
Console(config)#
```

logging facility

This command sets the facility type for remote logging of syslog messages. Use the **no** form to return the type to the default.

Syntax

[**no**] **logging facility** *type*

type - A number that indicates the facility used by the syslog server to dispatch log messages to an appropriate service. (Range: 16-23)

Default Setting

23

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

The command specifies the facility type tag sent in syslog messages. (See RFC 3164.) This type has no effect on the kind of messages reported by the switch. However, it may be used by the syslog server to sort messages or to store messages in the corresponding database.

Example

```
Console(config)#logging facility 19
Console(config)#
```

logging trap

This command enables the logging of system messages to a remote server, or limits the syslog messages saved to a remote server based on severity. Use this command without a specified level to enable remote logging. Use the **no** form to disable remote logging.

Syntax

logging trap [*level*]
no logging trap

level - One of the level arguments listed below. Messages sent include the selected level up through level 0. (Refer to the table on page 4-42.)

Default Setting

Level 3 - 0

Command Mode

Global Configuration

Example

```
Console(config)#logging trap 4
Console(config)#
```

clear logging

This command clears messages from the log buffer.

Syntax

clear logging [**flash** | **ram**]

- **flash** - Event history stored in flash memory (i.e., permanent memory).
- **ram** - Event history stored in temporary RAM (i.e., memory flushed on power reset).

Default Setting

Flash and RAM

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#clear logging
Console#
```

Related Commands

show logging (4-45)

show logging

This command displays the logging configuration, along with any system and event messages stored in memory.

Syntax

show logging {**flash** | **ram** | **sendmail** | **trap**}

- **flash** - Event history stored in flash memory (i.e., permanent memory).
- **ram** - Event history stored in temporary RAM (i.e., memory flushed on power reset).
- **sendmail** - Displays settings for the SMTP event handler (page 4-49).
- **trap** - Displays settings for the trap function.

Default Setting

None

Command Mode

Privileged Exec

Example

The following example shows that system logging is enabled, the message level for flash memory is “errors” (i.e., default level 3 - 0), the message level for RAM is “debugging” (i.e., default level 7 - 0), and lists one sample error

```
Console#show logging flash
Syslog logging: Enable
History logging in FLASH: level errors
[0] 0:0:5 1/1/1 "PRI_MGR_InitDefault function fails."
   level: 3, module: 13, function: 0, and event no.: 0
Console#show logging ram
Syslog logging: Enable
History logging in RAM: level debugging
[0] 0:0:5 1/1/1 PRI_MGR_InitDefault function fails."
   level: 3, module: 13, function: 0, and event no.: 0
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Table 4-18. System Logging Parameters	
Field	**Description**
Syslog logging	Shows if system logging has been enabled via the **logging on** command.
History logging in FLASH	The message level(s) reported based on the **logging history** command.
History logging in RAM	The message level(s) reported based on the **logging history** command.
Messages	Any system and event messages stored in memory.

The following example displays settings for the trap function.

```
Console#show logging trap
Syslog logging:               Enabled
REMOTELOG status:             Enabled
REMOTELOG facility type:      local use 7
REMOTELOG level type:         Informational messages only
REMOTELOG server IP address: 192.168.1.6
REMOTELOG server IP address: 192.168.1.7
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
Console#
```

Table 4-19. Remote Logging Parameters	
Field	**Description**
Syslog logging	Shows if system logging has been enabled via the **logging on** command.
REMOTELOG status	Shows if remote logging has been enabled via the **logging trap** command.
REMOTELOG facility type	The facility type for remote logging of syslog messages as specified in the **logging facility** command.
REMOTELOG level type	The severity threshold for syslog messages sent to a remote server as specified in the **logging trap** command.
REMOTELOG server IP address	The address of syslog servers as specified in the **logging host** command.

Related Commands

show logging sendmail (4-49)

SMTP Alert Commands

Configures SMTP event handling, and forwarding of alert messages to the specified SMTP servers and email recipients.

Table 4-20. SMTP Alert Commands			
Command	**Function**	**Mode**	**Page**
logging sendmail host	SMTP servers to receive alert messages	GC	4-47
logging sendmail level	Severity threshold used to trigger alert messages	GC	4-47
logging sendmail source-email	Email address used for “From” field of alert messages	GC	4-48
logging sendmail destination-email	Email recipients of alert messages	GC	4-48

Downloaded from www.Manualslib.com manuals search engine

Table 4-20. SMTP Alert Commands			
Command	**Function**	**Mode**	**Page**
logging sendmail	Enables SMTP event handling	GC	4-49
show logging sendmail	Displays SMTP event handler settings	NE, PE	4-49

logging sendmail host

This command specifies SMTP servers that will be sent alert messages. Use the **no** form to remove an SMTP server.

Syntax

[**no**] **logging sendmail host** *ip_address*

ip_address - IP address of an SMTP server that will be sent alert messages for event handling.

Default Setting

None

Command Mode

Global Configuration

Command Usage

- You can specify up to three SMTP servers for event handing. However, you must enter a separate command to specify each server.
- To send email alerts, the switch first opens a connection, sends all the email alerts waiting in the queue one by one, and finally closes the connection.
- To open a connection, the switch first selects the server that successfully sent mail during the last connection, or the first server configured by this command. If it fails to send mail, the switch selects the next server in the list and tries to send mail again. If it still fails, the system will repeat the process at a periodic interval. (A trap will be triggered if the switch cannot successfully open a connection.)

Example

```
Console(config)#logging sendmail host 192.168.1.19
Console(config)#
```

logging sendmail level

This command sets the severity threshold used to trigger alert messages.

Syntax

logging sendmail level *level*

level - One of the system message levels (page 4-42). Messages sent include the selected level down to level 0. (Range: 0-7; Default: 7)

Default Setting

Level 7

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

The specified level indicates an event threshold. All events at this level or higher will be sent to the configured email recipients. (For example, using Level 7 will report all events from level 7 to level 0.)

Example

This example will send email alerts for system errors from level 3 through 0.

```
Console(config)#logging sendmail level 3
Console(config)#
```

logging sendmail source-email

This command sets the email address used for the “From” field in alert messages.

Syntax

logging sendmail source-email *email-address*

email-address - The source email address used in alert messages. (Range: 1-41 characters)

Default Setting

None

Command Mode

Global Configuration

Command Usage

You may use an symbolic email address that identifies the switch, or the address of an administrator responsible for the switch.

Example

This example will send email alerts for system errors from level 3 through 0.

```
Console(config)#logging sendmail source-email bill@this-company.com
Console(config)#
```

logging sendmail destination-email

This command specifies the email recipients of alert messages. Use the **no** form to remove a recipient.

Syntax

[**no**] **logging sendmail destination-email** *email-address*

email-address - The source email address used in alert messages. (Range: 1-41 characters)

Default Setting

None

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

You can specify up to five recipients for alert messages. However, you must enter a separate command to specify each recipient.

Example

```
Console(config)#logging sendmail destination-email ted@this-company.com
Console(config)#
```

logging sendmail

This command enables SMTP event handling. Use the **no** form to disable this function.

Syntax

[**no**] **logging sendmail**

Default Setting

Disabled

Command Mode

Global Configuration

Example

```
Console(config)#logging sendmail
Console(config)#
```

show logging sendmail

This command displays the settings for the SMTP event handler.

Command Mode

Normal Exec, Privileged Exec

Example

```
Console#show logging sendmail
SMTP servers
-----------------------------------------------
Active SMTP server: 0.0.0.0

SMTP minimum severity level: 7

SMTP destination email addresses
-----------------------------------------------
ted@this-company.com

SMTP source email address: bill@this-company.com

SMTP status: Enable

Console#
```


Downloaded from www.Manualslib.com manuals search engine

Time Commands

The system clock can be dynamically set by polling a set of specified time servers (NTP or SNTP).

Table 4-21. Time Commands

Command	Function	Mode	Page
sntp client	Accepts time from specified time servers	GC	4-50
sntp server	Specifies one or more time servers	GC	4-51
sntp poll	Sets the interval at which the client polls for time	GC	4-52
show sntp	Shows current SNTP configuration settings	NE, PE	4-52
clock timezone	Sets the time zone for the switch's internal clock	GC	4-53
calendar set	Sets the system date and time	PE	4-53
show calendar	Displays the current date and time setting	NE, PE	4-54

sntp client

This command enables SNTP client requests for time synchronization from NTP or SNTP time servers specified with the **sntp servers** command. Use the **no** form to disable SNTP client requests.

Syntax

[**no**] **sntp client**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

- The time acquired from time servers is used to record accurate dates and times for log events. Without SNTP, the switch only records the time starting from the factory default set at the last bootup (i.e., 00:00:00, Jan. 1, 2001).
- This command enables client time requests to time servers specified via the **sntp servers** command. It issues time synchronization requests based on the interval set via the **sntp poll** command.
- The SNTP time query method is set to client mode when the first **sntp client** command is issued.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#sntp server 10.1.0.19
Console(config)#sntp poll 60
Console(config)#sntp client
Console(config)#end
Console#show sntp
Current time:  Dec 23 02:52:44 2002
Poll interval: 60
Current mode: unicast
Console#
```

Related Commands

sntp server (4-51)
sntp poll (4-52)
show sntp (4-52)

sntp server

This command sets the IP address of the servers to which SNTP time requests are issued. Use the this command with no arguments to clear all time servers from the current list.

Syntax

sntp server [*ip1* [*ip2* [*ip3*]]]

ip - IP address of an time server (NTP or SNTP).
(Range: 1 - 3 addresses)

Default Setting

None

Command Mode

Global Configuration

Command Usage

This command specifies time servers from which the switch will poll for time updates when set to SNTP client mode. The client will poll the time servers in the order specified until a response is received. It issues time synchronization requests based on the interval set via the **sntp poll** command.

Example

```
Console(config)#sntp server 10.1.0.19
Console#
```

Related Commands

sntp client (4-50)
sntp poll (4-52)
show sntp (4-52)

Downloaded from www.Manualslib.com manuals search engine

sntp poll

This command sets the interval between sending time requests when the switch is set to SNTP client mode. Use the **no** form to restore to the default.

Syntax

sntp poll *seconds*
no sntp poll

seconds - Interval between time requests. (Range: 16-16384 seconds)

Default Setting

16 seconds

Command Mode

Global Configuration

Command Usage

This command is only applicable when the switch is set to SNTP client mode.

Example

```
Console(config)#sntp poll 60
Console#
```

Related Commands

sntp client (4-50)

show sntp

This command displays the current time and configuration settings for the SNTP client, and indicates whether or not the local time has been properly updated.

Command Mode

Normal Exec, Privileged Exec

Command Usage

This command displays the current time, the poll interval used for sending time synchronization requests.

Example

```
Console#show sntp
Current time:  Jan  6 14:56:05 2004
Poll interval: 60
Current  mode:  unicast
SNTP status : Enabled
SNTP server 10.1.0.11 137.82.140.80 128.250.36.2
Current server: 128.250.36.2
Console#
```


Downloaded from www.Manualslib.com manuals search engine

clock timezone

This command sets the time zone for the switch's internal clock.

Syntax

clock timezone *name* **hour** *hours* **minute** *minutes* {**before-utc** | **after-utc**}

- *name* - Name of timezone, usually an acronym. (Range: 1-29 characters)
- *hours* - Number of hours before/after UTC. (Range: 1-12 hours)
- *minutes* - Number of minutes before/after UTC. (Range: 0-59 minutes)
- **before-utc** - Sets the local time zone before (east) of UTC.
- **after-utc** - Sets the local time zone after (west) of UTC.

Default Setting

None

Command Mode

Global Configuration

Command Usage

This command sets the local time zone relative to the Coordinated Universal Time (UTC, formerly Greenwich Mean Time or GMT), based on the earth's prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must indicate the number of hours and minutes your time zone is east (before) or west (after) of UTC.

Example

```
Console(config)#clock timezone Japan hours 8 minute 0 after-UTC
Console(config)#
```

Related Commands

show sntp (4-52)

calendar set

This command sets the system clock.

Syntax

calendar set *hour min sec* {*day month year* | *month day year*}

- *hour* - Hour in 24-hour format. (Range: 0 - 23)
- *min* - Minute. (Range: 0 - 59)
- *sec* - Second. (Range: 0 - 59)
- *day* - Day of month. (Range: 1 - 31)
- *month* - **january** | **february** | **march** | **april** | **may** | **june** | **july** | **august** | **september** | **october** | **november** | **december**
- *year* - Year (4-digit). (Range: 2001 - 2101)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Privileged Exec

Example

This example shows how to set the system clock to 15:12:34, February 1st, 2002.

```
Console#calendar set 15:12:34 1 February 2002
Console#
```

show calendar

This command displays the system clock.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Example

```
Console#show calendar set
 15:12:34 February 1 2002
Console#
```

System Status Commands

Table 4-22. System Status Commands

Command	Function	Mode	Page
show startup-config	Displays the contents of the configuration file (stored in flash memory) that is used to start up the system	PE	4-54
show running-config	Displays the configuration data currently in use	PE	4-57
show system	Displays system information	NE, PE	4-59
show users	Shows all active console and Telnet sessions, including user name, idle time, and IP address of Telnet clients	NE, PE	4-60
show version	Displays version information for the system	NE, PE	4-60

show startup-config

This command displays the configuration file stored in non-volatile memory that is used to start up the system.

Default Setting

None

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- Use this command in conjunction with the **show running-config** command to compare the information in running memory to the information stored in non-volatile memory.
- This command displays settings for key command modes. Each mode group is separated by “!” symbols, and includes the configuration mode command, and corresponding commands. This command displays the following information:
  - SNMP community strings
  - Users (names and access levels)
  - VLAN database (VLAN ID, name and state)
  - VLAN configuration settings for each interface
  - Multiple spanning tree instances (name and interfaces)
  - IP address configured for VLANs
  - Routing protocol configuration settings
  - Spanning tree settings
  - Any configured settings for the console port and Telnet

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show startup-config
building startup-config, please wait.....
!
sntp server 0.0.0.0 0.0.0.0 0.0.0.0
!
snmp-server community public ro
snmp-server community private rw
!
snmp-server group DefaultROGroup v1 read defaultview write none
snmp-server group DefaultROGroup v2c read defaultview write none
snmp-server group DefaultRWGroup v1 read defaultview write defaultview
snmp-server group DefaultRWGroup v2c read defaultview write defaultview
snmp-server view defaultview 1 included
!
username admin access-level 15
username admin password 7 21232f297a57a5a743894a0e4a801fc3
username guest access-level 0
username guest password 7 084e0343a0486ff05530df6c705c8bb4
enable password level 15 7 1b3231655cebb7a1f783eddf27d254ca
!
!
vlan database
 vlan 1 name DefaultVlan media ethernet state active
!
spanning-tree mst-configuration
!
interface ethernet 1/1
 switchport allowed vlan add 1 untagged
 switchport native vlan 1
 lacp partner admin-key 0
!
!
!
no map ip precedence
no map ip dscp
!
!
!
line console
!
!
line vty
!
!
end

Console#
```

Related Commands

show running-config (4-57)

Downloaded from www.Manualslib.com manuals search engine

show running-config

This command displays the configuration information currently in use.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- Use this command in conjunction with the **show startup-config** command to compare the information in running memory to the information stored in non-volatile memory.
- This command displays settings for key command modes. Each mode group is separated by "!" symbols, and includes the configuration mode command, and corresponding commands. This command displays the following information:
  - SNMP community strings
  - Users (names, access levels, and encrypted passwords)
  - VLAN database (VLAN ID, name and state)
  - VLAN configuration settings for each interface
  - Multiple spanning tree instances (name and interfaces)
  - IP address configured for VLANs
  - Spanning tree settings
  - Any configured settings for the console port and Telnet

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show running-config
building running-config, please wait.....
!
sntp server 0.0.0.0 0.0.0.0 0.0.0.0
!
!
snmp-server community public ro
snmp-server community private rw
!
snmp-server group DefaultROGroup v1 read defaultview write none
snmp-server group DefaultROGroup v2c read defaultview write none
snmp-server group DefaultRWGroup v1 read defaultview write defaultview
snmp-server group DefaultRWGroup v2c read defaultview write defaultview
snmp-server view defaultview 1 included
!
username admin access-level 15
username admin password 7 21232f297a57a5a743894a0e4a801fc3
username guest access-level 0
username guest password 7 084e0343a0486ff05530df6c705c8bb4
enable password level 15 7 1b3231655cebb7a1f783eddf27d254ca
!
!
vlan database
 vlan 1 name DefaultVlan media ethernet state active
!
spanning-tree mst-configuration
!
interface ethernet 1/2
 switchport allowed vlan add 1 untagged
 switchport native vlan 1
 queue cos-map 0 0
 queue cos-map 1 1
 queue cos-map 2 2
.
!
interface vlan 1
 ip address 10.1.0.1 255.255.255.0
!
no map ip precedence
map ip dscp
queue bandwidth 1 3 5 7
!
!
queue mode strict
!
!
line console
!
!
line vty
!
end
!
Console#
```

Related Commands

show startup-config (4-54)

Downloaded from www.Manualslib.com manuals search engine

show system

This command displays system information.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Command Usage

- For a description of the items shown by this command, refer to “Displaying System Information” on page 3-8.
- The POST results should all display “PASS.” If any POST test indicates “FAIL,” contact your distributor for assistance.

Example

```
Console#show system
System description: OmniStack*24 10/100/1000
System OID string: 1.3.6.1.4.1.6486.800.1.1.2.1.5.1.1
System information
 System Up time: 0 days, 1 hours, 10 minutes, and 42.13 seconds
 System Name            : [NONE]
 System Location        : [NONE]
 System Contact         : [NONE]
 MAC address            : 00-30-F1-99-B3-DB
 Web server             : enable
 Web server port        : 80
 Web secure server      : enable
 Web secure server port : 443
 POST result
UART LOOP BACK Test.........PASS
DRAM Test...................PASS
Timer Test..................PASS
PCI Device 1 Test...........PASS
PCI Device 2 Test...........PASS
Switch Int Loopback test.....PASS

Done All Pass.
Console#
```


Downloaded from www.Manualslib.com manuals search engine

show users

Shows all active console and Telnet sessions, including user name, idle time, and IP address of Telnet client.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Command Usage

The session used to execute this command is indicated by a "*" symbol next to the Line (i.e., session) index number.

Example

```
Console#show users
 Username accounts:
  Username Privilege Public-Key
  -------- --------- ----------
     admin        15       None
     guest         0       None

 Online users:
  Line        Username Idle time (h:m:s) Remote IP addr.
  ----------- -------- ----------------- ---------------
* 0   console    admin           0:00:00
  1     vty 0    admin           0:04:37      10.1.0.19

 Web online users:
  Line        Remote IP addr Username Idle time (h:m:s).
  ----------- -------------- -------- ------------------
 1      HTTP   192.168.1.10    admin           0:00:16

Console#
```

show version

This command displays hardware and software version information for the system.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Command Usage

See "Displaying Switch Hardware/Software Versions" on page 3-10 for detailed information on the items displayed by this command.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show version
Unit1
 Serial number           :A329025054
 Hardware version        :R01
 Number of ports         :24
 Main power status       :up
 Redundant power status :not present
Agent(Primary)
 Unit id                 :1
 Loader version          :2.1.0.2
 Boot rom version        :2.0.2.11
 Operation code version :1.0.0.3
Console#
```

Frame Size Commands

Table 4-23. Frame Size Commands

Command	Function	Mode	Page
jumbo frame	Enables support for jumbo frames	GC	4-61

jumbo frame

This command enables support for jumbo frames. Use the **no** form to disable it.

Syntax

[**no**] **jumbo frame**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

- This switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames up to 9216 bytes. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.
- To use jumbo frames, both the source and destination end nodes (such as a computer or server) must support this feature. Also, when the connection is operating at full duplex, all switches in the network between the two end nodes must be able to accept the extended frame size. And for half-duplex connections, all devices in the collision domain would need to support jumbo frames.
- Enabling jumbo frames will limit the maximum threshold for broadcast storm control to 64 packets per second. (See the **switchport broadcast** command on page 4-136.)

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#jumbo frame
Console(config)#
```

Flash/File Commands

These commands are used to manage the system code or configuration files.

Table 4-24. Flash/File Commands

Command	Function	Mode	Page
copy	Copies a code image or a switch configuration to or from flash memory or a TFTP server	PE	4-62
delete	Deletes a file or code image	PE	4-64
dir	Displays a list of files in flash memory	PE	4-65
whichboot	Displays the files booted	PE	4-66
boot system	Specifies the file or image used to start up the system	GC	4-66

copy

This command moves (upload/download) a code image or configuration file between the switch's flash memory and a TFTP server. When you save the system code or configuration settings to a file on a TFTP server, that file can later be downloaded to the switch to restore system operation. The success of the file transfer depends on the accessibility of the TFTP server and the quality of the network connection.

Syntax

copy file {**file** | **running-config** | **startup-config** | **tftp** | **unit**}
copy running-config {**file** | **startup-config** | **tftp**}
copy startup-config {**file** | **running-config** | **tftp**}
copy tftp {**https secure-certificate** | **file** | **public-key** | **running-config** | **startup-config** }
copy unit file

- **file** - Keyword that allows you to copy to/from a file.
- **running-config** - Keyword that allows you to copy to/from the current running configuration.
- **startup-config** - The configuration used for system initialization.
- **tftp** - Keyword that allows you to copy to/from a TFTP server.
- **unit** - Keyword that allows you to copy to/from a specific unit in the stack.
- **https secure-certificate** - Keyword that allows you to copy the https secure site certificate.
- **public-key** - Keyword that allows you to copy a SSH key from a TFTP server.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- The system prompts for data required to complete the copy command.
- The destination file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names on the TFTP server is 127 characters or 31 characters for files on the switch. (Valid characters: A-Z, a-z, 0-9, ".", "-", "_")
- Due to the size limit of the flash memory, the switch supports only two operation code files.
- The maximum number of user-defined configuration files depends on available memory.
- You can use "Factory_Default_Config.cfg" as the source to copy from the factory default configuration file, but you cannot use it as the destination.
- To replace the startup configuration, you must use **startup-config** as the destination.
- The Boot ROM and Loader cannot be uploaded or downloaded from the TFTP server. You must use a direct console connection and access the download menu during a boot up to download the Boot ROM (or diagnostic) image. See "Upgrading Firmware via the Serial Port" on page B-1 for more details.

Example

The following example shows how to upload the configuration settings to a file on the TFTP server:

```
Console#copy file tftp
Choose file type:
 1. config:  2. opcode: <1-2>: 1
Source file name: startup
TFTP server ip address: 10.1.0.99
Destination file name: startup.01
TFTP completed.
Success.

Console#
```

The following example shows how to copy the running configuration to a startup file.

```
Console#copy running-config file
Destination configuration file name: STARTUP
Write to FLASH Programming.
Write to FLASH finish.
Success.
Console#
```


Downloaded from www.Manualslib.com manuals search engine

The following example shows how to download a configuration file:

```
Console#copy tftp startup-config
TFTP server ip address: 10.1.0.99
Source configuration file name: startup.01
Startup configuration file name [startup]:
Write to FLASH Programming.

\Write to FLASH finish.
Success.

Console#
```

This example shows how to copy a secure-site certificate from an TFTP server. It then reboots the switch to activate the certificate:

```
Console#copy tftp https-certificate
TFTP server ip address: 10.1.0.19
Source certificate file name: SS-certificate
Source private file name: SS-private
Private password: ********

Success.
Console#reload
System will be restarted, continue <y/n>? y
```

This example shows how to copy a public-key used by SSH from an TFTP server. Note that public key authentication via SSH is only supported for users configured locally on the switch.

```
Console#copy tftp public-key
TFTP server IP address: 192.168.1.19
Choose public key type:
 1. RSA:  2. DSA: <1-2>: 1
Source file name: steve.pub
Username: steve
TFTP Download
Success.
Write to FLASH Programming.
Success.

Console#
```

delete

This command deletes a file or image.

Syntax

delete *filename*

filename - Name of the configuration file or image name.

Default Setting

None

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- If the file type is used for system startup, then this file cannot be deleted.
- "Factory_Default_Config.cfg" cannot be deleted.

Example

This example shows how to delete the test2.cfg configuration file from flash memory.

```
Console#delete test2.cfg
Console#
```

Related Commands

dir (4-65)
delete public-key (4-64)

dir

This command displays a list of files in flash memory.

Syntax

dir [**boot-rom** | **config** | **opcode** [:*filename*]]

The type of file or image to display includes:

- **boot-rom** - Boot ROM (or diagnostic) image file.
- **config** - Switch configuration file.
- **opcode** - Run-time operation code image file.
- *filename* - Name of the file or image. If this file exists but contains errors, information on this file cannot be shown.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- If you enter the command **dir** without any parameters, the system displays all files.
- File information is shown below:

Table 4-25. File Directory

Column Heading	Description
file name	The name of the file.
file type	File types: Boot-Rom, Operation Code, and Config file.
startup	Shows if this file is used when the system is started.
size	The length of the file in bytes.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example shows how to display all file information:

```
Console#dir
                        file name      file type startup size (byte)
 ------------------------------ -------------- ------- -----------
                     diag2.0.2.2 Boot-Rom image       Y      813880
                        4524C_61 Operation Code       Y     2184064
       Factory_Default_Config.cfg    Config File       N         374
                         startup    Config File       N        2827
                  startup-config    Config File       Y        2863
 ------------------------------------------------------------------
                                       Total free space:   3932160
Console#
```

whichboot

This command displays which files were booted when the system powered up.

Default Setting

None

Command Mode

Privileged Exec

Example

This example shows the information displayed by the **whichboot** command. See the table under the **dir** command for a description of the file information displayed by this command.

```
Console#whichboot
                        file name      file type startup size (byte)
 ------------------------------ -------------- ------- -----------
                     diag2.0.2.2 Boot-Rom image       Y      813880
                        4524C_61 Operation Code       Y     2184064
                  startup-config    Config File       Y        2863
Console#
```

boot system

This command specifies the image used to start up the system.

Syntax

boot system {**boot-rom**| **config** | **opcode**}: *filename*

The type of file or image to set as a default includes:

- **boot-rom** - Boot ROM.
- **config** - Configuration file.
- **opcode** - Run-time operation code.

The colon (:) is required.

filename - Name of the configuration file or image name.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Global Configuration

Command Usage

- A colon (:) is required after the specified file type.
- If the file contains an error, it cannot be set as the default file.

Example

```
Console(config)#boot system config: startup
Console(config)#
```

Related Commands

dir (4-65)
whichboot (4-66)

Authentication Commands

You can configure this switch to authenticate users logging into the system for management access using local or RADIUS authentication methods. You can also enable port-based authentication for network client access using IEEE 802.1x.

Table 4-26. Authentication Commands

Command Group	Function	Page
Authentication Sequence	Defines logon authentication method and precedence	4-67
RADIUS Client	Configures settings for authentication via a RADIUS server	4-70
TACACS+ Client	Configures settings for authentication via a TACACS+ server	4-73
Port Security	Configures secure addresses for a port	4-75
Port Authentication	Configures host authentication on specific ports using 802.1x	4-76

Authentication Sequence

Table 4-27. Authentication Sequence

Command	Function	Mode	Page
authentication login	Defines logon authentication method and precedence	GC	4-68
authentication enable	Defines the authentication method and precedence for command mode change	GC	4-69

Downloaded from www.Manualslib.com manuals search engine

authentication login

This command defines the login authentication method and precedence. Use the **no** form to restore the default.

Syntax

authentication login {[**local**] [**radius**] [**tacacs**]}
no authentication login

- **local** - Use local password.
- **radius** - Use RADIUS server password.
- **tacacs** - Use TACACS server password.

Default Setting

Local

Command Mode

Global Configuration

Command Usage

- RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a connection-oriented transport. Also, note that RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.
- RADIUS and TACACS+ logon authentication assigns a specific privilege level for each user name and password pair. The user name, password, and privilege level must be configured on the authentication server.
- You can specify three authentication methods in a single command to indicate the authentication sequence. For example, if you enter "**authentication login radius tacacs local**," the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted on the TACACS+ server. If the TACACS+ server is not available, the local user name and password is checked.

Example

```
Console(config)#authentication login radius
Console(config)#
```

Related Commands

username - for setting the local user names and passwords (4-25)

Downloaded from www.Manualslib.com manuals search engine

authentication enable

This command defines the authentication method and precedence to use when changing from Exec command mode to Privileged Exec command mode with the **enable** command (see page 4-19). Use the **no** form to restore the default.

Syntax

authentication enable {[**local**] [**radius**] [**tacacs**]}
no authentication enable

- **local** - Use local password only.
- **radius** - Use RADIUS server password only.
- **tacacs** - Use TACACS server password.

Default Setting

Local

Command Mode

Global Configuration

Command Usage

- RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a connection-oriented transport. Also, note that RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.
- RADIUS and TACACS+ logon authentication assigns a specific privilege level for each user name and password pair. The user name, password, and privilege level must be configured on the authentication server.
- You can specify three authentication methods in a single command to indicate the authentication sequence. For example, if you enter "**authentication enable radius tacacs local**," the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted on the TACACS+ server. If the TACACS+ server is not available, the local user name and password is checked.

Example

```
Console(config)#authentication enable radius
Console(config)#
```

Related Commands

enable password (4-26)

Downloaded from www.Manualslib.com manuals search engine

RADIUS Client

Remote Authentication Dial-in User Service (RADIUS) is a logon authentication protocol that uses software running on a central server to control access to RADIUS-aware devices on the network. An authentication server contains a database of multiple user name/password pairs with associated privilege levels for each user or group that require management access to a switch.

Table 4-28. RADIUS Commands

Command	Function	Mode	Page
radius-server host	Specifies the RADIUS server	GC	4-70
radius-server port	Sets the RADIUS server network port	GC	4-70
radius-server key	Sets the RADIUS encryption key	GC	4-71
radius-server retransmit	Sets the number of retries	GC	4-71
radius-server timeout	Sets the interval between sending authentication requests	GC	4-72
show radius-server	Shows the current RADIUS settings	PE	4-72

radius-server host

This command specifies the RADIUS server. Use the **no** form to restore the default.

Syntax

radius-server host *host_ip_address*
no radius-server host
host_ip_address - IP address of server.

Default Setting

10.1.0.1

Command Mode

Global Configuration

Example

```
Console(config)#radius-server host 192.168.1.25
Console(config)#
```

radius-server port

This command sets the RADIUS server network port. Use the **no** form to restore the default.

Syntax

radius-server port *port_number*
no radius-server port

port_number - RADIUS server UDP port used for authentication messages. (Range: 1-65535)

Default Setting

1812

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Example

```
Console(config)#radius-server port 181
Console(config)#
```

radius-server key

This command sets the RADIUS encryption key. Use the **no** form to restore the default.

Syntax

radius-server key *key_string*
no radius-server key

key_string - Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 20 characters)

Default Setting

None

Command Mode

Global Configuration

Example

```
Console(config)#radius-server key green
Console(config)#
```

radius-server retransmit

This command sets the number of retries. Use the **no** form to restore the default.

Syntax

radius-server retransmit *number_of_retries*
no radius-server retransmit

number_of_retries - Number of times the switch will try to authenticate logon access via the RADIUS server. (Range: 1 - 30)

Default Setting

2

Command Mode

Global Configuration

Example

```
Console(config)#radius-server retransmit 5
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

radius-server timeout

This command sets the interval between transmitting authentication requests to the RADIUS server. Use the **no** form to restore the default.

Syntax

radius-server timeout *number_of_seconds*
no radius-server timeout

number_of_seconds - Number of seconds the switch waits for a reply before resending a request. (Range: 1-65535)

Default Setting

5

Command Mode

Global Configuration

Example

```
Console(config)#radius-server timeout 10
Console(config)#
```

show radius-server

This command displays the current settings for the RADIUS server.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show radius-server

Remote RADIUS server configuration:

Global settings:
 Communication key with RADIUS server: *****
 Server port number:                   181
 Retransmit times:                     5
 Request timeout:                      10

Server 1:
 Server IP address: 192.168.1.25
 Communication key with RADIUS server: *****
 Server port number: 181
 Retransmit times: 5
 Request timeout: 10
Console#
```


Downloaded from www.Manualslib.com manuals search engine

TACACS+ Client

Terminal Access Controller Access Control System (TACACS+) is a logon authentication protocol that uses software running on a central server to control access to TACACS-aware devices on the network. An authentication server contains a database of multiple user name/password pairs with associated privilege levels for each user or group that require management access to a switch.

Table 4-29. TACACS+ Commands

Command	Function	Mode	Page
tacacs-server host	Specifies the TACACS+ server	GC	4-73
tacacs-server port	Specifies the TACACS+ server network port	GC	4-73
tacacs-server key	Sets the TACACS+ encryption key	GC	4-74
show tacacs-server	Shows the current TACACS+ settings	GC	4-74

tacacs-server host

This command specifies the TACACS+ server. Use the **no** form to restore the default.

Syntax

tacacs-server host *host_ip_address*
no tacacs-server host

host_ip_address - IP address of a TACACS+ server.

Default Setting

10.11.12.13

Command Mode

Global Configuration

Example

```
Console(config)#tacacs-server host 192.168.1.25
Console(config)#
```

tacacs-server port

This command specifies the TACACS+ server network port. Use the **no** form to restore the default.

Syntax

tacacs-server port *port_number*
no tacacs-server port

port_number - TACACS+ server TCP port used for authentication messages. (Range: 1-65535)

Default Setting

49

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Example

```
Console(config)#tacacs-server port 181
Console(config)#
```

tacacs-server key

This command sets the TACACS+ encryption key. Use the **no** form to restore the default.

Syntax

tacacs-server key *key_string*
no tacacs-server key

key_string - Encryption key used to authenticate logon access for the client. Do not use blank spaces in the string.
(Maximum length: 20 characters)

Default Setting

None

Command Mode

Global Configuration

Example

```
Console(config)#tacacs-server key green
Console(config)#
```

show tacacs-server

This command displays the current settings for the TACACS+ server.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show tacacs-server
Remote TACACS server configuration:
 Server IP address: 10.11.12.13
 Communication key with radius server: green
 Server port number: 49
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Port Security Commands

These commands can be used to disable the learning function or manually specify secure addresses for a port. You may want to leave port security off for an initial training period (i.e., enable the learning function) to register all the current VLAN members on the selected port, and then enable port security to ensure that the port will drop any incoming frames with a source MAC address that is unknown or has been previously learned from another port.

Table 4-30. Port Security Commands

Command	Function	Mode	Page
port security	Configures a secure port	IC	4-75
mac-address-table static	Maps a static address to a port in a VLAN	GC	4-157
show mac-address-table	Displays entries in the bridge-forwarding database	PE	4-158

port security

This command enables or configures port security. Use the **no** form without any keywords to disable port security. Use the **no** form with the appropriate keyword to restore the default settings for a response to security violation or for the maximum number of allowed addresses.

Syntax

port security [**action** {**shutdown** | **trap** | **trap-and-shutdown**} | **max-mac-count** *address-count*]
no port security [**action** | **max-mac-count**]

- **action** - Response to take when port security is violated.
  - **shutdown** - Disable port only.
  - **trap** - Issue SNMP trap message only.
  - **trap-and-shutdown** - Issue SNMP trap message and disable port.
- **max-mac-count**
  - *address-count* - The maximum number of MAC addresses that can be learned on a port. (Range: 0 - 20)

Default Setting

Status: Disabled
Action: None
Maximum Addresses: 0

Command Mode

Interface Configuration (Ethernet)

Command Usage

- If you enable port security, the switch will stop dynamically learning new addresses on the specified port. Only incoming traffic with source addresses already stored in the dynamic or static address table will be accepted.

Downloaded from www.Manualslib.com manuals search engine

- To use port security, first allow the switch to dynamically learn the <source MAC address, VLAN> pair for frames received on a port for an initial training period, and then enable port security to stop address learning. Be sure you enable the learning function long enough to ensure that all valid VLAN members have been registered on the selected port.
- To add new VLAN members at a later time, you can manually add secure addresses with the **mac-address-table static** command, or turn off port security to re-enable the learning function long enough for new VLAN members to be registered. Learning may then be disabled again, if desired, for security.
- A secure port has the following restrictions:
  - Cannot use port monitoring.
  - Cannot be a multi-VLAN port.
  - Cannot be connected to a network interconnection device.
  - Cannot be a trunk port.
- If a port is disabled due to a security violation, it must be manually re-enabled using the **no shutdown** command.

Example

The following example enables port security for port 5, and sets the response to a security violation to issue a trap message:

```
Console(config)#interface ethernet 1/5
Console(config-if)#port security action trap
```

Related Commands

shutdown (4-135)
mac-address-table static (4-157)
show mac-address-table (4-158)

802.1x Port Authentication

The switch supports IEEE 802.1x (dot1x) port-based access control that prevents unauthorized access to the network by requiring users to first submit credentials for authentication. Client authentication is controlled centrally by a RADIUS server using EAP (Extensible Authentication Protocol).

Table 4-31. 802.1X Port Authentication Commands

Command	Function	Mode	Page
authentication dot1x default	Sets the default authentication server type	GC	4-77
dot1x default	Resets all dot1x parameters to their default values	GC	4-77
dot1x max-req	Sets the maximum number of times that the switch retransmits an EAP request/identity packet to the client before it times out the authentication session	GC	4-78
dot1x port-control	Sets dot1x mode for a port interface	IC	4-78
dot1x operation-mode	Allows single or multiple hosts on an dot1x port	IC	4-79
dot1x re-authenticate	Forces re-authentication on specific ports	PE	4-79
dot1x re-authentication	Enables re-authentication for all ports	GC	4-80

Downloaded from www.Manualslib.com manuals search engine

Table 4-31. 802.1X Port Authentication Commands			
Command	**Function**	**Mode**	**Page**
dot1x timeout quiet-period	Sets the time that a switch port waits after the Max Request Count has been exceeded before attempting to acquire a new client	GC	4-80
dot1x timeout re-authperiod	Sets the time period after which a connected client must be re-authenticated	GC	4-80
dot1x timeout tx-period	Sets the time period during an authentication session that the switch waits before re-transmitting an EAP packet	GC	4-81
show dot1x	Shows all dot1x related information	PE	4-81

authentication dot1x default

This command sets the default authentication server type. Use the **no** form to restore the default.

Syntax

authentication dot1x default radius
no authentication dot1x

Default Setting

RADIUS

Command Mode

Global Configuration

Example

```
Console(config)#authentication dot1x default radius
Console(config)#
```

dot1x default

This command sets all configurable dot1x global and port settings to their default values.

Syntax

dot1x default

Command Mode

Global Configuration

Example

```
Console(config)#dot1x default
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

dot1x max-req

This command sets the maximum number of times the switch port will retransmit an EAP request/identity packet to the client before it times out the authentication session. Use the **no** form to restore the default.

Syntax

dot1x max-req *count*
no dot1x max-req

count – The maximum number of requests (Range: 1-10)

Default

2

Command Mode

Global Configuration

Example

```
Console(config)#dot1x max-req 2
Console(config)#
```

dot1x port-control

This command sets the dot1x mode on a port interface. Use the **no** form to restore the default.

Syntax

dot1x port-control {**auto** | **force-authorized** | **force-unauthorized**}
no dot1x port-control

- **auto** – Requires a dot1x-aware connected client to be authorized by the RADIUS server. Clients that are not dot1x-aware will be denied access.
- **force-authorized** – Configures the port to grant access to all clients, either dot1x-aware or otherwise.
- **force-unauthorized** – Configures the port to deny access to all clients, either dot1x-aware or otherwise.

Default

force-authorized

Command Mode

Interface Configuration

Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x port-control auto
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

dot1x operation-mode

This command allows single or multiple hosts (clients) to connect to an 802.1X-authorized port. Use the **no** form with no keywords to restore the default to single host. Use the **no** form with the **multi-host max-count** keywords to restore the default maximum count.

Syntax

dot1x operation-mode {**single-host** | **multi-host** [**max-count** *count*]}
no dot1x operation-mode [**multi-host max-count**]

- **single-host** – Allows only a single host to connect to this port.
- **multi-host** – Allows multiple host to connect to this port.
- **max-count** – Keyword for the maximum number of hosts.
  - *count* – The maximum number of hosts that can connect to a port. (Range: 1-20; Default: 5)

Default

Single-host

Command Mode

Interface Configuration

Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x operation-mode multi-host max-count 10
Console(config-if)#
```

dot1x re-authenticate

This command forces re-authentication on all ports or a specific interface.

Syntax

dot1x re-authenticate [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.

Command Mode

Privileged Exec

Example

```
Console#dot1x re-authenticate
Console#
```


Downloaded from www.Manualslib.com manuals search engine

dot1x re-authentication

This command enables periodic re-authentication globally for all ports. Use the **no** form to disable re-authentication.

Syntax

[**no**] **dot1x re-authentication**

Command Mode

Global Configuration

Example

```
Console(config)#dot1x re-authentication
Console(config)#
```

dot1x timeout quiet-period

This command sets the time that a switch port waits after the Max Request Count has been exceeded before attempting to acquire a new client. Use the **no** form to reset the default.

Syntax

dot1x timeout quiet-period *seconds*
no dot1x timeout quiet-period

seconds - The number of seconds. (Range: 1-65535)

Default

60 seconds

Command Mode

Global Configuration

Example

```
Console(config)#dot1x timeout quiet-period 350
Console(config)#
```

dot1x timeout re-authperiod

This command sets the time period after which a connected client must be re-authenticated.

Syntax

dot1x timeout re-authperiod *seconds*
no dot1x timeout re-authperiod

seconds - The number of seconds. (Range: 1-65535)

Default

3600 seconds

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Example

```
Console(config)#dot1x timeout re-authperiod 300
Console(config)#
```

dot1x timeout tx-period

This command sets the time that the switch waits during an authentication session before re-transmitting an EAP packet. Use the **no** form to reset to the default value.

Syntax

dot1x timeout tx-period *seconds*
no dot1x timeout tx-period

seconds - The number of seconds. (Range: 1-65535)

Default

30 seconds

Command Mode

Global Configuration

Example

```
Console(config)#dot1x timeout tx-period 300
Console(config)#
```

show dot1x

This command shows general port authentication related settings on the switch or a specific interface.

Syntax

show dot1x [**statistics**] [**interface** *interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Command Usage

This command displays the following information:

- *Global 802.1X Parameters* – Displays the global port access control parameters that can be configured for this switch as described in the preceding pages, including reauth-enabled (page 4-80), reauth-period (page 4-80), quiet-period (page 4-80), tx-period (page 4-81), and max-req (page 4-78). It also displays the following global parameters which are set to a fixed value, including the following items:
  - supp-timeout – Supplicant timeout.
  - server-timeout – Server timeout.
  - reauth-max – Maximum number of reauthentication attempts.
- *802.1X Port Summary* – Displays the port access control parameters for each interface, including the following items:
  - Status – Administrative state for port access control.
  - Mode – Dot1x port control mode (page 4-78).
  - Authorized – Authorization status (yes or n/a - not authorized).
- *802.1X Port Details* – Displays detailed port access control settings for each interface as described in the preceding pages, including administrative status for port access control, Max request (page 4-78), Quiet period (page 4-80), Reauth period (page 4-80), Tx period (page 4-81), and Port-control (page 4-78). It also displays the following information:
  - Status – Authorization status (authorized or unauthorized).
  - Supplicant – MAC address of authorized client.
- *Authenticator State Machine*
  - State – Current state (including initialize, disconnected, connecting, authenticating, authenticated, aborting, held, force_authorized, force_unauthorized).
  - Reauth Count – Number of times connecting state is re-entered.
- *Backend State Machine*
  - State – Current state (including request, response, success, fail, timeout, idle, initialize).
  - Request Count – Number of EAP Request packets sent to the Supplicant without receiving a response.
  - Identifier(Server) – Identifier carried in the most recent EAP Success, Failure or Request packet received from the Authentication Server.
- *Reauthentication State Machine*
  - State – Current state (including initialize, reauthenticate).

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show dot1x
Global 802.1X Parameters
 reauth-enabled: yes
 reauth-period:  300
 quiet-period:   350
 tx-period:      300
 supp-timeout:   30
 server-timeout: 30
 reauth-max:     2
 max-req:        2

802.1X Port Summary

Port Name    Status      Operation Mode    Mode              Authorized
       1/1   disabled    Single-Host       ForceAuthorized   n/a
       1/2   disabled    Single-Host       ForceAuthorized   n/a
.
.
       1/23  disabled    Single-Host       ForceAuthorized   yes
       1/24   disabled    Single-Host      ForceAuthorized   n/a

802.1X Port Details

802.1X is disabled on port 1
⋮
802.1X is enabled on port 24
Console#
```

Access Control List Commands

Access Control Lists (ACL) provide packet filtering for IP frames (based on address, protocol, Layer 4 protocol port number or TCP control code) or any frames (based on MAC address or Ethernet type). To filter packets, first create an access list, add the required rules, specify a mask to modify the precedence in which the rules are checked, and then bind the list to a specific port.

Access Control Lists

An ACL is a sequential list of permit or deny conditions that apply to IP addresses, MAC addresses, or other more specific criteria. This switch tests ingress or egress packets against the conditions in an ACL one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match for a list of all permit rules, the packet is dropped; and if no rules match for a list of all deny rules, the packet is accepted.

There are three filtering modes:

- Standard IP ACL mode (STD-ACL) filters packets based on the source IP address.
- Extended IP ACL mode (EXT-ACL) filters packets based on source or destination IP address, as well as protocol type and protocol port number. If the TCP protocol is specified, then you can also filter packets based on the TCP control code.

Downloaded from www.Manualslib.com manuals search engine

- MAC ACL mode (MAC-ACL) filters packets based on the source or destination MAC address and the Ethernet frame type (RFC 1060).

The following restrictions apply to ACLs:

- This switch supports ACLs for both ingress and egress filtering. However, you can only bind one IP ACL and one MAC ACL to any port for ingress filtering, and one IP ACL and one MAC ACL to any port for egress filtering. In other words, only four ACLs can be bound to an interface – Ingress IP ACL, Egress IP ACL, Ingress MAC ACL and Egress MAC ACL.
- When an ACL is bound to an interface as an egress filter, all entries in the ACL must be deny rules. Otherwise, the bind operation will fail.
- Each ACL can have up to 32 rules.
- The maximum number of ACLs is 41 per port.
- You must configure a mask for an ACL rule before you can bind it to a port or set the queue or frame priorities associated with the rule.
- The switch does not support the explicit “deny any any” rule for the egress IP ACL or the egress MAC ACLs. If these rules are included in ACL, and you attempt to bind the ACL to an interface for egress checking, the bind operation will fail.
- Egress MAC ACLs only work for destination-mac-known packets, not for multicast, broadcast, or destination-mac-unknown packets.

The order in which active ACLs are checked is as follows:

1. User-defined rules in the Egress MAC ACL for egress ports.
2. User-defined rules in the Egress IP ACL for egress ports.
3. User-defined rules in the Ingress MAC ACL for ingress ports.
4. User-defined rules in the Ingress IP ACL for ingress ports.
5. Explicit default rule (permit any any) in the ingress IP ACL for ingress ports.
6. Explicit default rule (permit any any) in the ingress MAC ACL for ingress ports.
7. If no explicit rule is matched, the implicit default is permit all.

Masks for Access Control Lists

You must specify masks that control the order in which ACL rules are checked. The switch includes two system default masks that pass/filter packets matching the permit/deny the rules specified in an ingress ACL. You can also configure up to seven user-defined masks for an ACL. A mask must be bound exclusively to one of the basic ACL types (i.e., Ingress IP ACL, Egress IP ACL, Ingress MAC ACL or Egress MAC ACL), but a mask can be bound to up to four ACLs of the same type.

Table 4-32. ACL Information

Command Groups	Function	Page
IP ACLs	Configures ACLs based on IP addresses, TCP/UDP port number, protocol type, and TCP control code	4-85
MAC ACLs	Configures ACLs based on hardware addresses, packet format, and Ethernet type	4-98
ACL Information	Displays ACLs and associated rules; shows ACLs assigned to each port	4-107

Downloaded from www.Manualslib.com manuals search engine

IP ACLs

Table 4-33. IP ACLs			
Command	**Function**	**Mode**	**Page**
access-list ip	Creates an IP ACL and enters configuration mode	GC	4-85
permit, deny	Filters packets matching a specified source IP address	STD-ACL	4-86
permit, deny	Filters packets meeting the specified criteria, including source and destination IP address, TCP/UDP port number, protocol type, and TCP control code	EXT-ACL	4-87
show ip access-list	Displays the rules for configured IP ACLs	PE	4-89
access-list ip mask-precedence	Changes to the mode for configuring access control masks	GC	4-89
mask	Sets a precedence mask for the ACL rules	IP-Mask	4-90
show access-list ip mask-precedence	Shows the ingress or egress rule masks for IP ACLs	PE	4-93
ip access-group	Adds a port to an IP ACL	IC	4-94
show ip access-group	Shows port assignments for IP ACLs	PE	4-94
map access-list ip	Sets the CoS value and corresponding output queue for packets matching an ACL rule	IC	4-95
show map access-list ip	Shows CoS value mapped to an access list for an interface	PE	4-96
match access-list ip	Changes the 802.1p priority, IP Precedence, or DSCP Priority of a frame matching the defined rule (i.e., also called packet marking)	IC	4-96
show marking	Displays the current configuration for packet marking	PE	4-97

access-list ip

This command adds an IP access list and enters configuration mode for standard or extended IP ACLs. Use the **no** form to remove the specified ACL.

Syntax

[**no**] **access-list ip** {**standard** | **extended**} *acl_name*

- **standard** – Specifies an ACL that filters packets based on the source IP address.
- **extended** – Specifies an ACL that filters packets based on the source or destination IP address, and other more specific criteria.
- *acl_name* – Name of the ACL. (Maximum length: 16 characters)

Default Setting

None

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- An egress ACL must contain all deny rules.
- When you create a new ACL or enter configuration mode for an existing ACL, use the **permit** or **deny** command to add new rules to the bottom of the list. To create an ACL, you must add at least one rule to the list.
- To remove a rule, use the **no permit** or **no deny** command followed by the exact text of a previously configured rule.
- An ACL can contain up to 32 rules.

Example

```
Console(config)#access-list ip standard david
Console(config-std-acl)#
```

Related Commands

permit, deny 4-86
ip access-group (4-94)
show ip access-list (4-89)

permit, **deny** (Standard ACL)

This command adds a rule to a Standard IP ACL. The rule sets a filter condition for packets emanating from the specified source. Use the **no** form to remove a rule.

Syntax

[**no**] {**permit | deny**} {**any** | *source bitmask* | **host** *source*}

- **any** – Any source IP address.
- *source* – Source IP address.
- *bitmask* – Decimal number representing the address bits to match.
- **host** – Keyword followed by a specific IP address.

Default Setting

None

Command Mode

Standard ACL

Command Usage

- New rules are appended to the end of the list.
- Address bitmasks are similar to a subnet mask, containing four integers from 0 to 255, each separated by a period. The binary mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The bitmask is bitwise ANDed with the specified source IP address, and then compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.

Downloaded from www.Manualslib.com manuals search engine

Example

This example configures one permit rule for the specific address 10.1.1.21 and another rule for the address range 168.92.16.x – 168.92.31.x using a bitmask.

```
Console(config-std-acl)#permit host 10.1.1.21
Console(config-std-acl)#permit 168.92.16.0 255.255.240.0
Console(config-std-acl)#
```

Related Commands

access-list ip (4-85)

permit, **deny** (Extended ACL)

This command adds a rule to an Extended IP ACL. The rule sets a filter condition for packets with specific source or destination IP addresses, protocol types, source or destination protocol ports, or TCP control codes. Use the **no** form to remove a rule.

Syntax

[**no**] {**permit | deny**} [*protocol-number* | **udp**]
{**any** | *source address-bitmask* | **host** *source*}
{**any** | *destination address-bitmask* | **host** *destination*}
[**precedence** *precedence*] [**tos** *tos*] [**dscp** *dscp***]
[**source-port** *sport* [*bitmask*]] [**destination-port** *dport* [*port-bitmask*]]

[**no**] {**permit | deny**} **tcp**
{**any** | *source address-bitmask* | **host** *source*}
{**any** | *destination address-bitmask* | **host** *destination*}
[**precedence** *precedence*] [**tos** *tos*] [**dscp** *dscp***]
[**source-port** *sport* [*bitmask*]] [**destination-port** *dport* [*port-bitmask*]]
[**control-flag** *control-flags flag-bitmask*]

- *protocol-number* – A specific protocol number. (Range: 0-255)
- *source* – Source IP address.
- *destination* – Destination IP address.
- *address-bitmask* – Decimal number representing the address bits to match.
- **host** – Keyword followed by a specific IP address.
- *precedence* – IP precedence level. (Range: 0-7)
- *tos* – Type of Service level. (Range: 0-15)
- *dscp* – DSCP priority level. (Range: 0-64)
- *sport* – Protocol* source port number. (Range: 0-65535)
- *dport* – Protocol* destination port number. (Range: 0-65535)
- *port-bitmask* – Decimal number representing the port bits to match. (Range: 0-65535)
- *control-flags* – Decimal number (representing a bit string) that specifies flag bits in byte 14 of the TCP header. (Range: 0-63)
- *flag-bitmask* – Decimal number representing the code bits to match.

* Includes TCP, UDP or other protocol types.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Extended ACL

Command Usage

- All new rules are appended to the end of the list.
- Address bitmasks are similar to a subnet mask, containing four integers from 0 to 255, each separated by a period. The binary mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The bitmask is bitwise ANDed with the specified source IP address, and then compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.
- You can specify both Precedence and ToS in the same rule. However, if DSCP is used, then neither Precedence nor ToS can be specified.
- The control-code bitmask is a decimal number (representing an equivalent bit mask) that is applied to the control code. Enter a decimal number, where the equivalent binary bit “1” means to match a bit and “0” means to ignore a bit. The following bits may be specified:
  - 1 (fin) – Finish
  - 2 (syn) – Synchronize
  - 4 (rst) – Reset
  - 8 (psh) – Push
  - 16 (ack) – Acknowledgement
  - 32 (urg) – Urgent pointer

  For example, use the code value and mask below to catch packets with the following flags set:
  - SYN flag valid, use “control-code 2 2”
  - Both SYN and ACK valid, use “control-code 18 18”
  - SYN valid and ACK invalid, use “control-code 2 18”

Example

This example accepts any incoming packets if the source address is within subnet 10.7.1.x. For example, if the rule is matched; i.e., the rule (10.7.1.0 & 255.255.255.0) equals the masked address (10.7.1.2 & 255.255.255.0), the packet passes through.

```
Console(config-ext-acl)#permit 10.7.1.1 255.255.255.0 any
Console(config-ext-acl)#
```

This allows TCP packets from class C addresses 192.168.1.0 to any destination address when set for destination TCP port 80 (i.e., HTTP).

```
Console(config-ext-acl)#permit 192.168.1.0 255.255.255.0 any dport 80
Console(config-ext-acl)#
```


Downloaded from www.Manualslib.com manuals search engine

This permits all TCP packets from class C addresses 192.168.1.0 with the TCP control code set to “SYN.”

```
Console(config-ext-acl)#permit 192.168.1.0 255.255.255.0 any tcp
  control-code 2 2
Console(config-ext-acl)#
```

Related Commands

access-list ip (4-85)

show ip access-list

This command displays the rules for configured IP ACLs.

Syntax

show ip access-list {**standard** | **extended**} [*acl_name*]

- **standard** – Specifies a standard IP ACL.
- **extended** – Specifies an extended IP ACL.
- *acl_name* – Name of the ACL. (Maximum length: 16 characters)

Command Mode

Privileged Exec

Example

```
Console#show ip access-list standard
IP standard access-list david:
  permit host 10.1.1.21
  permit 168.92.0.0 0.0.15.255
Console#
```

Related Commands

permit, deny 4-86
ip access-group (4-94)

access-list ip mask-precedence

This command changes to the IP Mask mode used to configure access control masks. Use the **no** form to delete the mask table.

Syntax

[**no**] **access-list ip mask-precedence** {**in** | **out**}

- **in** – Ingress mask for ingress ACLs.
- **out** – Egress mask for egress ACLs.

Default Setting

Default system mask: Filter inbound packets according to specified IP ACLs.

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Command Usage

- A mask can only be used by all ingress ACLs or all egress ACLs.
- The precedence of the ACL rules applied to a packet is not determined by order of the rules, but instead by the order of the masks; i.e., the first mask that matches a rule will determine the rule that is applied to a packet.
- You must configure a mask for an ACL rule before you can bind it to a port or set the queue or frame priorities associated with the rule.

Example

```
Console(config)#access-list ip mask-precedence in
Console(config-ip-mask-acl)#
```

Related Commands

mask (IP ACL) (4-90)
ip access-group (4-94)

mask (IP ACL)

This command defines a mask for IP ACLs. This mask defines the fields to check in the IP header. Use the **no** form to remove a mask.

Syntax

[**no**] **mask** [**protocol**]
{**any** | **host** | *source-bitmask*}
{**any** | **host** | *destination-bitmask*}
[**precedence**] [**tos**] [**dscp***]
[**source-port** [*port-bitmask*]] [**destination-port** [*port-bitmask]*]
[**control-flag** [*flag-bitmask*]]

- **protocol** – Check the protocol field.
- **any** – Any address will be matched.
- **host** – The address must be for a host device, not a subnetwork.
- *source-bitmask* – Source address of rule must match this bitmask.
- *destination-bitmask* – Destination address of rule must match this bitmask.
- **precedence** – Check the IP precedence field.
- **tos** – Check the TOS field.
- **dscp** – Check the DSCP field.
- **source-port** – Check the protocol source port field.
- **destination-port** – Check the protocol destination port field.
- *port-bitmask* – Protocol port of rule must match this bitmask. (Range: 0-65535)
- **control-flag** – Check the field for control flags.
- *flag-bitmask* – Control flags of rule must match this bitmask. (Range: 0-63)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

IP Mask

Command Usage

- Packets crossing a port are checked against all the rules in the ACL until a match is found. The order in which these packets are checked is determined by the mask, and not the order in which the ACL rules were entered.
- First create the required ACLs and ingress or egress masks before mapping an ACL to an interface.
- If you enter **dscp**, you cannot enter **tos** or **precedence**. You can enter both **tos** and **precedence** without **dscp***.
- Masks that include an entry for a Layer 4 protocol source port or destination port can only be applied to packets with a header length of exactly five bytes.

Example

This example creates an IP ingress mask with two rules. Each rule is checked in order of precedence to look for a match in the ACL entries. The first entry matching a mask is applied to the inbound packet.

```
Console(config)#access-list ip mask-precedence in
Console(config-ip-mask-acl)#mask host any
Console(config-ip-mask-acl)#mask 255.255.255.0 any
Console(config-ip-mask-acl)#
```

This shows that the entries in the mask override the precedence in which the rules are entered into the ACL. In the following example, packets with the source address 10.1.1.1 are dropped because the “deny 10.1.1.1 255.255.255.255” rule has the higher precedence according the “mask host any” entry.

```
Console(config)#access-list ip standard A2
Console(config-std-acl)#permit 10.1.1.0 255.255.255.0
Console(config-std-acl)#deny 10.1.1.1 255.255.255.255
Console(config-std-acl)#exit
Console(config)#access-list ip mask-precedence in
Console(config-ip-mask-acl)#mask host any
Console(config-ip-mask-acl)#mask 255.255.255.0 any
Console(config-ip-mask-acl)#
```


Downloaded from www.Manualslib.com manuals search engine

This shows how to create a standard ACL with an ingress mask to deny access to the IP host 171.69.198.102, and permit access to any others.

```
Console(config)#access-list ip standard A2
Console(config-std-acl)#permit any
Console(config-std-acl)#deny host 171.69.198.102
Console(config-std-acl)#end
Console#show access-list
IP standard access-list A2:
  deny host 171.69.198.102
  permit any
Console#configure
Console(config)#access-list ip mask-precedence in
Console(config-ip-mask-acl)#mask host any
Console(config-ip-mask-acl)#exit
Console(config)#interface ethernet 1/1
Console(config-if)#ip access-group A2 in
Console(config-if)#end
Console#show access-list
IP standard access-list A2:
  deny host 171.69.198.102
  permit any
Console#
```

This shows how to create an extended ACL with an egress mask to drop packets leaving network 171.69.198.0 when the Layer 4 source port is 23.

```
Console(config)#access-list ip extended A3
Console(config-ext-acl)#deny host 171.69.198.5 any
Console(config-ext-acl)#deny 171.69.198.0 255.255.255.0 any source-port 23
Console(config-ext-acl)#end
Console#show access-list
IP extended access-list A3:
  deny host 171.69.198.5 any
  deny 171.69.198.0 255.255.255.0 any source-port 23
Console#config
Console(config)#access-list ip mask-precedence out
Console(config-ip-mask-acl)#mask 255.255.255.0 any source-port
Console(config-ip-mask-acl)#exit
Console(config)#interface ethernet 1/15
Console(config-if)#ip access-group A3 out
Console(config-if)#end
Console#show access-list
IP extended access-list A3:
  deny 171.69.198.0 255.255.255.0 any source-port 23
  deny host 171.69.198.5 any
IP egress mask ACL:
  mask 255.255.255.0 any source-port
Console#
```


Downloaded from www.Manualslib.com manuals search engine

This is a more comprehensive example. It denies any TCP packets in which the SYN bit is ON, and permits all other packets. It then sets the ingress mask to check the deny rule first, and finally binds port 1 to this ACL. Note that once the ACL is bound to an interface (i.e., the ACL is active), the order in which the rules are displayed is determined by the associated mask.

```
Switch(config)#access-list ip extended 6
Switch(config-ext-acl)#permit any any
Switch(config-ext-acl)#deny tcp any any control-flag 2 2
Switch(config-ext-acl)#end
Console#show access-list
IP extended access-list A6:
  permit any any
  deny tcp any any control-flag 2 2
Console#configure
Switch(config)#access-list ip mask-precedence in
Switch(config-ip-mask-acl)#mask protocol any any control-flag 2
Switch(config-ip-mask-acl)#end
Console#sh access-list
IP extended access-list A6:
  permit any any
  deny tcp any any control-flag 2 2
IP ingress mask ACL:
  mask protocol any any control-flag 2
Console#configure
Console(config)#interface ethernet 1/1
Console(config-if)#ip access-group A6 in
Console(config-if)#end
Console#show access-list
IP extended access-list A6:
  deny tcp any any control-flag 2 2
  permit any any
IP ingress mask ACL:
  mask protocol any any control-flag 2
Console#
```

show access-list ip mask-precedence

This command shows the ingress or egress rule masks for IP ACLs.

Syntax

show access-list ip mask-precedence [**in** | **out**]

- **in** – Ingress mask precedence for ingress ACLs.
- **out** – Egress mask precedence for egress ACLs.

Command Mode

Privileged Exec

Example

```
Console#show access-list ip mask-precedence
IP ingress mask ACL:
  mask host any
  mask 255.255.255.0 any
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Related Commands

mask (IP ACL) (4-90)

ip access-group

This command binds a port to an IP ACL. Use the **no** form to remove the port.

Syntax

[**no**] **ip access-group** *acl_name* {**in** | **out**}

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- **in** – Indicates that this list applies to ingress packets.
- **out** – Indicates that this list applies to egress packets.

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Command Usage

- A port can only be bound to one ACL.
- If a port is already bound to an ACL and you bind it to a different ACL, the switch will replace the old binding with the new one.
- You must configure a mask for an ACL rule before you can bind it to a port.

Example

```
Console(config)#int eth 1/25
Console(config-if)#ip access-group standard david in
Console(config-if)#
```

Related Commands

show ip access-list (4-89)

show ip access-group

This command shows the ports assigned to IP ACLs.

Command Mode

Privileged Exec

Example

```
Console#show ip access-group
Interface ethernet 1/25
 IP standard access-list david
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Related Commands

ip access-group (4-94)

map access-list ip

This command sets the output queue for packets matching an ACL rule. The specified CoS value is only used to map the matching packet to an output queue; it is not written to the packet itself. Use the **no** form to remove the CoS mapping.

Syntax

[**no**] **map access-list ip** *acl_name* **cos** *cos-value*

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- *cos-value* – CoS value. (Range: 0-7)

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Command Usage

- You must configure an ACL mask before you can map CoS values to the rule.
- A packet matching a rule within the specified ACL is mapped to one of the output queues as shown in the following table. For information on mapping the CoS values to output queues, see **queue cos-map** on page 4-200.

Table 4-34. Priority Queue Mapping

Priority	0	1	2	3	4	5	6	7
Queue	1	2	0	3	4	5	6	7

Example

```
Console(config)#interface ethernet 1/25
Console(config-if)#map access-list ip bill cos 0
Console(config-if)#
```

Related Commands

queue cos-map (4-200)
show map access-list ip (4-96)

Downloaded from www.Manualslib.com manuals search engine

show map access-list ip

This command shows the CoS value mapped to an IP ACL for the current interface. (The CoS value determines the output queue for packets matching an ACL rule.)

Syntax

show map access-list ip [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.

Command Mode

Privileged Exec

Example

```
Console#show map access-list ip
Access-list to COS of Eth 1/24
 Access-list ALS1 cos 0
Console#
```

Related Commands

map access-list ip (4-95)

match access-list ip

This command changes the IEEE 802.1p priority, IP Precedence, or DSCP* Priority of a frame matching the defined ACL rule. (This feature is commonly referred to as ACL packet marking.) Use the **no** form to remove the ACL marker.

Syntax

match access-list ip *acl_name*
[**set priority** *priority*] {**set tos** *tos_value* | **set dscp*** *dscp_value*}
no match access-list ip *acl_name*

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- *priority* – Class of Service value in the IEEE 802.1p priority tag. (Range: 0-7; 7 is the highest priority)
- *tos_value* – IP Precedence value. (Range: 0-7)
- *dscp_value* – Differentiated Services Code Point value. (Range: 0-63)

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- You must configure an ACL mask before you can change frame priorities based on an ACL rule.
- Traffic priorities may be included in the IEEE 802.1p priority tag. This tag is also incorporated as part of the overall IEEE 802.1Q VLAN tag. To specify this priority, use the **set priority** keywords.
- The IP frame header also includes priority bits in the Type of Service (ToS) octet. The Type of Service octet may contain three bits for IP Precedence or six bits for Differentiated Services Code Point (DSCP*) service. To specify the IP precedence priority, use the **set tos** keywords. To specify the DSCP priority, use the **set dscp** keywords. Note that the IP frame header can include either the IP Precedence or DSCP priority type.
- The precedence for priority mapping by this switch is IP Precedence or DSCP Priority, and then 802.1p priority.

Example

```
Console(config)#interface ethernet 1/12
Console(config-if)#match access-list ip bill set dscp 0
Console(config-if)#
```

Related Commands

show marking (4-97)

show marking

This command displays the current configuration for packet marking.

Command Mode

Privileged Exec

Example

```
Console#show marking
Interface ethernet 1/12
 match access-list IP bill set DSCP 0
 match access-list MAC a set priority 0
Console#
```

Related Commands

match access-list ip (4-96)

Downloaded from www.Manualslib.com manuals search engine

MAC ACLs

Table 4-35. MAC ACLs			
Command	**Function**	**Mode**	**Page**
access-list mac	Creates a MAC ACL and enters configuration mode	GC	4-98
permit, deny	Filters packets matching a specified source and destination address, packet format, and Ethernet type	MAC-ACL	4-99
show mac access-list	Displays the rules for configured MAC ACLs	PE	4-100
access-list mac mask-precedence	Changes to the mode for configuring access control masks	GC	4-101
mask	Sets a precedence mask for the ACL rules	MAC-Mask	4-102
show access-list mac mask-precedence	Shows the ingress or egress rule masks for MAC ACLs	PE	4-104
mac access-group	Adds a port to a MAC ACL	IC	4-104
show mac access-group	Shows port assignments for MAC ACLs	PE	4-105
map access-list mac	Sets the CoS value and corresponding output queue for packets matching an ACL rule	IC	4-105
show map access-list mac	Shows CoS value mapped to an access list for an interface	PE	4-106
match access-list mac	Changes the 802.1p priority the priority of a frame matching the defined rule (i.e., also called packet marking)	IC	4-106
show marking	Displays the current configuration for packet marking	PE	4-97

access-list mac

This command adds a MAC access list and enters MAC ACL configuration mode. Use the **no** form to remove the specified ACL.

Syntax

[**no**] **access-list mac** *acl_name*

acl_name – Name of the ACL. (Maximum length: 16 characters)

Default Setting

None

Command Mode

Global Configuration

Command Usage

- An egress ACL must contain all deny rules.
- When you create a new ACL or enter configuration mode for an existing ACL, use the **permit** or **deny** command to add new rules to the bottom of the list. To create an ACL, you must add at least one rule to the list.

Downloaded from www.Manualslib.com manuals search engine

- To remove a rule, use the **no permit** or **no deny** command followed by the exact text of a previously configured rule.
- An ACL can contain up to 32 rules.

Example

```
Console(config)#access-list mac jerry
Console(config-mac-acl)#
```

Related Commands

permit, deny 4-99
mac access-group (4-104)
show mac access-list (4-100)

permit, **deny** (MAC ACL)

This command adds a rule to a MAC ACL. The rule filters packets matching a specified MAC source or destination address (i.e., physical layer address), or Ethernet protocol type. Use the **no** form to remove a rule.

Syntax

[**no**] {**permit** | **deny**}
{**any** | **host** *source* | *source address-bitmask*}
{**any** | **host** *destination* | *destination address-bitmask*}
[**vid** *vid vid-bitmask*] [**ethertype** *protocol* [*protocol-bitmask*]]

Note:- The default is for Ethernet II packets.

[**no**] {**permit** | **deny**} **tagged-eth2**
{**any** | **host** *source* | *source address-bitmask*}
{**any** | **host** *destination* | *destination address-bitmask*}
[**vid** *vid vid-bitmask*] [**ethertype** *protocol* [*protocol-bitmask*]]

[**no**] {**permit** | **deny**} **untagged-eth2**
{**any** | **host** *source* | *source address-bitmask*}
{**any** | **host** *destination* | *destination address-bitmask*}
[**ethertype** *protocol* [*protocol-bitmask*]]

[**no**] {**permit** | **deny**} **tagged-802.3**
{**any** | **host** *source* | *source address-bitmask*}
{**any** | **host** *destination* | *destination address-bitmask*}
[**vid** *vid vid-bitmask*]

[**no**] {**permit** | **deny**} **untagged-802.3**
{**any** | **host** *source* | *source address-bitmask*}
{**any** | **host** *destination* | *destination address-bitmask*}

- **tagged-eth2** – Tagged Ethernet II packets.
- **untagged-eth2** – Untagged Ethernet II packets.
- **tagged-802.3** – Tagged Ethernet 802.3 packets.
- **untagged-802.3** – Untagged Ethernet 802.3 packets.

Downloaded from www.Manualslib.com manuals search engine

- **any** – Any MAC source or destination address.
- **host** – A specific MAC address.
- *source* – Source MAC address.
- *destination* – Destination MAC address range with bitmask.
- *address-bitmask** – Bitmask for MAC address (in hexidecimal format).
- vid – VLAN ID. (Range: 1-4095)
- *vid-bitmask** – VLAN bitmask. (Range: 1-4095)
- *protocol* – A specific Ethernet protocol number. (Range: 600-fff hex.)
- *protocol-bitmask** – Protocol bitmask. (Range: 600-fff hex.)

* For all bitmasks, “1” means care and “0” means ignore.

Default Setting

None

Command Mode

MAC ACL

Command Usage

- New rules are added to the end of the list.
- The **ethertype** option can only be used to filter Ethernet II formatted packets.
- A detailed listing of Ethernet protocol types can be found in RFC 1060. A few of the more common types include the following:
  - 0800 - IP
  - 0806 - ARP
  - 8137 - IPX

Example

This rule permits packets from any source MAC address to the destination address 00-e0-29-94-34-de where the Ethernet type is 0800.

```
Console(config-mac-acl)#permit any host 00-e0-29-94-34-de ethertype 0800
Console(config-mac-acl)#
```

Related Commands

access-list mac (4-98)

show mac access-list

This command displays the rules for configured MAC ACLs.

Syntax

show mac access-list [*acl_name*]

acl_name – Name of the ACL. (Maximum length: 16 characters)

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#show mac access-list
MAC access-list jerry:
  permit any 00-e0-29-94-34-de ethertype 0800
Console#
```

Related Commands

permit, deny 4-99
mac access-group (4-104)

access-list mac mask-precedence

This command changes to MAC Mask mode used to configure access control masks. Use the **no** form to delete the mask table.

Syntax

[**no**] **access-list ip mask-precedence** {**in** | **out**}

- **in** – Ingress mask for ingress ACLs.
- **out** – Egress mask for egress ACLs.

Default Setting

Default system mask: Filter inbound packets according to specified MAC ACLs.

Command Mode

Global Configuration

Command Usage

- You must configure a mask for an ACL rule before you can bind it to a port or set the queue or frame priorities associated with the rule.
- A mask can only be used by all ingress ACLs or all egress ACLs.
- The precedence of the ACL rules applied to a packet is not determined by order of the rules, but instead by the order of the masks; i.e., the first mask that matches a rule will determine the rule that is applied to a packet.

Example

```
Console(config)#access-list mac mask-precedence in
Console(config-mac-mask-acl)#
```

Related Commands

mask (MAC ACL) (4-102)
mac access-group (4-104)

Downloaded from www.Manualslib.com manuals search engine

mask (MAC ACL)

This command defines a mask for MAC ACLs. This mask defines the fields to check in the packet header. Use the **no** form to remove a mask.

Syntax

[**no**] **mask** [**pktformat**]
{**any** | **host** | *source-bitmask*} {**any** | **host** | *destination-bitmask*}
[**vid** [*vid-bitmask*]] [**ethertype** [*ethertype-bitmask*]]

- **pktformat** – Check the packet format field. (If this keyword must be used in the mask, the packet format must be specified in ACL rule to match.)
- **any** – Any address will be matched.
- **host** – The address must be for a single node.
- *source-bitmask* – Source address of rule must match this bitmask.
- *destination-bitmask* – Destination address of rule must match this bitmask.
- **vid** – Check the VLAN ID field.
- *vid-bitmask* – VLAN ID of rule must match this bitmask.
- **ethertype** – Check the Ethernet type field.
- *ethertype-bitmask* – Ethernet type of rule must match this bitmask.

Default Setting

None

Command Mode

MAC Mask

Command Usage

- Up to seven masks can be assigned to an ingress or egress ACL.
- Packets crossing a port are checked against all the rules in the ACL until a match is found. The order in which these packets are checked is determined by the mask, and not the order in which the ACL rules were entered.
- First create the required ACLs and inbound or outbound masks before mapping an ACL to an interface.

Downloaded from www.Manualslib.com manuals search engine

Example

This example shows how to create an Ingress MAC ACL and bind it to a port. You can then see that the order of the rules have been changed by the mask.

```
Console(config)#access-list mac M4
Console(config-mac-acl)#permit any any
Console(config-mac-acl)#deny tagged-eth2 00-11-11-11-11-11
  ff-ff-ff-ff-ff-ff any vid 3
Console(config-mac-acl)#end
Console#show access-list
MAC access-list M4:
  permit any any
  deny tagged-eth2 host 00-11-11-11-11-11 any vid 3
Console(config)#access-list mac mask-precedence in
Console(config-mac-mask-acl)#mask pktformat ff-ff-ff-ff-ff-ff any vid
Console(config-mac-mask-acl)#exit
Console(config)#interface ethernet 1/12
Console(config-if)#mac access-group M4 in
Console(config-if)#end
Console#show access-list
MAC access-list M4:
  deny tagged-eth2 host 00-11-11-11-11-11 any vid 3
  permit any any
MAC ingress mask ACL:
  mask pktformat host any vid
Console#
```

This example creates an Egress MAC ACL.

```
Console(config)#access-list mac M5
Console(config-mac-acl)#deny tagged-802.3 host 00-11-11-11-11-11 any
Console(config-mac-acl)#deny tagged-eth2 00-11-11-11-11-11
  ff-ff-ff-ff-ff-ff any vid 3 ethertype 0806
Console(config-mac-acl)#end
Console#show access-list
MAC access-list M5:
  deny tagged-802.3 host 00-11-11-11-11-11 any
  deny tagged-eth2 host 00-11-11-11-11-11 any vid 3 ethertype 0806
Console(config)#access-list mac mask-precedence out
Console(config-mac-mask-acl)#mask pktformat ff-ff-ff-ff-ff-ff any vid
Console(config-mac-mask-acl)#exit
Console(config)#interface ethernet 1/5
Console(config-if)#mac access-group M5 out
Console(config-if)#end
Console#show access-list
MAC access-list M5:
  deny tagged-eth2 host 00-11-11-11-11-11 any vid 3 ethertype 0806
  deny tagged-802.3 host 00-11-11-11-11-11 any
MAC ingress mask ACL:
  mask pktformat host any vid ethertype
Console#
```


Downloaded from www.Manualslib.com manuals search engine

show access-list mac mask-precedence

This command shows the ingress or egress rule masks for MAC ACLs.

Syntax

show access-list mac mask-precedence [**in** | **out**]

- **in** – Ingress mask precedence for ingress ACLs.
- **out** – Egress mask precedence for egress ACLs.

Command Mode

Privileged Exec

Example

```
Console#show access-list mac mask-precedence
MAC egress mask ACL:
  mask pktformat host any vid ethertype
Console#
```

Related Commands

mask (MAC ACL) (4-102)

mac access-group

This command binds a port to a MAC ACL. Use the **no** form to remove the port.

Syntax

mac access-group *acl_name* {**in** | **out**}

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- **in** – Indicates that this list applies to ingress packets.
- **out** – Indicates that this list applies to egress packets.

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Command Usage

- A port can only be bound to one ACL.
- If a port is already bound to an ACL and you bind it to a different ACL, the switch will replace the old binding with the new one.
- You must configure a mask for an ACL rule before you can bind it to a port.

Example

```
Console(config)#interface ethernet 1/25
Console(config-if)#mac access-group jerry in
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Related Commands

show mac access-list (4-100)

show mac access-group

This command shows the ports assigned to MAC ACLs.

Command Mode

Privileged Exec

Example

```
Console#show mac access-group
Interface ethernet 1/5
 MAC access-list M5 out
Console#
```

Related Commands

mac access-group (4-104)

map access-list mac

This command sets the output queue for packets matching an ACL rule. The specified CoS value is only used to map the matching packet to an output queue; it is not written to the packet itself. Use the **no** form to remove the CoS mapping.

Syntax

[**no**] **map access-list mac** *acl_name* **cos** *cos-value*

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- *cos-value* – CoS value. (Range: 0-7)

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Command Usage

- You must configure an ACL mask before you can map CoS values to the rule.
- A packet matching a rule within the specified ACL is mapped to one of the output queues as shown below.

Table 4-36. Priority Queue Mapping

Priority	0	1	2	3	4	5	6	7
Queue	1	2	0	3	4	5	6	7

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#int eth 1/5
Console(config-if)#map access-list mac M5 cos 0
Console(config-if)#
```

Related Commands

queue cos-map (4-200)
show map access-list mac (4-106)

show map access-list mac

This command shows the CoS value mapped to a MAC ACL for the current interface. (The CoS value determines the output queue for packets matching an ACL rule.)

Syntax

show map access-list mac [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.

Command Mode

Privileged Exec

Example

```
Console#show map access-list mac
Access-list to COS of Eth 1/5
 Access-list M5 cos 0
Console#
```

Related Commands

map access-list mac (4-105)

match access-list mac

This command changes the IEEE 802.1p priority of a Layer 2 frame matching the defined ACL rule. (This feature is commonly referred to as ACL packet marking.) Use the **no** form to remove the ACL marker.

Syntax

match access-list mac *acl_name* **set priority** *priority*
no match access-list mac *acl_name*

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- *priority* – Class of Service value in the IEEE 802.1p priority tag. (Range: 0-7; 7 is the highest priority)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Command Usage

You must configure an ACL mask before you can change frame priorities based on an ACL rule.

Example

```
Console(config)#interface ethernet 1/12
Console(config-if)#match access-list mac a set priority 0
Console(config-if)#
```

Related Commands

show marking (4-97)

ACL Information

Table 4-37. ACL Information

Command	Function	Mode	Page
show access-list	Show all ACLs and associated rules	PE	4-107
show access-group	Shows the ACLs assigned to each port	PE	4-108

show access-list

This command shows all ACLs and associated rules, as well as all the user-defined masks.

Command Mode

Privileged Exec

Command Usage

Once the ACL is bound to an interface (i.e., the ACL is active), the order in which the rules are displayed is determined by the associated mask.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show access-list
IP standard access-list david:
  permit host 10.1.1.21
  permit 168.92.0.0 0.0.15.255
IP extended access-list bob:
  permit 10.7.1.1 0.0.0.255 any
  permit 192.168.1.0 0.0.0.255 any dport 80
  permit 192.168.1.0 0.0.0.255 any protocol tcp control-code 2 2
MAC access-list jerry:
  permit any 00-30-29-94-34-de ethertype 800
IP extended access-list A6:
  deny tcp any any control-flag 2 2
  permit any any
IP ingress mask ACL:
  mask protocol any any control-flag 2
Console#
```

show access-group

This command shows the port assignments of ACLs.

Command Mode

Privileged Executive

Example

```
Console#show access-group
Interface ethernet 1/25
 IP standard access-list david
 MAC access-list jerry
Console#
```

SNMP Commands

Controls access to this switch from management stations using the Simple Network Management Protocol (SNMP), as well as the error types sent to trap managers.

SNMPv3 provides security features that cover message integrity, authentication, and encryption; as well as controlling user access to specific areas of the MIB tree. To use SNMPv3, first set an engine ID (or accept the default), specify read and write access views for the MIB tree, configure SNMP user groups with the required security model (i.e., SNMP v1, v2c or v3) and security level (i.e., authentication and privacy), and then assign SNMP users to these groups, along with their specific authentication and privacy passwords.

Table 4-38. SNMP Commands

Command	Function	Mode	Page
snmp-server community	Sets up the community access string to permit access to SNMP commands	GC	4-109
snmp-server contact	Sets the system contact string	GC	4-110

Downloaded from www.Manualslib.com manuals search engine

Table 4-38. SNMP Commands			
Command	**Function**	**Mode**	**Page**
snmp-server location	Sets the system location string	GC	4-110
snmp-server host	Specifies the recipient of an SNMP notification operation	GC	4-111
snmp-server enable traps	Enables the device to send SNMP traps (i.e., SNMP notifications)	GC	4-112
show snmp	Displays the status of SNMP communications	NE, PE	4-113
snmp-server	Enables the SNMPv3 server	GC	4-114
snmp-server engineID	Sets the SNMPv3 engine ID	GC	4-114
show snmp engineID	Shows the SNMPv3 engine ID	PE	4-115
snmp-server view	Adds an SNMPv3 view	GC	4-115
show snmp view	Shows the SNMPv3 views	PE	4-116
snmp-server group	Adds an SNMPv3 group, mapping users to views	GC	4-117
show snmp group	Shows the SNMPv3 groups	PE	4-117
snmp-server user	Adds a user to an SNMPv3 group	GC	4-119
show snmp user	Shows the SNMPv3 users	PE	4-119

snmp-server community

This command defines the community access string for the Simple Network Management Protocol. Use the **no** form to remove the specified community string.

Syntax

snmp-server community *string* [**ro**|**rw**]
no snmp-server community *string*

- *string* - Community string that acts like a password and permits access to the SNMP protocol. (Maximum length: 32 characters, case sensitive; Maximum number of strings: 5)
- **ro** - Specifies read-only access. Authorized management stations are only able to retrieve MIB objects.
- **rw** - Specifies read/write access. Authorized management stations are able to both retrieve and modify MIB objects.

Default Setting

- public - Read-only access. Authorized management stations are only able to retrieve MIB objects.
- private - Read/write access. Authorized management stations are able to both retrieve and modify MIB objects.

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#snmp-server community alpha rw
Console(config)#
```

snmp-server contact

This command sets the system contact string. Use the **no** form to remove the system contact information.

Syntax

snmp-server contact *string*
no snmp-server contact

string - String that describes the system contact information. (Maximum length: 255 characters)

Default Setting

None

Command Mode

Global Configuration

Example

```
Console(config)#snmp-server contact Paul
Console(config)#
```

Related Commands

snmp-server location (4-110)

snmp-server location

This command sets the system location string. Use the **no** form to remove the location string.

Syntax

snmp-server location *text*
no snmp-server location

text - String that describes the system location. (Maximum length: 255 characters)

Default Setting

None

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#snmp-server location WC-19
Console(config)#
```

Related Commands

snmp-server contact (4-110)

snmp-server host

This command specifies the recipient of a Simple Network Management Protocol notification operation. Use the **no** form to remove the specified host.

Syntax

snmp-server host *host-addr community-string* [**version** {**1** | **2c**}] [**udp-port** *port*]
no snmp-server host *host-addr*

- *host-addr* - Internet address of the host (the targeted recipient). (Maximum host addresses: 5 trap destination IP address entries)
- *community-string* - Password-like community string sent with the notification operation. Although you can set this string using the **snmp-server host** command by itself, we recommend that you define this string using the **snmp-server community** command prior to using the **snmp-server host** command. (Maximum length: 32 characters)
- **version** - Specifies whether to send notifications as SNMP v1 or v2c traps.
- **udp-port** - Specifies the UDP port number used by the host.

Default Setting

Host Address: None
SNMP Version: 1
UDP Port: 162

Command Mode

Global Configuration

Command Usage

- If you do not enter an **snmp-server host** command, no notifications are sent. In order to configure the switch to send SNMP notifications, you must enter at least one **snmp-server host** command. In order to enable multiple hosts, you must issue a separate **snmp-server host** command for each host.
- The **snmp-server host** command is used in conjunction with the **snmp-server enable traps** command. Use the **snmp-server enable traps** command to specify which SNMP notifications are sent globally. For a host to receive notifications, at least one **snmp-server enable traps** command and the **snmp-server host** command for that host must be enabled.
- Some notification types cannot be controlled with the **snmp-server enable traps** command. For example, some notification types are always enabled.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#snmp-server host 10.1.19.23 batman
Console(config)#
```

Related Commands

snmp-server enable traps (4-112)

snmp-server enable traps

This command enables this device to send Simple Network Management Protocol traps (SNMP notifications). Use the **no** form to disable SNMP notifications.

Syntax

[**no**] **snmp-server enable traps** [**authentication** | **link-up-down**]

- **authentication** - Keyword to issue authentication failure traps.
- **link-up-down** - Keyword to issue link-up or link-down traps. The link-up-down trap can only be enabled/disabled via the CLI.

Default Setting

Issue authentication and link-up-down traps.

Command Mode

Global Configuration

Command Usage

- If you do not enter an **snmp-server enable traps** command, no notifications controlled by this command are sent. In order to configure this device to send SNMP notifications, you must enter at least one **snmp-server enable traps** command. If you enter the command with no keywords, both authentication and link-up-down notifications are enabled. If you enter the command with a keyword, only the notification type related to that keyword is enabled.
- The **snmp-server enable traps** command is used in conjunction with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications. In order to send notifications, you must configure at least one **snmp-server host** command.

Example

```
Console(config)#snmp-server enable traps link-up-down
Console(config)#
```

Related Commands

snmp-server host (4-111)

Downloaded from www.Manualslib.com manuals search engine

show snmp

This command checks the status of SNMP communications.

Default Setting

None

Command Mode

Normal Exec, Privileged Exec

Command Usage

This command provides information on the community access strings, counter information for SNMP input and output protocol data units, and whether or not SNMP logging has been enabled with the **snmp-server enable traps** command.

Example

```
Console#show snmp
SNMP Agent: enabled

SNMP traps:
 Authentication: enable
   Link-up-down: enable

SNMP communities:
   1. private, and the privilege is read-write
   2. public, and the privilege is read-only

0 SNMP packets input
    0 Bad SNMP version errors
    0 Unknown community name
    0 Illegal operation for community name supplied
    0 Encoding errors
    0 Number of requested variables
    0 Number of altered variables
    0 Get-request PDUs
    0 Get-next PDUs
    0 Set-request PDUs
0 SNMP packets output
    0 Too big errors
    0 No such name errors
    0 Bad values errors
    0 General errors
    0 Response PDUs
    0 Trap PDUs

SNMP logging: disabled
Console#
```


Downloaded from www.Manualslib.com manuals search engine

snmp-server

Use this command to enable the SNMP v3 engine. Use the **no** form to disable the engine.

Default Setting

Enabled

Command Mode

Global Configuration

Example

```
Console(config)#snmp-server
Console(config)#
```

snmp-server engine-id

Use this command to configure an identification string for the SNMP v3 engine. Use the **no** form to restore the default.

Syntax

snmp-server engine-id local *engineid-string*
no snmp-server engine-id local

engineid-string - String identifying the engine ID. (Range: 1-26 hexadecimal characters)

Default Setting

A unique engine ID is automatically generated by the switch based on its MAC address.

Command Mode

Global Configuration

Command Usage

- An SNMP engine is an independent SNMP agent that resides on this switch. This engine protects against message replay, delay, and redirection. The engine ID is also used in combination with user passwords to generate the security keys for authenticating and encrypting SNMPv3 packets.
- Trailing zeroes need not be entered to uniquely specify a engine ID. In other words, the value “1234” is equivalent to “1234” followed by 22 zeroes.
- If the local engineID is deleted or changed, all SNMP users will be cleared. You will need to reconfigure all existing users (page 4-119).

Example

```
Console(config)#snmp-server engineID local 12345
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

show snmp engine-id

Use this command to show the SNMP engine ID.

Command Mode

Privileged Exec

Example

This example shows the default engine ID.

```
Console#show snmp engine-id
Local SNMP engineID: 8000002a8000000000e8666672
Local SNMP engineBoots: 1
```

Table 4-1. SNMP Engine ID

Field	Description
Local SNMP engineID	String identifying the engine ID.
Local SNMP engineBoots	The number of times that the engine has (re-)initialized since the snmpEngineID was last configured.

snmp-server view

Use this command to add an SNMP view that controls user access to the MIB. Use the **no** form to remove an SNMP view.

Syntax

snmp-server view *view-name oid-tree* {**included** | **excluded**}
no snmp-server view *view-name*

- *view-name* - Name of an SNMP view. (Range: 1-64 characters)
- *oid-tree* - Object identifier of a branch within the MIB tree. Wildcards can be used to mask a specific portion of the OID string. (Refer to the examples.)
- **included** - Defines an included view.
- **excluded** - Defines an excluded view.

Default Setting

defaultview (includes access to the entire MIB tree)

Command Mode

Global Configuration

Command Usage

- Views are used in the **snmp-server group** command to restrict user access to spcified portions of the MIB tree.
- The predefined view “defaultview” includes access to the entire MIB tree.

Downloaded from www.Manualslib.com manuals search engine

Examples

This view includes MIB-2.

```
Console(config)#snmp-server view mib-2 1.3.6.1.2.1 included
Console(config)#
```

This view includes the MIB-2 interfaces table, ifDescr. The wildcard is used to select all the index values in this table.

```
Console(config)#snmp-server view ifEntry.2 1.3.6.1.2.1.2.2.1.*.2 included
Console(config)#
```

This view includes the MIB-2 interfaces table, and the mask selects all index entries.

```
Console(config)#snmp-server view ifEntry.a 1.3.6.1.2.1.2.2.1.1.* included
Console(config)#
```

show snmp view

Use this command to show information on the SNMP groups.

Command Mode

Privileged Exec

Example

```
Console#show snmp view
View Name: mib-2
Subtree OID: 1.2.2.3.6.2.1
View Type: included
Storage Type: nonvolatile
Row Status: active

View Name: defaultview
Subtree OID: 1
View Type: included
Storage Type: nonvolatile
Row Status: active

Console#
```

Table 4-2. SNMP View

Field	Description
View Name	Name of an SNMP view.
Subtree OID	A branch in the MIB tree.
View Type	Indicates if the view is included or excluded.
Storage Type	The storage type for this entry.
Row Status	The row status of this entry.

Downloaded from www.Manualslib.com manuals search engine

snmp-server group

Use this command to add an SNMP group, mapping SNMP users to SNMP views. Use the **no** form to remove an SNMP group.

Syntax

snmp-server group *groupname* {**v1** | **v2c** | **v3** {**auth** | **noauth** | **priv**}} [**read** *readview*] [**write** *writeview*]

no snmp-server group *groupname*

- *groupname* - Name of an SNMP group. (Range: 1-32 characters)
- **v1** | **v2c** | **v3** - Use SNMP version 1, 2c or 3.
- **auth** | **noauth** | **priv** - This group uses SNMPv3 with authentication, no authentication, or with authentication and privacy.
- *readview** - Defines the view for read access. (1-64 characters)
- *writeview** - Defines the view for write access. (1-64 characters)

Default Setting

readview - Every object belonging to the Internet OID space (1.3.6.1).
writeview - Nothing is defined.

Command Mode

Global Configuration

Command Usage

- A group sets the access policy for the assigned users.
- When authentication is selected, the MD5 or or SHA algorithm is used as specified in the **snmp-server user** command.
- When privacy is selected, the DES 56-bit algorithm is used for data encryption.

Example

```
Console(config)#snmp-server group r&d v3 auth write daily
Console(config)#
```

show snmp group

Four default groups are provided – SNMPv1 read-only access and read/write access, and SNMPv2c read-only access and read/write access.

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show snmp group
groupname: r&d
security model: v3
readview: v2defaultview
writeview: daily
notifyview: none
storage-type: permanent
row status: active

groupname: DefaultROGroup
security model: v1
readview: v2defaultview
writeview: none
notifyview: none
storage-type: permanent
row status: active

groupname: DefaultROGroup
security model: v2c
readview: v2defaultview
writeview: none
notifyview: none
storage-type: permanent
row status: active

groupname: DefaultRWGroup
security model: v1
readview: v2defaultview
writeview: v2defaultview
notifyview: none
storage-type: permanent
row status: active

groupname: DefaultRWGroup
security model: v2c
readview: v2defaultview
writeview: v2defaultview
notifyview: none
storage-type: permanent
row status: active

Console#
```

Table 4-3. SNMP Group

Field	Description
groupname	Name of an SNMP group.
security model	The SNMP version.
readview	The associated read view.
writeview	The associated write view.
notifyview	The associated notify view.
storage-type	The storage type for this entry.
Row Status	The row status of this entry.

Downloaded from www.Manualslib.com manuals search engine

snmp-server user

Use this command to add a user to an SNMP group, restricting the user to a specific SNMP Read and a Write View. Use the **no** form to remove a user from an SNMP group.

Syntax

snmp-server user *username groupname* {**v1** | **v2c** | **v3** [**encrypted**] [**auth** {**md5** | **sha**} *auth-password* [**priv des56** *priv-password*]]

no snmp-server user *username*

- *username* - Name of user connecting to the SNMP agent. (Range: 1-32 characters)
- *groupname* - Name of an SNMP group to which the user is assigned. (Range: 1-32 characters)
- **v1** | **v2c** | **v3** - Use SNMP version 1, 2c or 3.
- **encrypted** - Accepts the password as encrypted input.
- **auth** - Uses SNMPv3 with authentication.
- **md5** | **sha** - Uses MD5 or SHA authentication.
- *auth-password* - Authentication password. Enter as plain text if the **encrypted** option is not used. Otherwise, enter an encrypted password. (A minimum of eight characters is required.)
- **priv des56** - Uses SNMPv3 with 56-bit DES data encryption.
- *priv-password* - Privacy password. Enter as plain text if the **encrypted** option is not used. Otherwise, enter an encrypted password.

Default Setting

None

Command Mode

Global Configuration

Command Usage

- The SNMP engine ID is used to compute the authentication/privacy digests from the password. You should therefore configure the engine ID with the **snmp-server engine-id** command before using this configuration command.
- SNMP passwords are localized using the authoritative SNMP engine ID.

Example

```
Console(config)#snmp-server user steve group r&d v3 auth md5 greenpeace
  priv des56 einstien
Console(config)#
```

show snmp user

Use this command to show information on SNMP users.

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show snmp user
EngineId: 0100000000000000000000000
User Name: steve
Authentication Protocol: md5
Privacy Protocol: des56
Storage Type: nonvolatile
Row Status: active

Console#
```

Table 4-4. SNMP User	
Field	**Description**
EngineId	String identifying the engine ID.
User Name	Name of user connecting to the SNMP agent.
Authentication Protocol	The authentication protocol used with SNMPv3.
Privacy Protocol	The privacy protocol used with SNMPv3.
Storage Type	The storage type for this entry.
Row Status	The row status of this entry.

DHCP Commands

These commands are used to configure Dynamic Host Configuration Protocol (DHCP) client. You can configure any VLAN interface to be automatically assigned an IP address via DHCP.

DHCP Client

Table 4-39. DHCP Clients			
Command	**Function**	**Mode**	**Page**
ip dhcp client-identifier	Specifies the DHCP client identifier for this switch	IC	4-120
ip dhcp restart client	Submits a BOOTP or DHCP client request	PE	4-121

ip dhcp client-identifier

This command specifies the DCHP client identifier for the current interface. Use the **no** form to remove this identifier.

Syntax

ip dhcp client-identifier {**text** *text* | **hex** *hex*}
no ip dhcp client-identifier

- *text* - A text string. (Range: 1-15 characters)
- *hex* - The hexadecimal value.

Default Setting

None

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Interface Configuration (VLAN)

Command Usage

This command is used to include a client identifier in all communications with the DHCP server. The identifier type depends on the requirements of your DHCP server.

Example

```
Console(config)#interface vlan 2
Console(config-if)#ip dhcp client-identifier hex 00-00-e8-66-65-72
Console(config-if)#
```

Related Commands

ip dhcp restart client (4-121)

ip dhcp restart client

This command submits a BOOTP or DHCP client request.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- This command issues a BOOTP or DHCP client request for any IP interface that has been set to BOOTP or DHCP mode via the **ip address** command.
- DHCP requires the server to reassign the client's last address if available.
- If the BOOTP or DHCP server has been moved to a different domain, the network portion of the address provided to the client will be based on this new domain.

Example

In the following example, the device is reassigned the same address.

```
Console(config)#interface vlan 1
Console(config-if)#ip address dhcp
Console(config-if)#exit
Console#ip dhcp restart client
Console#show ip interface
 IP address and netmask: 192.168.1.54 255.255.255.0 on VLAN 1,
 and address mode: Dhcp.
Console#
```

Related Commands

ip address (4-227)

Downloaded from www.Manualslib.com manuals search engine

DNS Commands

These commands are used to configure Domain Naming System (DNS) services. You can manually configure entries in the DNS domain name to IP address mapping table, configure default domain names, or specify one or more name servers to use for domain name to address translation.

Note that domain name services will not be enabled until at least one name server is specified with the **ip name-server** command and domain lookup is enabled with the **ip domain-lookup** command. .

Table 4-40. DNS Commands

Command	Function	Mode	Page
ip host	Creates a static host name-to-address mapping	GC	4-122
clear host	Deletes entries from the host name-to-address table	PE	4-123
ip domain-name	Defines a default domain name for incomplete host names	GC	4-123
ip domain-list	Defines a list of default domain names for incomplete host names	GC	4-124
ip name-server	Specifies the address of one or more name servers to use for host name-to-address translation	GC	4-125
ip domain-lookup	Enables DNS-based host name-to-address translation	GC	4-126
show hosts	Displays the static host name-to-address mapping table	PE	4-127
show dns	Displays the configuration for DNS services	PE	4-127
show dns cache	Displays entries in the DNS cache	PE	4-128
clear dns cache	Clears all entries from the DNS cache	PE	4-128

ip host

This command creates a static entry in the DNS table that maps a host name to an IP address. Use the **no** form to remove an entry.

Syntax

[**no**] **ip host** *name address1* [*address2* … *address8*]

- *name* - Name of the host. (Range: 1-64 characters)
- *address1* - Corresponding IP address.
- *address2* … *address8* - Additional corresponding IP addresses.

Default Setting

No static entries

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

Servers or other network devices may support one or more connections via multiple IP addresses. If more than one IP address is associated with a host name using this command, a DNS client can try each address in succession, until it establishes a connection with the target device.

Example

This example maps two address to a host name.

```
Console(config)#ip host rd5 192.168.1.55 10.1.0.55
Console(config)#end
Console#show hosts

Hostname
 rd5
Inet address
 10.1.0.55 192.168.1.55
Alias
Console#
```

clear host

This command deletes entries from the DNS table.

Syntax

clear host {*name* | *}

- *name* - Name of the host. (Range: 1-64 characters)
- * - Removes all entries.

Default Setting

None

Command Mode

Privileged Exec

Example

This example clears all static entries from the DNS table.

```
Console(config)#clear host *
Console(config)#
```

ip domain-name

This command defines the default domain name appended to incomplete host names (i.e., host names passed from a client that are not formatted with dotted notation). Use the **no** form to remove the current domain name.

Syntax

ip domain-name *name*
no ip domain-name

name - Name of the host. Do not include the initial dot that separates the host name from the domain name. (Range: 1-64 characters)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Global Configuration

Example

```
Console(config)#ip domain-name sample.com
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS disabled
Default Domain Name:
    .sample.com
Domain Name List:
Name Server List:
Console#
```

Related Commands

ip domain-list (4-124)
ip name-server (4-125)
ip domain-lookup (4-126)

ip domain-list

This command defines a list of domain names that can be appended to incomplete host names (i.e., host names passed from a client that are not formatted with dotted notation). Use the **no** form to remove a name from this list.

Syntax

[**no**] **ip domain-list** *name*

name - Name of the host. Do not include the initial dot that separates the host name from the domain name. (Range: 1-64 characters)

Default Setting

None

Command Mode

Global Configuration

Command Usage

- Domain names are added to the end of the list one at a time.
- When an incomplete host name is received by the DNS server on this switch, it will work through the domain list, appending each domain name in the list to the host name, and checking with the specified name servers for a match.
- If there is no domain list, the domain name specified with the **ip domain-name** command is used. If there is a domain list, the default domain name is not used.

Downloaded from www.Manualslib.com manuals search engine

Example

This example adds two domain names to the current list and then displays the list.

```
Console(config)#ip domain-list sample.com.jp
Console(config)#ip domain-list sample.com.uk
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS disabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.jp
    .sample.com.uk
Name Server List:
Console#
```

Related Commands

ip domain-name (4-123)

ip name-server

This command specifies the address of one or more domain name servers to use for name-to-address resolution. Use the **no** form to remove a name server from this list.

Syntax

[**no**] **ip name-server** *server-address1* [*server-address2* … *server-address6*]

- *server-address1* - IP address of domain-name server.
- *server-address2* … *server-address6* - IP address of additional domain-name servers.

Default Setting

None

Command Mode

Global Configuration

Command Usage

The listed name servers are queried in the specified sequence until a response is received, or the end of the list is reached with no response.

Downloaded from www.Manualslib.com manuals search engine

Example

This example adds two domain-name servers to the list and then displays the list.

```
Console(config)#ip domain-server 192.168.1.55 10.1.0.55
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS disabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.jp
    .sample.com.uk
Name Server List:
    192.168.1.55
    10.1.0.55
Console#
```

Related Commands

ip domain-name (4-123)
ip domain-lookup (4-126)

ip domain-lookup

This command enables DNS host name-to-address translation. Use the **no** form to disable DNS.

Syntax

[**no**] **ip domain-lookup**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

- At least one name server must be specified before you can enable DNS.
- If all name servers are deleted, DNS will automatically be disabled.

Downloaded from www.Manualslib.com manuals search engine

Example

This example enables DNS and then displays the configuration.

```
Console(config)#ip domain-lookup
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS enabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.jp
    .sample.com.uk
Name Server List:
    192.168.1.55
    10.1.0.55
Console#
```

Related Commands

ip domain-name (4-123)
ip name-server (4-125)

show hosts

This command displays the static host name-to-address mapping table.

Command Mode

Privileged Exec

Example

Note that a host name will be displayed as an alias if it is mapped to the same address(es) as a previously configured entry.

```
Console#show hosts

Hostname
 rd5
Inet address
 10.1.0.55 192.168.1.55
Alias
 1.rd6
Console#
```

show dns

This command displays the configuration of the DNS server.

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show dns
Domain Lookup Status:
    DNS enabled
Default Domain Name:
    sample.com
Domain Name List:
    sample.com.jp
    sample.com.uk
Name Server List:
    192.168.1.55
    10.1.0.55
Console#
```

show dns cache

This command displays entries in the DNS cache.

Command Mode

Privileged Exec

Example

```
Console#show dns cache
NO      FLAG    TYPE    IP              TTL     DOMAIN
0        4      CNAME   10.2.44.96      893     pttch_pc.accton.com.tw
1        4      CNAME   10.2.44.3       898     ahten.accton.com.tw
2        4      CNAME   66.218.71.84    298     www.yahoo.akadns.net
3        4      CNAME   66.218.71.83    298     www.yahoo.akadns.net
4        4      CNAME   66.218.71.81    298     www.yahoo.akadns.net
5        4      CNAME   66.218.71.80    298     www.yahoo.akadns.net
6        4      CNAME   66.218.71.89    298     www.yahoo.akadns.net
7        4      CNAME   66.218.71.86    298     www.yahoo.akadns.net
8        4      ALIAS   POINTER TO:7    298     www.yahoo.com
Console#
```

Table 4-41. DNS Cache

Field	Description
NO	The entry number for each resource record.
FLAG	The flag is always “4” indicating a cache entry and therefore unreliable.
TYPE	This field includes CNAME which specifies the canonical or primary name for the owner, and ALIAS which specifies multiple domain names which are mapped to the same IP address as an existing entry.
IP	The IP address associated with this record.
TTL	The time to live reported by the name server.
DOMAIN	The domain name associated with this record.

clear dns cache

This command clears all entries in the DNS cache.

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#clear dns cache
Console#show dns cache
NO      FLAG    TYPE    IP              TTL     DOMAIN
Console#
```

Interface Commands

These commands are used to display or set communication parameters for an Ethernet port, aggregated link, or VLAN.

Table 4-42. Interface Commands

Command	Function	Mode	Page
interface	Configures an interface type and enters interface configuration mode	GC	4-130
description	Adds a description to an interface configuration	IC	4-131
speed-duplex	Configures the speed and duplex operation of a given interface when autonegotiation is disabled	IC	4-131
negotiation	Enables autonegotiation of a given interface	IC	4-132
capabilities	Advertises the capabilities of a given interface for use in autonegotiation	IC	4-133
flowcontrol	Enables flow control on a given interface	IC	4-134
combo-forced-mode	Force port type selected for combination ports	IC	4-135
shutdown	Disables an interface	IC	4-135
switchport broadcast packet-rate	Configures the broadcast storm control threshold	IC	4-136
clear counters	Clears statistics on an interface	PE	4-137
show interfaces status	Displays status for the specified interface	NE, PE	4-138
show interfaces counters	Displays statistics for the specified interfaces	NE, PE	4-139
show interfaces switchport	Displays the administrative and operational status of an interface	NE, PE	4-140

Downloaded from www.Manualslib.com manuals search engine

interface

This command configures an interface type and enter interface configuration mode. Use the **no** form to remove a trunk.

Syntax

interface *interface*
no interface port-channel *channel-id*

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)
- **vlan** *vlan-id* (Range: 1-4094)

Default Setting

None

Command Mode

Global Configuration

Example

To specify port 24, enter the following command:

```
Console(config)#interface ethernet 1/24
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

description

This command adds a description to an interface. Use the **no** form to remove the description.

Syntax

description *string*
no description

string - Comment or a description to help you remember what is attached to this interface. (Range: 1-64 characters)

Default Setting

None

Command Mode

Interface Configuration (Ethernet, Port Channel)

Example

The following example adds a description to port 24.

```
Console(config)#interface ethernet 1/24
Console(config-if)#description RD-SW#3
Console(config-if)#
```

speed-duplex

This command configures the speed and duplex mode of a given interface when autonegotiation is disabled. Use the **no** form to restore the default.

Syntax

speed-duplex {**1000full** | **100full** | **100half** | **10full** | **10half**}
no speed-duplex

- **1000full** - Forces 1000 Mbps full-duplex operation
- **100full** - Forces 100 Mbps full-duplex operation
- **100half** - Forces 100 Mbps half-duplex operation
- **10full** - Forces 10 Mbps full-duplex operation
- **10half** - Forces 10 Mbps half-duplex operation

Default Setting

- Auto-negotiation is enabled by default.
- When auto-negotiation is disabled, the default speed-duplex setting is 100half for 100BASE-TX ports and 1000full for Gigabit Ethernet ports.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- To force operation to the speed and duplex mode specified in a **speed-duplex** command, use the **no negotiation** command to disable auto-negotiation on the selected interface.
- When using the **negotiation** command to enable auto-negotiation, the optimal settings will be determined by the **capabilities** command. To set the speed/duplex mode under auto-negotiation, the required mode must be specified in the capabilities list for an interface.

Example

The following example configures port 5 to 100 Mbps, half-duplex operation.

```
Console(config)#interface ethernet 1/5
Console(config-if)#speed-duplex 100half
Console(config-if)#no negotiation
Console(config-if)#
```

Related Commands

negotiation (4-132)
capabilities (4-133)

negotiation

This command enables autonegotiation for a given interface. Use the **no** form to disable autonegotiation.

Syntax

[**no**] **negotiation**

Default Setting

Enabled

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- When auto-negotiation is enabled the switch will negotiate the best settings for a link based on the **capabilities** command. When auto-negotiation is disabled, you must manually specify the link attributes with the **speed-duplex** and **flowcontrol** commands.
- If autonegotiation is disabled, auto-MDI/MDI-X pin signal configuration will also be disabled for the RJ-45 ports.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example configures port 11 to use autonegotiation.

```
Console(config)#interface ethernet 1/11
Console(config-if)#negotiation
Console(config-if)#
```

Related Commands

capabilities (4-133)
speed-duplex (4-131)

capabilities

This command advertises the port capabilities of a given interface during autonegotiation. Use the **no** form with parameters to remove an advertised capability, or the **no** form without parameters to restore the default values.

Syntax

[**no**] **capabilities** {**1000full** | **100full** | **100half** | **10full** | **10half** | **flowcontrol** | **symmetric**}

- **1000full** - Supports 1000 Mbps full-duplex operation
- **100full** - Supports 100 Mbps full-duplex operation
- **100half** - Supports 100 Mbps half-duplex operation
- **10full** - Supports 10 Mbps full-duplex operation
- **10half** - Supports 10 Mbps half-duplex operation
- **flowcontrol** - Supports flow control
- **symmetric** (Gigabit only) - When specified, the port transmits and receives pause frames; when not specified, the port will auto-negotiate to determine the sender and receiver for asymmetric pause frames. (*The current switch ASIC only supports symmetric pause frames.*)

Default Setting

- 100BASE-TX: 10half, 10full, 100half, 100full
- 1000BASE-T: 10half, 10full, 100half, 100full, 1000full
- 1000BASE-SX/LX/LH: 1000full

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

When auto-negotiation is enabled with the **negotiation** command, the switch will negotiate the best settings for a link based on the **capabilites** command. When auto-negotiation is disabled, you must manually specify the link attributes with the **speed-duplex** and **flowcontrol** commands.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example configures Ethernet port 5 capabilities to 100half, 100full and flow control.

```
Console(config)#interface ethernet 1/5
Console(config-if)#capabilities 100half
Console(config-if)#capabilities 100full
Console(config-if)#capabilities flowcontrol
Console(config-if)#
```

Related Commands

negotiation (4-132)
speed-duplex (4-131)
flowcontrol (4-134)

flowcontrol

This command enables flow control. Use the **no** form to disable flow control.

Syntax

[**no**] **flowcontrol**

Default Setting

Flow control enabled

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- Flow control can eliminate frame loss by “blocking” traffic from end stations or segments connected directly to the switch when its buffers fill. When enabled, back pressure is used for half-duplex operation and IEEE 802.3x for full-duplex operation.
- To force flow control on or off (with the **flowcontrol** or **no flowcontrol** command), use the **no negotiation** command to disable auto-negotiation on the selected interface.
- When using the **negotiation** command to enable auto-negotiation, the optimal settings will be determined by the **capabilities** command. To enable flow control under auto-negotiation, “flowcontrol” must be included in the capabilities list for any port
- Avoid using flow control on a port connected to a hub unless it is actually required to solve a problem. Otherwise back pressure jamming signals may degrade overall performance for the segment attached to the hub.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example enables flow control on port 5.

```
Console(config)#interface ethernet 1/5
Console(config-if)#flowcontrol
Console(config-if)#no negotiation
Console(config-if)#
```

Related Commands

negotiation (4-132)
capabilities (flowcontrol, symmetric) (4-133)

combo-forced-mode

This command forces the port type selected for combination ports 21 - 24. Use the **no** form to restore the default mode.

Syntax

combo-forced-mode *mode*
no combo-forced-mode

- *mode*
  - **copper-forced** - Always uses the built-in RJ-45 port.
  - **copper-preferred-auto** - Uses the built-in RJ-45 port if both combination types are functioning and the RJ-45 port has a valid link.
  - **sfp-forced** - Always uses the SFP port (even if module not installed).
  - **sfp-preferred-auto** - Uses SFP port if both combination types are functioning and the SFP port has a valid link.

Default Setting

sfp-preferred-auto

Command Mode

Interface Configuration (Ethernet)

Example

This forces the switch to use the built-in RJ-45 port for the combination port 21.

```
Console(config)#interface ethernet 1/21
Console(config-if)#combo-forced-mode copper-forced
Console(config-if)#
```

shutdown

This command disables an interface. To restart a disabled interface, use the **no** form.

Syntax

[**no**] **shutdown**

Downloaded from www.Manualslib.com manuals search engine

Default Setting

All interfaces are enabled.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

This command allows you to disable a port due to abnormal behavior (e.g., excessive collisions), and then reenable it after the problem has been resolved. You may also want to disable a port for security reasons.

Example

The following example disables port 5.

```
Console(config)#interface ethernet 1/5
Console(config-if)#shutdown
Console(config-if)#
```

switchport broadcast packet-rate

This command configures broadcast storm control. Use the **no** form to disable broadcast storm control.

Syntax

switchport broadcast packet-rate *rate*
no switchport broadcast

rate - Threshold level as a rate; i.e., packets per second. (Range: 500 - 262143)

Default Setting

Enabled for all ports
Packet-rate limit: 500 packets per second

Command Mode

Interface Configuration (Ethernet)

Command Usage

- When broadcast traffic exceeds the specified threshold, packets above that threshold are dropped.
- This command can enable or disable broadcast storm control for the selected interface. However, the specified threshold value applies to all ports on the switch.

Downloaded from www.Manualslib.com manuals search engine

Example

The following shows how to configure broadcast storm control at 600 packets per second:

```
Console(config)#interface ethernet 1/5
Console(config-if)#switchport broadcast packet-rate 600
Console(config-if)#
```

clear counters

This command clears statistics on an interface.

Syntax

clear counters *interface*

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

None

Command Mode

Privileged Exec

Command Usage

Statistics are only initialized for a power reset. This command sets the base value for displayed statistics to zero for the current management session. However, if you log out and back into the management interface, the statistics displayed will show the absolute value accumulated since the last power reset.

Example

The following example clears statistics on port 5.

```
Console#clear counters ethernet 1/5
Console#
```


Downloaded from www.Manualslib.com manuals search engine

show interfaces status

This command displays the status for an interface.

Syntax

show interfaces status [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)
- **vlan** *vlan-id* (Range: 1-4094)

Default Setting

Shows the status for all interfaces.

Command Mode

Normal Exec, Privileged Exec

Command Usage

If no interface is specified, information on all interfaces is displayed. For a description of the items displayed by this command, see “Displaying Connection Status” on page 3-75.

Example

```
Console#show interfaces status ethernet 1/5
Information of Eth 1/5
 Basic information:
  Port type: 1000T
  Mac address: 00-00-AB-CD-00-01
 Configuration:
  Name:
  Port admin: Up
  Speed-duplex: Auto
  Capabilities: 10half, 10full, 100half, 100full, 1000full,
  Broadcast storm: Enabled
  Broadcast storm limit: 500 packets/second
  Flow control: Disabled
  Lacp: Disabled
  Port security: Disabled
  Max MAC count: 0
  Port security action: None
  Combo forced mode: None
Current status:
  Link status: Up
  Port operation status: Up
  Operation speed-duplex: 1000full
  Flow control type: None
Console#show interfaces status vlan 1
 Information of VLAN 1
 MAC address: 00-00-AB-CD-00-00
Console#
```


Downloaded from www.Manualslib.com manuals search engine

show interfaces counters

This command displays interface statistics.

Syntax

show interfaces counters [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

Shows the counters for all interfaces.

Command Mode

Normal Exec, Privileged Exec

Command Usage

If no interface is specified, information on all interfaces is displayed. For a description of the items displayed by this command, see “Showing Port Statistics” on page 3-93.

Example

```
Console#show interfaces counters ethernet 1/7
Ethernet 1/7
 Iftable stats:
  Octets input: 30658, Octets output: 196550
  Unicast input: 6, Unicast output: 5
  Discard input: 0, Discard output: 0
  Error input: 0, Error output: 0
  Unknown protos input: 0, QLen output: 0
 Extended iftable stats:
  Multi-cast input: 0, Multi-cast output: 3064
  Broadcast input: 262, Broadcast output: 1
 Ether-like stats:
  Alignment errors: 0, FCS errors: 0
  Single Collision frames: 0, Multiple collision frames: 0
  SQE Test errors: 0, Deferred transmissions: 0
  Late collisions: 0, Excessive collisions: 0
  Internal mac transmit errors: 0, Internal mac receive errors: 0
  Frame too longs: 0, Carrier sense errors: 0
  Symbol errors: 0
 RMON stats:
  Drop events: 0, Octets: 227208, Packets: 3338
  Broadcast pkts: 263, Multi-cast pkts: 3064
  Undersize pkts: 0, Oversize pkts: 0
  Fragments: 0, Jabbers: 0
  CRC align errors: 0, Collisions: 0
  Packet size <= 64 octets: 3150, Packet size 65 to 127 octets: 139
  Packet size 128 to 255 octets: 49, Packet size 256 to 511 octets: 0
  Packet size 512 to 1023 octets: 0, Packet size 1024 to 1518 octets: 0
Console#
```


Downloaded from www.Manualslib.com manuals search engine

show interfaces switchport

This command displays the administrative and operational status of the specified interfaces.

Syntax

show interfaces switchport [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

Shows all interfaces.

Command Mode

Normal Exec, Privileged Exec

Command Usage

If no interface is specified, information on all interfaces is displayed.

Example

This example shows the configuration setting for port 24.

```
Console#show interfaces switchport ethernet 1/24
 Broadcast threshold: Enabled, 500 packets/second
 Lacp status: Disabled
 Ingress rate limit: disable,1000M bits per second
 Egress rate limit: disable,1000M bits per second
 VLAN membership mode: Hybrid
 Ingress rule: Disabled
 Acceptable frame type: All frames
 Native VLAN: 1
 Priority for untagged traffic: 0
 Gvrp status: Disabled
 Allowed Vlan:    1(u),
 Forbidden Vlan:
Console#
```

Table 4-43. Interfaces Switchport Parameters

Field	Description
Broadcast threshold	Shows if broadcast storm suppression is enabled or disabled; if enabled it also shows the threshold level (page 4-136).
Lacp status	Shows if Link Aggregation Control Protocol has been enabled or disabled (page 4-149).
Ingress/Egress rate limit	Shows if rate limiting is enabled, and the current rate limit. (page 4-146).
VLAN membership mode	Indicates membership mode as Trunk or Hybrid (page 4-182).
Ingress rule	Shows if ingress filtering is enabled or disabled (page 4-183).

Downloaded from www.Manualslib.com manuals search engine

Table 4-43. Interfaces Switchport Parameters	
Field	**Description**
Acceptable frame type	Shows if acceptable VLAN frames include all types or tagged frames only (page 4-183).
Native VLAN	Indicates the default Port VLAN ID (page 4-184).
Priority for untagged traffic	Indicates the default priority for untagged frames (page 4-197).
Gvrp status	Shows if GARP VLAN Registration Protocol is enabled or disabled (page 4-194).
Allowed Vlan	Shows the VLANs this interface has joined, where "(u)" indicates untagged and "(t)" indicates tagged (page 4-185).
Forbidden Vlan	Shows the VLANs this interface can not dynamically join via GVRP (page 4-186).

Mirror Port Commands

This section describes how to mirror traffic from a source port to a target port.

Table 4-44. Mirror Port Commands			
Command	**Function**	**Mode**	**Page**
port monitor	Configures a mirror session	IC	4-141
show port monitor	Shows the configuration for a mirror port	PE	4-142

port monitor

This command configures a mirror session. Use the **no** form to clear a mirror session.

Syntax

port monitor *interface* [**rx** | **tx** | **both**]
no port monitor *interface*

- *interface* - **ethernet** *unit*/*port* (source port)
  - *unit* - Switch (unit 1).
  - *port* - Port number.
- **rx** - Mirror received packets.
- **tx** - Mirror transmitted packets.
- **both** - Mirror both received and transmitted packets.

Default Setting

No mirror session is defined. When enabled, the default mirroring is for both received and transmitted packets.

Command Mode

Interface Configuration (Ethernet, destination port)

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- You can mirror traffic from any source port to a destination port for real-time analysis. You can then attach a logic analyzer or RMON probe to the destination port and study the traffic crossing the source port in a completely unobtrusive manner.
- The destination port is set by specifying an Ethernet interface.
- The mirror port and monitor port speeds should match, otherwise traffic may be dropped from the monitor port.
- You can create multiple mirror sessions, but all sessions must share the same destination port. However, you should avoid sending too much traffic to the destination port from multiple source ports.

Example

The following example configures the switch to mirror all packets from port 6 to 11:

```
Console(config)#interface ethernet 1/11
Console(config-if)#port monitor ethernet 1/6 both
Console(config-if)#
```

show port monitor

This command displays mirror information.

Syntax

show port monitor [*interface*]

interface - **ethernet** *unit*/*port* (source port)

- *unit* - Switch (unit 1).
- *port* - Port number.

Default Setting

Shows all sessions.

Command Mode

Privileged Exec

Command Usage

This command displays the currently configured source port, destination port, and mirror mode (i.e., RX, TX, RX/TX).

Downloaded from www.Manualslib.com manuals search engine

Example

The following shows mirroring configured from port 6 to port 11:

```
Console(config)#interface ethernet 1/11
Console(config-if)#port monitor ethernet 1/6
Console(config-if)#end
Console#show port monitor
Port Mirroring
-------------------------------------
 Destination port(listen port):Eth1/1
 Source port(monitored port)  :Eth1/6
 Mode                         :RX/TX
Console#
```

AMAP Configuration

The AMAP protocol discovers adjacent switches by sending and receiving AMAP “Hello” packets on active Spanning Tree ports. Each port can be defined as being in one of three logical states of processing the AMAP "Hello" packets:

- Discovery — The initial state where a port transmits a “Hello” packet to detect an adjacent switch and then waits for a response.
- Common — The port has detected an adjacent switch and periodically sends “Hello” packets to determine that it is still present.
- Passive — A port enters this state if there is no response to a Discovery “hello” packet. This is a receive-only state and no “Hello” packets are transmitted. If a “Hello” packet is received from an adjacent switch, the port enters the Common state and then transmits a “Hello” packet in reply.

Use the AMAP Global Configuration screen to enable/disable AMAP and configure timeout parameters.

Table 4-45. AMAP Commands

Command	Function	Mode	Page
amap enable/disable	Enables, or disables AMAP on the switch	GC	4-144
amap run	This performs the same function as the **amap enable** command	GC	4-144
amap discovery timer	Sets the discovery transmission time interval	GC	4-144
amap common timer	Sets the common phase transmission time interval	GC	4-145
show amap	Displays the current AMAP settings	PE	4-145

Downloaded from www.Manualslib.com manuals search engine

amap enable

This command enables AMAP on the switch. Use the **amap disable** command to disable the feature.

Syntax

amap {**enable** | **disable**}

- **enable** – Enables AMAP
- **disable** – Disables AMAP

Default Setting

Enabled

Command Mode

Global Configuration

Example

```
Console(config)#amap enable
Console(config)
```

amap run

This command performs the same function as the **amap enable**/**disable** command. Use the **no** form to disable AMAP on the switch.

Syntax

amap run
no amap run

Default Setting

Enabled

Command Mode

Global Configuration

Example

```
Console(config)#amap run
Console(config)#
```

amap discovery timer

The time (in seconds) that switch ports in the Discovery state wait for a response to a “Hello” packet from an adjacent switch.

Syntax

amap discovery timer *seconds*

- *seconds* – Discovery transmission timeout value in seconds (Range: 1-65535 seconds)

Default Setting

30 seconds

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Global Configuration

Example

```
Console(config)#amap discovery timer 3000
Console(config)#
```

amap common timer

This command sets the time (in seconds) that switch ports in the Common state wait before sending a “Hello” packet to an adjacent switch. If there is no reply packet from an adjacent switch after two timeout intervals, the switch entry for the port will be removed and port will revert to the Discovery state.

Syntax

amap common timer *seconds*

- *seconds* – Common transmission timeout value in seconds (Range: 1-65535 seconds)

Default Setting

300 seconds

Command Mode

Global Configuration

Example

```
Console(config)#amap common timer 5000
Console(config)#
```

show amap

This command displays the current AMAP settings on the switch.

Syntax

show amap

Default Setting

None

Command Mode

Priviledged Executive

Example

```
Console#sh amap
AMAP is currently enabled
AMAP Common Phase Timeout Interval (seconds) = 5000
AMAP Discovery Phase Timeout Interval (seconds) = 3000
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Rate Limit Commands

This function allows the network manager to control the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Traffic that falls within the rate limit is transmitted, while packets that exceed the acceptable amount of traffic are dropped.

Rate limiting can be applied to individual ports or trunks. When an interface is configured with this feature, the traffic rate will be monitored by the hardware to verify conformity. Non-conforming traffic is dropped, conforming traffic is forwarded without any changes.

Table 4-46. Rate Limit Commands

Command	Function	Mode	Page
rate-limit	Configures the maximum input or output rate for a port	IC	4-146

rate-limit

This command defines the rate limit for a specific interface. Use this command without specifying a rate to restore the default rate. Use the **no** form to restore the default status of disabled.

Syntax

rate-limit {**input** | **output**} [*rate*]
no rate-limit {**input** | **output**}

- **input** – Input rate
- **output** – Output rate
- *rate* – Maximum value in Mbps. (Range: 1 to 1000 Mbps)

Default Setting

1000 Mbps

Command Mode

Interface Configuration (Ethernet, Port Channel)

Example

```
Console(config)#interface ethernet 1/1
Console(config-if)#rate-limit input 600
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Link Aggregation Commands

Ports can be statically grouped into an aggregate link (i.e., trunk) to increase the bandwidth of a network connection or to ensure fault recovery. Or you can use the Link Aggregation Control Protocol (LACP) to automatically negotiate a trunk link between this switch and another network device. For static trunks, the switches have to comply with the Cisco EtherChannel standard. For dynamic trunks, the switches have to comply with LACP. This switch supports up to six trunks. For example, a trunk consisting of two 1000 Mbps ports can support an aggregate bandwidth of 4 Gbps when operating at full duplex.

Table 4-47. Linnk Aggregation Commands

Command	Function	Mode	Page
Manual Configuration Commands			
interface port-channel	Configures a trunk and enters interface configuration mode for the trunk	GC	4-130
channel-group	Adds a port to a trunk	IC (Ethernet)	4-148
Dynamic Configuration Command			
lacp	Configures LACP for the current interface	IC (Ethernet)	4-149
lacp system-priority	Configures a port's LACP system priority	IC (Ethernet)	4-150
lacp admin-key	Configures a port's administration key	IC (Ethernet)	4-151
lacp admin-key	Configures an port channel's administration key	IC (Port Channel)	4-152
lacp port-priority	Configures a port's LACP port priority	IC (Ethernet)	4-153
Trunk Status Display Command			
show interfaces status port-channel	Shows trunk information	NE, PE	4-138
show lacp	Shows LACP information	PE	4-153

Guidelines for Creating Trunks

General Guidelines –

- Finish configuring port trunks before you connect the corresponding network cables between switches to avoid creating a loop.
- A trunk can have up to eight ports.
- The ports at both ends of a connection must be configured as trunk ports.
- All ports in a trunk must be configured in an identical manner, including communication mode (i.e., speed, duplex mode and flow control), VLAN assignments, and CoS settings.
- All the ports in a trunk have to be treated as a whole when moved from/to, added or deleted from a VLAN via the specified port-channel.
- STP, VLAN, and IGMP settings can only be made for the entire trunk via the specified port-channel.

Downloaded from www.Manualslib.com manuals search engine

Dynamically Creating a Port Channel –

Ports assigned to a common port channel must meet the following criteria:

- Ports must have the same LACP system priority.
- Ports must have the same port admin key (Ethernet Interface).
- If the port channel admin key (lacp admin key - Port Channel) is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (lacp admin key - Ethernet Interface) used by the interfaces that joined the group.
- However, if the port channel admin key is set, then the port admin key must be set to the same value for a port to be allowed to join a channel group.
- If a link goes down, LACP port priority is used to select the backup link.

channel-group

This command adds a port to a trunk. Use the **no** form to remove a port from a trunk.

Syntax

channel-group *channel-id*
no channel-group

channel-id - Trunk index (Range: 1-6)

Default Setting

The current port will be added to this trunk.

Command Mode

Interface Configuration (Ethernet)

Command Usage

- When configuring static trunks, the switches must comply with the Cisco EtherChannel standard.
- Use **no channel-group** to remove a port group from a trunk.
- Use **no interfaces port-channel** to remove a trunk from the switch.

Example

The following example creates trunk 1 and then adds port 11:

```
Console(config)#interface port-channel 1
Console(config-if)#exit
Console(config)#interface ethernet 1/11
Console(config-if)#channel-group 1
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

lacp

This command enables 802.3ad Link Aggregation Control Protocol (LACP) for the current interface. Use the **no** form to disable it.

Syntax

[**no**] **lacp**

Default Setting

Disabled

Command Mode

Interface Configuration (Ethernet)

Command Usage

- The ports on both ends of an LACP trunk must be configured for full duplex, either by forced mode or auto-negotiation.
- A trunk formed with another switch using LACP will automatically be assigned the next available port-channel ID.
- If the target switch has also enabled LACP on the connected ports, the trunk will be activated automatically.
- If more than four ports attached to the same target switch have LACP enabled, the additional ports will be placed in standby mode, and will only be enabled if one of the active links fails.

Downloaded from www.Manualslib.com manuals search engine

Example

The following shows LACP enabled on ports 11-13. Because LACP has also been enabled on the ports at the other end of the links, the **show interfaces status port-channel 1** command shows that Trunk1 has been established.

```
Console(config)#interface ethernet 1/11
Console(config-if)#lacp
Console(config-if)#exit
Console(config)#interface ethernet 1/12
Console(config-if)#lacp
Console(config-if)#exit
Console(config)#exit
Console#show interfaces status port-channel 1
Information of Trunk 1
 Basic information:
  Port type: 1000T
  Mac address: 00-00-e8-00-00-0b
 Configuration:
  Name:
  Port admin status: Up
  Speed-duplex: Auto
  Capabilities: 10half, 10full, 100half, 100full, 1000full,
  Flow control status: Disabled
  Port security: Disabled
  Max MAC count: 0
 Current status:
  Created by: lacp
  Link status: Up
  Operation speed-duplex: 1000full
  Flow control type: None
  Member Ports: Eth1/11, Eth1/12
Console#
```

lacp system-priority

This command configures a port's LACP system priority. Use the **no** form to restore the default setting.

Syntax

lacp {**actor** | **partner**} **system-priority** *priority*
no lacp {**actor** | **partner**} **system-priority**

- **actor** - The local side an aggregate link.
- **partner** - The remote side of an aggregate link.
- *priority* - This priority is used to determine link aggregation group (LAG) membership, and to identify this device to other switches during LAG negotiations. (Range: 0-65535)

Default Setting

32768

Command Mode

Interface Configuration (Ethernet)

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- Port must be configured with the same system priority to join the same LAG.
- System priority is combined with the switch's MAC address to form the LAG identifier. This identifier is used to indicate a specific LAG during LACP negotiations with other systems.
- Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#lacp actor system-priority 3
Console(config-if)#
```

lacp admin-key (Ethernet Interface)

This command configures a port's LACP administration key. Use the **no** form to restore the default setting.

Syntax

lacp {**actor** | **partner**} **admin-key** *key*
[**no**] **lacp** {**actor** | **partner**} **admin-key**

- **actor** - The local side an aggregate link.
- **partner** - The remote side of an aggregate link.
- *key* - The port admin key must be set to the same value for ports that belong to the same link aggregation group (LAG). (Range: 0-65535)

Default Setting

0

Command Mode

Interface Configuration (Ethernet)

Command Usage

- Ports are only allowed to join the same LAG if (1) the LACP system priority matches, (2) the LACP port admin key matches, and (3) the LACP port channel admin key matches (if configured).
- If the port channel admin key (**lacp admin key** - Port Channel) is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (**lacp admin key** - Ethernet Interface) used by the interfaces that joined the group.

Downloaded from www.Manualslib.com manuals search engine

- Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#lacp actor admin-key 120
Console(config-if)#
```

lacp admin-key (Port Channel)

This command configures a port channel's LACP administration key string. Use the **no** form to restore the default setting.

Syntax

lacp admin-key *key*
[**no**] **lacp admin-key**

key - The port channel admin key is used to identify a specific link aggregation group (LAG) during local LACP setup on this switch. (Range: 0-65535)

Default Setting

0

Command Mode

Interface Configuration (Port Channel)

Command Usage

- Ports are only allowed to join the same LAG if (1) the LACP system priority matches, (2) the LACP port admin key matches, and (3) the LACP port channel key matches (if configured).
- If the port channel admin key (**lacp admin key** - Port Channel) is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (**lacp admin key** - Ethernet Interface) used by the interfaces that joined the group. Note that when the LAG is no longer used, the port channel admin key is reset to 0.

Example

```
Console(config)#interface port channel 1
Console(config-if)#lacp admin-key 3
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

lacp port-priority

This command configures LACP port priority. Use the **no** form to restore the default setting.

Syntax

lacp {**actor** | **partner**} **port-priority** *priority*
no lacp {**actor** | **partner**} **port-priority**

- **actor** - The local side an aggregate link.
- **partner** - The remote side of an aggregate link.
- *priority* - LACP port priority is used to select a backup link. (Range: 0-65535)

Default Setting

32768

Command Mode

Interface Configuration (Ethernet)

Command Usage

- Setting a lower value indicates a higher effective priority.
- If an active port link goes down, the backup port with the highest priority is selected to replace the downed link. However, if two or more ports have the same LACP port priority, the port with the lowest physical port number will be selected as the backup port.
- Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#lacp actor port-priority 128
```

show lacp

This command displays LACP information.

Syntax

show lacp [*port-channel*] {**counters** | **internal** | **neighbors** | **sys-id**}

- *port-channel* - Local identifier for a link aggregation group. (Range: 1-6)
- **counters** - Statistics for LACP protocol messages.
- **internal** - Configuration settings and operational state for local side.
- **neighbors** - Configuration settings and operational state for remote side.
- **sys-id** - Summary of system priority and MAC address for all channel groups.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

Port Channel: all

Command Mode

Privileged Exec

Example

```
Console#show lacp 1 counters
Channel group : 1
-------------------------------------------------------------------------
Eth 1/ 1
-------------------------------------------------------------------------
  LACPDUs Sent : 21
  LACPDUs Received : 21
  Marker Sent : 0
  Marker Received : 0
  LACPDUs Unknown Pkts : 0
  LACPDUs Illegal Pkts : 0
⋮
```

Table 4-48. LACP Counters

Field	Description
LACPDUs Sent	Number of valid LACPDUs transmitted from this channel group.
LACPDUs Received	Number of valid LACPDUs received on this channel group.
Marker Sent	Number of valid Marker PDUs transmitted from this channel group.
Marker Received	Number of valid Marker PDUs received by this channel group.
LACPDUs Unknown Pkts	Number of frames received that either (1) Carry the Slow Protocols Ethernet Type value, but contain an unknown PDU, or (2) are addressed to the Slow Protocols group MAC Address, but do not carry the Slow Protocols Ethernet Type.
LACPDUs Illegal Pkts	Number of frames that carry the Slow Protocols Ethernet Type value, but contain a badly formed PDU or an illegal value of Protocol Subtype.

```
Console#show lacp 1 internal
Channel group : 1
-------------------------------------------------------------------------
Oper Key : 4
Admin Key : 0
Eth 1/1
-------------------------------------------------------------------------
  LACPDUs Internal : 30 sec
  LACP System Priority : 32768
  LACP Port Priority : 32768
  Admin Key : 4
  Oper Key : 4
  Admin State : defaulted, aggregation, long timeout, LACP-activity
  Oper State : distributing, collecting, synchronization, aggregation,
               long timeout, LACP-activity
⋮
```


Downloaded from www.Manualslib.com manuals search engine

Table 4-49. LACPDUs	
Field	**Description**
Oper Key	Current operational value of the key for the aggregation port.
Admin Key	Current administrative value of the key for the aggregation port.
LACPDUs Internal	Number of seconds before invalidating received LACPDU information.
LACP System Priority	LACP system priority assigned to this port channel.
LACP Port Priority	LACP port priority assigned to this interface within the channel group.
Admin State, Oper State	Administrative or operational values of the actor's state parameters: • Expired – The actor's receive machine is in the expired state; • Defaulted – The actor's receive machine is using defaulted operational partner information, administratively configured for the partner. • Distributing – If false, distribution of outgoing frames on this link is disabled; i.e., distribution is currently disabled and is not expected to be enabled in the absence of administrative changes or changes in received protocol information. • Collecting – Collection of incoming frames on this link is enabled; i.e., collection is currently enabled and is not expected to be disabled in the absence of administrative changes or changes in received protocol information. • Synchronization – The System considers this link to be IN_SYNC; i.e., it has been allocated to the correct Link Aggregation Group, the group has been associated with a compatible Aggregator, and the identity of the Link Aggregation Group is consistent with the System ID and operational Key information transmitted. • Aggregation – The system considers this link to be aggregatable; i.e., a potential candidate for aggregation. • Long timeout – Periodic transmission of LACPDUs uses a slow transmission rate. • LACP-Activity – Activity control value with regard to this link. (0: Passive; 1: Active)

```
Console#show lacp 1 neighbors
Channel group 1 neighbors
-------------------------------------------------------------------------
Eth 1/1
-------------------------------------------------------------------------
  Partner Admin System ID : 32768, 00-00-00-00-00-00
  Partner Oper System ID : 32768, 00-00-00-00-00-01
  Partner Admin Port Number : 1
  Partner Oper Port Number : 1
  Port Admin Priority : 32768
  Port Oper Priority : 32768
  Admin Key : 0
  Oper Key : 4
  Admin State : defaulted, distributing, collecting, synchronization,
                long timeout,
  Oper State : distributing, collecting, synchronization, aggregation,
               long timeout, LACP-activity
⋮
```


Downloaded from www.Manualslib.com manuals search engine

Table 4-50. LACP Neighbours Information	
Field	**Description**
Partner Admin System ID	LAG partner's system ID assigned by the user.
Partner Oper System ID	LAG partner's system ID assigned by the LACP protocol.
Partner Admin Port Number	Current administrative value of the port number for the protocol Partner.
Partner Oper Port Number	Operational port number assigned to this aggregation port by the port's protocol partner.
Port Admin Priority	Current administrative value of the port priority for the protocol partner.
Port Oper Priority	Priority value assigned to this aggregation port by the partner.
Admin Key	Current administrative value of the Key for the protocol partner.
Oper Key	Current operational value of the Key for the protocol partner.
Admin State	Administrative values of the partner's state parameters. (See preceding table.)
Oper State	Operational values of the partner's state parameters. (See preceding table.)

```
Console#show lacp sysid
Channel group    System Priority    System MAC Address
-------------------------------------------------------------------------------
            1              32768     00-30-F1-8F-2C-A7
            2              32768     00-30-F1-8F-2C-A7
            3              32768     00-30-F1-8F-2C-A7
            4              32768     00-30-F1-8F-2C-A7
            5              32768     00-30-F1-8F-2C-A7
            6              32768     00-30-F1-8F-2C-A7
Console#
```

Table 4-51. LACP System ID	
Field	**Description**
Channel group	A link aggregation group configured on this switch.
System Priority*	LACP system priority for this channel group.
System MAC Address*	System MAC address.

* The LACP system priority and system MAC address are concatenated to form the LAG system ID.

Downloaded from www.Manualslib.com manuals search engine

Address Table Commands

These commands are used to configure the address table for filtering specified addresses, displaying current entries, clearing the table, or setting the aging time.

Table 4-52. Address Table Commands

Command	Function	Mode	Page
mac-address-table static	Maps a static address to a port in a VLAN	GC	4-157
clear mac-address-table dynamic	Removes any learned entries from the forwarding database	PE	4-158
show mac-address-table	Displays entries in the bridge-forwarding database	PE	4-158
mac-address-table aging-time	Sets the aging time of the address table	GC	4-159
show mac-address-table aging-time	Shows the aging time for the address table	PE	4-160

mac-address-table static

This command maps a static address to a destination port in a VLAN. Use the **no** form to remove an address.

Syntax

mac-address-table static *mac-address* **interface** *interface*
vlan *vlan-id* [*action*]
no mac-address-table static *mac-address* **vlan** *vlan-id*

- *mac-address* - MAC address.
- *interface*
  - **ethernet** *unit*/*port*
    - *unit* - This is device 1.
    - *port* - Port number.
  - **port-channel** *channel-id* (Range: 1-6)
- *vlan-id* - VLAN ID (Range: 1-4094)
- *action* -
  - **delete-on-reset** - Assignment lasts until the switch is reset.
  - **permanent** - Assignment is permanent.

Default Setting

No static addresses are defined. The default mode is **permanent**.

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

The static address for a host device can be assigned to a specific port within a specific VLAN. Use this command to add static addresses to the MAC Address Table. Static addresses have the following characteristics:

- Static addresses will not be removed from the address table when a given interface link is down.
- Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table.
- A static address cannot be learned on another port until the address is removed with the **no** form of this command.

Example

```
Console(config)#mac-address-table static 00-e0-29-94-34-de interface
  ethernet 1/1 vlan 1 delete-on-reset
```

clear mac-address-table dynamic

This command removes any learned entries from the forwarding database and clears the transmit and receive counts for any static or system configured entries.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#clear mac-address-table dynamic
```

show mac-address-table

This command shows classes of entries in the bridge-forwarding database.

Syntax

show mac-address-table [**address** *mac-address* [*mask*]] [**interface** *interface*] [**vlan** *vlan-id*] [**sort** {**address** | **vlan** | **interface**}]

- *mac-address* - MAC address.
- *mask* - Bits to match in the address.
- *interface*
  - **ethernet** *unit*/*port*
    - *unit* - This is device 1.
    - *port* - Port number.
  - **port-channel** *channel-id* (Range: 1-6)
- *vlan-id* - VLAN ID (Range: 1-4094)
- **sort** - Sort by address, vlan or interface.

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- The MAC Address Table contains the MAC addresses associated with each interface. Note that the Type field may include the following types:
  - Learned - Dynamic address entries
  - Permanent - Static entry
  - Delete-on-reset - Static entry to be deleted when system is reset
- The mask should be hexadecimal numbers (representing an equivalent bit mask) in the form xx-xx-xx-xx-xx-xx that is applied to the specified MAC address. Enter hexadecimal numbers, where an equivalent binary bit “0” means to match a bit and “1” means to ignore a bit. For example, a mask of 00-00-00-00-00-00 means an exact match, and a mask of FF-FF-FF-FF-FF-FF means “any.”
- The maximum number of address entries is 8191.

Example

```
Console#show mac-address-table
 Interface Mac Address       Vlan Type
 --------- ----------------- ---- -----------------
  Eth 1/23 00-10-B5-C4-22-DD    1 Learned

 Total number of MAC addresses : 1
Console#
```

mac-address-table aging-time

This command sets the aging time for entries in the address table. Use the **no** form to restore the default aging time.

Syntax

mac-address-table aging-time *seconds*
no mac-address-table aging-time

seconds - Aging time. (Range: 10-1000000 seconds; 0 to disable aging)

Default Setting

300 seconds

Command Mode

Global Configuration

Command Usage

The aging time is used to age out dynamically learned forwarding information.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#mac-address-table aging-time 100
Console(config)#
```

show mac-address-table aging-time

This command shows the aging time for entries in the address table.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show mac-address-table aging-time
 Aging time: 300 sec.
Console#
```

Spanning Tree Commands

This section includes commands that configure the Spanning Tree Algorithm (STA) globally for the switch, and commands that configure STA for the selected interface.

Table 4-53. Spanning Tree Commands

Command	Function	Mode	Page
spanning-tree	Enables the spanning tree protocol	GC	4-161
spanning-tree mode	Configures STP, RSTP or MSTP mode	GC	4-162
spanning-tree forward-time	Configures the spanning tree bridge forward time	GC	4-163
spanning-tree hello-time	Configures the spanning tree bridge hello time	GC	4-164
spanning-tree max-age	Configures the spanning tree bridge maximum age	GC	4-164
spanning-tree priority	Configures the spanning tree bridge priority	GC	4-165
spanning-tree path-cost method	Configures the path cost method for RSTP/MSTP	GC	4-166
spanning-tree transmission-limit	Configures the transmission limit for RSTP/MSTP	GC	4-166
spanning-tree mst-configuration	Changes to MSTP configuration mode	GC	4-167
mst vlan	Adds VLANs to a spanning tree instance	MST	4-167
mst priority	Configures the priority of a spanning tree instance	MST	4-168
name	Configures the name for the multiple spanning tree	MST	4-169
revision	Configures the revision number for the multiple spanning tree	MST	4-169
max-hops	Configures the maximum number of hops allowed in the region before a BPDU is discarded	MST	4-170

Downloaded from www.Manualslib.com manuals search engine

Table 4-53. Spanning Tree Commands			
Command	**Function**	**Mode**	**Page**
spanning-tree spanning-disabled	Disables spanning tree for an interface	IC	4-171
spanning-tree cost	Configures the spanning tree path cost of an interface	IC	4-171
spanning-tree port-priority	Configures the spanning tree priority of an interface	IC	4-172
spanning-tree edge-port	Enables fast forwarding for edge ports	IC	4-172
spanning-tree portfast	Sets an interface to fast forwarding	IC	4-173
spanning-tree link-type	Configures the link type for RSTP/MSTP	IC	4-174
spanning-tree mst cost	Configures the path cost of an instance in the MST	IC	4-175
spanning-tree mst port-priority	Configures the priority of an instance in the MST	IC	4-176
spanning-tree protocol-migration	Re-checks the appropriate BPDU format	PE	4-176
show spanning-tree	Shows spanning tree configuration for the common spanning tree (i.e., overall bridge), a selected interface, or an instance within the multiple spanning tree	PE	4-177
show spanning-tree mst configuration	Shows the multiple spanning tree configuration	PE	4-178

spanning-tree

This command enables the Spanning Tree Algorithm globally for the switch. Use the **no** form to disable it.

Syntax

[**no**] **spanning-tree**

Default Setting

Spanning tree is enabled.

Command Mode

Global Configuration

Command Usage

The Spanning Tree Algorithm (STA) can be used to detect and disable network loops, and to provide backup links between switches, bridges or routers. This allows the switch to interact with other bridging devices (that is, an STA-compliant switch, bridge or router) in your network to ensure that only one route exists between any two stations on the network, and provide backup links which automatically take over when a primary link goes down.

Downloaded from www.Manualslib.com manuals search engine

Example

This example shows how to enable the Spanning Tree Algorithm for the switch:

```
Console(config)#spanning-tree
Console(config)#
```

spanning-tree mode

This command selects the spanning tree mode for this switch. Use the **no** form to restore the default.

Syntax

spanning-tree mode {**stp** | **rstp** | **mstp**}
no spanning-tree mode

- **stp** - Spanning Tree Protocol (IEEE 802.1D)
- **rstp** - Rapid Spanning Tree Protocol (IEEE 802.1w)
- **mstp** - Multiple Spanning Tree (IEEE 802.1s)

Default Setting

rstp

Command Mode

Global Configuration

Command Usage

- Spanning Tree Protocol

  Uses RSTP for the internal state machine, but sends only 802.1D BPDUs.

  - This creates one spanning tree instance for the entire network. If multiple VLANs are implemented on a network, the path between specific VLAN members may be inadvertently disabled to prevent network loops, thus isolating group members. When operating multiple VLANs, we recommend selecting the MSTP option.

- Rapid Spanning Tree Protocol

  RSTP supports connections to either STP or RSTP nodes by monitoring the incoming protocol messages and dynamically adjusting the type of protocol messages the RSTP node transmits, as described below:

  - STP Mode – If the switch receives an 802.1D BPDU after a port's migration delay timer expires, the switch assumes it is connected to an 802.1D bridge and starts using only 802.1D BPDUs.
  - RSTP Mode – If RSTP is using 802.1D BPDUs on a port and receives an RSTP BPDU after the migration delay expires, RSTP restarts the migration delay timer and begins using RSTP BPDUs on that port.

Downloaded from www.Manualslib.com manuals search engine

- Multiple Spanning Tree Protocol
  - To allow multiple spanning trees to operate over the network, you must configure a related set of bridges with the same MSTP configuration, allowing them to participate in a specific set of spanning tree instances.
  - A spanning tree instance can exist only on bridges that have compatible VLAN instance assignments.
  - Be careful when switching between spanning tree modes. Changing modes stops all spanning-tree instances for the previous mode and restarts the system in the new mode, temporarily disrupting user traffic.

Example

The following example configures the switch to use Rapid Spanning Tree:

```
Console(config)#spanning-tree mode rstp
Console(config)#
```

spanning-tree forward-time

This command configures the spanning tree bridge forward time globally for this switch. Use the **no** form to restore the default.

Syntax

spanning-tree forward-time *seconds*
no spanning-tree **forward-time**

seconds - Time in seconds. (Range: 4 - 30 seconds)
The minimum value is the higher of 4 or [(max-age / 2) + 1].

Default Setting

15 seconds

Command Mode

Global Configuration

Command Usage

This command sets the maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to the discarding state; otherwise, temporary data loops might result.

Example

```
Console(config)#spanning-tree forward-time 20
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

spanning-tree hello-time

This command configures the spanning tree bridge hello time globally for this switch. Use the **no** form to restore the default.

Syntax

spanning-tree hello-time *time*
no spanning-tree hello-time

time - Time in seconds. (Range: 1-10 seconds).
The maximum value is the lower of 10 or [(max-age / 2) -1].

Default Setting

2 seconds

Command Mode

Global Configuration

Command Usage

This command sets the time interval (in seconds) at which the root device transmits a configuration message.

Example

```
Console(config)#spanning-tree hello-time 5
Console(config)#
```

spanning-tree max-age

This command configures the spanning tree bridge maximum age globally for this switch. Use the **no** form to restore the default.

Syntax

spanning-tree max-age *seconds*
no spanning-tree max-age

seconds - Time in seconds. (Range: 6-40 seconds)
The minimum value is the higher of 6 or [2 x (hello-time + 1)].
The maximum value is the lower of 40 or [2 x (forward-time - 1)].

Default Setting

20 seconds

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

This command sets the maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network.

Example

```
Console(config)#spanning-tree max-age 40
Console(config)#
```

spanning-tree priority

This command configures the spanning tree priority globally for this switch. Use the **no** form to restore the default.

Syntax

spanning-tree priority *priority*
no spanning-tree priority

priority - Priority of the bridge. (Range: 0 - 65535)
(Range – 0-61440, in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440)

Default Setting

32768

Command Mode

Global Configuration

Command Usage

Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device.

Example

```
Console(config)#spanning-tree priority 40000
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

spanning-tree pathcost method

This command configures the path cost method used for Rapid Spanning Tree and Multiple Spanning Tree. Use the **no** form to restore the default.

Syntax

spanning-tree pathcost method {**long** | **short**}
no spanning-tree pathcost method

- **long** - Specifies 32-bit based values that range from 1-200,000,000.
- **short** - Specifies 16-bit based values that range from 1-65535.

Default Setting

Long method

Command Mode

Global Configuration

Command Usage

The path cost method is used to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. Note that path cost (page 4-171) takes precedence over port priority (page 4-172).

Example

```
Console(config)#spanning-tree pathcost method long
Console(config)#
```

spanning-tree transmission-limit

This command configures the minimum interval between the transmission of consecutive RSTP/MSTP BPDUs. Use the **no** form to restore the default.

Syntax

spanning-tree transmission-limit *count*
no spanning-tree transmission-limit

count - The transmission limit in seconds. (Range: 1-10)

Default Setting

3

Command Mode

Global Configuration

Command Usage

This command limits the maximum transmission rate for BPDUs.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#spanning-tree transmission-limit 4
Console(config)#
```

spanning-tree mst-configuration

Use this command to change to Multiple Spanning Tree (MST) configuration mode.

Default Setting

- No VLANs are mapped to any MST instance.
- The region name is set the switch's MAC address.

Command Mode

Global Configuration

Example

```
Console(config)#spanning-tree mst-configuration
Console(config-mstp)#
```

Related Commands

mst vlan (4-167)
mst priority (4-168)
name (4-169)
revision (4-169)
max-hops (4-170)

mst vlan

This command adds VLANs to a spanning tree instance. Use the **no** form to remove the specified VLANs. Using the **no** form without any VLAN parameters to remove all VLANs.

Syntax

[**no**] **mst** *instance_id* **vlan** *vlan-range*

- *instance_id* - Instance identifier of the spanning tree. (Range: 0-57)
- *vlan-range* - Range of VLANs. (Range: 1-4094)

Default Setting

none

Command Mode

MST Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- Use this command to group VLANs into spanning tree instances. MSTP generates a unique spanning tree for each instance. This provides multiple pathways across the network, thereby balancing the traffic load, preventing wide-scale disruption when a bridge node in a single instance fails, and allowing for faster convergence of a new topology for the failed instance.
- By default all VLANs are assigned to the Internal Spanning Tree (MSTI 0) that connects all bridges and LANs within the MST region. This switch supports up to 34 instances. You should try to group VLANs which cover the same general area of your network. However, remember that you must configure all bridges within the same MSTI Region (page 4-169) with the same set of instances, and the same instance (on each bridge) with the same set of VLANs. Also, note that RSTP treats each MSTI region as a single node, connecting all regions to the Common Spanning Tree.

Example

```
Console(config-mstp)#mst 1 vlan 2-5
Console(config-mstp)#
```

mst priority

This command configures the priority of a spanning tree instance. Use the **no** form to restore the default.

Syntax

mst *instance_id* **priority** *priority*
no mst *instance_id* **priority**

- *instance_id* - Instance identifier of the spanning tree. (Range: 0-64)
- *priority* - Priority of the a spanning tree instance.
  (Range: 0-61440 in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440)

Default Setting

32768

Command Mode

MST Configuration

Command Usage

- MST priority is used in selecting the root bridge and alternate bridge of the specified instance. The device with the highest priority (i.e., lowest numerical value) becomes the MSTI root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device.

Downloaded from www.Manualslib.com manuals search engine

- You can set this switch to act as the MSTI root device by specifying a priority of 0, or as the MSTI alternate device by specifying a priority of 16384.

Example

```
Console(config-mstp)#mst 1 priority 4096
Console(config-mstp)#
```

name

This command configures the name for the multiple spanning tree region in which this switch is located. Use the **no** form to clear the name.

Syntax

name *name*

name - Name of the spanning tree.

Default Setting

Switch's MAC address

Command Mode

MST Configuration

Command Usage

The MST region name and revision number (page 4-169) are used to designate a unique MST region. A bridge (i.e., spanning-tree compliant device such as this switch) can only belong to one MST region. And all bridges in the same region must be configured with the same MST instances.

Example

```
Console(config-mstp)#name R&D
Console(config-mstp)#
```

Related Commands

revision (4-169)

revision

This command configures the revision number for this multiple spanning tree configuration of this switch. Use the **no** form to restore the default.

Syntax

revision *number*

number - Revision number of the spanning tree. (Range: 0-65535)

Default Setting

0

Downloaded from www.Manualslib.com manuals search engine

Command Mode

MST Configuration

Command Usage

The MST region name (page 4-169) and revision number are used to designate a unique MST region. A bridge (i.e., spanning-tree compliant device such as this switch) can only belong to one MST region. And all bridges in the same region must be configured with the same MST instances.

Example

```
Console(config-mstp)#revision 1
Console(config-mstp)#
```

Related Commands

name (4-169)

max-hops

This command configures the maximum number of hops in the region before a BPDU is discarded. Use the **no** form to restore the default.

Syntax

max-hops hop-number

hop-number - Maximum hop number for multiple spanning tree. (Range: 1-40)

Default Setting

20

Command Mode

MST Configuration

Command Usage

A MSTI region is treated as a single node by the STP and RSTP protocols. Therefore, the message age for BPDUs inside a MSTI region is never changed. However, each spanning tree instance within a region, and the internal spanning tree (IST) that connects these instances use a hop count to specify the maximum number of bridges that will propagate a BPDU. Each bridge decrements the hop count by one before passing on the BPDU. When the hop count reaches zero, the message is dropped.

Example

```
Console(config-mstp)#max-hops 30
Console(config-mstp)#
```


Downloaded from www.Manualslib.com manuals search engine

spanning-tree spanning-disabled

This command disables the spanning tree algorithm for the specified interface. Use the **no** form to reenable the spanning tree algorithm for the specified interface.

Syntax

[**no**] **spanning-tree spanning-disabled**

Default Setting

Enabled

Command Mode

Interface Configuration (Ethernet, Port Channel)

Example

This example disables the spanning tree algorithm for port 5.

```
Console(config)#interface ethernet 1/5
Console(config-if)#spanning-tree spanning-disabled
Console(config-if)#
```

spanning-tree cost

This command configures the spanning tree path cost for the specified interface. Use the **no** form to restore the default.

Syntax

spanning-tree cost *cost*
no spanning-tree cost

cost - The path cost for the port. (Range: 1-200,000,000))
The recommended range is:

- Ethernet: 200,000-20,000,000
- Fast Ethernet: 20,000-2,000,000
- Gigabit Ethernet: 2,000-200,000

Default Setting

- Ethernet – half duplex: 2,000,000; full duplex: 1,000,000; trunk: 500,000
- Fast Ethernet – half duplex: 200,000; full duplex: 100,000; trunk: 50,000
- Gigabit Ethernet – full duplex: 10,000; trunk: 5,000

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- This command is used by the Spanning Tree Algorithm to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media.

Downloaded from www.Manualslib.com manuals search engine

- Path cost takes precedence over port priority.
- When the spanning-tree pathcost method (page 4-166) is set to short, the maximum value for path cost is 65,535.

Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#spanning-tree cost 50
Console(config-if)#
```

spanning-tree port-priority

This command configures the priority for the specified interface. Use the **no** form to restore the default.

Syntax

spanning-tree port-priority *priority*
no spanning-tree port-priority

priority - The priority for a port. (Range: 0-240, in steps of 16)

Default Setting

128

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- This command defines the priority for the use of a port in the Spanning Tree Algorithm. If the path cost for all ports on a switch are the same, the port with the highest priority (that is, lowest value) will be configured as an active link in the spanning tree.
- Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.

Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#spanning-tree port-priority 0
```

Related Commands

spanning-tree cost (4-171)

spanning-tree edge-port

This command specifies an interface as an edge port. Use the **no** form to restore the default.

Syntax

[**no**] **spanning-tree edge-port**

Downloaded from www.Manualslib.com manuals search engine

Default Setting

Disabled

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- You can enable this option if an interface is attached to a LAN segment that is at the end of a bridged LAN or to an end node. Since end nodes cannot cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to initiate reconfiguration when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device.
- This command has the same effect as the **spanning-tree portfast**.

Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree edge-port
Console(config-if)#
```

Related Commands

spanning-tree portfast (4-173)

spanning-tree portfast

This command sets an interface to fast forwarding. Use the **no** form to disable fast forwarding.

Syntax

[**no**] **spanning-tree portfast**

Default Setting

Disabled

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- This command is used to enable/disable the fast spanning-tree mode for the selected port. In this mode, ports skip the Discarding and Learning states, and proceed straight to Forwarding.

Downloaded from www.Manualslib.com manuals search engine

- Since end-nodes cannot cause forwarding loops, they can be passed through the spanning tree state changes more quickly than allowed by standard convergence time. Fast forwarding can achieve quicker convergence for end-node workstations and servers, and also overcome other STA related timeout problems. (Remember that fast forwarding should only be enabled for ports connected to a LAN segment that is at the end of a bridged LAN or for an end-node device.)
- This command is the same as **spanning-tree edge-port**, and is only included for backward compatibility with earlier products. Note that this command may be removed for future software versions.

Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#bridge-group 1 portfast
Console(config-if)#
```

Related Commands

spanning-tree edge-port (4-172)

spanning-tree link-type

This command configures the link type for Rapid Spanning Tree and Multiple Spanning Tree. Use the **no** form to restore the default.

Syntax

spanning-tree link-type {**auto** | **point-to-point** | **shared**}
no spanning-tree link-type

- **auto** - Automatically derived from the duplex mode setting.
- **point-to-point** - Point-to-point link.
- **shared** - Shared medium.

Default Setting

auto

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- Specify a point-to-point link if the interface can only be connected to exactly one other bridge, or a shared link if it can be connected to two or more bridges.
- When automatic detection is selected, the switch derives the link type from the duplex mode. A full-duplex interface is considered a point-to-point link, while a half-duplex interface is assumed to be on a shared link.
- RSTP only works on point-to-point links between two bridges. If you designate a port as a shared link, RSTP is forbidden. Since MSTP is an extension of RSTP, this same restriction applies.

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree link-type point-to-point
```

spanning-tree mst cost

This command configures the path cost on a spanning instance in the Multiple Spanning Tree. Use the **no** form to restore the default.

Syntax

spanning-tree mst *instance_id* **cost** *cost*
no spanning-tree mst *instance_id* **cost**

- *instance_id* - Instance identifier of the spanning tree. (Range: 1-4094, no leading zeroes)
- *cost* - Path cost for an interface. (Range: 1-200,000,000)
  The recommended range is -
  - Ethernet: 200,000-20,000,000
  - Fast Ethernet: 20,000-2,000,000
  - Gigabit Ethernet: 2,000-200,000

Default Setting

- Ethernet – half duplex: 2,000,000; full duplex: 1,000,000; trunk: 500,000
- Fast Ethernet – half duplex: 200,000; full duplex: 100,000; trunk: 50,000
- Gigabit Ethernet – full duplex: 10,000; trunk: 5,000

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- Each spanning-tree instance is associated with a unique set of VLAN IDs.
- This command is used by the multiple spanning-tree algorithm to determine the best path between devices. Therefore, lower values should be assigned to interfaces attached to faster media, and higher values assigned to interfaces with slower media.
- Path cost takes precedence over interface priority.

Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree mst 1 cost 50
Console(config-if)#
```

Related Commands

spanning-tree mst port-priority (4-176)

Downloaded from www.Manualslib.com manuals search engine

spanning-tree mst port-priority

This command configures the interface priority on a spanning instance in the Multiple Spanning Tree. Use the **no** form to restore the default.

Syntax

spanning-tree mst *instance_id* **port-priority** *priority*
no spanning-tree mst *instance_id* **port-priority**

- *instance_id* - Instance identifier of the spanning tree. (Range: 1-4094, no leading zeroes)
- *priority* - Priority for an interface. (Range: 0-240 in steps of 16)

Default Setting

128

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- This command defines the priority for the use of an interface in the multiple spanning-tree. If the path cost for all interfaces on a switch are the same, the interface with the highest priority (that is, lowest value) will be configured as an active link in the spanning tree.
- Where more than one interface is assigned the highest priority, the interface with lowest numeric identifier will be enabled.

Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree mst 1 port-priority 0
Console(config-if)#
```

Related Commands

spanning-tree mst cost (4-175)

spanning-tree protocol-migration

This command re-checks the appropriate BPDU format to send on the selected interface.

Syntax

spanning-tree protocol-migration *interface*

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Command Usage

If at any time the switch detects STP BPDUs, including Configuration or Topology Change Notification BPDUs, it will automatically set the selected interface to forced STP-compatible mode. However, you can also use the **spanning-tree protocol-migration** command at any time to manually re-check the appropriate BPDU format to send on the selected interfaces (i.e., RSTP or STP-compatible).

Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree protocol-migration
Console(config-if)#
```

show spanning-tree

This command shows the configuration for the common spanning tree (CST) or for an instance within the multiple spanning tree (MST).

Syntax

show spanning-tree [*interface* | **mst** *instance_id*]

- *interface*
  - **ethernet** *unit*/*port*
    - *unit* - This is device 1.
    - *port* - Port number.
  - **port-channel** *channel-id* (Range: 1-6)
- *instance_id* - Instance identifier of the multiple spanning tree. (Range: 0-64, no leading zeroes)

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- Use the **show spanning-tree** command with no parameters to display the spanning tree configuration for the switch for the Common Spanning Tree (CST) and for every interface in the tree.
- Use the **show spanning-tree** *interface* command to display the spanning tree configuration for an interface within the Common Spanning Tree (CST).
- Use the **show spanning-tree mst** *instance_id* command to display the spanning tree configuration for an instance within the Multiple Spanning Tree (MST).

Downloaded from www.Manualslib.com manuals search engine

- For a description of the items displayed under “Spanning-tree information,” see “Configuring Global Settings” on page 3-107. For a description of the items displayed for specific interfaces, see “Displaying Interface Settings” on page 3-111.

Example

```
Console#show spanning-tree
Spanning-tree information
---------------------------------------------------------------
 Spanning tree mode               :MSTP
 Spanning tree enable/disable     :enable
 Instance                         :0
 Vlans configuration              :1-4094
 Priority                         :32768
 Bridge Hello Time (sec.)         :2
 Bridge Max Age (sec.)            :20
 Bridge Forward Delay (sec.)      :15
 Root Hello Time (sec.)           :2
 Root Max Age (sec.)              :20
 Root Forward Delay (sec.)        :15
 Max hops                         :20
 Remaining hops                   :20
 Designated Root                  :32768.0.0000ABCD0000
 Current root port                :1
 Current root cost                :200000
 Number of topology changes       :1
 Last topology changes time (sec.):22
 Transmission limit               :3
 Path Cost Method                 :long
---------------------------------------------------------------
Eth  1/ 1 information
---------------------------------------------------------------
 Admin status         : enable
 Role                 : root
 State                : forwarding
 External path cost   : 100000
 Internal path cost   : 100000
 Priority             : 128
 Designated cost      : 200000
 Designated port      : 128.24
 Designated root      : 32768.0.0000ABCD0000
 Designated bridge    : 32768.0.0030F1552000
 Fast forwarding      : disable
 Forward transitions  : 1
 Admin edge port      : enable
 Oper edge port       : disable
 Admin Link type      : auto
 Oper Link type       : point-to-point
 Spanning Tree Status : enable
:
Console#
```

show spanning-tree mst configuration

This command shows the configuration of the multiple spanning tree.

Syntax

show spanning-tree mst configuration

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#show spanning-tree mst configuration
Mstp Configuration Information
-------------------------------------------------------------
 Configuration name:00 30 f1 ab 77 7c
 Revision level:0

 Instance Vlans
-------------------------------------------------------------
     0    1-4094
Console#
```

VLAN Commands

A VLAN is a group of ports that can be located anywhere in the network, but communicate as though they belong to the same physical segment. This section describes commands used to create VLAN groups, add port members, specify how VLAN tagging is used, and enable automatic VLAN registration for the selected interface.

Table 4-54. VLAN Commands

Command Groups	Function	Page
Editing VLAN Groups	Sets up VLAN groups, including name, VID and state	4-179
Configuring VLAN Interfaces	Configures VLAN interface parameters, including ingress and egress tagging mode, ingress filtering, PVID, and GVRP	4-181
Displaying VLAN Information	Displays VLAN groups, status, port members, and MAC addresses	4-187
Configuring Protocol VLANs	Configures protocol-based VLANs based on frame type and protocol	4-187
Configuring Private VLANs	Configures private VLANs, including uplink and downlink ports	4-191

Editing VLAN Groups

Table 4-55. Editing VLAN Groups

Command	Function	Mode	Page
vlan database	Enters VLAN database mode to add, change, and delete VLANs	GC	4-180
vlan	Configures a VLAN, including VID, name and state	VC	4-180

Downloaded from www.Manualslib.com manuals search engine

vlan database

This command enters VLAN database mode. All commands in this mode will take effect immediately.

Default Setting

None

Command Mode

Global Configuration

Command Usage

- Use the VLAN database command mode to add, change, and delete VLANs. After finishing configuration changes, you can display the VLAN settings by entering the **show vlan** command.
- Use the **interface vlan** command mode to define the port membership mode and add or remove ports from a VLAN. The results of these commands are written to the running-configuration file, and you can display this file by entering the **show running-config** command.

Example

```
Console(config)#vlan database
Console(config-vlan)#
```

Related Commands

show vlan (4-187)

vlan

This command configures a VLAN. Use the **no** form to restore the default settings or delete a VLAN.

Syntax

vlan *vlan-id* [**name** *vlan-name*] **media ethernet** [**state** {**active** | **suspend**}]
no vlan *vlan-id* [**name** | **state**]

- *vlan-id* - ID of configured VLAN. (Range: 1-4094, no leading zeroes)
- **name** - Keyword to be followed by the VLAN name.
  - *vlan-name* - ASCII string from 1 to 32 characters.
- **media ethernet** - Ethernet media type.
- **state** - Keyword to be followed by the VLAN state.
  - **active** - VLAN is operational.
  - **suspend** - VLAN is suspended. Suspended VLANs do not pass packets.

Default Setting

By default only VLAN 1 exists and is active.

Downloaded from www.Manualslib.com manuals search engine

Command Mode

VLAN Database Configuration

Command Usage

- **no vlan** *vlan-id* deletes the VLAN.
- **no vlan** *vlan-id* **name** removes the VLAN name.
- **no vlan** *vlan-id* **state** returns the VLAN to the default state (i.e., active).
- You can configure up to 255 VLANs on the switch.

Example

The following example adds a VLAN, using VLAN ID 105 and name RD5. The VLAN is activated by default.

```
Console(config)#vlan database
Console(config-vlan)#vlan 105 name RD5 media ethernet
Console(config-vlan)#
```

Related Commands

show vlan (4-187)

Configuring VLAN Interfaces

Table 4-56. Configuring VLAN Interfaces

Command	Function	Mode	Page
interface vlan	Enters interface configuration mode for a specified VLAN	IC	4-181
switchport mode	Configures VLAN membership mode for an interface	IC	4-182
switchport acceptable-frame-types	Configures frame types to be accepted by an interface	IC	4-183
switchport ingress-filtering	Enables ingress filtering on an interface	IC	4-183
switchport native vlan	Configures the PVID (native VLAN) of an interface	IC	4-184
switchport allowed vlan	Configures the VLANs associated with an interface	IC	4-185
switchport gvrp	Enables GVRP for an interface	IC	4-194
switchport forbidden vlan	Configures forbidden VLANs for an interface	IC	4-186
switchport priority default	Sets a port priority for incoming untagged frames	IC	4-197

interface vlan

This command enters interface configuration mode for VLANs, which is used to configure VLAN parameters for a physical interface.

Syntax

interface vlan *vlan-id*

vlan-id - ID of the configured VLAN. (Range: 1-4094, no leading zeroes)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Global Configuration

Example

The following example shows how to set the interface configuration mode to VLAN 1, and then assign an IP address to the VLAN:

```
Console(config)#interface vlan 1
Console(config-if)#ip address 192.168.1.254 255.255.255.0
Console(config-if)#
```

Related Commands

shutdown (4-135)

switchport mode

This command configures the VLAN membership mode for a port. Use the **no** form to restore the default.

Syntax

switchport mode {**trunk** | **hybrid**}
no switchport mode

- **trunk** - Specifies a port as an end-point for a VLAN trunk. A trunk is a direct link between two switches, so the port transmits tagged frames that identify the source VLAN. However, note that frames belonging to the port's default VLAN (i.e., associated with the PVID) are sent untagged.
- **hybrid** - Specifies a hybrid VLAN interface. The port may transmit tagged or untagged frames.

Default Setting

All ports are in hybrid mode with the PVID set to VLAN 1.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Example

The following shows how to set the configuration mode to port 1, and then set the switchport mode to hybrid:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport mode hybrid
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Related Commands

switchport acceptable-frame-types (4-183)

switchport acceptable-frame-types

This command configures the acceptable frame types for a port. Use the **no** form to restore the default.

Syntax

switchport acceptable-frame-types {**all** | **tagged**}
no switchport acceptable-frame-types

- **all** - The port accepts all frames, tagged or untagged.
- **tagged** - The port only receives tagged frames.

Default Setting

All frame types

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

When set to receive all frame types, any received frames that are untagged are assigned to the default VLAN.

Example

The following example shows how to restrict the traffic received on port 1 to tagged frames:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport acceptable-frame-types tagged
Console(config-if)#
```

Related Commands

switchport mode (4-182)

switchport ingress-filtering

This command enables ingress filtering for an interface. Use the **no** form to restore the default.

Syntax

[**no**] **switchport ingress-filtering**

Default Setting

Disabled

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- Ingress filtering only affects tagged frames.
- If ingress filtering is disabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be flooded to all other ports (except for those VLANs explicitly forbidden on this port).
- If ingress filtering is enabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be discarded.
- Ingress filtering does not affect VLAN independent BPDU frames, such as GVRP or STA. However, they do affect VLAN dependent BPDU frames, such as GMRP.

Example

The following example shows how to set the interface to port 1 and then enable ingress filtering:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport ingress-filtering
Console(config-if)#
```

switchport native vlan

This command configures the PVID (i.e., default VLAN ID) for a port. Use the **no** form to restore the default.

Syntax

switchport native vlan *vlan-id*
no switchport native vlan

vlan-id - Default VLAN ID for a port. (Range: 1-4094, no leading zeroes)

Default Setting

VLAN 1

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- If an interface is not a member of VLAN 1 and you assign its PVID to this VLAN, the interface will automatically be added to VLAN 1 as an untagged member. For all other VLANs, an interface must first be configured as an untagged member before you can assign its PVID to that group.
- If acceptable frame types is set to **all** or switchport mode is set to **hybrid**, the PVID will be inserted into all untagged frames entering the ingress port.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example shows how to set the PVID for port 1 to VLAN 3:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport native vlan 3
Console(config-if)#
```

switchport allowed vlan

This command configures VLAN groups on the selected interface. Use the **no** form to restore the default.

Syntax

switchport allowed vlan {**add** *vlan-list* [**tagged** | **untagged**] |
remove *vlan-list*}
no switchport allowed vlan

- **add** *vlan-list* - List of VLAN identifiers to add.
- **remove** *vlan-list* - List of VLAN identifiers to remove.
- *vlan-list* - Separate nonconsecutive VLAN identifiers with a comma and no spaces; use a hyphen to designate a range of IDs. Do not enter leading zeros. (Range: 1-4094).

Default Setting

All ports are assigned to VLAN 1 by default.
The default frame type is untagged.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- A port, or a trunk with switchport mode set to **hybrid**, must be assigned to at least one VLAN as untagged.
- If a trunk has switchport mode set to **trunk** (i.e., 1Q Trunk), then you can only assign an interface to VLAN groups as a tagged member.
- Frames are always tagged within the switch. The tagged/untagged parameter used when adding a VLAN to an interface tells the switch whether to keep or remove the tag from a frame on egress.
- If none of the intermediate network devices nor the host at the other end of the connection supports VLANs, the interface should be added to these VLANs as an untagged member. Otherwise, it is only necessary to add at most one VLAN as untagged, and this should correspond to the native VLAN for the interface.
- If a VLAN on the forbidden list for an interface is manually added to that interface, the VLAN is automatically removed from the forbidden list for that interface.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example shows how to add VLANs 1, 2, 5 and 6 to the allowed list as tagged VLANs for port 1:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport allowed vlan add 1,2,5,6 tagged
Console(config-if)#
```

switchport forbidden vlan

This command configures forbidden VLANs. Use the **no** form to remove the list of forbidden VLANs.

Syntax

switchport forbidden vlan {**add** *vlan-list* | **remove** *vlan-list*}
no switchport forbidden vlan

- **add** *vlan-list* - List of VLAN identifiers to add.
- **remove** *vlan-list* - List of VLAN identifiers to remove.
- *vlan-list* - Separate nonconsecutive VLAN identifiers with a comma and no spaces; use a hyphen to designate a range of IDs. Do not enter leading zeros. (Range: 1-4094).

Default Setting

No VLANs are included in the forbidden list.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- This command prevents a VLAN from being automatically added to the specified interface via GVRP.
- If a VLAN has been added to the set of allowed VLANs for an interface, then you cannot add it to the set of forbidden VLANs for that same interface.

Example

The following example shows how to prevent port 1 from being added to VLAN 3:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport forbidden vlan add 3
Console(config-if)#
```


Downloaded from www.Manualslib.com manuals search engine

Displaying VLAN Information

Table 4-57. Displaying VLAN Information			
Command	**Function**	**Mode**	**Page**
show vlan	Shows VLAN information	NE, PE	4-187
show interfaces status vlan	Displays status for the specified VLAN interface	NE, PE	4-138
show interfaces switchport	Displays the administrative and operational status of an interface	NE, PE	4-140

show vlan

This command shows VLAN information.

Syntax

show vlan [**id** *vlan-id* | **name** *vlan-name*]

- **id** - Keyword to be followed by the VLAN ID.
  - *vlan-id* - ID of the configured VLAN. (Range: 1-4094, no leading zeroes)
- **name** - Keyword to be followed by the VLAN name.
  - *vlan-name* - ASCII string from 1 to 32 characters.

Default Setting

Shows all VLANs.

Command Mode

Normal Exec, Privileged Exec

Example

The following example shows how to display information for VLAN 1:

```
Console#show vlan id 1
VLAN Type         Name            Status    Ports/Channel groups
---- -----------  --------------- --------- ---------------------------------
   1  Static       DefaultVlan     Active Eth1/ 1 Eth1/ 2 Eth1/ 3 Eth1/ 4 Eth1/5
                                          Eth1/ 6 Eth1/ 7 Eth1/ 8 Eth1/ 9 Eth1/10
                                          Eth1/11 Eth1/12 Eth1/13 Eth1/14 Eth1/15
                                          Eth1/16 Eth1/17 Eth1/18 Eth1/19 Eth1/20
                                          Eth1/21 Eth1/22 Eth1/23 Eth1/24

Console#
```

Configuring Protocol-based VLANs

The network devices required to support multiple protocols cannot be easily grouped into a common VLAN. This may require non-standard devices to pass traffic between different VLANs in order to encompass all the devices participating in a specific protocol. This kind of configuration deprives users of the basic benefits of VLANs, including security and easy accessibility.

To avoid these problems, you can configure this switch with protocol-based VLANs that divide the physical network into logical VLAN groups for each required protocol.

Downloaded from www.Manualslib.com manuals search engine

When a frame is received at a port, its VLAN membership can then be determined based on the protocol type in use by the inbound packets.

Table 4-58. Protocol VLANs			
Command	**Function**	**Mode**	**Page**
protocol-vlan protocol-group	Create a protocol group, specifying the supported protocols	GC	4-188
protocol-vlan protocol-group	Maps a protocol group to a VLAN	IC	4-189
show protocol-vlan protocol-group	Shows the configuration of protocol groups	PE	4-190
show interfaces protocol-vlan protocol-group	Shows the interfaces mapped to a protocol group and the corresponding VLAN	PE	4-190

To configure protocol-based VLANs, follow these steps:

1. First configure VLAN groups for the protocols you want to use (page 4-180). Although not mandatory, we suggest configuring a separate VLAN for each major protocol running on your network. Do not add port members at this time.
2. Create a protocol group for each of the protocols you want to assign to a VLAN using the **protocol-vlan protocol-group** command (General Configuration mode).
3. Then map the protocol for each interface to the appropriate VLAN using the **protocol-vlan protocol-group** command (Interface Configuration mode).

protocol-vlan protocol-group (Configuring Groups)

This command creates a protocol group, or to add specific protocols to a group. Use the **no** form to remove a protocol group.

Syntax

protocol-vlan protocol-group *group-id* [{**add** | **remove**} **frame-type** *frame* **protocol-type** *protocol*]
no protocol-vlan protocol-group *group-id*

- *group-id* - Group identifier of this protocol group. (Range: 1-2147483647)
- *frame* - Frame type used by this protocol. (Options: ethernet, rfc_1042, llc_other)
- *protocol* - Protocol type. The only option for the llc_other frame type is ipx_raw. The options for all other frames types include: ip, arp, rarp.

Default Setting

No protocol groups are configured.

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Example

The following creates protocol group 1, and specifies Ethernet frames with IP and ARP protocol types:

```
Console(config)#protocol-vlan protocol-group 1 add frame-type ethernet
  protocol-type ip
Console(config)#protocol-vlan protocol-group 1 add frame-type ethernet
  protocol-type arp
Console(config)#
```

protocol-vlan protocol-group (Configuring Interfaces)

This command maps a protocol group to a VLAN for the current interface. Use the **no** form to remove the protocol mapping for this interface.

Syntax

protocol-vlan protocol-group *group-id* **vlan** *vlan-id*
no protocol-vlan protocol-group *group-id* **vlan**

- *group-id* - Group identifier of this protocol group. (Range: 1-2147483647)
- *vlan-id* - VLAN to which matching protocol traffic is forwarded. (Range: 1-4094)

Default Setting

No protocol groups are mapped for any interface.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- When creating a protocol-based VLAN, only assign interfaces via this command. If you assign interfaces using any of the other VLAN commands (such as **vlan** on page 4-180), these interfaces will admit traffic of any protocol type into the associated VLAN.
- When a frame enters a port that has been assigned to a protocol VLAN, it is processed in the following manner:
  - If the frame is tagged, it will be processed according to the standard rules applied to tagged frames.
  - If the frame is untagged and the protocol type matches, the frame is forwarded to the appropriate VLAN.
  - If the frame is untagged but the protocol type does not match, the frame is forwarded to the default VLAN for this interface.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example maps the traffic entering Port 1 which matches the protocol type specified in protocol group 1 to VLAN 2.

```
Console(config)#interface ethernet 1/1
Console(config-if)#protocol-vlan protocol-group 1 vlan 2
Console(config-if)#
```

show protocol-vlan protocol-group

This command shows the frame and protocol type associated with protocol groups.

Syntax

show protocol-vlan protocol-group [*group-id*]

group-id - Group identifier for a protocol group. (Range: 1-2147483647)

Default Setting

All protocol groups are displayed.

Command Mode

Privileged Exec

Example

This shows protocol group 1 configured for IP over Ethernet:

```
Console#show protocol-vlan protocol-group

 ProtocolGroup ID   Frame Type    Protocol Type
------------------ ------------- ---------------
       1            ethernet       08 00
Console#
```

show interfaces protocol-vlan protocol-group

This command shows the mapping from protocol groups to VLANs for the selected interfaces.

Syntax

show interfaces protocol-vlan protocol-group [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

The mapping for all interfaces is displayed.

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

This shows that traffic entering Port 1 that matches the specifications for protocol group 1 will be mapped to VLAN 2:

```
Console#show interfaces protocol-vlan protocol-group

   Port     ProtocolGroup ID    Vlan ID
---------- ------------------ -----------
   Eth 1/1          1           vlan2
Console#
```

Configuring Private VLANs

Private VLANs provide port-based security and isolation between ports within the assigned VLAN. This section describes commands used to configure private VlANs.

Table 4-59. Configuring Private VLAN Groups

Command	Function	Mode	Page
pvlan	Enables and configured private VLANS	GC	4-191
show pvlan	Displays the configured private VLANS	PE	4-192

pvlan

This command enables or configures a private VLAN. Use the **no** form to disable the private VLAN.

Syntax

pvlan [**up-link** *interface-list* **down-link** *interface-list*]
no pvlan

- **up-link** – Specifies an uplink interface.
- **down-link** – Specifies a downlink interface.

Default Setting

No private VLANs are defined.

Command Mode

Global Configuration

Command Usage

- A private VLAN provides port-based security and isolation between ports within the VLAN. Data traffic on the downlink ports can only be forwarded to, and from, the uplink port.
- Private VLANs and normal VLANs can exist simultaneously within the same switch.

Downloaded from www.Manualslib.com manuals search engine

- Entering the **pvlan** command without any parameters enables the private VLAN. Entering **no pvlan** disables the private VLAN.

Example

This example enables the private VLAN, and then sets port 24 as the uplink and ports 1-8 as the downlinks.

```
Console(config)#pvlan
Console(config)#pvlan up-link ethernet 1/24 down-link ethernet 1/1-8
Console(config)#
```

show pvlan

This command displays the configured private VLAN.

Command Mode

Privileged Exec

Example

```
Console#show pvlan
Private VLAN status: Enabled
Up-link port:
 Ethernet 1/24
Down-link port:
 Ethernet 1/1-8
Console#
```

GVRP and Bridge Extension Commands

GARP VLAN Registration Protocol defines a way for switches to exchange VLAN information in order to automatically register VLAN members on interfaces across the network. This section describes how to enable GVRP for individual interfaces and globally for the switch, as well as how to display default configuration settings for the Bridge Extension MIB.

Table 4-60. GVRP and Bridge Extension Commands

Command	Function	Mode	Page
bridge-ext gvrp	Enables GVRP globally for the switch	GC	4-193
show bridge-ext	Shows the global bridge extension configuration	PE	4-193
switchport gvrp	Enables GVRP for an interface	IC	4-194
switchport forbidden vlan	Configures forbidden VLANs for an interface	IC	4-186
show gvrp configuration	Displays GVRP configuration for the selected interface	NE, PE	4-194
garp timer	Sets the GARP timer for the selected function	IC	4-195
show garp timer	Shows the GARP timer for the selected function	NE, PE	4-196

Downloaded from www.Manualslib.com manuals search engine

bridge-ext gvrp

This command enables GVRP globally for the switch. Use the **no** form to disable it.

Syntax

[**no**] **bridge-ext gvrp**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

GVRP defines a way for switches to exchange VLAN information in order to register VLAN members on ports across the network. This function should be enabled to permit automatic VLAN registration, and to support VLANs which extend beyond the local switch.

Example

```
Console(config)#bridge-ext gvrp
Console(config)#
```

show bridge-ext

This command shows the configuration for bridge extension commands.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

See “Displaying Basic VLAN Information” on page 3-126 and “Displaying Bridge Extension Capabilities” on page 3-11 for a description of the displayed items.

Example

```
Console#show bridge-ext
 Max support vlan numbers: 255
 Max support vlan ID: 4094
 Extended multicast filtering services: No
 Static entry individual port: Yes
 VLAN learning: IVL
 Configurable PVID tagging: Yes
 Local VLAN capable: Yes
 Traffic classes: Enabled
 Global GVRP status: Disabled
 GMRP: Disabled
Console#
```


Downloaded from www.Manualslib.com manuals search engine

switchport gvrp

This command enables GVRP for a port. Use the **no** form to disable it.

Syntax

[**no**] **switchport gvrp**

Default Setting

Disabled

Command Mode

Interface Configuration (Ethernet, Port Channel)

Example

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport gvrp
Console(config-if)#
```

show gvrp configuration

This command shows if GVRP is enabled.

Syntax

show gvrp configuration [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

Shows both global and interface-specific configuration.

Command Mode

Normal Exec, Privileged Exec

Example

```
Console#show gvrp configuration ethernet 1/7
Eth 1/ 7:
 Gvrp configuration: Disabled
Console#
```


Downloaded from www.Manualslib.com manuals search engine

garp timer

This command sets the values for the join, leave and leaveall timers. Use the **no** form to restore the timers' default values.

Syntax

garp timer {**join** | **leave** | **leaveall**} *timer_value*
no garp timer {**join** | **leave** | **leaveall**}

- {**join** | **leave** | **leaveall**} - Which timer to set.
- *timer_value* - Value of timer.
  Ranges:
  join: 20-1000 centiseconds
  leave: 60-3000 centiseconds
  leaveall: 500-18000 centiseconds

Default Setting

- join: 20 centiseconds
- leave: 60 centiseconds
- leaveall: 1000 centiseconds

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- Group Address Registration Protocol is used by GVRP and GMRP to register or deregister client attributes for client services within a bridged LAN. The default values for the GARP timers are independent of the media access method or data rate. These values should not be changed unless you are experiencing difficulties with GMRP or GVRP registration/deregistration.
- Timer values are applied to GVRP for all the ports on all VLANs.
- Timer values must meet the following restrictions:
  - leave >= (2 x join)
  - leaveall > leave

Note: Set GVRP timers on all Layer 2 devices connected in the same network to the same values. Otherwise, GVRP may not operate successfully.

Example

```
Console(config)#interface ethernet 1/1
Console(config-if)#garp timer join 100
Console(config-if)#
```

Related Commands

show garp timer (4-196)

Downloaded from www.Manualslib.com manuals search engine

show garp timer

This command shows the GARP timers for the selected interface.

Syntax

show garp timer [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

Shows all GARP timers.

Command Mode

Normal Exec, Privileged Exec

Example

```
Console#show garp timer ethernet 1/1
Eth 1/ 1 GARP timer status:
 Join timer: 20 centiseconds
 Leave timer: 60 centiseconds
 Leaveall timer: 1000 centiseconds

Console#
```

Related Commands

garp timer (4-195)

Downloaded from www.Manualslib.com manuals search engine

Priority Commands

The commands described in this section allow you to specify which data packets have greater precedence when traffic is buffered in the switch due to congestion. This switch supports CoS with eight priority queues for each port. Data packets in a port's high-priority queue will be transmitted before those in the lower-priority queues. You can set the default priority for each interface, the relative weight of each queue, and the mapping of frame priority tags to the switch's priority queues.

Table 4-61. Priority Commands

Command Groups	Function	Page
Priority (Layer 2)	Configures default priority for untagged frames, sets queue weights, and maps class of service tags to hardware queues	4-197
Priority (Layer 3 and 4)	Maps TCP ports, IP precedence tags, or IP DSCP tags to class of service values	4-202

Priority Commands (Layer 2)

Table 4-62. Priority Commands (Layer 2)

Command	Function	Mode	Page
switchport priority default	Sets a port priority for incoming untagged frames	IC	4-197
queue mode	Sets the queue mode to strict priority or Weighted Round-Robin (WRR)	GC	4-198
queue bandwidth	Assigns round-robin weights to the priority queues	GC	4-199
queue cos map	Assigns class-of-service values to the priority queues	IC	4-200
show queue mode	Shows the current queue mode	PE	4-201
show queue bandwidth	Shows round-robin weights assigned to the priority queues	PE	4-201
show queue cos-map	Shows the class-of-service map	PE	4-202
show interfaces switchport	Displays the administrative and operational status of an interface	PE	4-140

switchport priority default

This command sets a priority for incoming untagged frames. Use the **no** form to restore the default value.

Syntax

switchport priority default *default-priority-id*
no switchport priority default

default-priority-id - The priority number for untagged ingress traffic. The priority is a number from 0 to 7. Seven is the highest priority.

Default Setting

The priority is not set, and the default value for untagged frames received on the interface is zero.

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- The default priority applies for an untagged frame received on a port set to accept all frame types (i.e, receives both untagged and tagged frames). This priority does not apply to IEEE 802.1Q VLAN tagged frames. If the incoming frame is an IEEE 802.1Q VLAN tagged frame, the IEEE 802.1p User Priority bits will be used.
- This switch provides eight priority queues for each port. It is configured to use Weighted Round Robin, which can be viewed with the **show queue bandwidth** command. Inbound frames that do not have VLAN tags are tagged with the input port's default ingress user priority, and then placed in the appropriate priority queue at the output port. The default priority for all ingress ports is zero. Therefore, any inbound frames that do not have priority tags will be placed in queue 0 of the output port. (Note that if the output port is an untagged member of the associated VLAN, these frames are stripped of all VLAN tags prior to transmission.)

Example

The following example shows how to set a default priority on port 3 to 5:

```
Console(config)#interface ethernet 1/3
Console(config-if)#switchport priority default 5
```

queue mode

This command sets the queue mode to strict priority or Weighted Round-Robin (WRR) for the class of service (CoS) priority queues. Use the **no** form to restore the default value.

Syntax

queue mode {**strict** | **wrr**}
no queue mode

- **strict** - Services the egress queues in sequential order, transmitting all traffic in the higher priority queues before servicing lower priority queues.
- **wrr** - Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights 1, 2, 4, 6, 8, 10, 12, 14 for queues 0 - 7 respectively.

Default Setting

Weighted Round Robin

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

You can set the switch to service the queues based on a strict rule that requires all traffic in a higher priority queue to be processed before lower priority queues are serviced, or use Weighted Round-Robin (WRR) queuing that specifies a relative weight of each queue. WRR uses a predefined relative weight for each queue that determines the percentage of service time the switch services each queue before moving on to the next queue. This prevents the head-of-line blocking that can occur with strict priority queuing.

Example

The following example sets the queue mode to strict priority service mode:

```
Console(config)#queue mode strict
Console(config)#
```

queue bandwidth

This command assigns weighted round-robin (WRR) weights to the eight class of service (CoS) priority queues. Use the **no** form to restore the default weights.

Syntax

queue bandwidth *weight1...weight8*
no queue bandwidth

weight1...weight8 - The ratio of weights for queues 0 - 7 determines the weights used by the WRR scheduler. (Range: 1 - 15)

Default Setting

Weights 1, 2, 4, 6, 8, 10, 12, 14 are assigned to queues 0 - 7 respectively.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

WRR controls bandwidth sharing at the egress port by defining scheduling weights.

Example

This example shows how to assign WRR weights to each of the priority queues:

```
Console(config)#queue bandwidth 1 3 5 7 9 11 13 15
Console(config)#
```

Related Commands

show queue bandwidth (4-201)

Downloaded from www.Manualslib.com manuals search engine

queue cos-map

This command assigns class of service (CoS) values to the priority queues (i.e., hardware output queues 0 - 7). Use the **no** form set the CoS map to the default values.

Syntax

queue cos-map *queue_id* [*cos1 ... cosn*]
no queue cos-map

- *queue_id* - The ID of the priority queue.
  Ranges are 0 to 7, where 7 is the highest priority queue.
- *cos1 .. cosn* - The CoS values that are mapped to the queue ID. It is a space-separated list of numbers. The CoS value is a number from 0 to 7, where 7 is the highest priority.

Default Setting

This switch supports Class of Service by using eight priority queues, with Weighted Round Robin queuing for each port. Eight separate traffic classes are defined in IEEE 802.1p. The default priority levels are assigned according to recommendations in the IEEE 802.1p standard as shown below.

Table 4-63. Priority Queue Mapping

Queue	0	1	2	3	4	5	6	7
Priority	2	0	1	3	4	5	6	7

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- CoS values assigned at the ingress port are also used at the egress port.
- This command sets the CoS priority for all interfaces.

Example

The following example shows how to change the CoS assignments to a one-to-one mapping:

```
Console(config)#interface ethernet 1/1
Console(config-if)#queue cos-map 0 0
Console(config-if)#queue cos-map 1 1
Console(config-if)#queue cos-map 2 2
Console(config-if)#exit
Console#show queue cos-map ethernet 1/1
Information of Eth 1/1
 Traffic Class : 0 1 2 3 4 5 6 7
 Priority Queue: 0 1 2 3 4 5 6 7
Console#
```


Downloaded from www.Manualslib.com manuals search engine

Related Commands

show queue cos-map (4-202)

show queue mode

This command shows the current queue mode.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#sh queue mode

Queue mode: strict
Console#
```

show queue bandwidth

This command displays the weighted round-robin (WRR) bandwidth allocation for the eight priority queues.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show queue bandwidth
Information of Eth 1/1
 Queue ID  Weight
 --------  ------
    0        1
    1        2
    2        4
    3        6
    4        8
    5        10
    6        12
    7        14
⋮
Console#
```


Downloaded from www.Manualslib.com manuals search engine

show queue cos-map

This command shows the class of service priority map.

Syntax

show queue cos-map [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show queue cos-map ethernet 1/1
Information of Eth 1/1
 CoS Value     : 0 1 2 3 4 5 6 7
 Priority Queue: 2 0 1 3 4 5 6 7
Console#
```

Priority Commands (Layer 3 and 4)

Table 4-64. Priority Commands (Layer 3 and 4)

Command	Function	Mode	Page
map ip port	Enables TCP class of service mapping	GC	4-203
map ip port	Maps TCP socket to a class of service	IC	4-203
map ip precedence	Enables IP precedence class of service mapping	GC	4-204
map ip precedence	Maps IP precedence value to a class of service	IC	4-204
map ip dscp	Enables IP DSCP class of service mapping	GC	4-205
map ip dscp	Maps IP DSCP value to a class of service	IC	4-206
map access-list ip	Sets the CoS value and corresponding output queue for packets matching an ACL rule	IC	4-207
show map ip port	Shows the IP port map	PE	4-208
show map ip precedence	Shows the IP precedence map	PE	4-200
show map ip dscp	Shows the IP DSCP map	PE	4-209

Downloaded from www.Manualslib.com manuals search engine

map ip port (Global Configuration)

Use this command to enable IP port mapping (i.e., class of service mapping for TCP/UDP sockets). Use the **no** form to disable IP port mapping.

Syntax

[**no**] **map ip port**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.

Example

The following example shows how to enable TCP/UDP port mapping globally:

```
Console(config)#map ip port
Console(config)#
```

map ip port (Interface Configuration)

Use this command to set IP port priority (i.e., TCP/UDP port priority). Use the **no** form to remove a specific setting.

Syntax

map ip port *port-number* **cos** *cos-value*
no map ip port *port-number*

- *port-number* - 16-bit TCP/UDP port number. (Range: 0-65535)
- *cos-value* - Class-of-Service value (Range: 0-7)

Default Setting

None

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- This command sets the IP port priority for all interfaces.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example shows how to map HTTP traffic to CoS value 0:

```
Console(config)#interface ethernet 1/5
Console(config-if)#map ip port 80 cos 0
Console(config-if)#
```

map ip precedence (Global Configuration)

This command enables IP precedence mapping (i.e., IP Type of Service). Use the **no** form to disable IP precedence mapping.

Syntax

[**no**] **map ip precedence**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- IP Precedence and IP DSCP cannot both be enabled. Enabling one of these priority types will automatically disable the other type.

Example

The following example shows how to enable IP precedence mapping globally:

```
Console(config)#map ip precedence
Console(config)#
```

map ip precedence (Interface Configuration)

This command sets IP precedence priority (i.e., IP Type of Service priority). Use the **no** form to restore the default table.

Syntax

map ip precedence *ip-precedence-value* **cos** *cos-value*
no map ip precedence

- *precedence-value* - 3-bit precedence value. (Range: 0-7)
- *cos-value* - Class-of-Service value (Range: 0-7)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

The list below shows the default priority mapping.

Table 4-65. Mapping IP Precedence								
IP Precedence Value	0	1	2	3	4	5	6	7
CoS Value	0	1	2	3	4	5	6	7

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- IP Precedence values are mapped to default Class of Service values on a one-to-one basis according to recommendations in the IEEE 802.1p standard, and then subsequently mapped to the eight hardware priority queues.
- This command sets the IP Precedence for all interfaces.

Example

The following example shows how to map IP precedence value 1 to CoS value 0:

```
Console(config)#interface ethernet 1/5
Console(config-if)#map ip precedence 1 cos 0
Console(config-if)#
```

map ip dscp (Global Configuration)

This command enables IP DSCP mapping (i.e., Differentiated Services Code Point mapping). Use the **no** form to disable IP DSCP mapping.

Syntax

[**no**] **map ip dscp**

Default Setting

Disabled

Command Mode

Global Configuration

Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- IP Precedence and IP DSCP cannot both be enabled. Enabling one of these priority types will automatically disable the other type.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example shows how to enable IP DSCP mapping globally:

```
Console(config)#map ip dscp
Console(config)#
```

map ip dscp (Interface Configuration)

This command sets IP DSCP priority (i.e., Differentiated Services Code Point priority). Use the **no** form to restore the default table.

Syntax

map ip dscp *dscp-value* **cos** *cos-value*
no map ip dscp

- *dscp-value* - 8-bit DSCP value. (Range: 0-255)
- *cos-value* - Class-of-Service value (Range: 0-7)

Default Setting

The DSCP default values are defined in the following table. Note that all the DSCP values that are not specified are mapped to CoS value 0.

Table 4-66. Mapping IP DSCP Precedence

IP DSCP Value	CoS Value
0	0
8	1
10, 12, 14, 16	2
18, 20, 22, 24	3
26, 28, 30, 32, 34, 36	4
38, 40, 42	5
48	6
46, 56	7

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- DSCP priority values are mapped to default Class of Service values according to recommendations in the IEEE 802.1p standard, and then subsequently mapped to the eight hardware priority queues.
- This command sets the IP DSCP priority for all interfaces.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example shows how to map IP DSCP value 1 to CoS value 0:

```
Console(config)#interface ethernet 1/5
Console(config-if)#map ip dscp 1 cos 0
Console(config-if)#
```

map access-list ip

This command sets the output queue for packets matching an ACL rule. The specified CoS value is only used to map the matching packet to an output queue; it is not written to the packet itself. Use the **no** form to remove the CoS mapping.

Syntax

[**no**] **map access-list ip** *acl_name* **cos** *cos-value*

- *acl_name* – Name of the ACL. (Maximum length: 16 characters)
- *cos-value* – CoS value. (Range: 0-7)

Default Setting

None

Command Mode

Interface Configuration (Ethernet)

Command Usage

Command Usage

- You must configure an ACL mask before you can map CoS values to the rule.
- A packet matching a rule within the specified ACL is mapped to one of the output queues as shown in the following table. For information on mapping the CoS values to output queues, see **queue cos-map** on page 4-200.

Table 4-5. Mapping CoS Values to ACL Rules

Queue	0	1	2	3
Priority	1,2	0,3	4,5	6,7

Example

```
Console(config)#interface ethernet 1/2
Console(config-if)#map access-list ip bill cos 0
Console(config-if)#
```

Related Commands

queue cos-map (4-200)
show map ip port (4-208)

Downloaded from www.Manualslib.com manuals search engine

show map ip port

Use this command to show the IP port priority map.

Syntax

show map ip port [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

None

Command Mode

Privileged Exec

Example

The following shows that HTTP traffic has been mapped to CoS value 0:

```
Console#show map ip port
TCP port mapping status: disabled

 Port      Port no. COS
 --------- -------- ---
  Eth 1/ 5       80   0
Console#
```

Related Commands

map ip port (Global Configuration) (4-203)
map ip port (Interface Configuration) (4-203)

show map ip precedence

This command shows the IP precedence priority map.

Syntax

show map ip precedence [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

None

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#show map ip precedence ethernet 1/5
Precedence mapping status: disabled

 Port      Precedence COS
 --------- ---------- ---
  Eth 1/ 5          0   0
  Eth 1/ 5          1   1
  Eth 1/ 5          2   2
  Eth 1/ 5          3   3
  Eth 1/ 5          4   4
  Eth 1/ 5          5   5
  Eth 1/ 5          6   6
  Eth 1/ 5          7   7
Console#
```

Related Commands

map ip precedence (Global Configuration) (4-204)
map ip precedence (Interface Configuration) (4-204)

show map ip dscp

This command shows the IP DSCP priority map.

Syntax

show map ip dscp [*interface*]

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Default Setting

None

Command Mode

Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Example

```
Console#show map ip dscp ethernet 1/1
DSCP mapping status: disabled

 Port      DSCP COS
 --------- ---- ---
  Eth 1/ 1    0   0
  Eth 1/ 1    1   0
  Eth 1/ 1    2   0
  Eth 1/ 1    3   0
⋮
  Eth 1/ 1   61   0
  Eth 1/ 1   62   0
  Eth 1/ 1   63   0
Console#
```

Related Commands

map ip dscp (Global Configuration) (4-205)
map ip dscp (Interface Configuration) (4-206)

Quality of Service Commands

The commands described in this section are used to configure QoS classification criteria and service policies. You can classify traffic based on access lists, IP Precedence or DSCP values, or VLAN lists. Access lists allow you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet.

Table 4-67. Quality of Service Commands

Command	Function	Mode	Page
class-map	Creates a class map for a type of traffic	GC	4-211
match	Defines the criteria used to classify traffic	CM	4-212
policy-map	Creates a policy map for multiple interfaces	GC	4-213
class	Defines a traffic classification for the policy to act on	PM	4-214
set	Classify IP traffic by setting a CoS, DSCP, or IP-precedence value in a packet	PM-C	4-214
police	Defines an enforcer for classified traffic	PM-C	4-215
service-policy	Applies a policy map defined by the **policy-map** command to the input or output of a particular interface	IC	4-216
show class-map	Displays the QoS class maps which define matching criteria used for classifying traffic	PE	4-216
show policy-map	Displays the QoS policy maps which define classification criteria for incoming traffic, and may include policers for bandwidth limitations	PE	4-217
show policy-map interface	Displays the configuration of all classes configured for all service policies on the specified interface	PE	4-217

Downloaded from www.Manualslib.com manuals search engine

To create a service policy for a specific category or ingress traffic, follow these steps:

1. Use the **class-map** command to designate a class name for a specific category of traffic, and enter the Class Map configuration mode.
2. Use the **match** command to select a specify type of traffic based on an access list, a list of DSCP or IP Precedence values, or a list of VLANs.
3. Use the **policy-map** command to designate a policy name for a specific manner in which ingress traffic will be handled, and enter the Policy Map configuration mode.
4. Use the **class** command to identify the class map, and enter Policy Map Class configuration mode. A policy map can contain multiple class statements.
5. Use the **set** command to modify the QoS value for matching traffic class,and use the **police** command to monitor the average flow and burst rate, and drop any traffic that exceeds the specified rate, or just reduce the DSCP service level for traffic exceeding the specified rate.
6. Use the **service-policy** command to assign a policy map to a specific interface.

Notes: **1.** When creating Class Maps and Policy Maps do not use the character '&' in either name.

2. Currently you may only configure one rule per Class Map.

3. The ingress rate for a Policy Map must be set before setting the egress rate.

4. You must create a Class Map before creating a Policy Map.

class-map

This command creates a class map used for matching packets to the specified class, and enters Class Map configuration mode. Use the **no** form to delete a class map and return to Global configuration mode.

Syntax

[**no**] **class-map** *class-map-name* [**match-any**]

- **match-any** - Match any condition within a class map.
- *class-map-name* - Name of the class map. (Range: 1-32 characters)

Default Setting

None

Command Mode

Global Configuration

Command Usage

- First enter this command to designate a class map and enter the Class Map configuration mode. Then use the **match** command to specify the criteria for ingress traffic that will be classified under this class map.
- Only one **match** command is permitted per class map, so the **match-any** field refers to the criteria specified by the lone **match** command for a class map.

Downloaded from www.Manualslib.com manuals search engine

- The class map is used with a policy map (page 4-213) to create a service policy (page 4-216) for a specific interface that defines packet classification, service tagging, and bandwidth policing.
- After entering the Class Map configuration mode, use the **match** command (page 4-212) to specify the required classification criteria.

Example

This example creates a class map call “rd-class,” and sets it to match packets marked for DSCP service value 3:

```
Console(config)#class-map rd_class match-any
Console(config-cmap)#match ip dscp 3
Console(config-cmap)#
```

Related Commands

show class map (4-216)

match

This command defines the criteria used to classify traffic. Use the **no** form to delete a the matching criteria.

Syntax

[**no**] **match** {**access-list** *acl-name* | **ip dscp** *dscp-list* | **ip precedence** *ip-precedence-list* | **vlan** *vlan-list*}

- *acl-name* - Name of the access control list. Any type of ACL can be specified, including standard or extended IP ACLs and MAC ACLs. (Range: 1-16 characters)
- *dscp-list* - List of DSCP values. Up to 8 values can be specified, each separated by a space. (Range: 0-63)
- *ip-precedence-list* - List of IP Precedence values. Up to 8 values can be specified, each separated by a space. (Range: 0-7)
- *vlan-list* - List of VLANs. Up to 30 VLANs can be specified, each separated by a space. A range of VLANs can be entered using a hyphen. (Range:1-4094)

Default Setting

None

Command Mode

Class Map Configuration

Command Usage

- First enter the **class-map** command to designate a class map and enter the Class Map configuration mode. Then use the **match** command to specify the fields within ingress packets that must match to qualify for this class map.
- Only one **match** command can be entered per class map.

Downloaded from www.Manualslib.com manuals search engine

Example

This example creates a class map called “rd-class,” and sets it to match packets marked for DSCP service value 3:

```
Console(config)#class-map rd_class
Console(config-cmap)#match ip dscp 3
Console(config-cmap)#
```

policy-map

This command creates a policy map that can be attached to multiple interfaces, and enters Policy Map configuration mode. Use the **no** form to delete a policy map and return to Global configuration mode.

Syntax

[**no**] **policy-map** *policy-map-name*

policy-map-name - Name of the policy map. (Range: 1-32 characters)

Default Setting

The default policy sets DSCP to 0 for IP packets, and CoS to 0 for non-IP packets.

Command Mode

Global Configuration

Command Usage

- Use the **policy-map** command to specify the name of the policy map, and then use the **class** command to configure policies for traffic that matches criteria defined in a class map.
- A policy map can contain multiple class statements that can be applied to the same interface with the **service-policy** command (page 4-216). Or you can create a separate policy map for each type of traffic that may enter a port.
- When creating a Policy Map do not use the character ‘&’ in the name.
- The ingress rate for a policy map must be set before setting the egress rate.
- You must create a Class Map before creating a Policy Map.

Example

This example creates a policy map called “rd-policy,” sets the average bandwidth the 1 Mbps, the burst rate to 1522 bps, and the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 100000 1522 exceed-action drop
Console(config-pmap-c)#
```


Downloaded from www.Manualslib.com manuals search engine

class

This command defines a traffic classification upon which a policy can act, and enters Policy Map Class configuration mode. Use the **no** form to delete a class map and return to Policy Map configuration mode.

Syntax

[**no**] **class** *class-map-name*

class-map-name - Name of the class map. (Range: 1-32 characters)

Default Setting

None

Command Mode

Policy Map Configuration

Command Usage

- Use the **policy-map** command to specify a policy map and enter Policy Map configuration mode. Then use the **class** command to enter Policy Map Class configuration mode. And finally, use the **set**and **police** commands to specify the match criteria, where the:
  - **set** command classifies the service that an IP packet will receive.
- When creating a Class Map do not use the character '&' in the name.
- Currently you may only configure one rule per Class Map.

police command defines the maximum throughput, burst rate, drop rate, and the action that results from a policy violation.**Example**

This example creates a class called "rd-class," sets the average bandwidth the 1 Mbps, the burst rate to 1522 bytes, and the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 100000 1522 exceed-action drop
Console(config-pmap-c)#
```

set

This command classifies IP traffic by setting a CoS, DSCP, or IP Precedence value in a packet. Use the **no** form to remove the traffic classification.

Syntax

[**no**] **set** {**cos** *new-cos* | **ip dscp** *new-dscp* | **ip precedence** *new-precedence*}

- *new-cos* - New Class of Service (CoS) value. (Range: 0-7)
- *new-dscp* - New Differentiated Service Code Point (DSCP) value. (Range: 0-63)
- *new-precedence* - New IP Precedence value. (Range: 0-7)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

None

Command Mode

Policy Map Class Configuration

Example

This example sets the DSCP value to 3 for all traffic assigned to this policy class.

```
Console(config)#policy-map rd_policy
Console(config-pmap-c)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#
```

police

This command defines an policer for classified traffic. Use the **no** form to remove a policer.

Syntax

[**no**] **police** *rate-bps burst-byte* [**exceed-action** {**drop** | **set**}]

- *rate-bps* - Rate in kilobits per second. (Range: 1-100000 Kbps or maximum port speed, whichever is lower)
- *burst-byte* - Burst in bytes. (Range: 64-1522 bytes)
- **drop** - Drop packet when specified rate or burst are exceeded.
- **set** - Set DSCP service to the specified value. (Range: 0-63)

Default Setting

Drop out-of-profile packets.

Command Mode

Policy Map Class Configuration

Command Usage

- You can configure up to 8 policers on Fast Ethernet ingress ports, and up to 128 policers on Gigabit Ethernet ingress ports.
- Policing is based on a token bucket, where bucket depth (i.e., the maximum burst before the bucket overflows) is by specified the *burst-byte* field, and the average rate tokens are removed from the bucket is by specified by the *rate-bps* option.

Downloaded from www.Manualslib.com manuals search engine

Example

This example creates a policer that sets the maximum burst rate to 20 Kbytes, the average rate to 1522 bps, and the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 1000 1522 exceed-action drop
Console(config-pmap-c)#
```

service-policy

This command applies a policy map defined by the **policy-map** command to a particular interface. Use the **no** form to remove the policy map from this interface.

Syntax

[**no**] **service-policy input** *policy-map-name*

- **input** - Apply to the input traffic.
- *policy-map-name* - Name of the policy map for this interface. (Range: 1-32 characters)

Default Setting

No policy map is attached to an interface.

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

You can only assign one policy map to an interface.

Example

This example applies a service policy to an ingress interface.

```
Console(config)#interface ethernet 1/1
Console(config-if)#service-policy input rd_service
Console(config-if)#
```

show class-map

This command displays the QoS class maps which define matching criteria used for classifying traffic.

Syntax

show class-map [*class-map-name*]

class-map-name - Name of the class map. (Range: 1-32 characters)

Default Setting

Displays all class maps.

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#show class-map
Class Map match-any rd_class
 Match ip dscp 3
Console#
```

show policy-map

This command displays the QoS policy maps which define classification criteria for incoming traffic, and may include policers for bandwidth limitations.

Syntax

show policy-map [*policy-map-name* [**class** *class-map-name*]]

- *policy-map-name* - Name of the policy map. (Range: 1-32 characters)
- *class-map-name* - Name of the class map. (Range: 1-32 characters)

Default Setting

Displays all policy maps and all classes.

Command Mode

Privileged Exec

Example

```
Console#show policy-map
Policy Map rd_policy
 class rd_class
  set ip dscp 3
Console#show policy-map rd_policy class rd_class
Policy Map rd_policy
 class rd_class
  set ip dscp 3
Console#
```

show policy-map interface

This command displays the configuration of all classes configured for all service policies on the specified interface.

Syntax

show policy-map interface *interface*

interface

- **ethernet** *unit*/*port*
  - *unit* - This is device 1.
  - *port* - Port number.
- **port-channel** *channel-id* (Range: 1-6)

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#show policy-map ethernet 1/1
Policy Map rd_policy
 class rd_class
  set ip dscp 3
Console#
```

Multicast Filtering Commands

This switch uses IGMP (Internet Group Management Protocol) to query for any attached hosts that want to receive a specific multicast service. It identifies the ports containing hosts requesting a service and sends data out to those ports only. It then propagates the service request up to any neighboring multicast switch/router to ensure that it will continue to receive the multicast service.

Table 4-68. Multicast Filtering Commands

Command Groups	Function	Page
IGMP Snooping	Configures multicast groups via IGMP snooping or static assignment, sets the IGMP version, displays current snooping and query settings, and displays the multicast service and group members	4-218
IGMP Query	Configures IGMP query parameters for multicast filtering at Layer 2	4-222
Static Multicast Routing	Configures static multicast router ports	4-225

IGMP Snooping Commands

Table 4-69. IGMP Snooping Commands

Command	Function	Mode	Page
ip igmp snooping	Enables IGMP snooping	GC	4-218
ip igmp snooping vlan static	Adds an interface as a member of a multicast group	GC	4-219
ip igmp snooping version	Configures the IGMP version for snooping	GC	4-220
show ip igmp snooping	Shows the IGMP snooping and query configuration	PE	4-220
show mac-address-table multicast	Shows the IGMP snooping MAC multicast list	PE	4-221

ip igmp snooping

This command enables IGMP snooping on this switch. Use the **no** form to disable it.

Syntax

[no] ip igmp snooping

Downloaded from www.Manualslib.com manuals search engine

Default Setting

Enabled

Command Mode

Global Configuration

Example

The following example enables IGMP snooping.

```
Console(config)#ip igmp snooping
Console(config)#
```

ip igmp snooping vlan static

This command adds a port to a multicast group. Use the **no** form to remove the port.

Syntax

[**no**] **ip igmp snooping vlan** *vlan-id* **static** *ip-address interface*

- *vlan-id* - VLAN ID (Range: 1-4094)
- *ip-address* - IP address for multicast group
- *interface*
  - **ethernet** *unit*/*port*
    - *unit* - This is device 1.
    - *port* - Port number.
  - **port-channel** *channel-id* (Range: 1-6)

Default Setting

None

Command Mode

Global Configuration

Example

The following shows how to statically configure a multicast group on a port:

```
Console(config)#ip igmp snooping vlan 1 static 224.0.0.12 ethernet 1/5
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

ip igmp snooping version

This command configures the IGMP snooping version. Use the **no** form to restore the default.

Syntax

ip igmp snooping version {**1** | **2**}
no ip igmp snooping version

- **1** - IGMP Version 1
- **2** - IGMP Version 2

Default Setting

IGMP Version 2

Command Mode

Global Configuration

Command Usage

- All systems on the subnet must support the same version. If there are legacy devices in your network that only support Version 1, you will also have to configure this switch to use Version 1.
- Some commands are only enabled for IGMPv2, including **ip igmp query-max-response-time** and **ip igmp query-timeout**.

Example

The following configures the switch to use IGMP Version 1:

```
Console(config)#ip igmp snooping version 1
Console(config)#
```

show ip igmp snooping

This command shows the IGMP snooping configuration.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

See “Configuring IGMP Snooping and Query Parameters” on page 3-161 for a description of the displayed items.

Downloaded from www.Manualslib.com manuals search engine

Example

The following shows the current IGMP snooping configuration:

```
Console#show ip igmp snooping
 Service status: Enabled
 Querier status: Enabled
 Query count: 2
 Query interval: 125 sec
 Query max response time: 10 sec
 Router port expire time: 300 sec
 IGMP snooping version: Version 2
Console#
```

show mac-address-table multicast

This command shows known multicast addresses.

Syntax

show mac-address-table multicast [**vlan** *vlan-id*] [**user** | **igmp-snooping**]

- *vlan-id* - VLAN ID (1 to 4094)
- **user** - Display only the user-configured multicast entries.
- **igmp-snooping** - Display only entries learned through IGMP snooping.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

Member types displayed include IGMP or USER, depending on selected options.

Example

The following shows the multicast entries learned through IGMP snooping for VLAN 1:

```
Console#show mac-address-table multicast vlan 1 igmp-snooping
 VLAN  M'cast IP addr.   Member ports   Type
 ----  ---------------   ------------   -------
    1  224.1.2.3         Eth1/11        IGMP
Console#
```


Downloaded from www.Manualslib.com manuals search engine

IGMP Query Commands (Layer 2)

Table 4-70. IGMP Query Commands (Layer 2)			
Command	**Function**	**Mode**	**Page**
ip igmp snooping querier	Allows this device to act as the querier for IGMP snooping	GC	4-222
ip igmp snooping query-count	Configures the query count	GC	4-222
ip igmp snooping query-interval	Configures the query interval	GC	4-223
ip igmp snooping query-max-response-time	Configures the report delay	GC	4-224
ip igmp snooping router-port-expire-time	Configures the query timeout	GC	4-224

ip igmp snooping querier

This command enables the switch as an IGMP querier. Use the **no** form to disable it.

Syntax

[**no**] **ip igmp snooping querier**

Default Setting

Enabled

Command Mode

Global Configuration

Command Usage

If enabled, the switch will serve as querier if elected. The querier is responsible for asking hosts if they want to receive multicast traffic.

Example

```
Console(config)#ip igmp snooping querier
Console(config)#
```

ip igmp snooping query-count

This command configures the query count. Use the **no** form to restore the default.

Syntax

ip igmp snooping query-count *count*
no ip igmp snooping query-count

count - The maximum number of queries issued for which there has been no response before the switch takes action to drop a client from the multicast group. (Range: 2-10)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

2 times

Command Mode

Global Configuration

Command Usage

The query count defines how long the querier waits for a response from a multicast client before taking action. If a querier has sent a number of queries defined by this command, but a client has not responded, a countdown timer is started using the time defined by **ip igmp snooping query-max-response-time**. If the countdown finishes, and the client still has not responded, then that client is considered to have left the multicast group.

Example

The following shows how to configure the query count to 10:

```
Console(config)#ip igmp snooping query-count 10
Console(config)#
```

Related Commands

ip igmp snooping query-max-response-time (4-224)

ip igmp snooping query-interval

This command configures the query interval. Use the **no** form to restore the default.

Syntax

ip igmp snooping query-interval *seconds*
no ip igmp snooping query-interval

seconds - The frequency at which the switch sends IGMP host-query messages. (Range: 60-125)

Default Setting

125 seconds

Command Mode

Global Configuration

Example

The following shows how to configure the query interval to 100 seconds:

```
Console(config)#ip igmp snooping query-interval 100
Console(config)#
```


Downloaded from www.Manualslib.com manuals search engine

ip igmp snooping query-max-response-time

This command configures the query report delay. Use the **no** form to restore the default.

Syntax

ip igmp snooping query-max-response-time *seconds*
no ip igmp snooping query-max-response-time

seconds - The report delay advertised in IGMP queries. (Range: 5-30)

Default Setting

10 seconds

Command Mode

Global Configuration

Command Usage

- The switch must be using IGMPv2 for this command to take effect.
- This command defines the time after a query, during which a response is expected from a multicast client. If a querier has sent a number of queries defined by the **ip igmp snooping query-count**, but a client has not responded, a countdown timer is started using an initial value set by this command. If the countdown finishes, and the client still has not responded, then that client is considered to have left the multicast group.

Example

The following shows how to configure the maximum response time to 20 seconds:

```
Console(config)#ip igmp snooping query-max-response-time 20
Console(config)#
```

Related Commands

ip igmp snooping version (4-220)
ip igmp snooping query-max-response-time (4-224)

ip igmp snooping router-port-expire-time

This command configures the query timeout. Use the **no** form to restore the default.

Syntax

ip igmp snooping router-port-expire-time *seconds*
no ip igmp snooping router-port-expire-time

seconds - The time the switch waits after the previous querier stops before it considers the router port (i.e., the interface which had been receiving query packets) to have expired.
(Range: 300-500)

Downloaded from www.Manualslib.com manuals search engine

Default Setting

300 seconds

Command Mode

Global Configuration

Command Usage

The switch must use IGMPv2 for this command to take effect.

Example

The following shows how to configure the default timeout to 300 seconds:

```
Console(config)#ip igmp snooping router-port-expire-time 300
Console(config)#
```

Related Commands

ip igmp snooping version (4-220)

Static Multicast Routing Commands

Table 4-71. Static Multicast Routing Commands

Command	Function	Mode	Page
ip igmp snooping vlan mrouter	Adds a multicast router port	GC	4-225
show ip igmp snooping mrouter	Shows multicast router ports	PE	4-226

ip igmp snooping vlan mrouter

This command statically configures a multicast router port. Use the **no** form to remove the configuration.

Syntax

[**no**] **ip igmp snooping vlan** *vlan-id* **mrouter** *interface*

- *vlan-id* - VLAN ID (Range: 1-4094)
- *interface*
  - **ethernet** *unit*/*port*
    - *unit* - This is device 1.
    - *port* - Port number.
  - **port-channel** *channel-id* (Range: 1-6)

Default Setting

No static multicast router ports are configured.

Command Mode

Global Configuration

Downloaded from www.Manualslib.com manuals search engine

Command Usage

Depending on your network connections, IGMP snooping may not always be able to locate the IGMP querier. Therefore, if the IGMP querier is a known multicast router/switch connected over the network to an interface (port or trunk) on your router, you can manually configure that interface to join all the current multicast groups.

Example

The following shows how to configure port 11 as a multicast router port within VLAN 1:

```
Console(config)#ip igmp snooping vlan 1 mrouter ethernet 1/11
Console(config)#
```

show ip igmp snooping mrouter

This command displays information on statically configured and dynamically learned multicast router ports.

Syntax

show ip igmp snooping mrouter [**vlan** *vlan-id*]

vlan-id - VLAN ID (Range: 1-4094)

Default Setting

Displays multicast router ports for all configured VLANs.

Command Mode

Privileged Exec

Command Usage

Multicast router port types displayed include Static or Dynamic.

Example

The following shows that port 11 in VLAN 1 is attached to a multicast router:

```
Console#show ip igmp snooping mrouter vlan 1
 VLAN M'cast Router Ports Type
 ---- ------------------- -------
    1            Eth 1/11  Static
    2            Eth 1/12  Dynamic
Console#
```


Downloaded from www.Manualslib.com manuals search engine

IP Interface Commands

There are no IP addresses assigned to this switch by default. You must manually configure a new address to manage the switch over your network or to connect the switch to existing IP subnets. You may also need to a establish a default gateway between this device and management stations or other devices that exist on another network segment.

Basic IP Configuration

Table 4-72. IP Configuration

Command	Function	Mode	Page
ip address	Sets the IP address for the current interface	IC	4-227
ip default-gateway	Defines the default gateway through which this switch can reach other subnetworks	GC	4-228
ip dhcp restart	Submits a BOOTP or DCHP client request	PE	4-229
show ip interface	Displays the IP settings for this device	PE	4-229
show ip redirects	Displays the default gateway configured for this device	PE	4-230
ping	Sends ICMP echo request packets to another node on the network	NE, PE	4-230

ip address

This command sets the IP address for the currently selected VLAN interface. Use the **no** form to restore the default IP address.

Syntax

ip address {*ip-address netmask* | **bootp** | **dhcp**}
no ip address

- *ip-address* - IP address
- *netmask* - Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- **bootp** - Obtains IP address from BOOTP.
- **dhcp** - Obtains IP address from DHCP.

Default Setting

IP address: 0.0.0.0
Netmask: 255.0.0.0

Command Mode

Interface Configuration (VLAN)

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- You must assign an IP address to this device to gain management access over the network or to connect the switch to existing IP subnets. You can manually configure a specific IP address, or direct the device to obtain an address from a BOOTP or DHCP server. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. Anything outside this format will not be accepted by the configuration program.
- If you select the **bootp** or **dhcp** option, IP is enabled but will not function until a BOOTP or DHCP reply has been received. Requests will be broadcast periodically by this device in an effort to learn its IP address. (BOOTP and DHCP values can include the IP address, default gateway, and subnet mask).
- You can start broadcasting BOOTP or DHCP requests by entering an **ip dhcp restart client** command, or by rebooting the switch.

Caution: Only one VLAN interface can be assigned an IP address (the default is VLAN 1). This defines the management VLAN, the only VLAN through which you can gain management access to the switch. If you assign an IP address to any other VLAN, the new IP address overrides the original IP address and this becomes the new management VLAN.

Example

In the following example, the device is assigned an address in VLAN 1.

```
Console(config)#interface vlan 1
Console(config-if)#ip address 192.168.1.5 255.255.255.0
Console(config-if)#
```

Related Commands

ip dhcp restart client (4-121)

ip default-gateway

This command establishes a static route between this switch and devices that exist on another network segment. Use the **no** form to remove the static route.

Syntax

ip default-gateway *gateway*
no ip default-gateway

gateway - IP address of the default gateway

Default Setting

No static route is established.

Command Mode

Global Configuration

Command Usage

A gateway must be defined if the management station is located in a different IP segment.

Downloaded from www.Manualslib.com manuals search engine

Example

The following example defines a default gateway for this device:

```
Console(config)#ip default-gateway 10.1.1.254
Console(config)#
```

Related Commands

show ip redirects (4-230)

ip dhcp restart

Use this command to submit a BOOTP or DCHP client request.

Default Setting

None

Command Mode

Privileged Exec

Command Usage

- This command issues a BOOTP or DHCP client request for any IP interface that has been set to BOOTP or DHCP mode via the **ip address** command.
- DHCP requires the server to reassign the client's last address if available.
- If the BOOTP or DHCP server has been moved to a different domain, the network portion of the address provided to the client will be based on this new domain.

Example

In the following example, the device is reassigned the same address

```
Console(config)#interface vlan 1
Console(config-if)#ip address dhcp
Console(config-if)#exit
Console#ip dhcp restart
Console#show ip interface
IP interface vlan
 IP address and netmask: 10.1.0.54 255.255.255.0 on VLAN 1,
 and address mode: Dhcp.
Console#
```

Related Commands

ip address (4-227)

show ip interface

This command displays the settings of an IP interface.

Default Setting

All interfaces

Downloaded from www.Manualslib.com manuals search engine

Command Mode

Privileged Exec

Example

```
Console#show ip interface
 IP address and netmask: 192.168.1.54 255.255.255.0 on VLAN 1,
 and address mode: User specified.
Console#
```

Related Commands

show ip redirects (4-230)

show ip redirects

This command shows the default gateway configured for this device.

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show ip redirects
ip default gateway 10.1.0.254
Console#
```

Related Commands

ip default-gateway (4-228)

ping

This command sends ICMP echo request packets to another node on the network.

Syntax

ping *host* [**count** *count*][**size** *size*]

- *host* - IP address or IP alias of the host.
- *count* - Number of packets to send. (Range: 1-16, default: 5)
- *size* - Number of bytes in a packet. (Range: 32-512, default: 32)
  The actual packet size will be eight bytes larger than the size specified because the switch adds header information.

Default Setting

This command has no default for the host.

Command Mode

Normal Exec, Privileged Exec

Downloaded from www.Manualslib.com manuals search engine

Command Usage

- Use the ping command to see if another site on the network can be reached.
- Following are some results of the **ping** command:
  - *Normal response* - The normal response occurs in one to ten seconds, depending on network traffic.
  - *Destination does not respond* - If the host does not respond, a “timeout” appears in ten seconds.
  - *Destination unreachable* - The gateway for this destination indicates that the destination is unreachable.
  - *Network or host unreachable* - The gateway found no corresponding entry in the route table.
- Press <Esc> to stop pinging.

Example

```
Console#ping 10.1.0.9
Type ESC to abort.
PING to 10.1.0.9, by 5 32-byte payload ICMP packets, timeout is 5 seconds
response time: 10 ms
response time: 10 ms
response time: 10 ms
response time: 10 ms
response time: 0 ms
Ping statistics for 10.1.0.9:
 5 packets transmitted, 5 packets received (100%), 0 packets lost (0%)
Approximate round trip times:
 Minimum = 0 ms, Maximum = 10 ms, Average = 8 ms
Console#
```

Related Commands

interface (4-130)

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Appendix A: Software Specifications

Software Features

Authentication
Local, RADIUS, TACACS, Port (802.1x), HTTPS, SSH, Port Security

Access Control Lists
IP, MAC (up to 32 lists)

AMAP
Alcatel Mapping Adjacency Protocol

SNMPv3
Management access via MIB database
Trap management to specified hosts

DHCP Client
DNS Server

Port Configuration
1000BASE-T: 10/100/1000 Mbps, half/full duplex
1000BASE-SX/LX: 1000 Mbps, full duplex

Flow Control
Full Duplex: IEEE 802.3x
Half Duplex: Back pressure

Broadcast Storm Control
Traffic throttled above a critical threshold

Port Mirroring
Multiple source ports, one destination port

Rate Limits
Input Limit
Output limit
Range (configured per port)

Port Trunking
Static trunks (Cisco EtherChannel compliant)
Dynamic trunks (Link Aggregation Control Protocol)

Spanning Tree Protocol
Spanning Tree Protocol (STP, IEEE 802.1D)
Rapid Spanning Tree Protocol (RSTP, IEEE 802.1w)
Multiple Spanning Tree Protocol (MSTP, IEEE 802.1s)

Downloaded from www.Manualslib.com manuals search engine

VLAN Support

Up to 255 groups; port-based, protocol-based, or tagged (802.1Q), GVRP for automatic VLAN learning, private VLANs

Class of Service

Supports eight levels of priority and Weighted Round Robin Queueing (which can be configured by VLAN tag or port),
Layer 3/4 priority mapping: IP Precedence, IP DSCP

Multicast Filtering

IGMP Snooping (Layer 2)

Additional Features

BOOTP client
CIDR (Classless Inter-Domain Routing)
SNTP (Simple Network Time Protocol)
SNMP (Simple Network Management Protocol)
RMON (Remote Monitoring, groups 1,2,3,9)
SMTP Email Alerts

Management Features

In-Band Management

Telnet, Web-based HTTP or HTTPS, SNMP manager, or Secure Shell

Out-of-Band Management

RS-232 DB-9 console port

Software Loading

TFTP in-band or XModem out-of-band

SNMP

Management access via MIB database
Trap management to specified hosts

RMON

Groups 1, 2, 3, 9 (Statistics, History, Alarm, Event)

Standards

IEEE 802.3 Ethernet,
IEEE 802.3u Fast Ethernet
IEEE 802.3x Full-duplex flow control (ISO/IEC 8802-3)
IEEE 802.3z Gigabit Ethernet,
IEEE 802.3ab 1000BASE-T
IEEE 802.3ac VLAN tagging
IEEE 802.1Q VLAN
IEEE 802.1v Protocol-based VLANs
IEEE 802.3ad Link Aggregation Control Protocol

Downloaded from www.Manualslib.com manuals search engine

IEEE 802.1D Spanning Tree Protocol and traffic priorities
IEEE 802.1p Priority tags
IEEE 802.1s Multiple Spanning Tree Protocol
IEEE 802.1w Rapid Spanning Tree Protocol
IEEE 802.1x Port Authentication
ARP (RFC 826)
DHCP (RFC 1541)
HTTPS
ICMP (RFC 792)
IGMP (RFC 1112)
IGMPv2 (RFC 2236)
RADIUS+ (RFC 2618)
RMON (RFC 1757 groups 1,2,3,9)
SNTP (RFC 2030)
SNMP (RFC 1157)
SNMPv2 (RFC 1907)
SSH (Version 2.0)

Management Information Bases

Bridge MIB (RFC 1493)
Entity MIB (RFC 2737)
Ethernet MIB (RFC 2665)
Ether-like MIB (RFC 1643)
Extended Bridge MIB (RFC 2674)
Extensible SNMP Agents MIB (RFC 2742)
Forwarding Table MIB (RFC 2096)
IGMP MIB (RFC 2933)
Interface Group MIB (RFC 2233)
Interfaces Evolution MIB (RFC 2863)
IP Multicasting related MIBs
MAU MIB (RFC 2668)
MIB II (RFC 1213)
Port Access Entity MIB (IEEE 802.1x)
Private MIB
Quality of Service MIB
RADIUS Authentication Client MIB (RFC 2618)
RMON MIB (RFC 2819)
RMON II Probe Configuration Group (RFC 2021, partial implementation)
TACACS+ Authentication Client MIB
TCP MIB (RFC 2013)
Trap (RFC 1215)
UDP MIB (RFC 2012)
SNMP framework MIB (RFC 2571)
SNMP-MPD MIB (RFC 2572)

Downloaded from www.Manualslib.com manuals search engine

SNMP Target MIB, SNMP Notification MIB (RFC 2573)
SNMP User-Based SM MIB (RFC 2574)
SNMP View Based ACM MIB (RFC 2575)
SNMP Community MIB (RFC 2576)

Downloaded from www.Manualslib.com manuals search engine

Appendix B: Troubleshooting

Table B-1. Troubleshooting Chart	
Symptom	**Action**
Cannot connect using Telnet, Web browser, or SNMP software	• Be sure you have configured the agent with a valid IP address, subnet mask and default gateway. • If you are trying to connect to the agent via the IP address for a tagged VLAN group, your management station must include the appropriate tag in its transmitted frames. • Check that you have a valid network connection to the switch and that the port you are using has not been disabled. • Check network cabling between the management station and the switch. • If you cannot connect using Telnet or SSH, you may have exceeded the maximum number of concurrent Telnet/SSH sessions permitted. Try connecting again at a later time.
Cannot access the on-board configuration program via a serial port connection	• Be sure you have set the terminal emulator program to VT100 compatible, 8 data bits, 1 stop bit, no parity, and the baud rate set to any of the following (9600, 19200, 38400, 57600, 115200 bps). • Check that the null-modem serial cable conforms to the pin-out connections provided in the Installation Guide.
Forgot or lost the password	• Contact your local distributor.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Glossary

Access Control List (ACL)

ACLs can limit network traffic and restrict access to certain users or devices by checking each packet for certain IP or MAC (i.e., Layer 2) information.

Boot Protocol (BOOTP)

BOOTP is used to provide bootup information for network devices, including IP address information, the address of the TFTP server that contains the devices system files, and the name of the boot file.

Class of Service (CoS)

CoS is supported by prioritizing packets based on the required level of service, and then placing them in the appropriate output queue. Data is transmitted from the queues using weighted round-robin service to enforce priority service and prevent blockage of lower-level queues. Priority may be set according to the port default, the packet's priority bit (in the VLAN tag), TCP/UDP port number, IP Precedence bit, or DSCP priority bit.

Differentiated Services Code Point Service (DSCP)

DSCP uses a six-bit tag to provide for up to 64 different forwarding behaviors. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding. The DSCP bits are mapped to the Class of Service categories, and then into the output queues.

Domain Name Service (DNS)

A system used for translating host names for network nodes into IP addresses.

Dynamic Host Control Protocol (DHCP)

Provides a framework for passing configuration information to hosts on a TCP/IP network. DHCP is based on the Bootstrap Protocol (BOOTP), adding the capability of automatic allocation of reusable network addresses and additional configuration options.

Extensible Authentication Protocol over LAN (EAPOL)

EAPOL is a client authentication protocol used by this switch to verify the network access rights for any device that is plugged into the switch. A user name and password is requested by the switch, and then passed to an authentication server (e.g., RADIUS) for verification. EAPOL is implemented as part of the IEEE 802.1x Port Authentication standard.

Downloaded from www.Manualslib.com manuals search engine

GARP VLAN Registration Protocol (GVRP)

Defines a way for switches to exchange VLAN information in order to register necessary VLAN members on ports along the Spanning Tree so that VLANs defined in each switch can work automatically over a Spanning Tree network.

Generic Attribute Registration Protocol (GARP)

GARP is a protocol that can be used by endstations and switches to register and propagate multicast group membership information in a switched environment so that multicast data frames are propagated only to those parts of a switched LAN containing registered endstations. Formerly called Group Address Registration Protocol.

Generic Multicast Registration Protocol (GMRP)

GMRP allows network devices to register end stations with multicast groups. GMRP requires that any participating network devices or end stations comply with the IEEE 802.1p standard.

Group Attribute Registration Protocol (GARP)

See Generic Attribute Registration Protocol.

IEEE 802.1D

Specifies a general method for the operation of MAC bridges, including the Spanning Tree Protocol.

IEEE 802.1Q

VLAN Tagging—Defines Ethernet frame tags which carry VLAN information. It allows switches to assign endstations to different virtual LANs, and defines a standard way for VLANs to communicate across switched networks.

IEEE 802.1p

An IEEE standard for providing quality of service (QoS) in Ethernet networks. The standard uses packet tags that define up to eight traffic classes and allows switches to transmit packets based on the tagged priority value.

IEEE 802.1s

An IEEE standard for the Multiple Spanning Tree Protocol (MSTP) which provides independent spanning trees for VLAN groups.

IEEE 802.1x

Port Authentication controls access to the switch ports by requiring users to first enter a user ID and password for authentication.

IEEE 802.3ac

Defines frame extensions for VLAN tagging.

Downloaded from www.Manualslib.com manuals search engine

IEEE 802.3x

Defines Ethernet frame start/stop requests and timers used for flow control on full-duplex links.

IGMP Snooping

Listening to IGMP Query and IGMP Report packets transferred between IP Multicast Routers and IP Multicast host groups to identify IP Multicast group members.

IGMP Query

On each subnetwork, one IGMP-capable device will act as the querier — that is, the device that asks all hosts to report on the IP multicast groups they wish to join or to which they already belong. The elected querier will be the device with the lowest IP address in the subnetwork.

Internet Group Management Protocol (IGMP)

A protocol through which hosts can register with their local router for multicast services. If there is more than one multicast switch/router on a given subnetwork, one of the devices is made the “querier” and assumes responsibility for keeping track of group membership.

In-Band Management

Management of the network from a station attached directly to the network.

IP Multicast Filtering

A process whereby this switch can pass multicast traffic along to participating hosts.

IP Precedence

The Type of Service (ToS) octet in the IPv4 header includes three precedence bits defining eight different priority levels ranging from highest priority for network control packets to lowest priority for routine traffic. The eight values are mapped one-to-one to the Class of Service categories by default, but may be configured differently to suit the requirements for specific network applications.

Layer 2

Data Link layer in the ISO 7-Layer Data Communications Protocol. This is related directly to the hardware interface for network devices and passes on traffic based on MAC addresses.

Link Aggregation

See Port Trunk.

Link Aggregation Control Protocol (LACP)

Allows ports to automatically negotiate a trunked link with LACP-configured ports on another device.

Downloaded from www.Manualslib.com manuals search engine

Management Information Base (MIB)

An acronym for Management Information Base. It is a set of database objects that contains information about a specific device.

MD5

An algorithm that is used to create digital signatures. It is intended for use with 32 bit machines and is safer than the MD4 algorithm, which has been broken. MD5 is a one-way hash function, meaning that it takes a message and converts it into a fixed string of digits, also called a message digest.

Multicast Switching

A process whereby the switch filters incoming multicast frames for services for which no attached host has registered, or forwards them to all ports contained within the designated multicast VLAN group.

Network Time Protocol (NTP)

NTP provides the mechanisms to synchronize time across the network. The time servers operate in a hierarchical-master-slave configuration in order to synchronize local clocks within the subnet and to national time standards via wire or radio.

Out-of-Band Management

Management of the network from a station not attached to the network.

Port Authentication

See IEEE 802.1x.

Port Mirroring

A method whereby data on a target port is mirrored to a monitor port for troubleshooting with a logic analyzer or RMON probe. This allows data on the target port to be studied unobstructively.

Port Trunk

Defines a network link aggregation and trunking method which specifies how to create a single high-speed logical link that combines several lower-speed physical links.

Private VLANs

Private VLANs provide port-based security and isolation between ports within the assigned VLAN. Data traffic on downlink ports can only be forwarded to, and from, uplink ports.

Remote Authentication Dial-in User Service (RADIUS)

RADIUS is a logon authentication protocol that uses software running on a central server to control access to RADIUS-compliant devices on the network.

Downloaded from www.Manualslib.com manuals search engine

Remote Monitoring (RMON)

RMON provides comprehensive network monitoring capabilities. It eliminates the polling required in standard SNMP, and can set alarms on a variety of traffic conditions, including specific error types.

Rapid Spanning Tree Protocol (RSTP)

RSTP reduces the convergence time for network topology changes to about 10% of that required by the older IEEE 802.1D STP standard.

Secure Shell (SSH)

A secure replacement for remote access functions, including Telnet. SSH can authenticate users with a cryptographic key, and encrypt data connections between management clients and the switch.

Simple Mail Transfer Protocol (SMTP)

A standard host-to-host mail transport protocol that operates over TCP, port 25.

Simple Network Management Protocol (SNMP)

The application protocol in the Internet suite of protocols which offers network management services.

Simple Network Time Protocol (SNTP)

SNTP allows a device to set its internal clock based on periodic updates from a Network Time Protocol (NTP) server. Updates can be requested from a specific NTP server, or can be received via broadcasts sent by NTP servers.

Spanning Tree Protocol (STP)

A technology that checks your network for any loops. A loop can often occur in complicated or backup linked network systems. Spanning Tree detects and directs data along the shortest available path, maximizing the performance and efficiency of the network.

Terminal Access Controller Access Control System Plus (TACACS+)

TACACS+ is a logon authentication protocol that uses software running on a central server to control access to TACACS-compliant devices on the network.

Telnet

Defines a remote communication facility for interfacing to a terminal device over TCP/IP.

Transmission Control Protocol/Internet Protocol (TCP/IP)

Protocol suite that includes TCP as the primary transport protocol, and IP as the network layer protocol.

Downloaded from www.Manualslib.com manuals search engine

Trivial File Transfer Protocol (TFTP)

A TCP/IP protocol commonly used for software downloads.

User Datagram Protocol (UDP)

UDP provides a datagram mode for packet-switched communications. It uses IP as the underlying transport mechanism to provide access to IP-like services. UDP packets are delivered just like IP packets – connection-less datagrams that may be discarded before reaching their targets. UDP is useful when TCP would be too complex, too slow, or just unnecessary.

Virtual LAN (VLAN)

A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. A VLAN serves as a logical workgroup with no physical barriers, and allows users to share information and resources as though located on the same LAN.

XModem

A protocol used to transfer files between devices. Data is grouped in 128-byte blocks and error-corrected.

Downloaded from www.Manualslib.com manuals search engine

Index

Numerics

802.1x, port authentication 3-54, 4-76

A

acceptable frame type 3-133, 4-183
Access Control List *See* ACL
ACL
  Extended IP 3-62, 4-83, 4-85, 4-87
  MAC 3-62, 4-84, 4-98, 4-98–4-100
  Standard IP 3-62, 4-83, 4-85, 4-86
address table 3-100, 4-157
  aging time 3-102, 4-160

B

BOOTP 3-14, 3-15, 4-227
BPDU 3-104
broadcast storm, threshold 3-90, 4-136

C

Class of Service *See* CoS
CLI, showing commands 4-4
command line interface *See* CLI
community string 2-6, 3-33, 4-109
configuration settings, saving or restoring 2-7, 3-17, 4-62
console port, required connections 2-2
CoS
  configuring 3-139, 4-197, 4-210
  DSCP 3-147, 3-150, 3-151, 4-205
  IP precedence 3-146, 4-204
  layer 3/4 priorities 3-145, 4-202
  queue mapping 3-141, 4-200
  queue mode 3-143, 4-198
  traffic class weights 3-143, 4-199

D

default gateway, configuration 3-13, 4-228
default priority, ingress port 3-139, 4-197
default settings, system 1-5
DHCP 3-14, 3-15, 4-227
  client 3-13, 4-120, 4-122
  dynamic configuration 2-5
Differentiated Code Point Service *See* DSCP
DNS
  default domain name 3-167
  displaying the cache 3-171
  domain name list 3-167
  enabling lookup 3-167
  name server list 3-167
  static entries 3-169
Domain Name Service 3-166
downloading software 3-16, 4-62
DSCP
  enabling 3-145, 4-205
  mapping priorities 3-147, 3-150, 3-151, 4-206
dynamic addresses, displaying 3-101, 4-158
Dynamic Host Configuration Protocol *See* DHCP

E

edge port, STA 3-113, 3-115, 4-172
event logging 4-41

F

firmware
  displaying version 3-10, 4-60
  upgrading 4-62
firmware, upgrade 3-16

G

GARP VLAN Registration Protocol *See* GVRP
gateway, default 3-13, 4-228
GVRP
  global setting 3-125, 4-193
  interface configuration 3-133, 4-194

Downloaded from www.Manualslib.com manuals search engine

H
hardware version, displaying 3-10, 4-60
HTTPS 3-45, 4-30
HTTPS, secure server 3-45, 4-30

I
IEEE 802.1D 3-103, 4-162
IEEE 802.1s 4-162
IEEE 802.1w 3-103, 4-162
IEEE 802.1x 3-54, 4-76
IGMP
  groups, displaying 3-164, 4-221
  Layer 2 3-160, 4-218
  query 3-160, 4-222
  query, Layer 2 3-161, 4-222
  snooping 3-160, 4-218
  snooping, configuring 3-161, 4-218
ingress filtering 3-133, 4-183
IP address
  BOOTP/DHCP 3-14, 3-15, 4-121, 4-227
  setting 2-4, 3-12, 4-227
IP precedence
  enabling 3-145, 4-204
  mapping priorities 3-146, 4-204

J
jumbo frame 4-61

L
link type, STA 3-113, 3-115, 4-174
logging
  syslog traps 4-44
  to syslog servers 4-43
log-in, Web interface 3-2
logon authentication 3-41, 4-67
  RADIUS client 3-42, 4-70
  RADIUS server 3-42, 4-70
  TACACS+ client 3-42, 4-73
  TACACS+ server 3-42, 4-73
logon authentication, sequence 3-43, 4-68, 4-69

M
main menu 3-3
Management Information Bases (MIBs) A-3
mirror port, configuring 3-91, 4-141
MSTP 4-162
  global settings 3-116, 4-160
  interface settings 4-161
multicast filtering 3-160, 4-218
multicast groups 3-164, 4-221
  displaying 4-221
  static 3-164, 4-219, 4-221
multicast services
  configuring 3-165, 4-219
  displaying 3-164, 4-221
multicast, static router port 3-163, 4-225

P
password, line 4-12
passwords 2-4
  administrator setting 3-41, 4-25
path cost 3-105, 3-112
  method 3-109, 4-166
  STA 3-105, 3-112, 4-166
port authentication 3-54, 4-76
port priority
  configuring 3-139, 4-197, 4-210
  default ingress 3-139, 4-197
  STA 3-113, 4-172
port security, configuring 3-52, 4-75
port, statistics 3-93, 4-139
ports
  autonegotiation 3-77, 4-132
  broadcast storm threshold 3-90, 4-136
  capabilities 3-77, 4-133
  duplex mode 3-77, 4-131
  flow control 3-77, 4-134
  forced selection on combo ports 3-76, 4-135
  speed 3-77, 4-131
ports, configuring 3-75, 4-129
ports, mirroring 3-91, 4-141
priority, default port ingress 3-139, 4-197

Downloaded from www.Manualslib.com manuals search engine

problems, troubleshooting B-1
protocol migration 3-115, 4-176

Q
queue weights 3-143, 4-199

R
RADIUS, logon authentication 3-42, 4-70
rate limits, setting 3-92, 4-146
remote logging 4-44
restarting the system 3-29, 4-22
RSTP 3-103, 4-162
  global configuration 3-104, 4-162

S
secure shell 3-47, 4-32
Secure Shell configuration 3-47, 4-35, 4-36
serial port
  configuring 4-10
Simple Network Management Protocol *See* SNMP
SNMP 3-31
  community string 3-33, 4-109
  enabling traps 3-34, 4-112
  filtering IP addresses 3-73
  trap manager 3-34, 4-111
software
  displaying version 3-10, 4-60
  downloading 4-62
software downloads 3-16
Spanning Tree Protocol *See* STA
specifications, software A-1
SSH, configuring 3-47, 4-35, 4-36
STA 3-103, 4-160
  edge port 3-113, 3-115, 4-172
  global settings, configuring 3-107, 4-161–4-166
  global settings, displaying 3-104, 4-177
  interface settings 3-111, 3-119, 3-121, 4-171–4-176, 4-177
  link type 3-113, 3-115, 4-174
  path cost 3-105, 3-112, 4-171
  path cost method 3-109, 4-166
  port priority 3-113, 4-172
  protocol migration 3-115, 4-176
  transmission limit 3-109, 4-166
standards, IEEE A-2
startup files
  creating 3-17, 4-62
  displaying 3-16, 4-54
  setting 3-16, 4-66
static addresses, setting 3-100, 4-157
statistics
  port 3-93, 4-139
STP 3-107, 4-162
STP *Also see* STA
system clock, setting 3-29, 4-50
System Logs 3-23
system software
  downloading from server 3-16
system software, downloading from server 4-62

T
TACACS+, logon authentication 3-42, 4-73
time, setting 3-29, 4-50
traffic class weights 3-143, 4-199
trap manager 2-7, 3-34, 4-111
troubleshooting B-1
trunk
  configuration 3-79, 4-147
  LACP 3-81, 4-149
  static 3-80, 4-148

U
upgrading software 3-16, 4-62
user password 3-41, 4-25, 4-26

Downloaded from www.Manualslib.com manuals search engine

V

VLANs 3-122–3-136, 4-179–4-192
- adding static members 3-130, 3-132, 4-185
- creating 3-129, 4-180
- description 3-122
- displaying basic information 3-126, 4-193
- displaying port members 3-127, 4-187
- egress mode 3-134, 4-182
- interface configuration 3-133, 4-183–4-186
- private 3-135, 4-191
- protocol 3-136, 4-187

W

Web interface
- access requirements 3-1
- configuration buttons 3-2
- home page 3-2
- menu list 3-3
- panel display 3-3

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine